

Set-up, Operation & Maintenance Manual

90° Adjustable Transfers for 2100 Series, 3100 Series & LPZ Conveyors



Table of Contents

Warnings – General Safety	2	Ins
Introduction	2	
Specifications	3	

Installation	3
Required Tools	3
Kit Mounting	3
Service Parts	б
Return Policy	б

Warnings – General Safety



Introduction

IMPORTANT: Some illustrations may show guards removed. Do NOT operate equipment without guards.

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage.

• Accessories may be shipped loose. See accessory instructions for installation.

Dorner conveyors are covered by the following patent numbers: 5131529, 5156260, 5156261, 5174435, 5203447, 5265714, 5875883, and corresponding patents and patent applications in other countries.

Dorner's Limited Warranty applies.

Dorner reserves the right to make changes at any time without notice or obligation.

90° Adjustable Transfers for 2100 Series, 3100 Series & LPZ Conveyors Set-up, Operation & Maintenance Manual 851-335 Rev. B 2 Dorner Mfg. Corp.

Specifications

- Requires low side conveyors
- Maximum recommended part weight is 20 lb (9 Kg) at 50 ft/minute (15 M/minute) belt speed
- For conveyors up to 12["] (610 mm) wide
- 1/4" (6 mm) minimum part thickness

- Minimum product size:
- -3/4" (19 mm) for 2100 Series conveyor or 3100 Series conveyor with transfer tail option
- -1-1/4" (32 mm) for 3100 Series or LPZ conveyors with standard 3" (76 mm) diameter tail

Installation



WARNING

Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.

Required Tools

• Hex key wrenches

-4 mm & 5 mm

- 17 mm wrench
- Torque wrench

Kit Mounting



1. Parts as shipped (Figure 1)

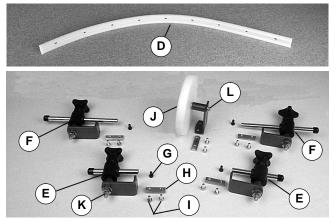


Figure 1

Illustration References

- А Infeed Conveyor
- В С
- Е
- F
- G
- M6 x 12 mm Socket Head Screws (10x)
- J Guide Wheel Assembly
- **2.** Identify infeed conveyor (A of Figure 2) and outfeed conveyor (C). Install pulley transfer plate (B) on discharge end of infeed conveyor (A). See instructions in your Pulley Transfer Plates Set-up, Operation & Maintenance Manual.

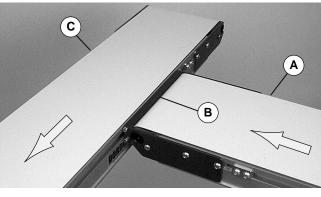


Figure 2

NOTE: The 90° Transfer Kit is a universal guide kit. The following is an example of a typical installation.

- Transfer Plate **Outfeed Conveyor**
- D Outside Turn Guide, 4-ft (1219 mm) Length
 - Guide Mounts with 4-1/2" (114 mm) Long Shaft (2x)
 - Guide Mounts with 12" (305 mm) Long Shaft (2x)
 - M6 x 12 mm Low Head Cap Screws (4x)
- Н T-bars (5x)
- Т

Installation

3. Install T-bars (H of Figure 3) in both infeed conveyor (A) and outfeed conveyor (C) T-slots. See Figure 4 for attaching guide mounts.

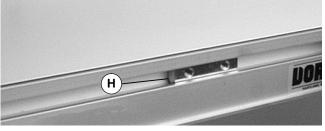


Figure 3

4. Loosely attach guide mounts with 4-1/2" (114 mm) long shafts (E of Figure 4) to T-bars (H of Figure 1) with screws (I).


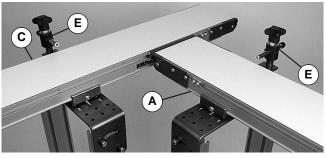


Figure 4

5. Attach outside turn guide (D of Figure 5) to shaft of each guide mount (E) with screw (G). Tighten screws to 30 in-lb (3 Nm).



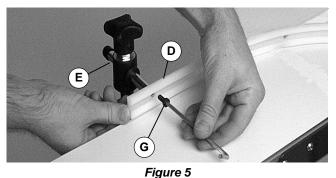

6. Determine arc of guide (D of Figure 6) and position of guide mounts (E). Adjust guide mounts to create desired guide position.

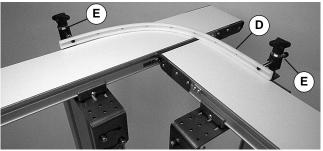


Figure 6

- 7. Secure fasteners:
- Tighten screws (I of Figure 1) to 73 in-lb (8 Nm)
- Tighten guide mount nuts (K of Figure 1) to 146 in-lb (16 Nm)
- **8.** To stabilize guide (D of Figure 7), repeat steps 3 through 7 to install additional guide mount(s) (F), as required.

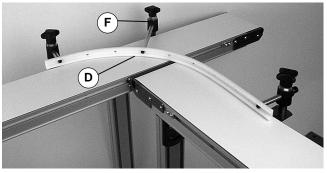


Figure 7

- 9. Trim excess guide (D) as required.
- **10.** Install T-bar (H of Figure 8) in T-slot of outfeed conveyor (C). Loosely attach guide wheel assembly (J) to T-bar with screws (I).

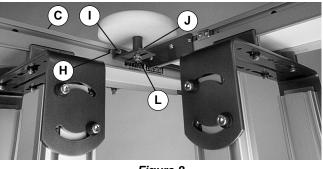


Figure 8



- **11.** Adjust guide wheel assembly position, as required (Figure 8).
- 12. Secure fasteners:
- Tighten screws (I of Figure 8) to 73 in-lb (8 Nm)
- Tighten screw (L) 146 in-lb (16 Nm)



Transfer Plate (B of Figure 9) and guiding (M & N) MUST be installed on discharge end of Infeed Conveyor to eliminate pinch points.

- **13.** On the discharge end of the infeed conveyor (A of Figure 9):
- Install guiding (M) within 1/4" (6 mm) of the guide wheel assembly (J). See instructions provided with guiding.
- Install guiding (N) against the outside turn guide (D). See instructions provided with guiding.

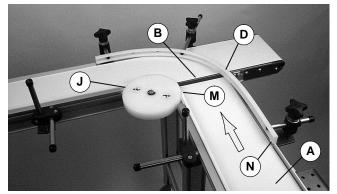


Figure 9

Service Parts

NOTE: For replacement parts other than those shown on this page, contact an authorized Dorner Service Center or the factory.

ltem	Part No.	Part Description
1	234014	Guide, 4-ft (cut to length required)
2	234006	UHMW Guide Wheel

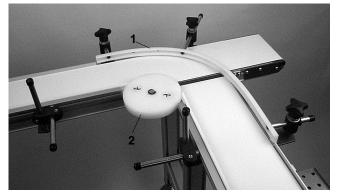


Figure 10

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor: 1. Name and address of customer. 2. Dorner part number(s) of Item(s) being returned. 3. Reason for return. 4. Customer's original order number used when ordering the item(s). 5. Dorner or distributor invoice number. A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization number for reference. There will be a return charge on all new undamaged items returned for credit where Dorner was not at fault. Dorner is not responsible for return freight on such items. Conveyors and conveyor accessories Standard catalog conveyors 30% MPB Series, cleated and specialty belt conveyors 50% 7400 & 7600 Series conveyors non-returnable items Engineered special products case by case Drives and accessories 30% Sanitary stand supports non-returnable items Parts 30% Standard stock parts MPB, cleated and specialty belts non-returnable items Returns will not be accepted after 60 days from original invoice date. The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory. If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete. Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Technical Sales, Catalog Sales and Service Teams will gladly help with your questions on Dorner products. For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com,

For replacement parts, contact an authorized Dorner Service Center or the factory.

USA

DORNER MFG. CORP.

975 Cottonwood Ave., PO Box 20 Hartland, WI 53029-0020 USA

TEL 1-800-397-8664 (USA)

FAX 1-800-369-2440 (USA)

TEL 1-262-367-7600, FAX 1-262-367-5827



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. [©]Dorner Mfg. Corp. 1999

Printed in U.S.A.

Outside the USA:

D-52499 Baesweiler

Germany TEL (02401) 80 52 90 FAX (02401) 80 52 93

DORNER Arnold-Sommerfeld-Ring 2

Internet: www.dorner.com