



2100, 2200, 4100, 6200 & MPB Series Top Mount Drive Pack. for Standard Load Parallel Shaft 60 Hz Gearmotors

Installation, Maintenance & Parts Manual



DORNER MFG. CORP.
P.O. Box 20 • 975 Cottonwood Ave.
Hartland, WI 53029-0020 USA

INSIDE THE USA
TEL: 1-800-397-8664
FAX: 1-800-369-2440

OUTSIDE THE USA
TEL: 262-367-7600
FAX: 262-367-5827

For other service manuals visit our website at:
www.dorner.com/service_manuals.asp

Table of Contents

Introduction	2	Drive or Driven Pulley Replacement	13
Warnings – General Safety	3	Gearmotor Replacement.....	13
Product Description	4	Service Parts.....	15
Specifications	4	2100, 2200, 4100, 6200 and MPB Series	
Installation	9	Top Mount Drive Package	15
Required Tools.....	9	MPB Series Cleated Belt Top Mount Drive Package	16
Mounting.....	9	4100 Series Adapter Package	17
Preventive Maintenance and Adjustment	12	Gearmotors	17
Required Tools.....	12	Return Policy.....	18
Timing Belt Tensioning	12		
Timing Belt Replacement	12		

Introduction

NOTE
<i>Some illustrations may show guards removed. DO NOT operate equipment without guards.</i>

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage.
- Accessories may be shipped loose. See accessory instructions for installation.

Dorner 2100 Series conveyors are covered by the following patent numbers: 5131529, 5174435, and corresponding patents and patent applications in other countries.

Dorner 2200 and MPB Series conveyors are covered by patent number 5174435 and corresponding patents and patent applications in other countries.

Dorner 4100 Series conveyors are covered by patent number 3923148 and corresponding patents and patent applications in other countries.

Dorner 6200 Series conveyors are covered by patent number 6685009, 5174435, 6109427 and corresponding patents and patent applications in other countries.

Dorner's Limited Warranty applies.

Dorner reserves the right to make changes at any time without notice or obligation.

Dorner has convenient, pre-configured kits of Key Service Parts for all conveyor products. These time saving kits are easy to order, designed for fast installation, and guarantee you will have what you need when you need it. Key Parts and Kits are marked in the Service Parts section of this manual with the Performance Parts Kits logo .

Warnings – General Safety

⚠ WARNING

The safety alert symbol, black triangle with white exclamation, is used to alert you to potential personal injury hazards.

⚠ DANGER



Climbing, sitting, walking or riding on conveyor will cause severe injury. **KEEP OFF CONVEYORS.**

⚠ DANGER



Do NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.

⚠ WARNING



Exposed moving parts can cause severe injury.
LOCK OUT POWER before removing guards or performing maintenance.

⚠ WARNING



Gearmotors may be **HOT**.
DO NOT TOUCH Gearmotors.

⚠ WARNING



Exposed moving parts can cause severe injury.
REPLACE ALL GUARDS BEFORE RUNNING CONVEYOR.

⚠ WARNING



Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.
When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, **CHECK FOR POTENTIAL PINCH POINTS** and other mechanical hazards before system start-up.

⚠ WARNING



MPB Series Conveyors are not reversible. Reversing creates pinch points which can cause severe injury.
DO NOT REVERSE MPB SERIES CONVEYORS.

Product Description

Refer to Figure 1 for typical components.

A	Conveyor
B	Mounting Bracket
C	Gearmotor
D	Timing Belt Tensioner
E	Cover
F	Timing Belt
G	Drive Pulley
H	Driven Pulley

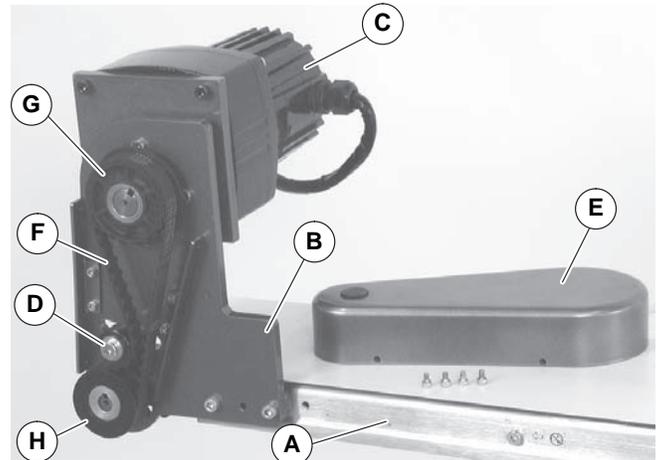


Figure 1

Specifications

Gearmotor Mounting Package Models:


Example:

2 M T P S WW A - 32 32

- 2 = 2100 Series Conveyor
- M = 2200 & MPB Series Conveyor
- T = 4100 Series Conveyor
- P = 6200 Series Conveyor
- S = MPB Series Conveyor
- WW = Conveyor Width Reference*
- A = Mount Position = A, B, C or D (see detail to the right)
- = Belt Type: - = flat belt, A through J = cleated belt
- 32 = Drive Pulley (see Belt Speed Tables starting on page 4)
- 32 = Driven Pulley (see Belt Speed Tables starting on page 4)
- Standard Load, Industrial = Gearmotor Type
- Parallel Shaft = Output Shaft Type
- Top Mount = Mount Style
- U.S. English = Language Code

- 2 = 2100 Series Conveyor
- 22 = 2200 & MPB Series Conveyor
- 4 = 4100 Series Conveyor
- 6 = 6200 Series Conveyor
- 2P = MPB Series Conveyor

* See "Ordering and Specifications" Catalog for details.

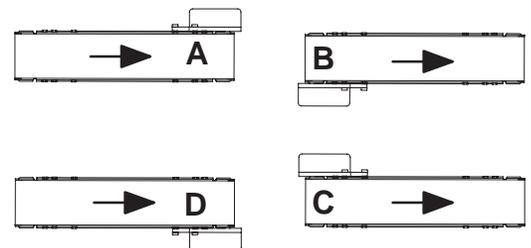

Specifications

Table 1: Gearmotor Specifications

	Single Phase	Three Phase	DC Variable Speed
Output Power	0.17 hp (0.13 kw)		0.25 hp (0.19 kw)
Input Voltage	115 Volts A.C.	230 Volts A.C.	130 Volts D.C.
Input Frequency	60 Hz		N/A
Input Current	1.9 Amperes	1.2 Amperes	1.8 Amperes
Motor RPM	1725		2500
Gearmotor Ratios	5:1, 10:1, 20:1, 30:1, 60:1, 180:1		
Frame Size	NEMA 42 CZ		
Motor Type	Totally enclosed, Fan-cooled		Totally enclosed, Non-ventilated

Table 2: Belt Speeds for Standard Load Fixed Speed Parallel Shaft 60 Hz Gearmotors on 2100, 2200 Gang Drive, 4100 and 6200 Series Conveyors

Part Number	Gearmotors				Belt Speed		Drive Pulley	Driven Pulley
	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M180PS4(vp)F(n)	180:1	10	341	38.5	2	0.6	22	32
62M180PS4(vp)F(n)	180:1	10	341	38.5	3	0.9	32	32
62M180PS4(vp)F(n)	180:1	10	341	38.5	4	1.2	48	32
62M060PS4(vp)F(n)	60:1	29	270	30.5	6	1.7	22	32
62M060PS4(vp)F(n)	60:1	29	270	30.5	8	2.4	32	32
62M060PS4(vp)F(n)	60:1	29	270	30.5	12	3.7	48	32
62M030PS4(vp)F(n)	30:1	58	135	15.3	16	4.9	32	32
62M020PS4(vp)F(n)	20:1	86	90	10.2	25	7.6	32	32
62M020PS4(vp)F(n)	20:1	86	90	10.2	37	11.3	48	32
62M010PS4(vp)F(n)	10:1	173	45	5.1	49	14.9	32	32
62M010PS4(vp)F(n)	10:1	173	45	5.1	74	22.6	48	32
62M005PS4(vp)F(n)	5:1	345	25	2.8	99	30.2	32	32
62M005PS4(vp)F(n)	5:1	345	25	2.8	148	45.1	48	32
62M005PS4(vp)F(n)	5:1	345	25	2.8	169	51.5	48	28
62M005PS4(vp)F(n)	5:1	345	25	2.8	197	60.0	44	22
62M005PS4(vp)F(n)	5:1	345	25	2.8	215	65.5	48	22
62M005PS4(vp)F(n)	5:1	345	25	2.8	249	75.9	48	19

(vp) = voltage and phase
 11 = 115 V, 1-phase
 23 = 230V, 3-phase

(n) = reversing capability
 N = no reversing switch
 R = With reversing switch
 (115V, 1 phase only)

Specifications

Table 3: Belt Speeds for Standard Load Fixed Speed Parallel Shaft 60 Hz Gearmotors on 2200 Series Conveyors (Excluding Gang Drive)

Part Number	Gearmotors*				Belt Speed		Drive Pulley	Driven Pulley
	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M180PS4(vp)F(n)	180:1	10	341	38.5	3	0.9	28	28
62M180PS4(vp)F(n)	180:1	10	341	38.5	5	1.5	44	22
62M060PS4(vp)F(n)	60:1	29	270	30.5	6	1.7	19	32
62M060PS4(vp)F(n)	60:1	29	270	30.5	10	3.0	28	28
62M060PS4(vp)F(n)	60:1	29	270	30.5	16	4.9	44	28
62M020PS4(vp)F(n)	20:1	86	90	10.2	30	9.1	28	28
62M020PS4(vp)F(n)	20:1	86	90	10.2	48	14.6	44	28
62M010PS4(vp)F(n)	10:1	173	45	5.1	61	18.6	28	28
62M010PS4(vp)F(n)	10:1	173	45	5.1	95	29.0	44	28
62M010PS4(vp)F(n)	10:1	173	45	5.1	104	31.7	48	28
62M005PS4(vp)F(n)	5:1	345	25	2.8	121	36.9	28	28
62M005PS4(vp)F(n)	5:1	345	25	2.8	138	42.1	32	28
62M005PS4(vp)F(n)	5:1	345	25	2.8	176	53.6	32	22
62M005PS4(vp)F(n)	5:1	345	25	2.8	208	63.4	48	28
62M005PS4(vp)F(n)	5:1	345	25	2.8	242	73.8	44	22
62M005PS4(vp)F(n)	5:1	345	25	2.8	264	80.5	48	22

(vp) = voltage and phase
 11 = 115 V, 1-phase
 23 = 230V, 3-phase

(n) = reversing capability
 N = no reversing switch
 R = With reversing switch
 (115V, 1 phase only)

Table 4: Belt Speeds for Standard Load Fixed Speed Parallel Shaft 60 Hz Gearmotors on MPD Series Conveyors

Part Number	Gearmotors*				Belt Speed		Drive Pulley	Driven Pulley
	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M180PS4(vp)F(n)	180:1	10	341	38.5	4.5	1.4	22	32
62M060PS4(vp)F(n)	60:1	29	270	30.5	6	1.7	19	32
62M180PS4(vp)F(n)	180:1	10	341	38.5	6.5	2	28	28
62M060PS4(vp)F(n)	60:1	29	270	30.5	13	4.0	22	32
62M060PS4(vp)F(n)	60:1	29	270	30.5	20	6.0	28	28
62M030PS4(vp)F(n)	30:1	58	135	15.3	39	11.9	28	28
62M020PS4(vp)F(n)	20:1	86	90	10.2	59	17.9	28	28

(vp) = voltage and phase
 11 = 115 V, 1-phase
 23 = 230V, 3-phase

(n) = reversing capability
 N = no reversing switch
 R = With reversing switch
 (115V, 1 phase only)

Specifications

Table 5: Belt Speeds for Standard Load Variable Speed Parallel Shaft VFD Gearmotors on 2100, 4100 and 6200 Series Conveyors

Gearmotors*					Belt Speed		Drive Pulley	Driven Pulley
Part Number	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M060PS423EN	60:1	29	270	30.5	0.6–5.6	0.2–1.7	22	32
62M060PS423EN	60:1	29	270	30.5	0.8–8.2	0.3–2.5	32	32
62M020PS423EN	20:1	86	167	18.9	2.5–25	0.8–7.5	32	32
62M010PS423EN	10:1	173	115	13	4.9–49	1.5–15	32	32
62M005PS423EN	5:1	345	58	6.5	9.9–99	3–30	32	32
62M005PS423EN	5:1	345	58	6.5	14–148	4.5–45	48	32
62M005PS423EN	5:1	345	58	6.5	19–197	6–60	44	22
62M005PS423EN	5:1	345	58	6.5	24–249	7.6–76	48	19

* At 60 Hz

Table 6: Belt Speeds for Standard Load Variable Speed Parallel Shaft VFD Gearmotors on 2200 Series Conveyors (Excluding Gang Drive)

Gearmotors*					Belt Speed		Drive Pulley	Driven Pulley
Part Number	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M060PS423EN	60:1	29	270	30.5	0.6–6	0.2–1.8	19	32
62M060PS423EN	60:1	29	270	30.5	1–10	0.3–3.1	28	28
62M020PS423EN	20:1	86	167	18.9	3–30	0.9–9.2	28	28
62M010PS423EN	10:1	173	115	13	6–60	1.8–18	28	28
62M010PS423EN	10:1	173	115	13	10–104	3.2–32	48	28
62M005PS423EN	5:1	345	58	6.5	12–121	3.7–37	28	28
62M005PS423EN	5:1	345	58	6.5	26–264	8.1–81	48	22

* At 60 Hz

Table 7: Belt Speeds for Standard Load Variable Speed Parallel Shaft VFD Gearmotors on MPD Series Conveyors

Gearmotors*					Belt Speed		Drive Pulley	Driven Pulley
Part Number	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M060PS423EN	60:1	29	270	30.5	1.3–13.4	0.4–4.1	22	32
62M060PS423EN	60:1	29	270	30.5	2–19	0.9–5.9	28	28
62M020PS423EN	20:1	86	167	18.9	5.9–59	1.8–18	28	28
62M010PS423EN	10:1	173	115	13	11–117	3.6–36	28	28
62M010PS423EN	10:1	173	115	13	17–175	5.4–54	48	32
62M005PS423EN	5:1	345	58	6.5	23–234	7.1–71	28	28

* At 60 Hz

Specifications

Table 8: Belt Speeds for Standard Load Variable Speed Parallel Shaft DC Gearmotors on 2100, 4100 and 6200 Series Conveyors

Gearmotors*					Belt Speed		Drive Pulley	Driven Pulley
Part Number	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M180PSD3DEN	180:1	14	341	38.5	0.3-2.7	0.1-0.8	22	32
62M180PSD3DEN	180:1	14	341	38.5	0.5-4	0.1-1.2	32	32
62M060PSD3DEN	60:1	42	270	30.5	1.0-8.2	0.3-2.5	22	32
62M060PSD3DEN	60:1	42	270	30.5	1.4-12	0.4-3.6	32	32
62M030PSD3DEN	30:1	83	135	15.3	2.9-24	0.9-7.3	32	32
62M020PSD3DEN	20:1	125	90	10.2	4.3-36	1.3-11	32	32
62M010PSD3DEN	10:1	250	72	8.1	9-71	2.6-22	32	32
62M005PSD3DEN	5:1	500	25	2.8	17-143	5.2-43	32	32
62M005PSD3DEN	5:1	500	25	2.8	26-214	7.8-65	48	32
62M005PSD3DEN	5:1	500	25	2.8	29-245	9.0-75	48	28

Table 9: Belt Speeds for Standard Load Variable Speed Parallel Shaft DC Gearmotors on 2200 Series Conveyors (Excluding Gang Drive)

Gearmotors*					Belt Speed		Drive Pulley	Driven Pulley
Part Number	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M180PSD3DEN	180:1	14	341	38.5	0.4-3.4	0.1-1.0	22	32
62M180PSD3DEN	180:1	14	341	38.5	0.6-5	0.2-1.5	28	28
62M060PSD3DEN	60:1	42	270	30.5	1.8-14	0.5-4.5	28	28
62M060PSD3DEN	60:1	42	270	30.5	2.8-23	0.8-7	44	28
62M030PSD3DEN	30:1	83	135	15.3	3.5-29	1.1-9	28	28
62M020PSD3DEN	20:1	125	90	10.2	5.3-44	1.6-13	28	28
62M010PSD3DEN	10:1	250	72	8.1	10-88	3.2-27	28	28
62M005PSD3DEN	5:1	500	25	2.8	17-138	5-42	44	28
62M005PSD3DEN	5:1	500	25	2.8	21-176	6.4-54	28	28
62M005PSD3DEN	5:1	500	25	2.8	33-276	10-84	44	28

Table 10: Belt Speeds for Standard Load Variable Speed Parallel Shaft DC Gearmotors on MPB Series Conveyors

Gearmotors*					Belt Speed		Drive Pulley	Driven Pulley
Part Number	Gear Ratio	RPM	In-lb	N-m	Ft/min	M/min		
62M180PSD3DEN	180:1	14	341	38.5	1.1-9	0.3-2.9	28	28
62M060PSD3DEN	60:1	42	270	30.5	2.3-19	0.7-5.9	22	32
62M060PSD3DEN	60:1	42	270	30.5	3.4-28	1-8.6	28	28
62M060PSD3DEN	60:1	42	270	30.5	5.3-44	1.6-13	44	28
62M030PSD3DEN	30:1	83	135	15.3	6.8-57	2.1-17	28	28
62M020PSD3DEN	20:1	125	90	10.2	10-85	3-26	28	28
62M020PSD3DEN	20:1	125	90	10.2	15-127	4.7-39	48	32
62M010PSD3DEN	10:1	250	72	8.1	20-170	6-52	28	28
62M010PSD3DEN	10:1	250	72	8.1	31-255	9-77	48	32

* = Cleated and Sidewall Cleated belts operate at a maximum of 150 Ft/min (45.7 m/min)

NOTE

For belt speed other than those listed, contact factory for details.

Required Tools

- Hex key wrenches:
2 mm, 2.5 mm, 3 mm, 5 mm
- Torque wrench

Mounting

⚠ WARNING

<p>Exposed moving parts can cause severe injury.</p> <p>LOCK OUT POWER before removing guards or performing maintenance.</p>

⚠ WARNING

<p>MPB Series Conveyors are not reversible. Reversing creates pinch points which can cause severe injury.</p> <p>DO NOT REVERSE MPB SERIES CONVEYORS.</p>

⚠ WARNING

<p>For MPB Series and Cleated Belt Conveyors Gearmotors must be mounted as shown in Figure 7.</p> <p>Failure to do so creates pinch points which can cause severe injury.</p>

1. Typical components (Figure 2)

Installation Component List:

I	Top Mount Assembly
J	Drive Pulley
K	Cover
L	M4 Socket Head Screws (4x)
M	Driven Pulley
N	Key
O	M6 Socket Head Screws (2x)
P	Timing Belt


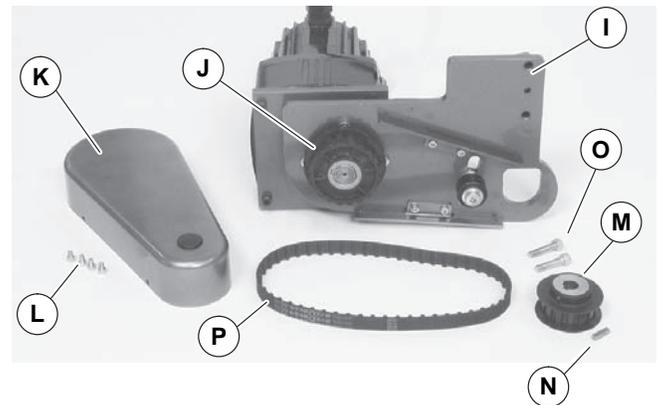


Figure 2


2. For your reference, the following figures show gearmotor mounting configurations for various conveyor series.

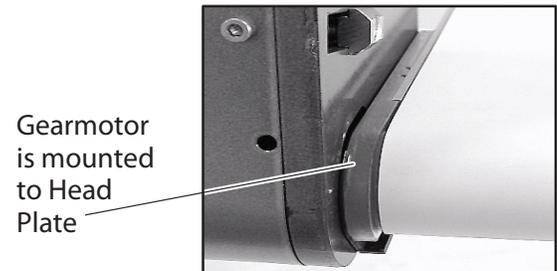

Gearmotor is mounted to Head Plate

2200 Series


Figure 3

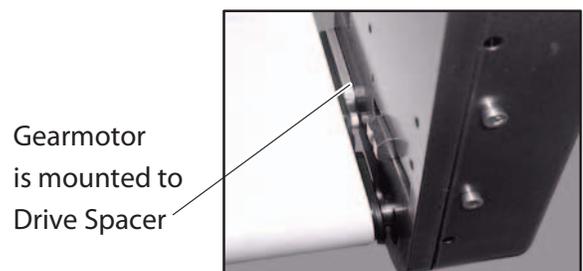

Gearmotor is mounted to Drive Spacer

6200 Series

Figure 4

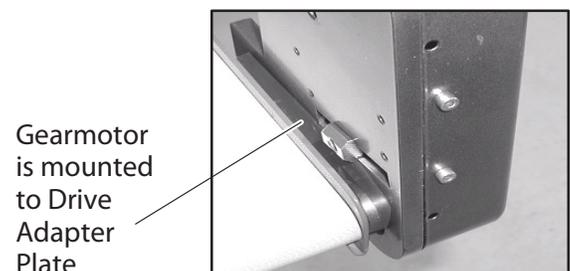


Gearmotor is mounted to Drive Adapter Plate

4100 Series

Figure 5

Installation

Gearmotor is mounted to Head Plate

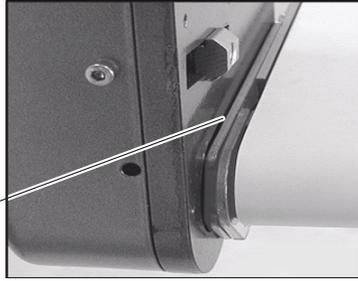

2100 Series

Figure 6

Gearmotor is mounted to Head Plate



MPB Series

Figure 7

NOTE

6200 Series conveyor shown, other Series similar.

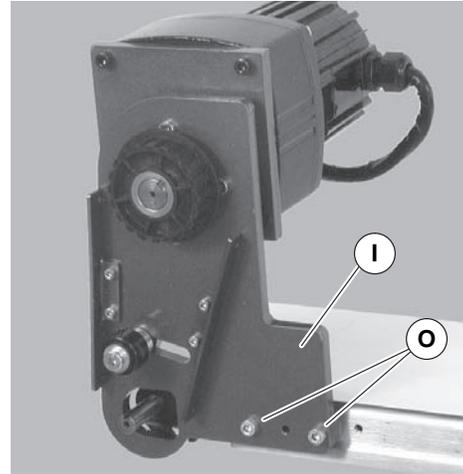


Figure 9

⚠ WARNING



Drive shaft keyway may be sharp.
HANDLE WITH CARE.

3. Locate drive output shaft (Figure 8, item Q) and remove two (2) screws (R).

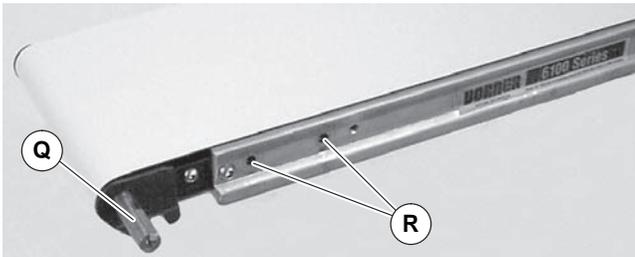


Figure 8

4. Attach mount assembly (Figure 9, item I) with screws (O). Tighten screws to 80 in-lb (9 N-m).

5. Install key (Figure 10, item N).

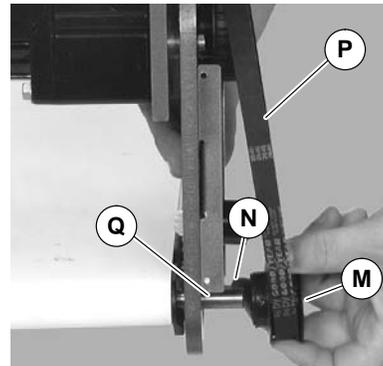


Figure 10

6. Wrap timing belt (P) around driven pulley (M) and drive pulley (J). Install driven pulley onto conveyor shaft (Q).

7. Remove cam bearing and spacer (Figure 9, item S). Place the cam bearing and spacer (Figure 11, item S) next to the driven pulley (M). Ensure the flanges of the driven pulley are aligned with the cam bearing. Tighten driven pulley set screws (T). This will allow for proper belt alignment while conveyor is in use. Install cam bearing and spacer (S).

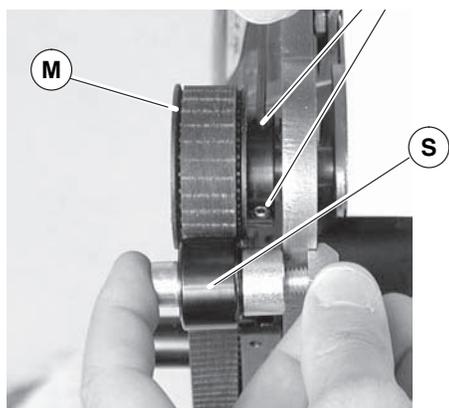


Figure 11

8. Depending on direction of conveyor belt travel (1 or 2 of Figure 12), position belt tensioner (U) as shown. Tension belt to obtain 0.125" (3 mm) deflection for 1.0 lb (456 grams) of force at belt mid-point (V). Tighten tensioner screw to 103 in-lb (12 N-m).

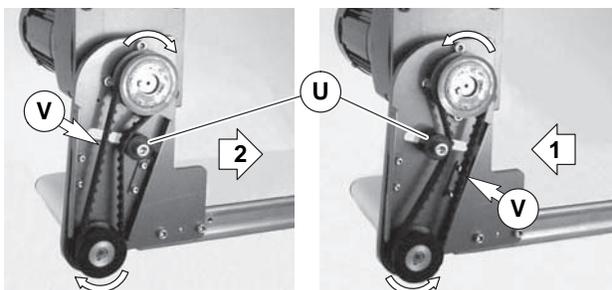


Figure 12

9. Install cover (Figure 13, item K) with four screws (L). Tighten to 35 in-lb (4 N-m).

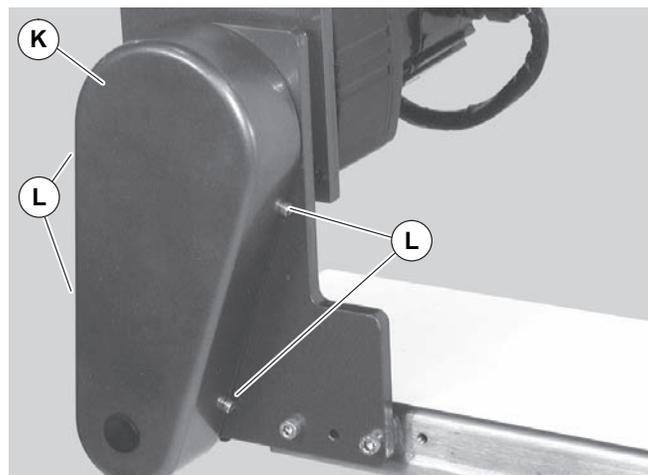


Figure 13

Preventive Maintenance and Adjustment

Required Tools

- Hex key wrenches
– 2 mm, 2.5 mm, 3 mm & 5 mm
- Adjustable wrench (for hexagon head screws)
- Torque wrench

Timing Belt Tensioning

⚠ WARNING



Exposed moving parts can cause severe injury.
LOCK OUT POWER before removing guards or performing maintenance.

1. Remove four screws (Figure 13, item L) and remove cover (K).
2. Loosen tensioner (Figure 14, item U).

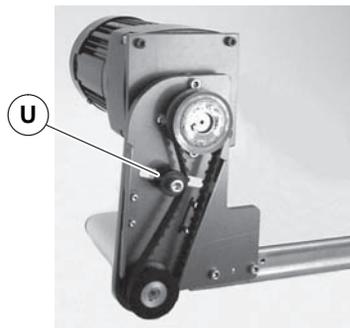


Figure 14

3. Depending on direction of conveyor belt travel (1 or 2 of Figure 12), position belt tensioner (U) as shown. Tension belt to obtain 0.125" (3 mm) deflection for 1.0 lb (456 grams) of force at belt mid-point (V). Tighten tensioner screw to 103 in-lb (12 N-m).
4. Install cover (Figure 13, item K) with four screws (L). Tighten to 35 in-lb (4 N-m).

Timing Belt Replacement

⚠ WARNING



Exposed moving parts can cause severe injury.
LOCK OUT POWER before removing guards or performing maintenance.

1. Remove four screws (Figure 13, item L) and remove cover (K).
2. Loosen tensioner (Figure 14, item U).
3. Remove timing belt (Figure 15, item P).

NOTE

If timing belt does not slide over pulley flange, loosen two driven pulley set screws (Figure 15, item T) and remove pulley with belt (P). For re-installation, see steps 6 and 7 on page 10.

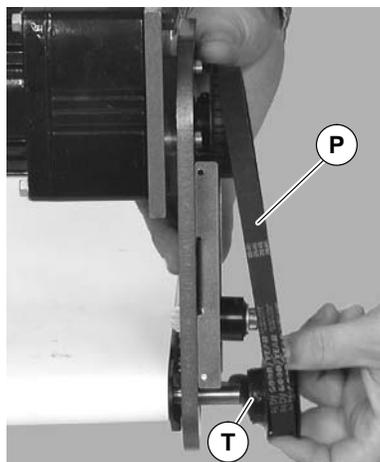


Figure 15

4. Install new timing belt.
5. Depending on conveyor belt travel (direction 1 or 2), locate timing belt tensioner (Figure 12, item U) as shown. Tension timing belt to obtain 0.125" (3 mm) deflection for 1.0 lb (456 grams) of force at timing belt mid-point (V). Tighten tensioner screw to 103 in-lb (12 N-m).
6. Install cover (Figure 13, item K) with four screws (L). Tighten to 35 in-lb (4 N-m).

Preventive Maintenance and Adjustment

Drive or Driven Pulley Replacement

⚠ WARNING

Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.

1. Complete steps 1 through 3 of “Timing Belt Replacement” section on page 12.
2. Loosen set screws and remove drive or driven pulley.

NOTE
<i>If drive pulley (Figure 18, item J) was replaced, wrap timing belt around drive pulley and complete step 3.</i>

3. Complete steps 6 through 9 of “Installation” section beginning on page 10.

Gearmotor Replacement

⚠ WARNING

Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.

⚠ DANGER

Hazardous voltage will cause severe injury or death. LOCKOUT POWER BEFORE before wiring.

1. For single phase motor, unplug power cord from outlet.
2. For three phase motor:
 - a. Loosen terminal box screws (Figure 16, item W) and remove cover (X).

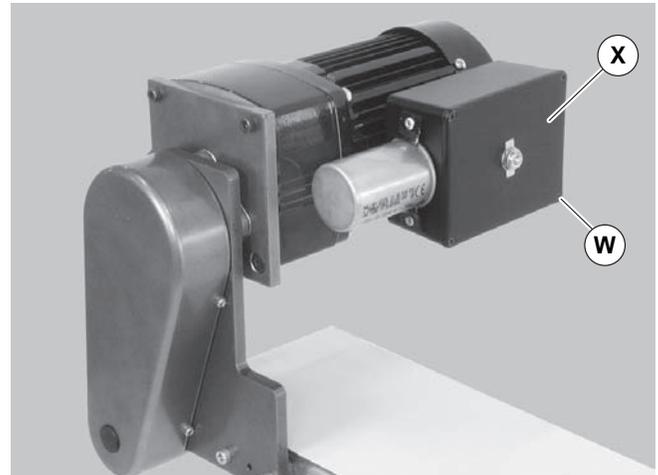


Figure 16

- b. Record incoming wire colors connecting to red, black and blue leads. Loosen wire nuts and remove incoming wires.
 - c. Loosen cord grip and remove cord.
3. For DC variable speed motor, unplug motor cord at disconnect (Figure 17, item Y).

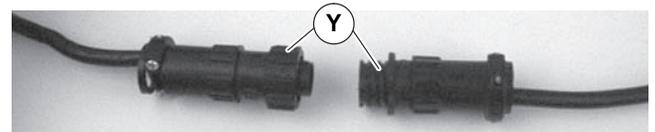


Figure 17

4. Remove four screws (Figure 13, item L) and remove cover (K).
5. Loosen tensioner (Figure 14, item U).
6. Loosen drive pulley set screws (Figure 18, item Z). Remove drive pulley (J) and timing belt (P).

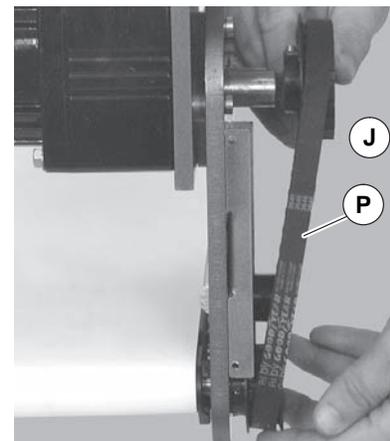


Figure 18

Preventive Maintenance and Adjustment

7. Remove four gear motor mounting screws (Figure 19, item AA). Remove gearmotor/adapter plate Assembly.

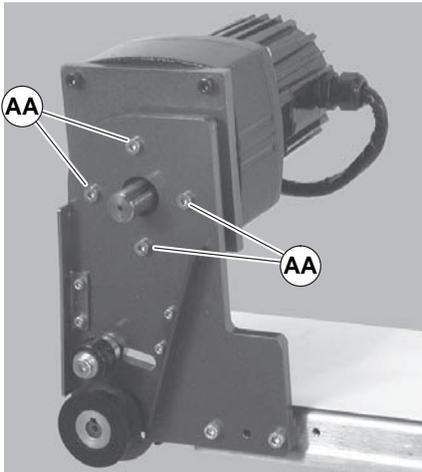


Figure 19

8. Remove four adapter plate screws (Figure 20, item AB). Remove adapter plate.



Figure 20

9. Install new gearmotor to adapter plate with screws (Figure 20, item AB). Tighten screws to 103 in-lb (12 N-m).
10. Install gearmotor/adapter plate assembly on mounting bracket with screws (Figure 19, item AA). Tighten screws to 103 in-lb (12 N-m).

NOTE


If drive pulley (Figure 18, item J) was removed, wrap timing belt around drive pulley and complete step 11.

11. Complete steps 6 through 9 of “Installation” section beginning on page 10.
12. Replace wiring:
 - For a single phase motor, reverse step 1 on page 13.
 - For a three phase motor, reverse step 2, on page 13.
 - For a DC variable speed motor, reverse step 3 on page 13.

NOTE

For replacement parts other than those shown in this section, contact an authorized *Donner Service Center* or the factory. Key Service Parts and Kits are identified by the Performance Parts Kits logo . Donner recommends keeping these parts on hand.

2100, 2200, 4100, 6200 and MPB Series Top Mount Drive Package

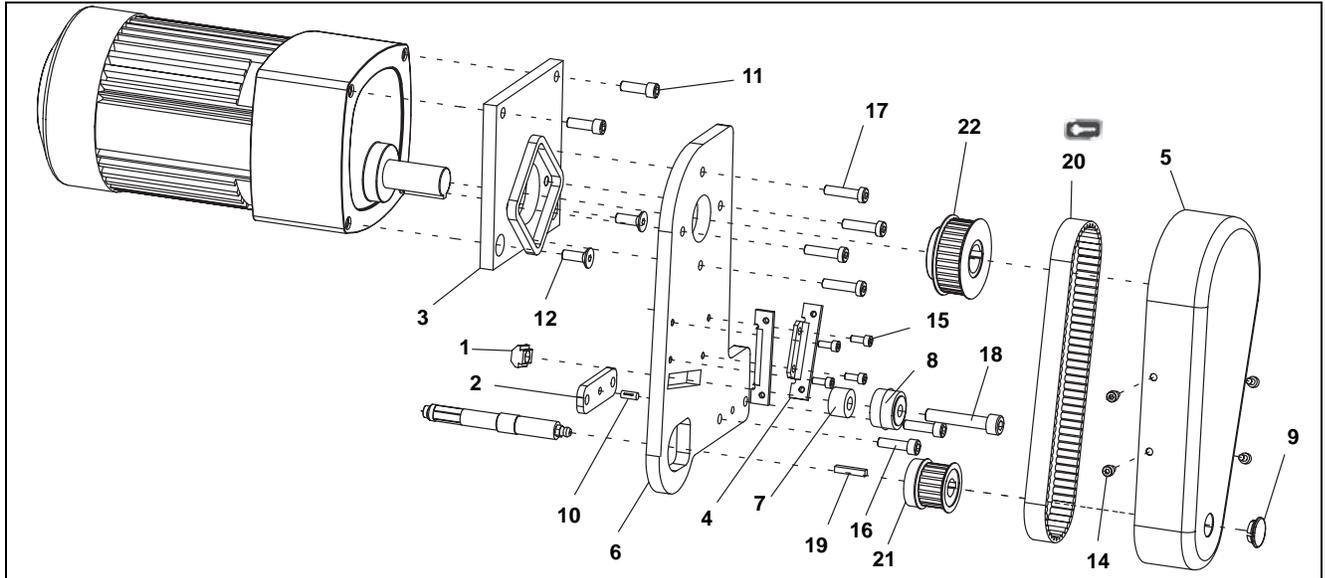


Item	Part Number	Description
1	202390M	Nut, Cam Follower
2	450027M	Adaptor Plate Assembly (6200 Only)
3	450029M	Adaptor Plate Assembly
4	450375M	Cover Mounting Bracket
5	450376M	Drive Guard
6	450443M	Grove Mounting Plate
7	450445	Spacer
8	802-046	Bearing
9	807-226	Snap-out Plastic Plug
10	807-952	Groove Pin (6200 Only)
11	902-157	Socket Cap Head Screw, 1/4-28 x 0.75"
12	903-161	Flat Cap Head Screw, 1/4-28 x 0.75"
13	912-084	Square Key, 0.188" x 1.50"
14	920406M	Socket Head Screw, M4 x 6mm
15	920410M	Socket Head Screw, M4 x 10mm
16	920625M	Socket Head Screw, M6 x 25mm
	920616M	Socket Head Screw, M6 x 16mm (4100 Only)
	920630M	Socket Head Screw, M6 x 30mm (6200 Only)
17	920695M	Socket Low Head Screw, M6 x 20mm
18	920845M	Socket Head Screw, M8 x 45mm

Item	Part Number	Description
19	980422M	Square Key 4mm x 22mm
	912-053	Square Key, 0.125" x 0.75" (4100 Series - 1" (25mm) Wide Conveyor Only)
20	814-104	Timing Belt, 15mm W x 450mm L
	814-105	Timing Belt, 15mm W x 460mm L
	814-065	Timing Belt, 15mm W x 475mm L
	814-112	Timing Belt, 15mm W x 495mm L
	814-101	Timing Belt, 15mm W x 500mm L
	814-108	Timing Belt, 15mm W x 520mm L
	814-064	Timing Belt, 15mm W x 535mm L
	814-099	Timing Belt, 15mm W x 565mm L
	21	450365MP
450366MP		Driven Pulley, 22Tooth, 12mm bore
450367MP		Driven Pulley, 28Tooth, 12mm bore
450368MP		Driven Pulley, 32Tooth, 12mm bore
22	450434	Drive Pulley, 22Tooth, 0.75" bore
	450435	Drive Pulley, 28Tooth, 0.75" bore
	450436	Drive Pulley, 32Tooth, 0.75" bore
	450437	Drive Pulley, 44Tooth, 0.75" bore
	450438	Drive Pulley, 48Tooth, 0.75" bore
	450439	Drive Pulley, 60Tooth, 0.75" bore

Service Parts


MPB Series Cleated Belt Top Mount Drive Package

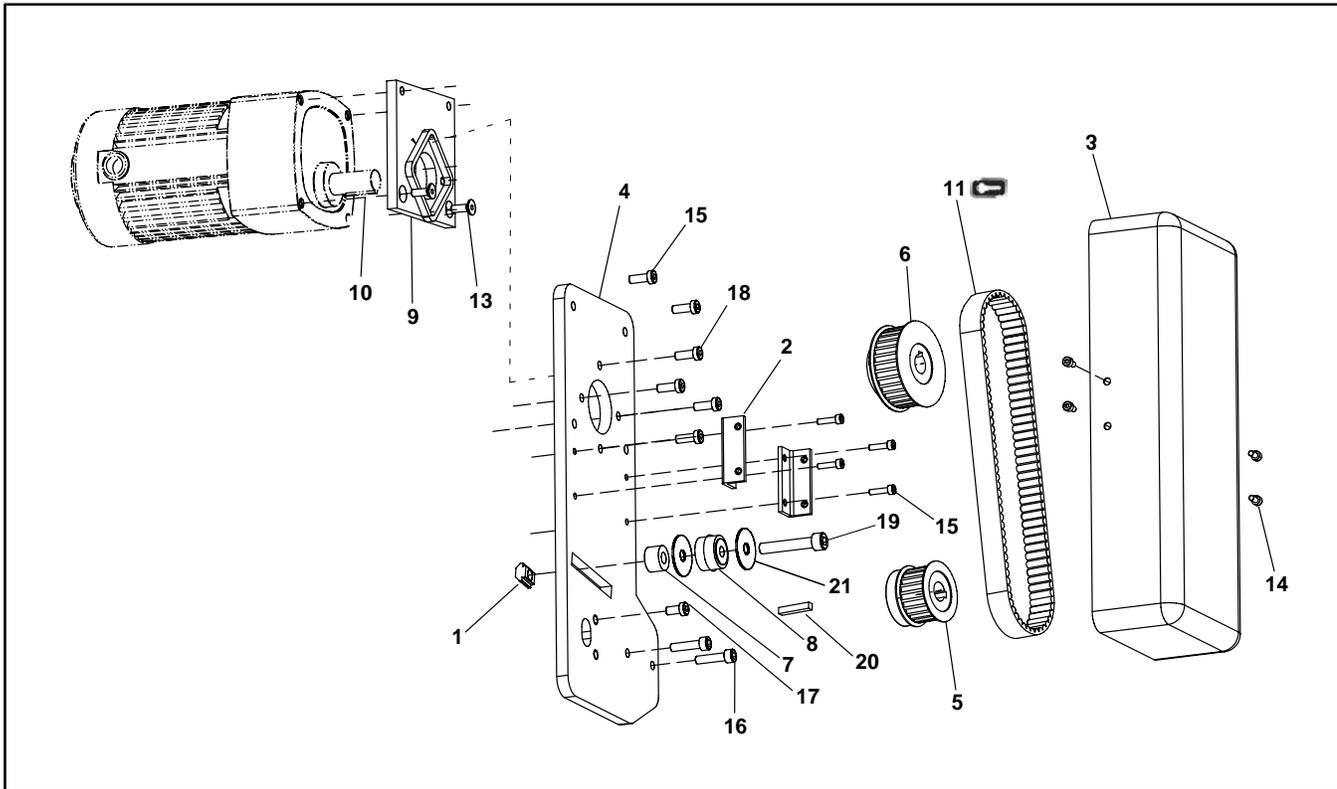

Item	Part Number	Description
1	202390M	Nut Cam Follower
2	243402	Mounting Cover Bracket
3	300871M	Drive Guard
4	243401	Mounting Plate
5	450367MP	Driven Pulley, 28 Tooth
	450368MP	Driven Pulley, 32 Tooth
6	450434	Drive Pulley, 22 Tooth, 0.75" bore
	450435	Drive Pulley, 28 Tooth, 0.75" bore
	450436	Drive Pulley, 32 Tooth, 0.75" bore
	450437	Drive Pulley, 44 Tooth, 0.75" bore
	450438	Drive Pulley, 48 Tooth, 0.75" bore
7	450445	Spacer
8	802-046	Bearing
9	450029M	Adaptor Plate Assembly
10	912-084	Square Key, 0.188 x 1.5"


Item	Part Number	Description
11	814-101	Timing Belt, 15mm W x 500mm L
	814-108	Timing Belt, 15mm W x 520mm L
	814-064	Timing Belt, 15mm W x 535mm L
	814-099	Timing Belt, 15mm W x 565mm L
	814-109	Timing Belt, 15mm W x 580mm L
	814-115	Timing Belt, 15mm W x 600mm L
	814-110	Timing Belt, 15mm W x 615mm L
12	902-157	Socket Head Screw, 1/4-28 x 0.75"
13	903-161	Flat Head Screw, 1/4-28 x 0.75"
14	920408M	Socket Head Screw, M4 x 8mm
15	920416M	Socket Head Screw, M4 x 16mm
16	920625M	Socket Head Screw, M6 x 25mm
17	920692M	Stabilization Screw, M6 x 12mm Low Hd
18	920695M	Socket Low Head Screw, M6 x 25mm
19	920845M	Socket Head Screw, M8 x 45mm
20	980422M	Square Key, 4mm x 22mm
21	807-1133	Washer

4100 Series Adapter Package

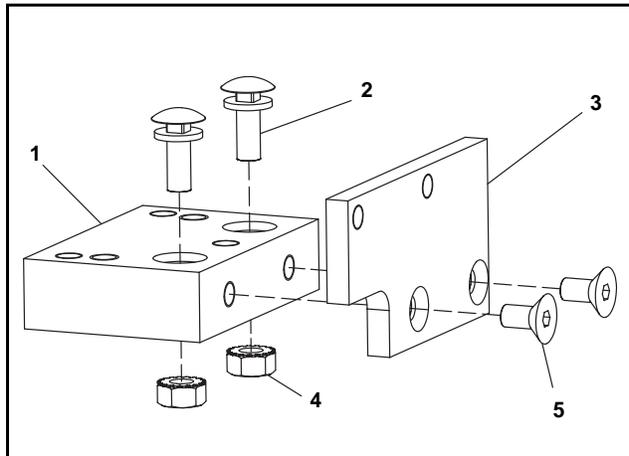

Item	Part No.	Part Description
1	609486	Mounting Block 1" (25mm)
	609487	Mounting Block 2" (51mm)
	609488	Mounting Block 3" (76mm)
	609479	Mounting Block 4" (102mm)
	609480	Mounting Block 5" (127mm)
	609481	Mounting Block 6" (152mm)
	609482	Mounting Block 7" (178mm)
	609483	Mounting Block 8" (203mm)
	609484	Mounting Block 10" (254mm)
	609485	Mounting Block 12" (305mm)
2	613602P	Bolt & Flat Washer Assembly
3	450374	Drive Adapter Plate
4	910-126	Hex Nut with Lock Washer
5	930612M	Flat Head Screw, M6 x 12mm

Gearmotors

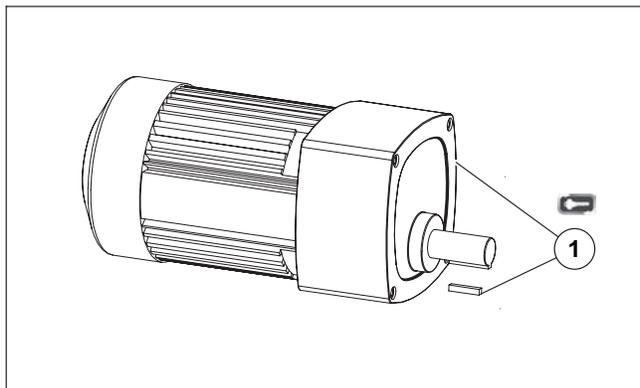

Item	Part No.	Part Description
1	62M180PS411FN	Motor, 0.08hp (0.06Kw), 10 RPM, 115VAC, 60Hz, 1-Phase
	62M180PS411FR	Motor, 0.08hp (0.06Kw), 10 RPM, 115VAC, 60Hz, 1-Phase with reversing switch
	62M060PS411FN	Motor, 0.17hp (0.13Kw), 29 RPM, 115VAC, 60Hz, 1-Phase
	62M060PS411FR	Motor, 0.17hp (0.13Kw), 29 RPM, 115VAC, 60Hz, 1-Phase with reversing switch
	62M060PS423FN	Motor, 0.25hp (0.19Kw), 29 RPM, 230VAC, 60Hz, 3-Phase
	62M030PS411FN	Motor, 0.17hp (0.13Kw), 58 RPM, 115VAC, 60Hz, 1-Phase
	62M030PS411FR	Motor, 0.17hp (0.13Kw), 58 RPM, 115VAC, 60Hz, 1-Phase with reversing switch
	62M030PS423FN	Motor, 0.25hp (0.19Kw), 58 RPM, 230VAC, 60Hz, 3-Phase
	62M020PS411FN	Motor, 0.17hp (0.13Kw), 86 RPM, 230VAC, 60Hz, 1-Phase
	62M020PS411FR	Motor, 0.17hp (0.13Kw), 86 RPM, 115VAC, 60Hz, 1-Phase with reversing switch

Item	Part No.	Part Description
	62M010PS411FN	Motor, 0.17hp (0.13Kw), 173 RPM, 115VAC, 60Hz, 1-Phase
	62M010PS411FR	Motor, 0.17hp (0.13Kw), 173 RPM, 115VAC, 60Hz, 1-Phase with reversing switch
	62M010PS423FN	Motor, 0.25hp (0.19Kw), 173 RPM, 230VAC, 60Hz, 3-Phase
	62M005PS411FN	Motor, 0.17hp (0.13Kw), 345 RPM, 230VAC, 60Hz, 1-Phase
	62M005PS411FR	Motor, 0.17hp (0.13Kw), 345 RPM, 115VAC, 60Hz, 1-Phase with reversing switch
	62M180PSD3DEN	Motor, 0.12hp (0.09Kw), 14 RPM, 130VDC
	62M060PSD3DEN	Motor, 0.25hp (0.19Kw), 42 RPM, 130VDC
	62M030PSD3DEN	Motor, 0.25hp (0.19Kw), 83 RPM, 130VDC
	62M020PSD3DEN	Motor, 0.25hp (0.19Kw), 125 RPM, 130VDC
	62M010PSD3DEN	Motor, 0.25hp (0.19Kw), 250 RPM, 130VDC
	62M005PSD3DEN	Motor, 0.25hp (0.19Kw), 500 RPM, 130VDC

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

1. Name and address of customer.
2. Dorner part number(s) of item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number (if available, part serial number).

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization (RMA) number for reference. RMA will automatically close 30 days after being issued. To get credit, items must be new and undamaged. There will be a return charge on all items returned for credit, where Dorner was not at fault. It is the customer's responsibility to prevent damage during return shipping. Damaged or modified items will not be accepted. The customer is responsible for return freight.

Conveyors and conveyor accessories

Standard catalog conveyors	30%
MPB, 7200, 7300 Series, cleated and specialty belt	50%
AquaGard & AquaPruf Series conveyors	non-returnable items
Engineered to order products	case by case
Drives and accessories	30%
Sanitary stand supports	non-returnable items

Parts

Standard stock parts	30%
Plastic chain, cleated and specialty belts	non-returnable items

Returns will not be accepted after 60 days from original invoice date. The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory. If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Customer Service Team will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2010

DORNER MFG. CORP.

975 Cottonwood Ave., PO Box 20
Hartland, WI 53029-0020 USA
TEL 1-800-397-8664 (USA)
FAX 1-800-369-2440 (USA)
Internet: www.dorner.com

Outside the USA:
TEL 1-262-367-7600
FAX 1-262-367-5827