


Controller Mounting on Dorner Conveyors and Stands

Assembly Instructions

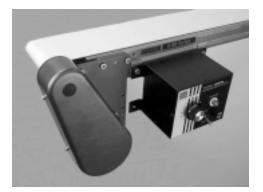

DORNER MFG. CORP. P.O. Box 20 • 975 Cottonwood Ave. Hartland, WI 53029-0020 USA INSIDE THE USA TEL: 1-800-397-8664 FAX: 1-800-369-2440 OUTSIDE THE USA TEL: 262-367-7600 FAX: 262-367-5827

For other service manuals visit our website at: www.dorner.com/service_manuals.asp

Table of Contents

Warnings - General Safety	2
Conveyor Mounting	3


Stand Leg Mounting	. 4
Aluminum Stand Legs	
Steel Stand Leg	
Notes	
Return Policy	. 6
,	

Warnings - General Safety

WARNING


To prevent injury, make sure all electrical power sources have been disconnected and locked-out before you perform any assembly or adjustments. NEVER operate equipment without guards or other protective devices properly secured in place.

Conveyor Mounting

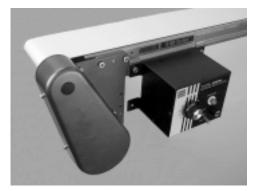

Typical Light Duty Vari-Speed Drive Mounting on 6100/6200 Series Conveyor


Figure 1

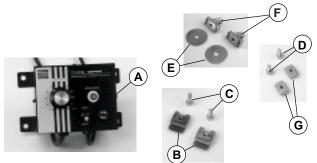


Shipping Package Figure 2

Illustration References:

 
- A 62MV1122B(R), 62MD1134(R), or 62MD1192(R) Controller
- B (2) 6100/6200 Series Accessory Mounting Clips (425501)
- C Socket Head Screws, M6 x 16 mm (2)
- D Socket Head Screws, M6 x 12 mm (2)
- E (2) Washers (807-692)
- F (2) Spring Nuts, M6 (990605M)
- G (2) T-Bars (639971M)
- H 6100/6200 Industrial Conveyor
- I 2100/2200 Series, 3100/3200 Series or LPZ Conveyor T-slot
- J Stand T-slot
- K 4 mm hex key wrench (not supplied)
- L Screwdriver (not supplied)

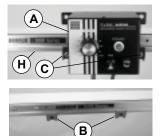

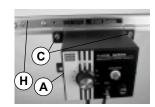



6100/6200 Series Conveyor Typical Mountings Figure 3



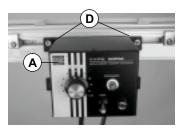

 2100/2200 Series Conveyor Typical Mounting Figure 4

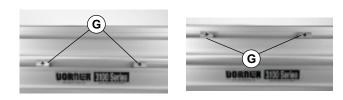

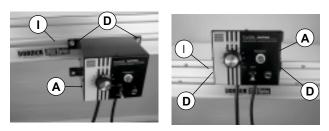

3100/3200 Series Conveyor Typical Mountings Figure 5

Stand Leg Mounting

Aluminum Stand Legs



DC Controller Attached to Single Post Support Stand Figure 6



DC Controller Attached to Aluminum Stand Figure 7

1. Place 1st T-bar (Figure 8, item G) into T-slot, insert screw (D) into hole in lower mounting tab and, using a 4 mm hex key wrench, partially thread into T-bar.


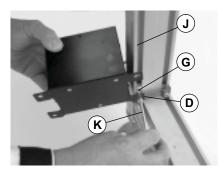


Figure 8

NOTE

For electrical wiring or troubleshooting, refer to information provided by manufacturer. 2. Raise controller to its approximate mounting position and tighten screw (Figure 9, item D) to temporarily fix the controller position. Then, insert 2nd T-bar (G) into T-slot as shown.



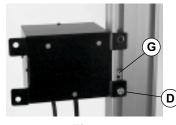

3. Using screwdriver (Figure 10, item L), raise 2nd T-bar to align it with upper mounting tab hole and insert a screw (D) and partially thread into T-bar as shown. Then position controller to desired location and tightly secure both screws (D).

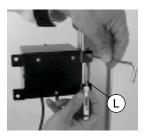




Figure 10

Steel Stand Leg

1. Attach to steel stand leg using spring nuts (Figure 11, item F), washers (E) and screws (C).



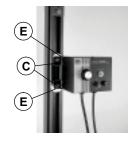


Figure 11

Notes

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

- 1. Name and address of customer.
- 2. Dorner part number(s) of item(s) being returned.
- 3. Reason for return.
- 4. Customer's original order number used when ordering the item(s).
- 5. Dorner or distributor invoice number (if available, part serial number).

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization (RMA) number for reference. RMA will automatically close 30 days after being issued. To get credit, items must be new and undamaged. There will be a return charge on all items returned for credit, where Dorner was not at fault. It is the customer's responsibility to prevent damage during return shipping. Damaged or modified items will not be accepted. The customer is responsible for return freight.

	Product Type								
	Standard Products							Engineered to order parts	
Product Line	Conveyors	Gearmotors & Mounting Packages	Support Stands	Accessories	Spare Parts (non-belt)	Spare Belts - Standard Flat Fabric	Spare Belts - Cleated & Specialty Fabric	Spare Belts - Plastic Chain	All equipment and parts
1100									
2200									
2200 Modular Belt									
2200 Precision Move		30% return fee for all products except: 50% return fee for conveyors with modular belt, cleated belt or specialty belts non-returnable							case-by-case
2300									
2300 Modular Belt									
3200									
3200 LPZ									
3200 Precision Move									
4100									
5200									
5300									
6200									
Controls									
7200 / 7300	50% return fee for all products								
7350							1		
7360	non-returnable								
7400									
7600									

Returns will not be accepted after 60 days from original invoice date. The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory. If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Customer Service Team will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2015

DORNER MFG. CORP.

975 Cottonwood Ave., PO Box 20 Hartland, WI 53029-0020 USA TEL 1-800-397-8664 (USA) FAX 1-800-369-2440 (USA) Internet: www.dorner.com

Outside the USA: TEL 1-262-367-7600 FAX 1-262-367-5827