

6100 Series Sanitary End Drive Conveyors

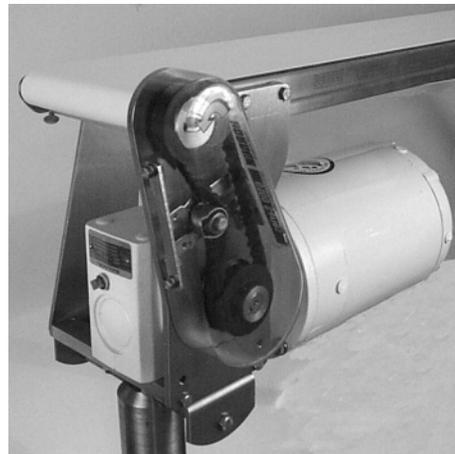
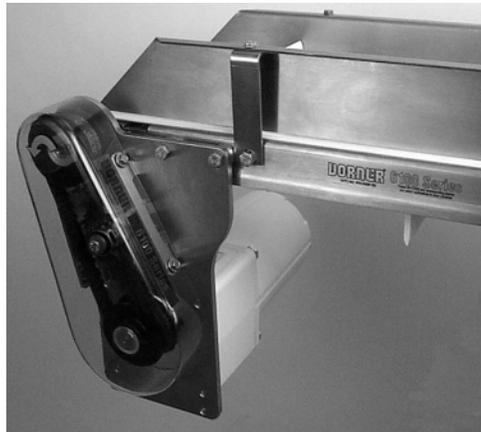


Table of Contents

Warnings – General Safety	2	Belt Removal for Conveyor With Stands and/or Gearmotor Mounting Package	9
Introduction	2	Belt Installation for Conveyor Without Gearmotor Mounting Package or Stands	10
Product Description	3	Belt Installation for Conveyor With Stands and/or Gearmotor Mounting Package	10
Specifications	3	Conveyor Belt Tensioning	11
Installation	4	Pulley Removal	11
Required Tools	5	A – Removal of Drive Pulley with Standard 0.47" (12 mm) Diameter Outboard Shaft	12
Standard Tools	5	B – Removal of Idler Pulley with Tool-less Belt Release	12
Recommended Installation Sequence	5	Bearing Replacement	13
Conveyors Up to 13 ft (3962 mm)	5	Bearing Removal	13
Conveyors Longer Than 13 ft (3962 mm)	5	Bearing Installation	13
Mounting Brackets with Return Rollers	6	Drive Pulley Shaft Seal Replacement	13
Cleated Belt Conveyors	6	Pulley Replacement	14
2" to 6" (44 mm to 152 mm) Wide	6	Drive Pulley with Standard 0.47" (12 mm) Diameter Outboard Shaft	14
Flat Belt Conveyors	6	Idler Pulley with Tool-less Belt Release	14
8" (203 mm) & Wider Flat Belt Conveyors	7	Service Parts	16
Preventative Maintenance & Adjustment	7	6100 Sanitary End Drive Conveyor	16
Required Tools	7	–21 1" Sanitary Bolt-On High Side	18
Standard Tools	7	–22 2" Sanitary Bolt-On High Side	19
Special Tools	7	–23 Sanitary Fully Adjustable UHMW Guide	20
Checklist	7	–24 Sanitary Adjustable Width UHMW Guide	21
Lubrication	7	Sanitary 2" Through 6" Wide Flat Belt Mounting Bracket with Return Roller	22
Conveyors with Standard 0.47" (12 mm) Diameter Output Shaft	7	Sanitary 8" Through 18" Wide Flat Belt Mounting Bracket with Return Roller	22
Mounting Brackets with Return Rollers	7	Sanitary Cleated Belt Mounting Bracket with return Roller	23
Maintaining Conveyor Belt	7	Configuring Conveyor Belt Part Number	23
Troubleshooting	7	Return Policy	24
Cleaning Conveyor Belt	8		
Cleaning Conveyor	8		
Conveyor Belt Replacement	8		
Conveyor Belt Replacement Sequence	8		
Belt Removal for Conveyor Without Gearmotor Mounting Package or Stands	8		

Warnings – General Safety

	WARNING	
<p>The safety alert symbol, black triangle with white exclamation, is used to alert you to potential personal injury hazards.</p>		

		WARNING
<p>Gearmotors may be HOT. DO NOT TOUCH Gearmotors.</p>		

		DANGER
<p>Climbing, sitting, walking or riding on conveyor will cause severe injury. KEEP OFF CONVEYORS.</p>		

		WARNING
<p>Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.</p> <p>When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, CHECK FOR POTENTIAL PINCH POINTS and other mechanical hazards before system start-up.</p>		

		DANGER
<p>DO NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.</p>		

		WARNING
<p>Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.</p>		

		WARNING
<p>Loosening stand height or angle adjustment screws may cause conveyor sections to drop down, causing severe injury. SUPPORT CONVEYOR SECTIONS PRIOR TO LOOSENING STAND HEIGHT OR ANGLE ADJUSTMENT SCREWS.</p>		

Introduction

IMPORTANT: Some illustrations may show guards removed. Do NOT operate equipment without guards.

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage.
- Accessories may be shipped loose. See accessory instructions for installation.

Dorner's Limited Warranty applies.

Dorner 6100 Series conveyors are covered by Patent Nos. 5174435, 6109472 and corresponding patents and patent applications in other countries.

Dorner reserves the right to make changes at any time without notice or obligation.

Product Description

Refer to Figure 1 for typical conveyor components.

Typical Components	
A	Conveyor
B	Gearmotor Mounting Package
C	Gearmotor
D	Guiding & Accessories
E	Mounting Brackets with Return Rollers
F	Support Stands
G	Variable Speed Controller
H	Drive End
I	Idler/Tension End


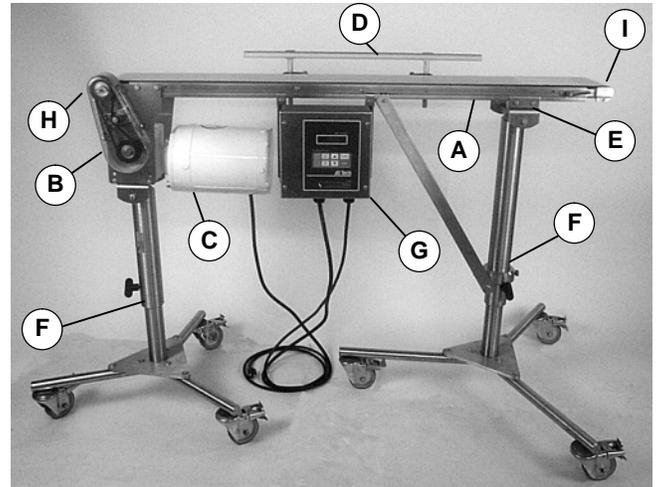


Figure 1


Specifications

Models:

Flat Belt 6100 Series Sanitary Conveyor

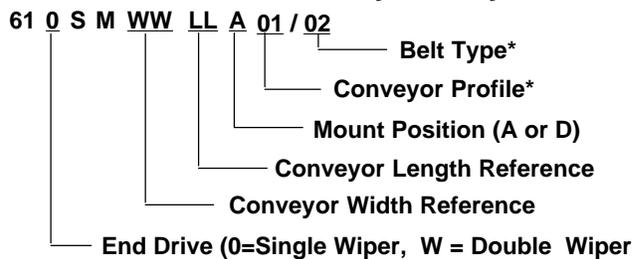

Cleated Belt 6100 Series Sanitary Conveyor

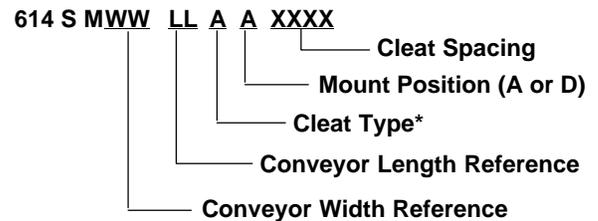

* See "Ordering and Specifications" Catalog for details.

Conveyor Supports:

Maximum Distances:

J = 18" (457 mm)**

K = 6 ft (1829 mm)***

L = 18" (457 mm)

** For Heavy Load Bottom Mount Package, mount support under gear head.

*** For conveyors longer than 13 ft (3962 mm), install support at joint.

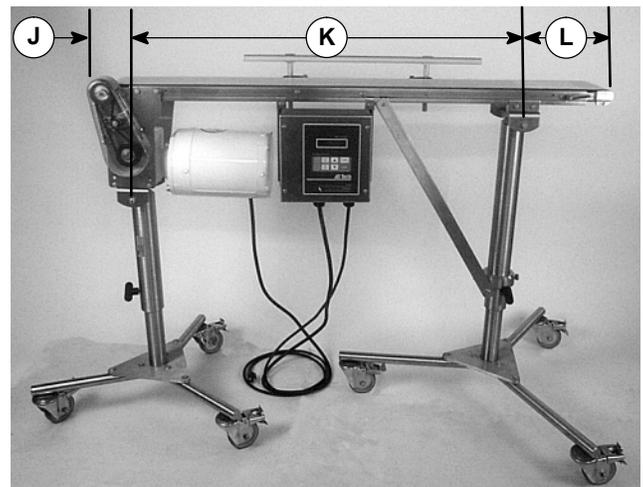


Figure 2

Specifications

Specifications:

Conveyor Width Reference (WW)	02	03	04	05	06	08	10	12	18
Conveyor Belt Width	1.75" (44 mm)	2.75" (70 mm)	3.75" (95 mm)	5" (127 mm)	6" (152 mm)	8" (203 mm)	10" (254 mm)	12" (305 mm)	18" (457 mm)
Maximum Conveyor Load* (See NOTE Below)	30 lb (14 kg)	35 lb (16 kg)	42 lb (19 kg)	50 lb (23 kg)	60 lb (27 kg)	60 lb (27 kg)	60 lb (27 kg)	60 lb (27 kg)	60 lb (27 kg)
Conveyor Start-up Torque*	4 in-lb (0.5 Nm)	5 in-lb (0.6 Nm)	6 in-lb (0.7 Nm)	7 in-lb (0.8 Nm)	8 in-lb (0.9 Nm)	10 in-lb (1.1 Nm)	12 in-lb (1.4 Nm)	14 in-lb (1.5 Nm)	15 in-lb (1.7 Nm)
Belt Travel	3.5" (88 mm) per revolution of pulley								
Maximum Belt Speed*	235 feet/minute (72 meters/minute)								
Belt Take-up	0.38" (10 mm) of stroke = 0.75" (19 mm) of belt take-up								

Conveyor Length Reference (LL)	02	03	04	05	06	07	08	09	10	11	12	13**	14**	15**	16**	17**	18**
Conveyor Length	2-ft (610 mm)	3-ft (914 mm)	4-ft (1219 mm)	5-ft (1524 mm)	6-ft (1829 mm)	7-ft (2134 mm)	8-ft (2438 mm)	9-ft (2743 mm)	10-ft (3048 mm)	11-ft (3353 mm)	12-ft (3658 mm)	13-ft (3962 mm)**	14-ft (4267 mm)**	15-ft (4572 mm)**	16-ft (4877 mm)**	17-ft (5182 mm)**	18-ft (5486 mm)**

* See "Ordering and Specifications" Catalog for details.

** Lengths available only in 6" (152 mm) & wider conveyors.

NOTE: Maximum conveyor loads based on:

- Non-accumulating product
- Product moving towards gearmotor
- Conveyor being mounted horizontal

Installation

NOTE: 6100 Series sanitary conveyors are shipped with a "belt travel direction" sticker (M of Figure 3) installed. After drive is installed and tested, remove sticker.

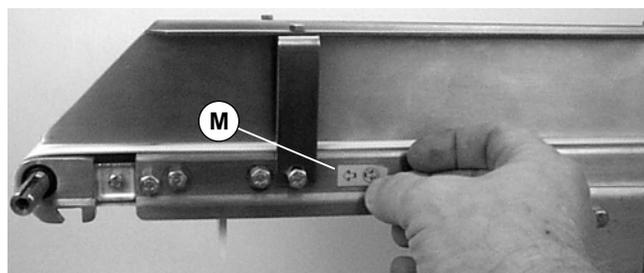


Figure 3

NOTE: Dorner recommends cleaning all the "food zones" prior to placing conveyor into service. Insure adequate access is provided for cleaning and servicing equipment so that the required level of hygiene can be maintained.

Illustration References

M	Sticker
N	Level
O	Conveyor frame without belt
P	M6 x 10 mm Hex Head Socket Head Screws (6x) (shipped loose)
Q	Connector Strips (2x) (Attached to conveyor section)
R	Conveyor frame with belt
S	M6 x 12 mm Hex Head Screws (4x)
T	M6 x 16 mm Hex Head Screws & Hard Washers (4x)

NOTE: Conveyor MUST be mounted straight, flat and level within confines of conveyor. Use a level (N of Figure 4) for set-up.

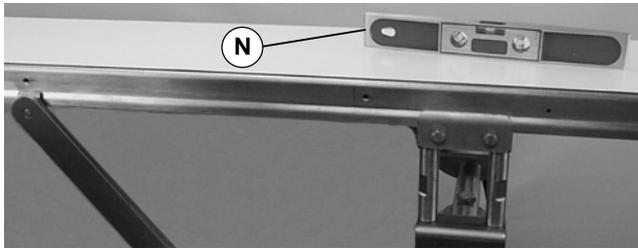


Figure 4

Required Tools

Standard Tools

- 10 mm wrench (for hexagon head fasteners)
- Level
- Torque wrench

Recommended Installation Sequence (see Table of Contents for page number)

- Assemble conveyor (if required)
- Attach mounting bracket(s) with return roller to conveyor (see pages 6 through 7)
- Install stands (see accessory instructions)
- Attach conveyor to stands
- Mount gearmotor mounting package (see accessory instructions)
- Attach guides/accessories (see “Service Parts” section, pages 16 through 23)

Conveyors Up to 13 ft (3962 mm)

No additional assembly is required.

Conveyors Longer Than 13 ft (3962 mm)

1. Typical components (Figure 5)

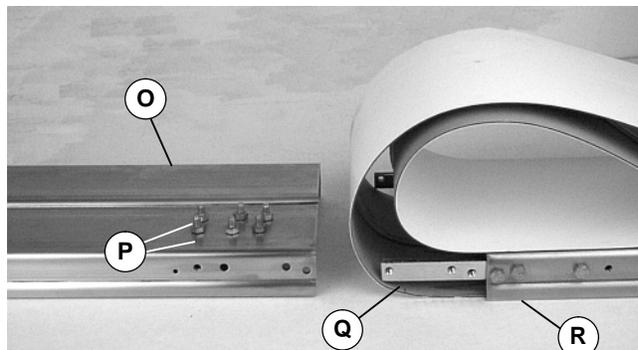


Figure 5

2. Compress tension end (Figure 6). Refer to steps 3, 4 & 5 under the “Belt Removal for Conveyor Without Gearmotor Mounting Package or Stands” on page 8.



Figure 6

3. Roll out conveyor belt.
4. Place conveyor frame (O Figure 7) into belt loop.

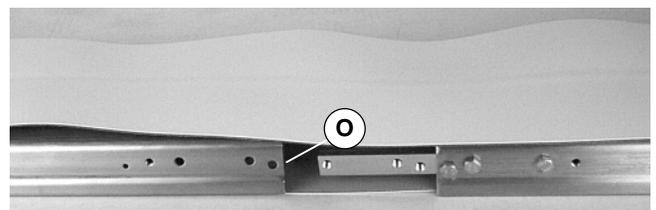


Figure 7

5. Join conveyor sections (O and R of Figure 8). Install screws (P) on both sides. Tighten to 92 in-lb (10.4 Nm).

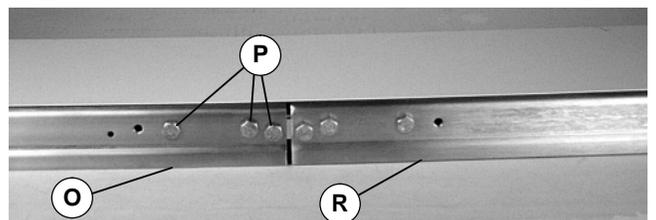


Figure 8

6. Tension conveyor belt. Refer to “Conveyor Belt Tensioning” on page 11.

Installation

Mounting Brackets with Return Rollers Cleated Belt Conveyors

1. Typical components (Figure 9)

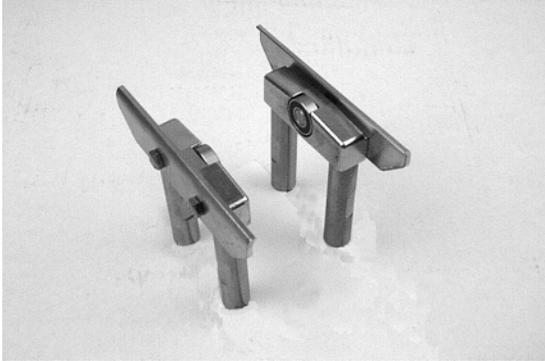


Figure 9

2. Loosen screws (S of Figure 10) and remove screws and washers (T).

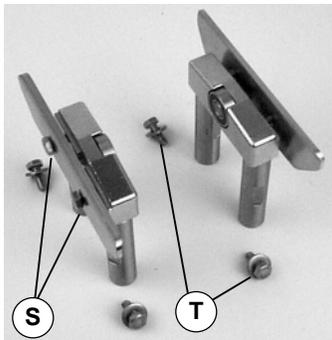


Figure 10

3. Attach clamp plates on each side of conveyor (Figure 11). Tighten the screws (S) to 92 in-lb (10.4 Nm).

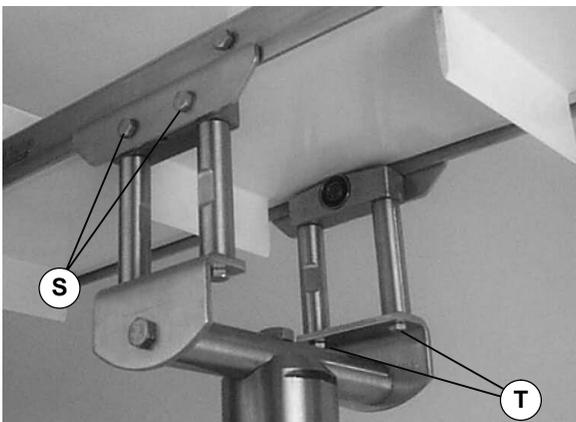


Figure 11

4. Attach to support stand. Tighten screws (T) to 92 in-lb (10.4 Nm). Make sure belt is free to move.

2" to 6" (44 mm to 152 mm) Wide Flat Belt Conveyors

1. Typical components (Figure 12)

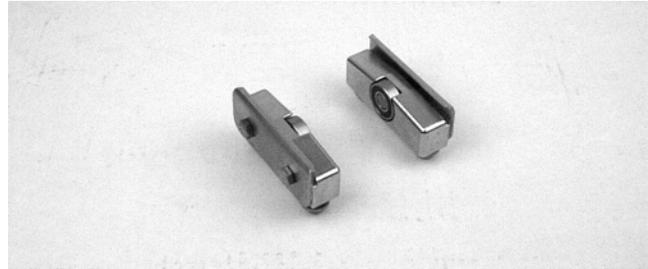


Figure 12

2. Loosen screws (S of Figure 13) and remove screws and washers (T).

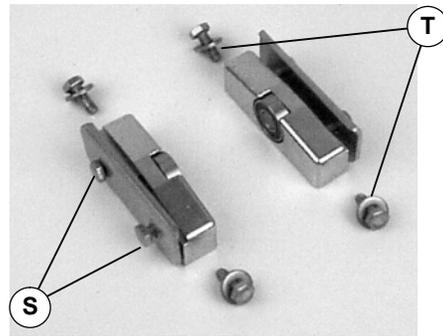


Figure 13

3. Attach clamp plates on each side of conveyor (Figure 14). Tighten the screws (S) to 92 in-lb (10.4 Nm).

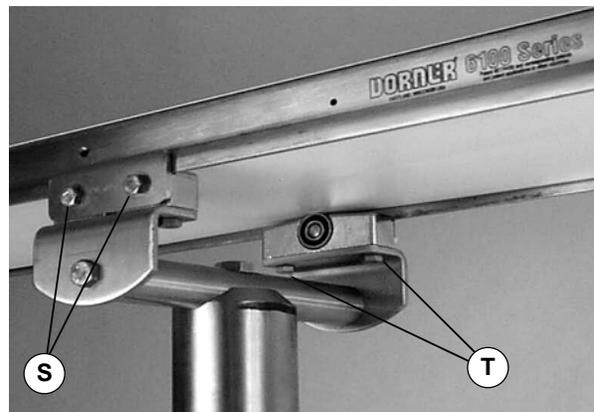


Figure 14

4. Attach to support stand. Tighten screws (T) to 92 in-lb (10.4 Nm). Make sure belt is free to move.

8" (203 mm) & Wider Flat Belt Conveyors

1. Typical components (Figure 15)

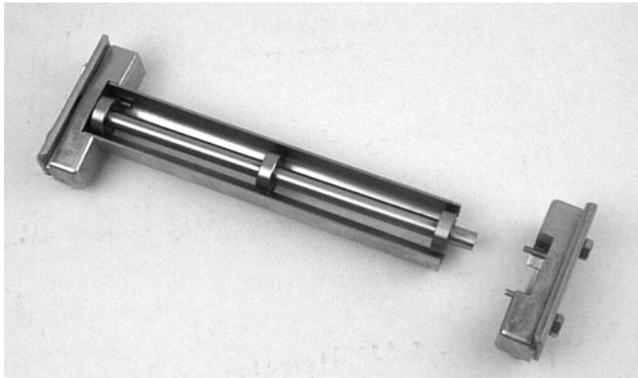


Figure 15

2. Loosen screws (S of Figure 16) and remove screws and washers (T).

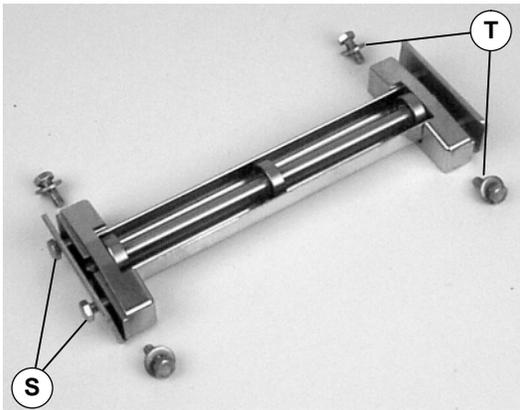


Figure 16

3. Attach clamp plates on each side of conveyor (Figure 17). Tighten the screws (S) to 92 in-lb (10.4 Nm).

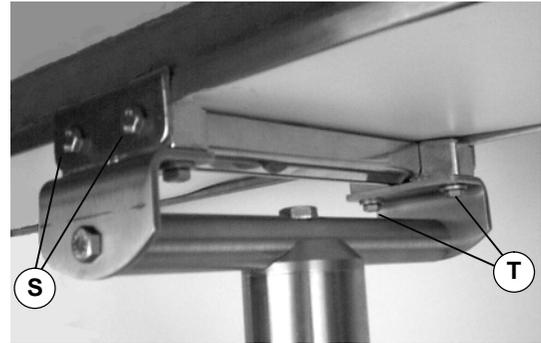


Figure 17

4. Attach to support stand. Tighten screws (T) to 92 in-lb (10.4 Nm). Make sure belt is free to move.

Preventative Maintenance & Adjustment

Required Tools

Standard Tools

- Wrenches (for hexagon head fasteners)
8 mm & 10 mm
- Arbor press

Special Tools

- 450281 Sealed Bearing Removal Tool
- 450282 Sealed Bearing Installation Tool

Checklist

- Keep service parts on hand (see "Service Parts" section for recommendations)
- Keep supply of belt cleaner (part # 625619)
- Clean entire conveyor and knurled pulley while disassembled

- Replace worn or damaged parts

Lubrication

Conveyor with Standard 0.47" (12 mm) Diameter Output Shaft

No lubrication is required. Replace bearings if worn.

Mounting Brackets with Return Rollers

No lubrication is required. Replace bearings if worn.

Maintaining Conveyor Belt

Troubleshooting

Inspect conveyor belt for:

- Surface cuts or wear
- Stalling or slipping
- Damage to V-guide

Preventive Maintenance and Adjustment

Surface cuts and wear indicate:

- Sharp or heavy parts impacting belt
- Jammed parts
- Improperly installed bottom wiper(s)
- Accumulated dirt in wiper(s)
- Foreign material inside the conveyor
- Improperly positioned accessories
- Bolt-on guiding is pinching belt

Stalling or slipping indicates:

- Excessive load on belt
- Conveyor belt or drive timing belt are not properly tensioned
- Worn knurl or impacted dirt on drive pulley
- Intermittent jamming or drive train problems

Damage to V-guide indicates:

- Twisted or damaged conveyor frame
- Dirt impacted on pulleys
- Excessive or improper side loading

NOTE: Visit www.dorner.com for complete list of troubleshooting solutions.

Cleaning Conveyor Belt

IMPORTANT: Do not use belt cleaners that contain alcohol, acetone, Methyl Ethyl Ketone (MEK) or other harsh chemicals.

For most types of conveyor belt, use mild soap and water to clean the conveyor belt.

Cleaning Conveyor

Due to the simplified design of the 6100 Series sanitary conveyor, the conveyor belt can be conveniently and quickly removed to expose the inside of the conveyor. Conveyor may be cleaned with mild soap and water, as required. Refer to the “Conveyor Belt Replacement Procedure” topic on page 8 for belt removal details.

IMPORTANT: Due to the wide variety of possible applications for washdown conveyors, methods and materials used to clean the conveyor equipment is the responsibility of the user. If a high pressure washer is used, avoid direct contact with bearings and gearmotors.

Conveyor Belt Replacement



Conveyor Belt Replacement Sequence (see Table of Contents for page number)

- Remove old conveyor belt
 - Conveyor without Gearmotor Mounting Package or Stands
 - Conveyor with Stands and/or Gearmotor Mounting Package
- Install new conveyor belt
- Tension conveyor belt

Belt Removal for Conveyor Without Gearmotor Mounting Package or Stands

1. For a flat belt conveyor, remove and retain the bottom wiper(s) (U of Figure 18).

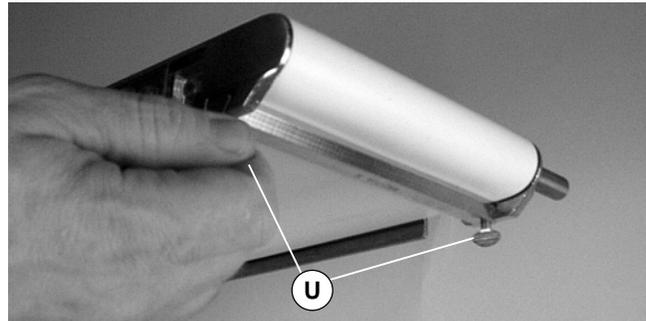


Figure 18

2. If conveyor is equipped with guiding and accessories, remove them from one side.

NOTE: Tension end of conveyor is identified with a

symbol  (V of Figure 19).

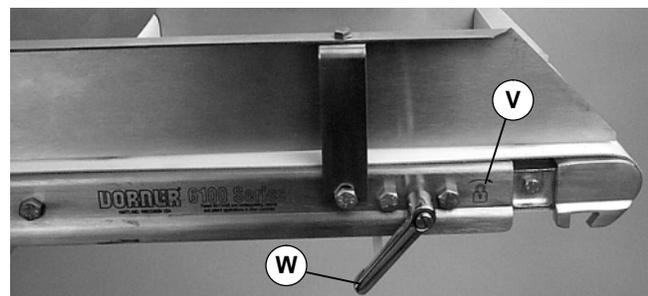


Figure 19

Preventive Maintenance and Adjustment

3. Apply counter-clockwise pressure to tension handle (X of Figure 20).

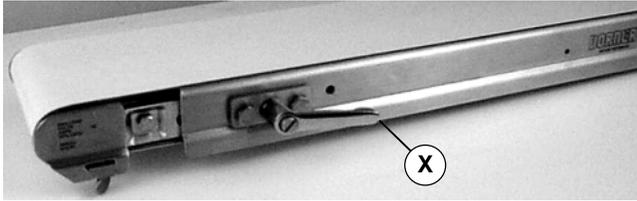


Figure 20

4. While holding tension handle (X), rotate lock handle (W of Figures 19 & 21) counter-clockwise to release the lock.

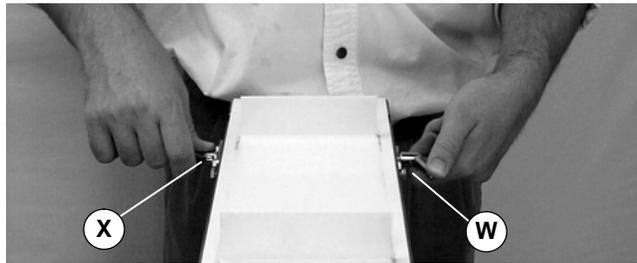


Figure 21

5. Rotate tension handle (X of Figures 20 & 21) clockwise to release conveyor belt tension.
6. Remove conveyor belt.

Belt Removal for Conveyor With Stands and/or Gearmotor Mounting Package

NOTE: For conveyor with a Heavy Load Bottom or Top Mount Package, bracket (Z of Figure 22) must be removed.

- Remove two (2) M6 x 30 mm cap screws (Y).
- Remove two (2) M6 x 16 mm cap screws (AA).
- Remove bracket (Z).

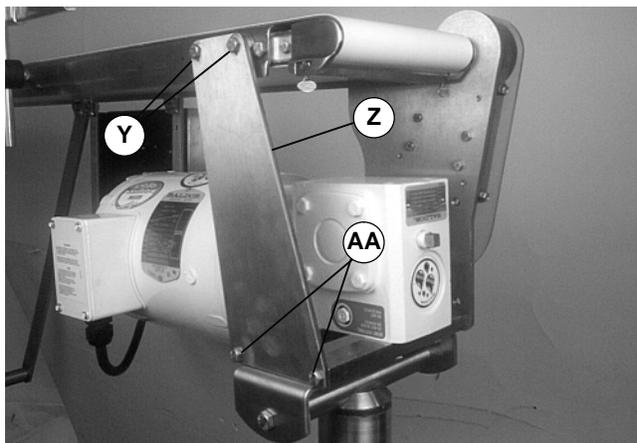


Figure 22

1. For a flat belt conveyor, remove and retain the bottom wiper(s) (U of Figure 18).
2. If conveyor is equipped with guiding and accessories, remove them from one side.
3. Apply counter-clockwise pressure to tension handle (X of Figure 20).
4. While holding tension handle (X), rotate lock handle (W of Figures 19 & 21) counter-clockwise to release the lock.
5. Rotate tension handle (X of Figures 20 & 21) clockwise to release conveyor belt tension.

! WARNING !

The weight of the gearmotor is all on one end of the conveyor which could cause it to tip off the stands when the mounting clamp plates are loosened. Be sure to provide support (AB of Figure 23) underneath the gearmotor while changing the belt.

6. Temporarily support conveyor at gearmotor mounting package (AB of Figure 23).

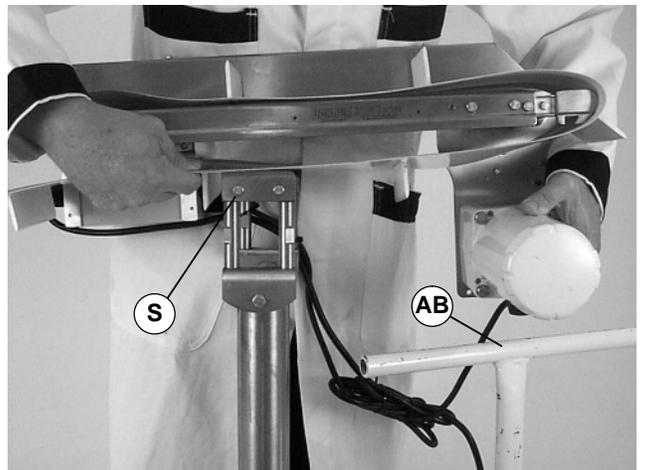


Figure 23

NOTE: To remove belt, complete steps 7 & 8, at each stand location.

! WARNING !

To prevent injury from the support stand tipping-over when conveyor is uncoupled, anchor stand to floor or otherwise stabilize the stand.

Preventive Maintenance and Adjustment

7. Loosen the mounting clamp plates (S of Figures 23 and 24), on both sides of the conveyor. Raise the conveyor and remove the belt.

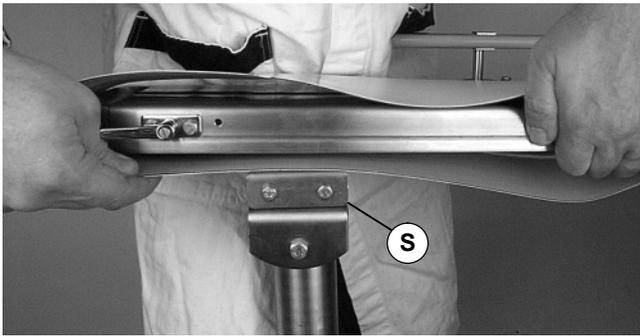


Figure 24

8. With belt removed, secure conveyor with clamp plates (S).

Belt Installation for Conveyor without Gearmotor Mounting Package or Stands

IMPORTANT: On a flat belt conveyor, the wiper is installed on discharge end. With a reversing gearmotor, a second bottom wiper must be installed on opposite end.

1. Orient the conveyor belt so that the splice leading fingers (AC of Figure 25) point in the direction of belt travel (AD).

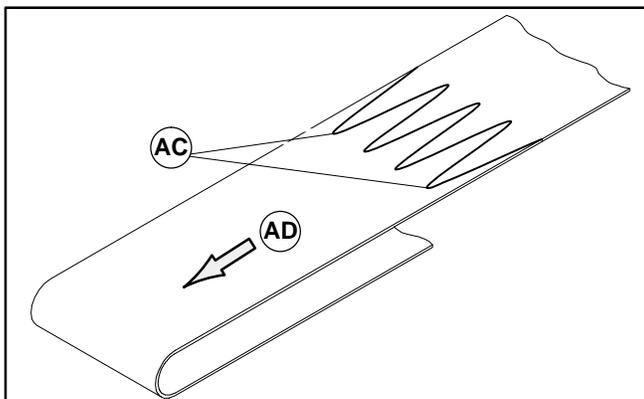


Figure 25

2. Slide belt onto the conveyor frame assembly.
3. On a flat belt conveyor, install bottom wiper(s) (U of Figure 18). Center thumbscrews in frame and tighten.
4. Tension belt. Refer to “Conveyor Belt Tensioning” on page 11.
5. Where applicable, replace guiding.

Belt Installation for Conveyor with Gearmotor Mounting Package and/or Stands

IMPORTANT: On a flat belt conveyor, the wiper is installed on discharge end. Belt travel direction is identified by an arrow on the drive cover (AE of Figure 26). With a reversing gearmotor, a second bottom wiper must be installed on opposite end.

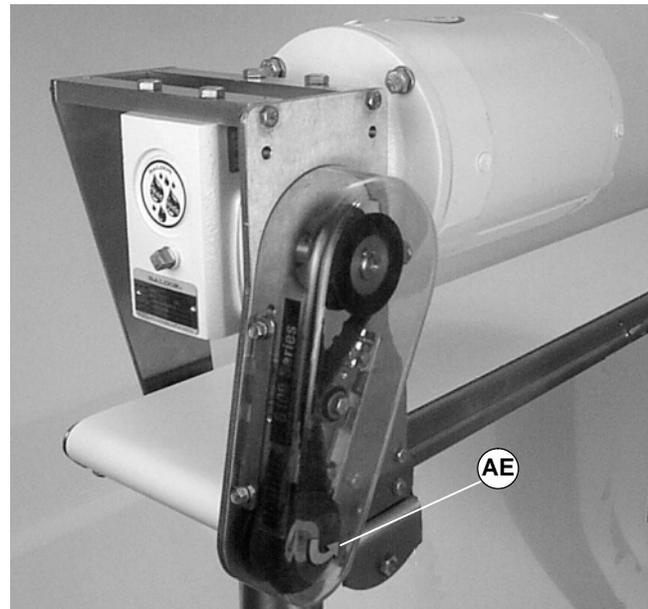


Figure 26

1. Orient the conveyor belt so that the splice leading fingers (AC of Figure 25) point in the direction of belt travel (AD).

NOTE: To install belt, complete steps 2, 3 & 4, at each stand location.

2. Loosen the mounting clamp plates (S of Figures 23 and 24), on both sides of the conveyor. Raise the conveyor and replace the belt.
3. Lower the conveyor onto the mounting blocks being careful not to pinch belt.
4. Tighten clamp plates screws (S) to 92 in-lb (10.4 Nm).
5. On a flat belt conveyor, install bottom wiper(s) (U of Figure 18). Center thumbscrews in frame and tighten.
6. For a conveyor with a Heavy Load Bottom or Top Mounting package, re-install bracket (Z of Figure 22).
7. Tension belt. Refer to “Conveyor Belt Tensioning” on page 11.
8. Where applicable, replace guiding.

Preventive Maintenance and Adjustment

Conveyor Belt Tensioning



NOTE: Tension end of conveyor is identified with a

symbol  (V of Figure 19).

1. Completely loosen lock handle (W of Figure 19).

NOTE: Do not exceed a torque on the tension handle (X of Figure 27) of 25 in-lb (2.8 Nm) for 2" to 12" (44 mm to 305 mm) wide conveyors and 40 in-lb (4.5 Nm) for an 18" (457 mm) wide conveyor. Over-tensioning conveyor belt will cause excessive pulley bearing load and early failure.

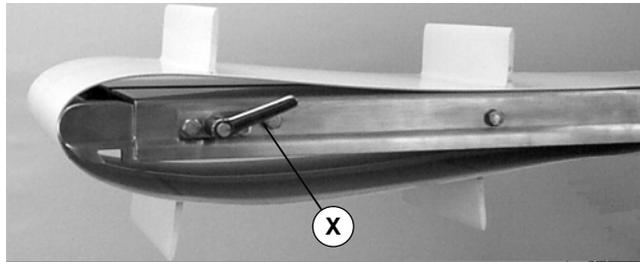


Figure 27

- 2a. For existing belt:
With V-guide seated in pulley, rotate tension handle (X of Figure 27) counter-clockwise to sufficiently tension the belt to convey the load.

NOTE: If maximum take-up stroke is achieved, replace conveyor belt.

- 2b. For a new belt:
With V-guide seated in pulley, rotate tension handle (X of Figure 27) counter-clockwise to a distance of 1" (25 mm) (AF of Figure 28).

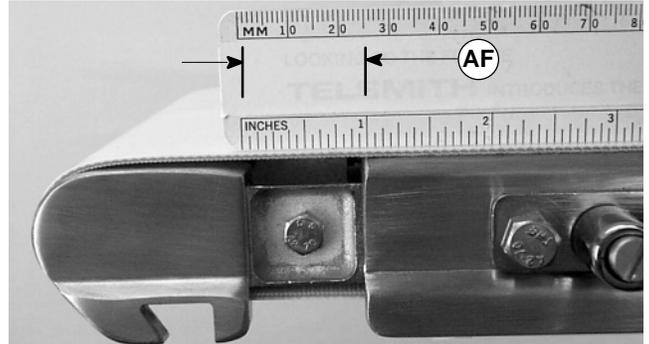


Figure 28

3. Tighten lock handle (W of Figure 19) by rotating it clockwise .

Pulley Removal



Remove conveyor belt to access pulley(s). See "Conveyor Belt Replacement" on page 8. Remove the desired pulley following instructions:

- A – Drive Pulley with Standard 0.47" (12 mm) Diameter Output Shaft
- B – Idler Pulley with Tool-less Belt Release

Preventive Maintenance and Adjustment

A – Removal of Drive Pulley with Standard 0.47" (12 mm) Diameter Output Shaft



1. Remove the gearmotor mounting package. See accessory instructions.
2. Remove screw (AG).

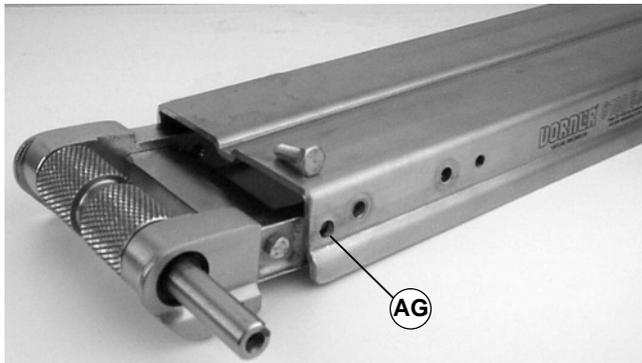


Figure 29

NOTE: With a Heavy Load Mount Package, two (2) screws (Y of Figure 22) were removed in step 1.

3. Remove three (3) screws (AH of Figure 30) on the side opposite the drive shaft.

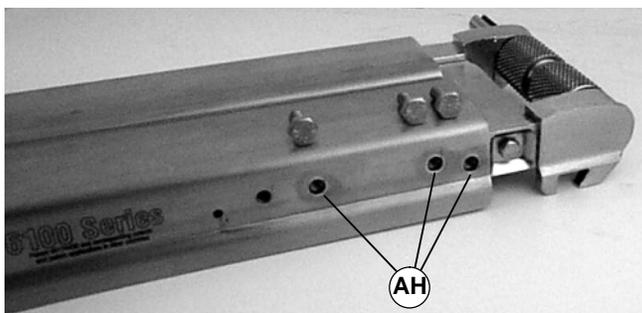


Figure 30

4. Remove the drive tail assembly.
5. Remove screw (AI of Figure 31).

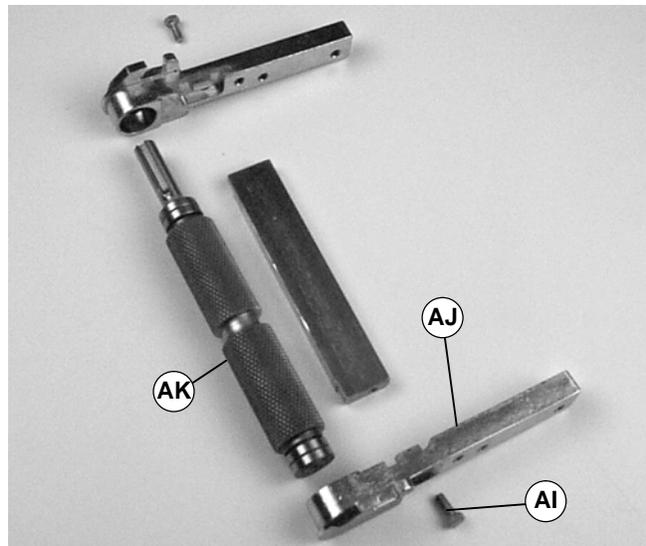


Figure 31

6. Remove headplate (AJ).
7. Remove pulley (AK).

B – Removal of Idler Pulley with Tool-less Belt Release

1. Remove handle (W of Figure 32).

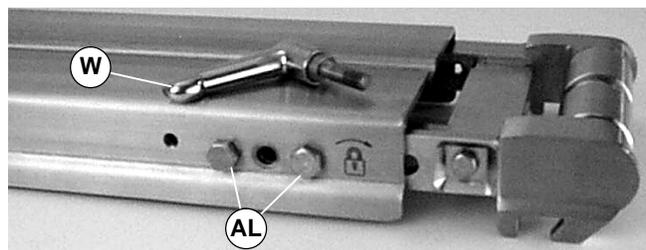


Figure 32

2. Remove two (2) screws (AL of Figure 32).
3. Remove two (2) screws (AL of Figure 20). Remove handle assembly (X).

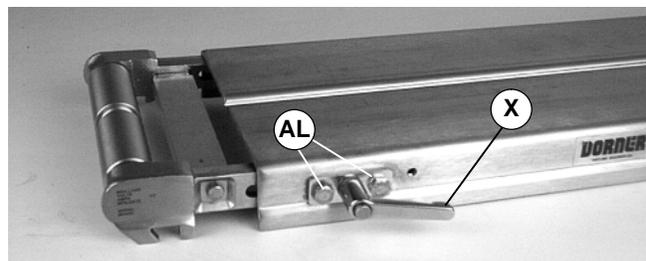


Figure 33

4. Remove tail assembly.

Preventive Maintenance and Adjustment

5. Remove screw (AI).

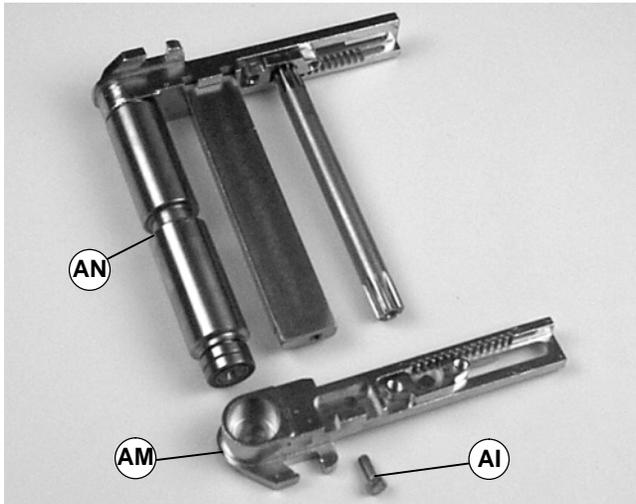


Figure 34

6. Remove headplate (AM).
7. Remove pulley (AN).

Bearing Replacement

Bearing Removal

1. Place bearing removal tool (part # 450281) over bearing(s) with lip (AO of Figure 35) located in Bearing gap (AP) as shown.

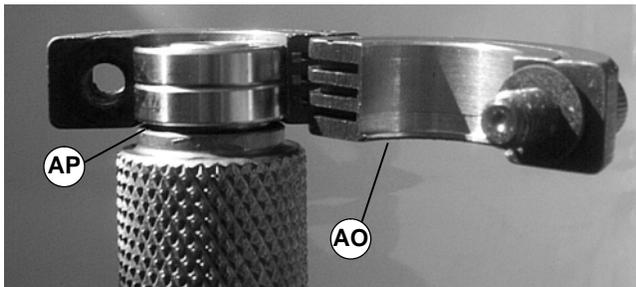


Figure 35

2. Using 3/16" hex key wrench (AQ of Figure 36), tighten tool.

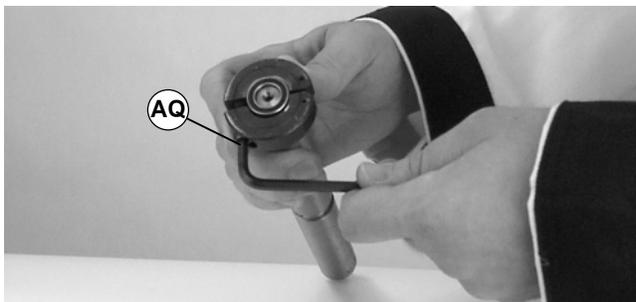


Figure 36

3. Using a puller (AR of Figure 37), remove and discard bearing(s).

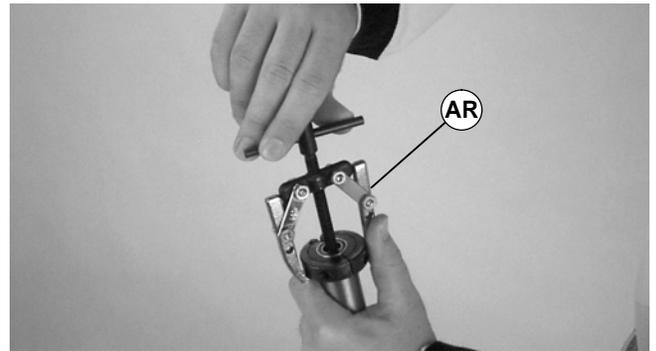


Figure 37

Bearing Installation

IMPORTANT: Install bearings one at a time.

1. Inspect seating surface(s) for damage. Replace if damaged.
2. Slide bearing (part # 802-120) (AS of Figure 38) onto pulley shaft.



Figure 38

3. Slide the sleeve of tool (part # 450282) (AT of Figure 39) over bearing.

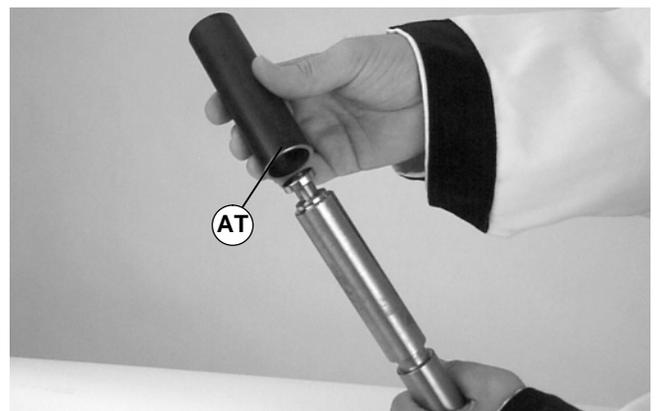


Figure 39

Preventive Maintenance and Adjustment

4. Place open end of shaft (AU of Figure 40) into sleeve.

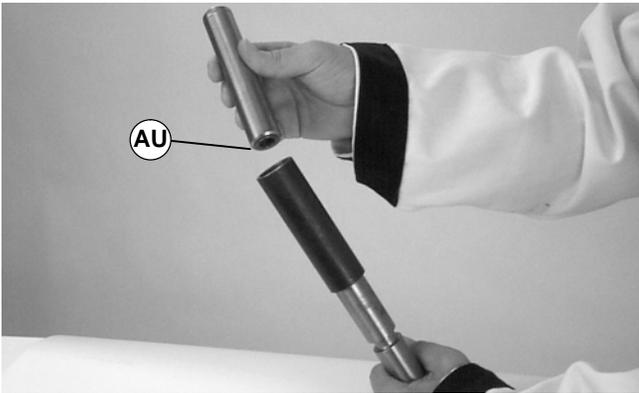


Figure 40

5. Using arbor press or similar device, press bearing onto pulley shaft (see Figure 41).

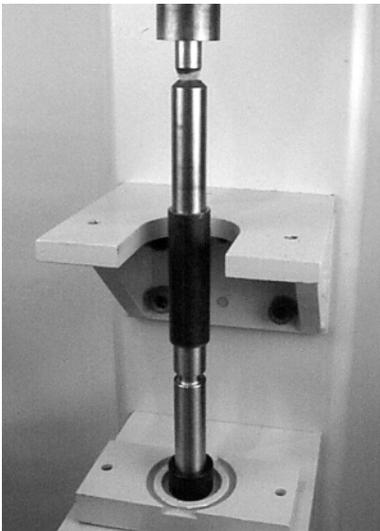


Figure 41

6. Repeat steps 1 through 5 for each bearing.

Drive Pulley Shaft Seal Replacement

1. Remove drive pulley from headplate. See “Pulley Removal” topic on page 11.
2. Push-out and discard old seal.
3. Install new seal (part # 807-1016) with grooved surface (AV of Figure 42) facing out.

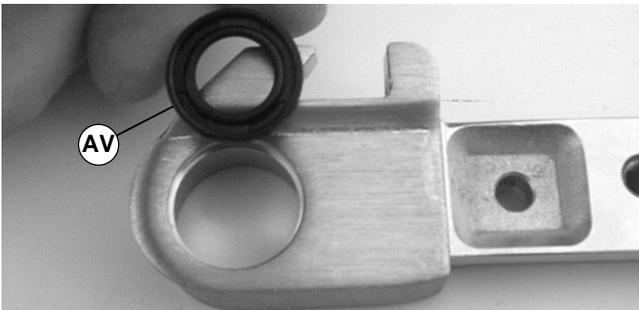


Figure 42

4. Using Food Grade Grease (part # 829-012), apply a small bead (AW) around entire edge of shaft hole in seal.

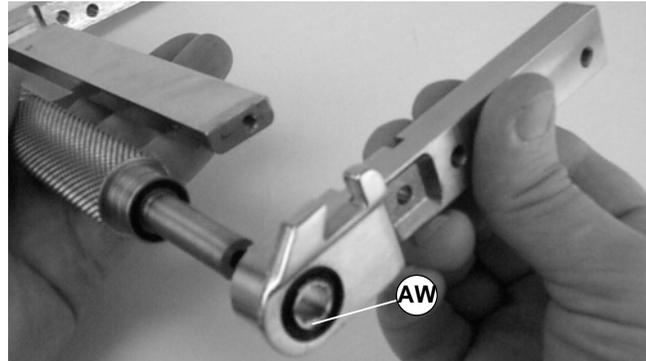


Figure 43

5. Re-install drive pulley per the following topic.

Pulley Replacement

Drive Pulley with Standard 0.47” (12 mm) Diameter Output Shaft

1. Reverse the removal procedure “A” (see page 12).

Idler Pulley with Tool-less Belt Release

IMPORTANT: On tension tail, be sure to correctly orient components to match the factory orientation. Orient threaded hole side of pinion (AX of Figure 44) so it is toward detached tail plate as shown. Be sure both pinion housings (AY) engage the same tooth positions of racks as shown.

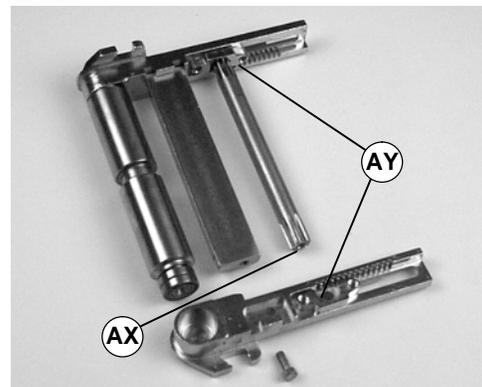



Figure 44

1. Reverse the removal procedure “B” (see page 12).


Service Parts

NOTE: For replacement parts other than those shown in this section, contact an authorized Dorner Service Center or the factory.

6100 Sanitary End Drive Conveyor

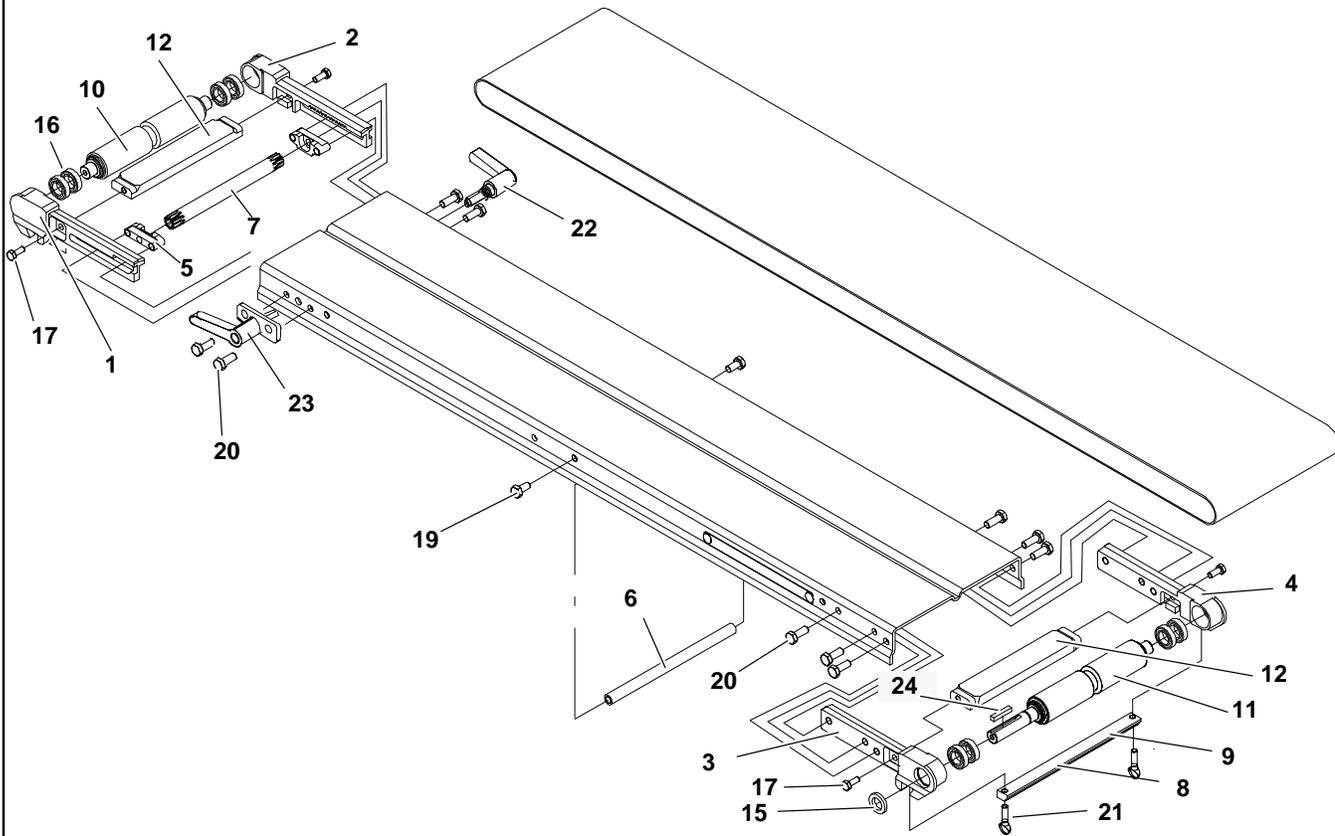

6100 Sanitary End Drive Conveyor Extension

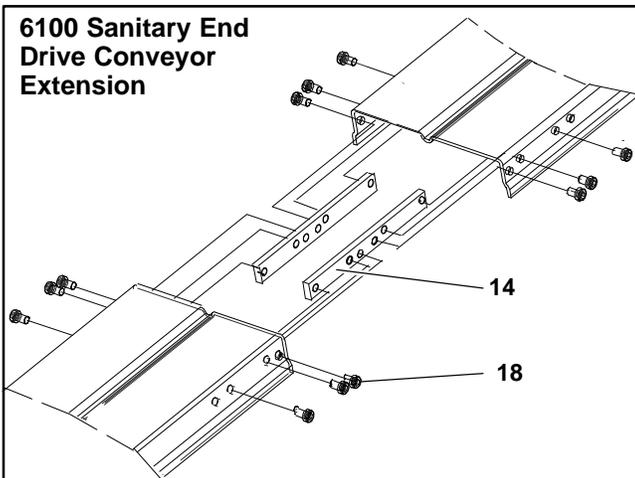

Item	Part Number	Description
1	450231MSS	Tension Plate RH 2-3" Wide
	450031MSS	Tension Plate RH 4-18" Wide
2	450232MSS	Tension Plate LH 2-3" Wide
	450032MSS	Tension Plate LH 4-18" Wide

3	450233MSS	Fixed Plate, No Shaft, RH 2-3" Wide
	450033MSS	Fixed Plate, No Shaft, RH 4-18" Wide
	450243MSS	Fixed Plate, Shaft, RH 2-3" Wide
	450043MSS	Fixed Plate, Shaft, RH 4-18" Wide
4	450234MSS	Fixed Plate, No Shaft, LH 2-3" Wide
	450034MSS	Fixed Plate, No Shaft, LH 4-18" Wide
	450244MSS	Fixed Plate, Shaft, LH 2-3" Wide
	450044MSS	Fixed Plate, Shaft, LH 4-18" Wide
5	450039MSS	Pinion Retainer Block
6	452502MSS	Frame Support Post 2" (51mm)
	452503MSS	Frame Support Post 3" (76mm)
	452504MSS	Frame Support Post 4" (102mm)
	452505MSS	Frame Support Post 5" (127mm)
	452506MSS	Frame Support Post 6" (152mm)
	452508MSS	Frame Support Post 8" (203mm)
	452510MSS	Frame Support Post 10" (254mm)
	452512MSS	Frame Support Post 12" (305mm)
452518MSS	Frame Support Post 18" (457mm)	

Service Parts

7	453702MSS	Pinion 2" (51mm)
	453703MSS	Pinion 3" (76mm)
	453704MSS	Pinion 4" (102mm)
	453705MSS	Pinion 5" (127mm)
	453706MSS	Pinion 6" (152mm)
	453708MSS	Pinion 8" (203mm)
	453710MSS	Pinion 10" (254mm)
	453712MSS	Pinion 12" (305mm)
	453718MSS	Pinion 18" (457mm)
8	452702SS	Bottom Wiper 2" (51mm)
	452703SS	Bottom Wiper 3" (76mm)
	452704SS	Bottom Wiper 4" (102mm)
	452705SS	Bottom Wiper 5" (127mm)
	452706SS	Bottom Wiper 6" (152mm)
	452708SS	Bottom Wiper 8" (203mm)
	452710SS	Bottom Wiper 10" (254mm)
	452712SS	Bottom Wiper 12" (305mm)
	452718SS	Bottom Wiper 18" (457mm)
9	452802MSS	Bottom Bar 2" (51mm)
	452803MSS	Bottom Bar 3" (76mm)
	452804MSS	Bottom Bar 4" (102mm)
	452805MSS	Bottom Bar 5" (127mm)
	452806MSS	Bottom Bar 6" (152mm)
	452808MSS	Bottom Bar 8" (203mm)
	452810MSS	Bottom Bar 10" (254mm)
	452812MSS	Bottom Bar 12" (305mm)
	452818MSS	Bottom Bar 18" (457mm)
10	452902SS	Idler Spindle 2" (51mm)
	452903SS	Idler Spindle 3" (76mm)
	452904SS	Idler Spindle 4" (102mm)
	452905SS	Idler Spindle 5" (127mm)
	452906SS	Idler Spindle 6" (152mm)
	452908SS	Idler Spindle 8" (203mm)
	452910SS	Idler Spindle 10" (254mm)
	452912SS	Idler Spindle 12" (305mm)
	452918SS	Idler Spindle 18" (457mm)
11	453102MSS	Drive Spindle 2" (51mm)
	453103MSS	Drive Spindle 3" (76mm)
	453104MSS	Drive Spindle 4" (102mm)
	453105MSS	Drive Spindle 5" (127mm)
	453106MSS	Drive Spindle 6" (152mm)
	453108MSS	Drive Spindle 8" (203mm)
	453110MSS	Drive Spindle 10" (254mm)
	453112MSS	Drive Spindle 12" (305mm)
	453118MSS	Drive Spindle 18" (457mm)

12	453802MSS	Fixed Tension Support 2" (51mm)
	453803MSS	Fixed Tension Support 3" (76mm)
	453804MSS	Fixed Tension Support 4" (102mm)
	453805MSS	Fixed Tension Support 5" (127mm)
	453806MSS	Fixed Tension Support 6" (152mm)
	453808MSS	Fixed Tension Support 8" (203mm)
	453810MSS	Fixed Tension Support 10" (254mm)
	453812MSS	Fixed Tension Support 12" (305mm)
	453818MSS	Fixed Tension Support 18" (457mm)
13	See chart below	6100 Conveyor Frame
14	450160MSS	Bar Connecting Frame
15	807-1016	Lip Seal
16	802-120	Ball Bearing 12mm (Bore) x 21mm (OD)
17	960512MSS	Hex Head Screw M5-.80 x 12mm
18	960610MSS	Hex Head Screw M6-1.0 x 10mm
19	960612MSS	Hex Head Screw M6-1.0 x 12mm
20	960616MSS	Hex Head Screw M6-1.0 x 16mm
21	807-999	Thumb Screw
22	807-994	Handle M6 x 20mm
23	450239M	Tension Handle Assembly
24	980422M	Key Square 4mm x 22mm



Item 13: 6100 Conveyor Frame

Length	Part Number(s)
2' (610mm)	47WW02MSS
3' (914mm)	47WW03MSS
4' (1219mm)	47WW04MSS
5' (1524mm)	47WW05MSS
6' (1829mm)	47WW06MSS
7' (2134mm)	47WW07MSS
8' (2438mm)	47WW08MSS
9' (2743mm)	47WW09MSS
10' (3048mm)	47WW10MSS
11' (3353mm)	47WW11MSS
12' (3658mm)	47WW12MSS
13' (3962mm)	47WW07MSS 47WW13MSS
14' (4267mm)	47WW08MSS 47WW13MSS
15' (4572mm)	47WW09MSS 47WW13MSS
16' (4877mm)	47WW09MSS 47WW13MSS
17' (5182mm)	47WW09MSS 47WW13MSS
18' (5486mm)	47WW09MSS 47WW13MSS
19' (5791mm)	47WW09MSS 47WW13MSS
20' (6096mm)	47WW09MSS 47WW13MSS
21' (6401mm)	47WW09MSS 47WW13MSS
22' (6706mm)	47WW09MSS 47WW13MSS
23' (7011mm)	47WW09MSS 47WW13MSS
24' (7316mm)	47WW09MSS 47WW13MSS

WW = frame width reference: 02, 03, 04, 05, 06, 08, 10, 12, 18

Service Parts

-21 1" Sanitary Bolt – On High Side

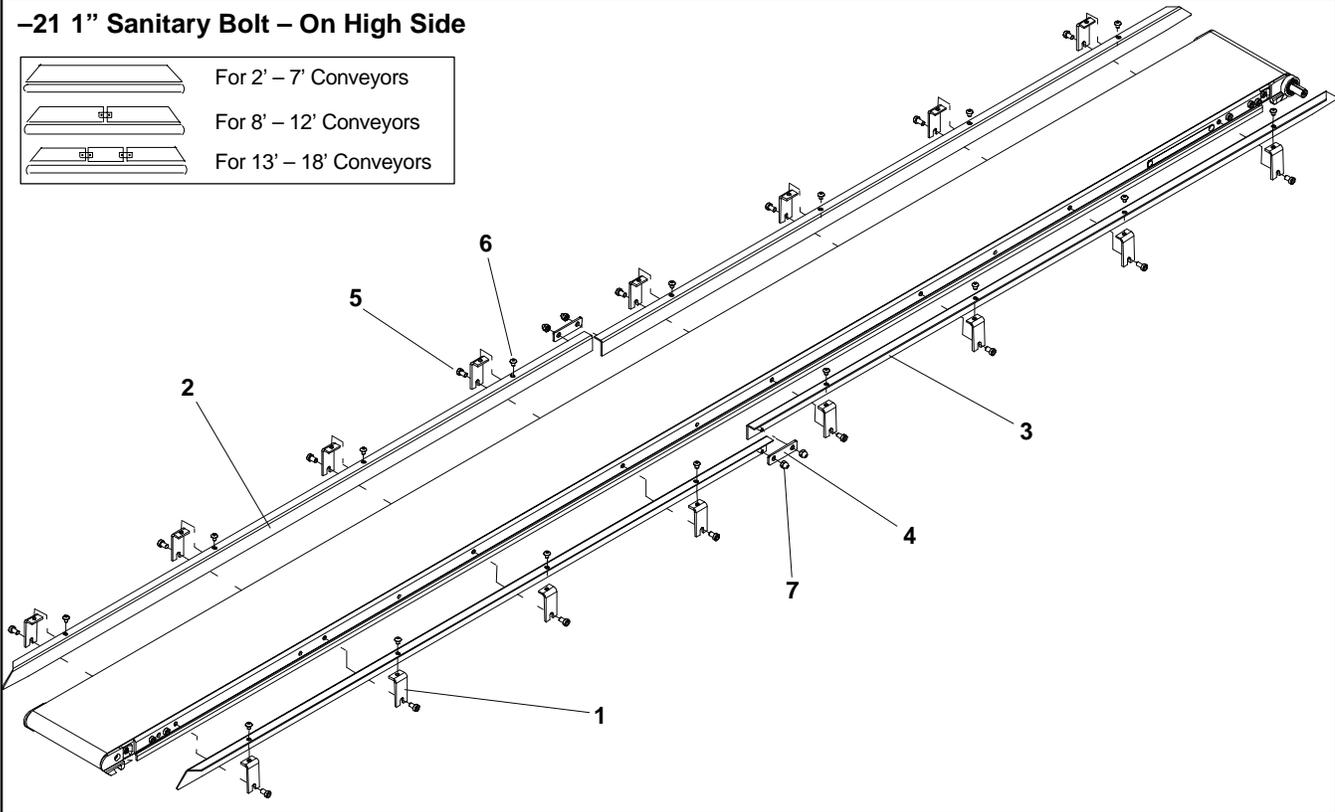
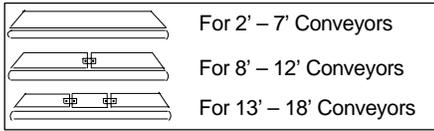


Item	Part Number	Description
1	462150MSS	1" Guide Mounting Bracket
2	See chart below	1" Guide RH
3	See chart below	1" Guide LH
4	450188SS	Guide Tie Plate
5	960608MSS	M6–1.0 x 8mm Hex Head Screw
6	960506MSS	M5–0.8 x 6mm Hex Head Screw
7	990508MSS	M5 Acorn Nut

Conveyor Length		End Guide	Center Guide	End Guide
2' (610mm)	Right Hand	462132SSP	N/A	N/A
	Left Hand	462132SSP	N/A	N/A
3' (914mm)	Right Hand	462133SSP	N/A	N/A
	Left Hand	462133SSP	N/A	N/A
4' (1219mm)	Right Hand	462134SSP	N/A	N/A
	Left Hand	462134SSP	N/A	N/A
5' (1524mm)	Right Hand	462135SSP	N/A	N/A
	Left Hand	462135SSP	N/A	N/A
6' (1829mm)	Right Hand	462136SSP	N/A	N/A
	Left Hand	462136SSP	N/A	N/A
7' (2134mm)	Right Hand	462137SSP	N/A	N/A
	Left Hand	462137SSP	N/A	N/A

8' (2438mm)	Right Hand	462144SSP	N/A	462154SSP
	Left Hand	462154SSP	N/A	462144SSP
9' (2743mm)	Right Hand	462144SSP	N/A	462154SSP
	Left Hand	462145SSP	N/A	462155SSP
10' (3048mm)	Right Hand	462155SSP	N/A	462145SSP
	Left Hand	462145SSP	N/A	462155SSP
11' (3353mm)	Right Hand	462146SSP	N/A	462156SSP
	Left Hand	462145SSP	N/A	462155SSP
12' (3658mm)	Right Hand	462146SSP	N/A	462156SSP
	Left Hand	462156SSP	N/A	462146SSP
13' (3962mm)	Right Hand	462146SSP	462163SSP	462156SSP
	Left Hand	462144SSP	462163SSP	462154SSP
14' (4267mm)	Right Hand	462146SSP	462163SSP	462156SSP
	Left Hand	462145SSP	462163SSP	462155SSP
15' (4572mm)	Right Hand	462146SSP	462163SSP	462156SSP
	Left Hand	462156SSP	462163SSP	462146SSP
16' (4877mm)	Right Hand	462146SSP	462166SSP	462156SSP
	Left Hand	462144SSP	462166SSP	462154SSP
17' (5182mm)	Right Hand	462146SSP	462166SSP	462156SSP
	Left Hand	462145SSP	462166SSP	462155SSP
18' (5486mm)	Right Hand	462146SSP	462166SSP	462156SSP
	Left Hand	462156SSP	462166SSP	462146SSP

-22 2" Sanitary Bolt – On High Side

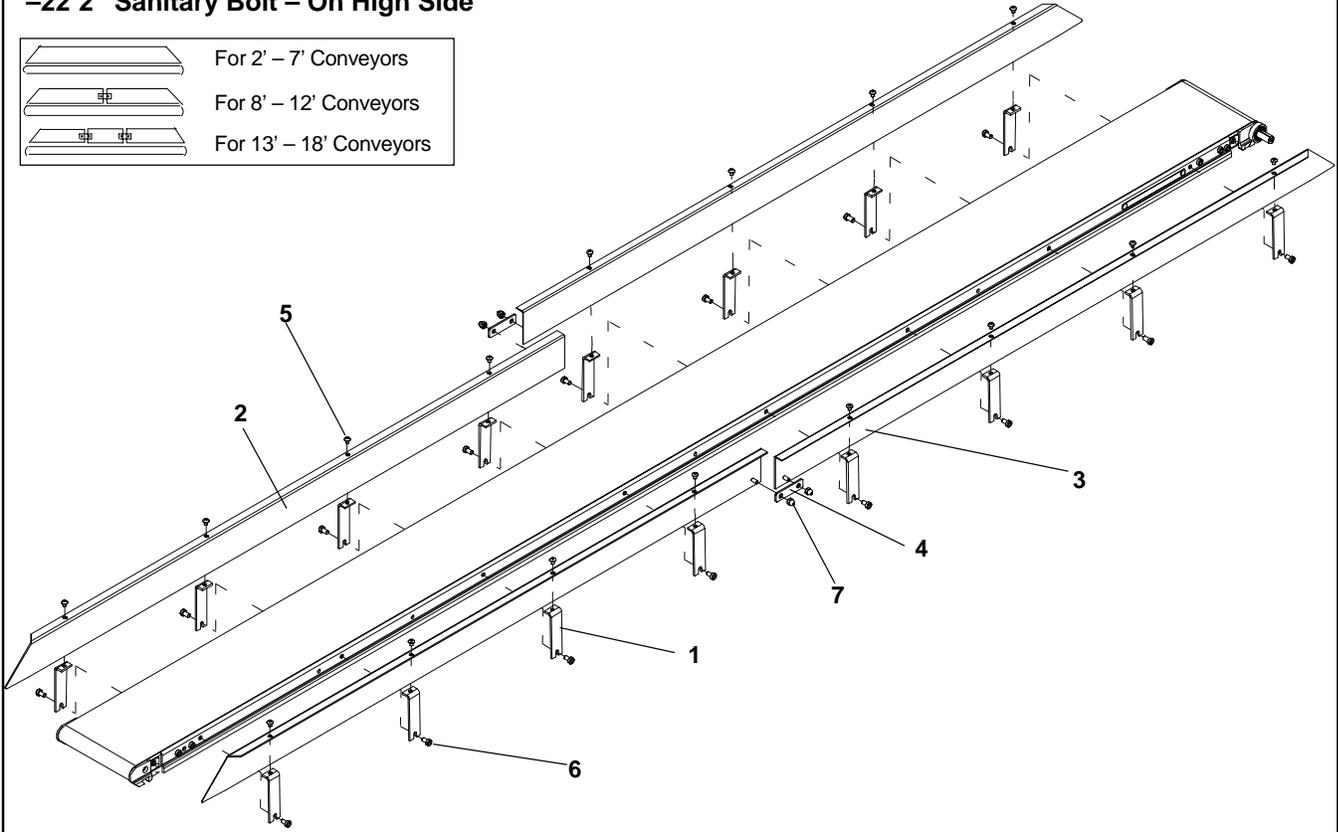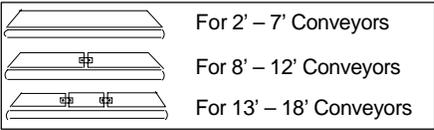


Item	Part Number	Description
1	462250MSS	2" Guide Mounting Bracket
2	See chart below	2" Guide RH
3	See chart below	2" Guide LH
4	450188SS	Guide Tie Plate
5	960608MSS	M6-1.0 x 10mm Hex Head Screw
6	960506MSS	M5-0.8 x 6mm Hex Head Screw
7	990508MSS	M5 Acorn Nut

Conveyor Length		End Guide	Center Guide	End Guide
2' (610mm)	Right Hand	462232SSP	N/A	N/A
	Left Hand	462232SSP	N/A	N/A
3' (914mm)	Right Hand	462233SSP	N/A	N/A
	Left Hand	462233SSP	N/A	N/A
4' (1219mm)	Right Hand	462234SSP	N/A	N/A
	Left Hand	462234SSP	N/A	N/A
5' (1524mm)	Right Hand	462235SSP	N/A	N/A
	Left Hand	462235SSP	N/A	N/A
6' (1829mm)	Right Hand	462236SSP	N/A	N/A
	Left Hand	462236SSP	N/A	N/A
7' (2134mm)	Right Hand	462237SSP	N/A	N/A
	Left Hand	462237SSP	N/A	N/A

8' (2438mm)	Right Hand	462244SSP	N/A	462254SSP
	Left Hand	462254SSP	N/A	462244SSP
9' (2743mm)	Right Hand	462244SSP	N/A	462254SSP
	Left Hand	462245SSP	N/A	462255SSP
10' (3048mm)	Right Hand	462255SSP	N/A	462245SSP
	Left Hand	462245SSP	N/A	462255SSP
11' (3353mm)	Right Hand	462246SSP	N/A	462256SSP
	Left Hand	462245SSP	N/A	462255SSP
12' (3658mm)	Right Hand	462246SSP	N/A	462256SSP
	Left Hand	462256SSP	N/A	462246SSP
13' (3962mm)	Right Hand	462246SSP	462263SSP	462256SSP
	Left Hand	462244SSP	462263SSP	462254SSP
14' (4267mm)	Right Hand	462246SSP	462263SSP	462256SSP
	Left Hand	462245SSP	462263SSP	462255SSP
15' (4572mm)	Right Hand	462246SSP	462263SSP	462256SSP
	Left Hand	462256SSP	462263SSP	462246SSP
16' (4877mm)	Right Hand	462246SSP	462266SSP	462256SSP
	Left Hand	462244SSP	462266SSP	462254SSP
17' (5182mm)	Right Hand	462246SSP	462266SSP	462256SSP
	Left Hand	462245SSP	462266SSP	462255SSP
18' (5486mm)	Right Hand	462246SSP	462266SSP	462256SSP
	Left Hand	462256SSP	462266SSP	462246SSP

Service Parts


-23 Sanitary Fully Adjustable UHMW Guide

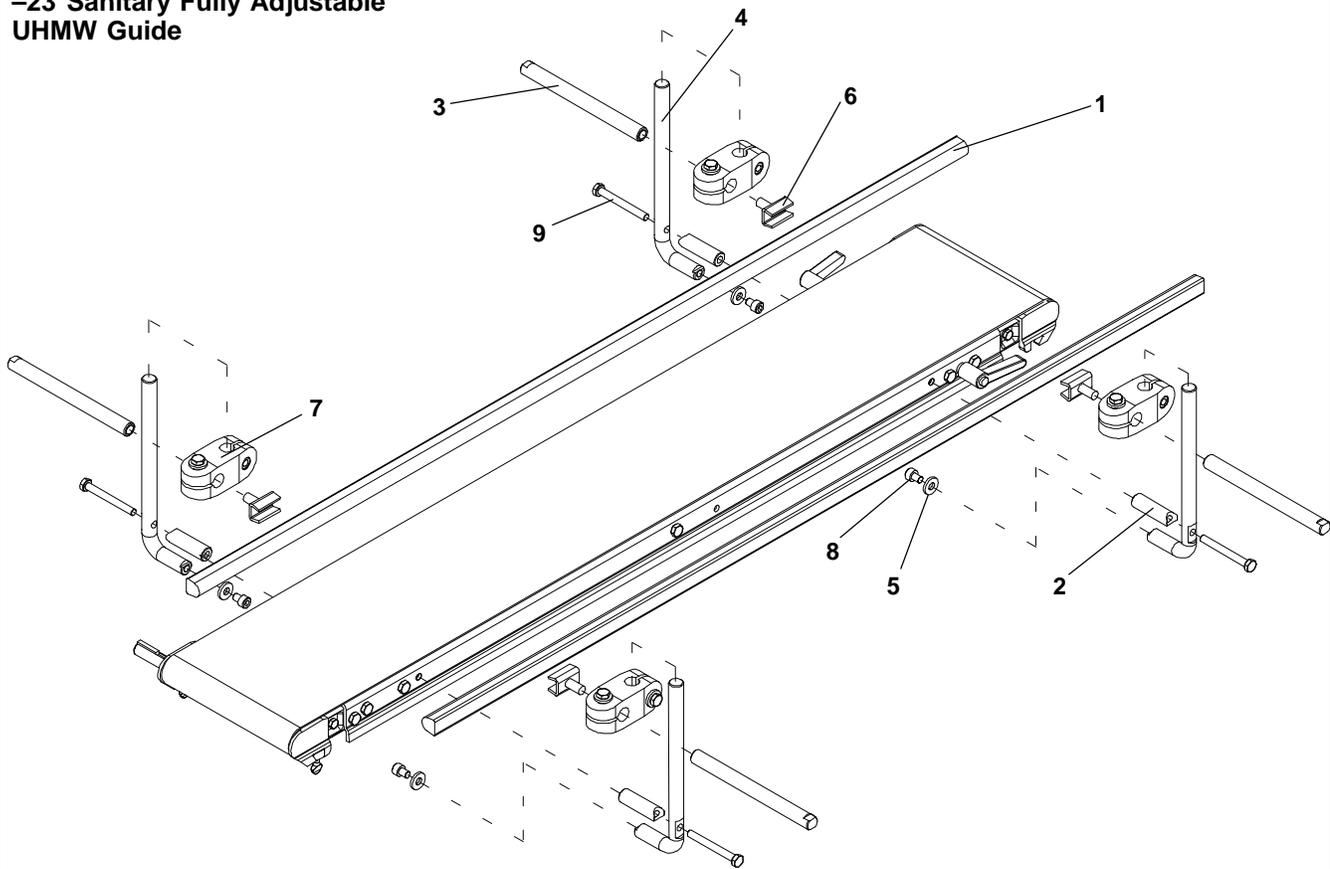

Item	Part Number(s)	Description
1	462332	Guide Mounting Rail 2' (610mm)
	462333	Guide Mounting Rail 3' (914mm)
	462334	Guide Mounting Rail 4' (1219mm)
	462335	Guide Mounting Rail 5' (1524mm)
	462336	Guide Mounting Rail 6' (1829mm)
	462337	Guide Mounting Rail 7' (2134mm)
	462338	Guide Mounting Rail 8' (2438mm)
	462339	Guide Mounting Rail 9' (2743mm)
	462340	Guide Mounting Rail 10' (3053mm)
	462341	Guide Mounting Rail 11' (3353mm)
	462342	Guide Mounting Rail 12' (3658mm)
	462337 462336	Guide Mounting Rail 13' (3962mm)
	462337 462337	Guide Mounting Rail 14' (4267mm)
	462338 462337	Guide Mounting Rail 15' (4572mm)
	462338 462338	Guide Mounting Rail 16' (4877mm)
	462339 462338	Guide Mounting Rail 17' (5182mm)
	462339 462339	Guide Mounting Rail 18' (5486mm)

2	462351MSS	Shaft Brace
3	462352MSS	Horizontal Shaft Mounting Guide
4	462350MSS	Vertical Shaft Adjustable Guide
5	911-201	Flat Washer
6	807-978	Guide Clamp
7	450787MSS	Cross Block
8	960608MSS	Hex Head Screw (Metric) M6-1.0 x 8mm
9	960655MSS	Hex Head Screw (Metric) M6-1.0 x 55mm

**-24 Sanitary Adjustable Width
UHMW Guide**

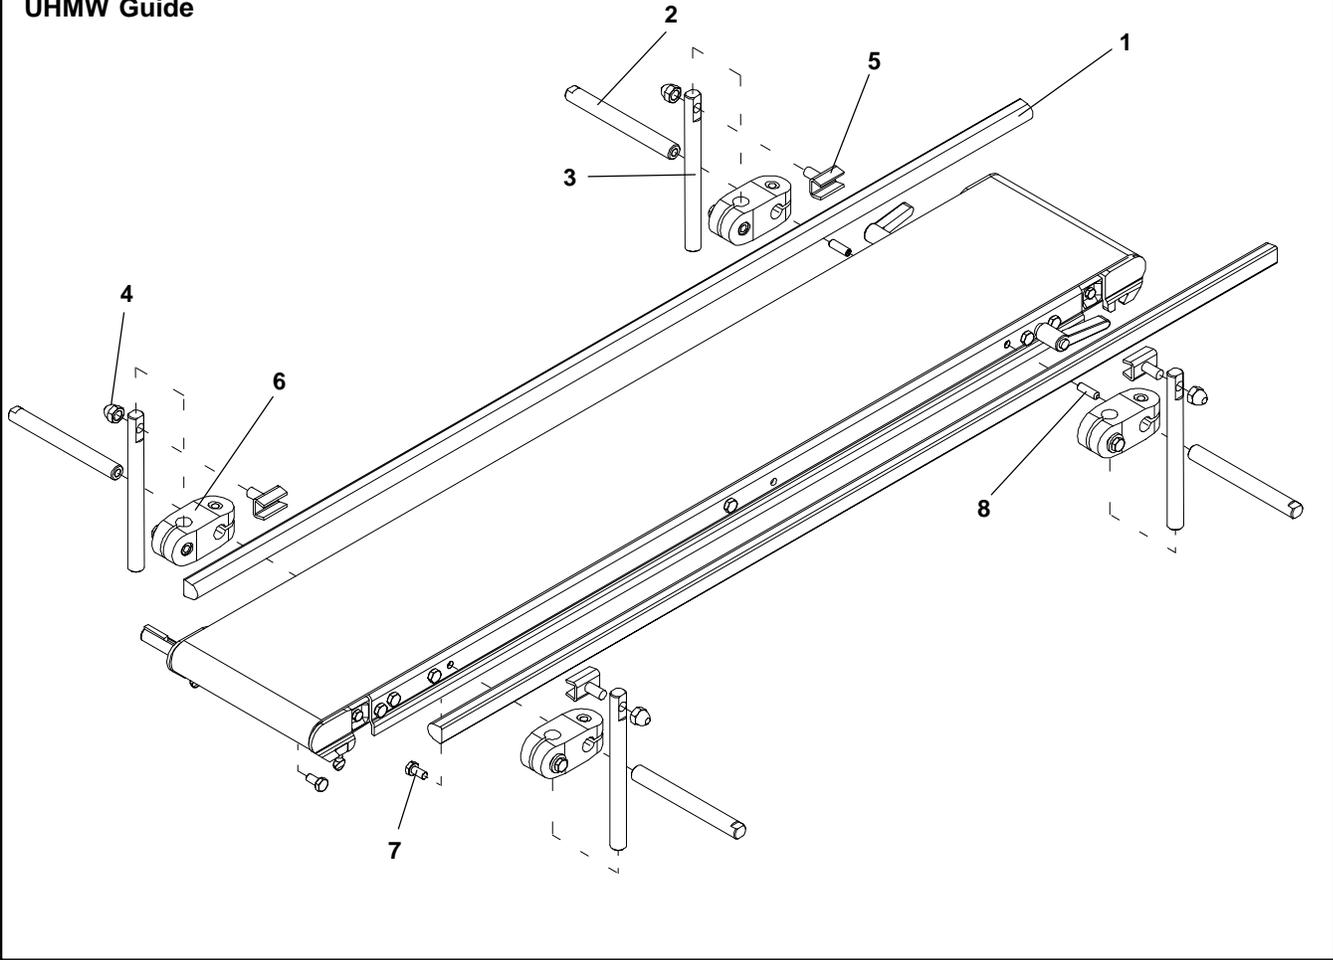


Item	Part Number(s)	Description
1	462332	Guide Mounting Rail 2' (610mm)
	462333	Guide Mounting Rail 3' (914mm)
	462334	Guide Mounting Rail 4' (1219mm)
	462335	Guide Mounting Rail 5' (1524mm)
	462336	Guide Mounting Rail 6' (1829mm)
	462337	Guide Mounting Rail 7' (2134mm)
	462338	Guide Mounting Rail 8' (2438mm)
	462339	Guide Mounting Rail 9' (2743mm)
	462340	Guide Mounting Rail 10' (3053mm)
	462341	Guide Mounting Rail 11' (3353mm)
	462342	Guide Mounting Rail 12' (3658mm)
	462337 462336	Guide Mounting Rail 13' (3962mm)
	462337 462337	Guide Mounting Rail 14' (4267mm)
	462338 462337	Guide Mounting Rail 15' (4572mm)
	462338 462338	Guide Mounting Rail 16' (4877mm)
	462339 462338	Guide Mounting Rail 17' (5182mm)
	462339 462339	Guide Mounting Rail 18' (5486mm)

2	462452MSS	Horizontal Shaft Gullwing Guide
3	462450MSS	Vertical Shaft Gullwing Guide
4	807-977	Acorn Nut
5	807-978	Guide Clamp
6	450187MSS	Cross Block
7	960612MSS	Hex Head Cap Screw (Metric) M6-1.0 x 12mm
8	970620MSS	Socket Head Set Screw (Metric) M6-1.0 x 20mm

Service Parts


Sanitary 2" Through 6" Wide Flat Belt Mounting Bracket with Return Roller

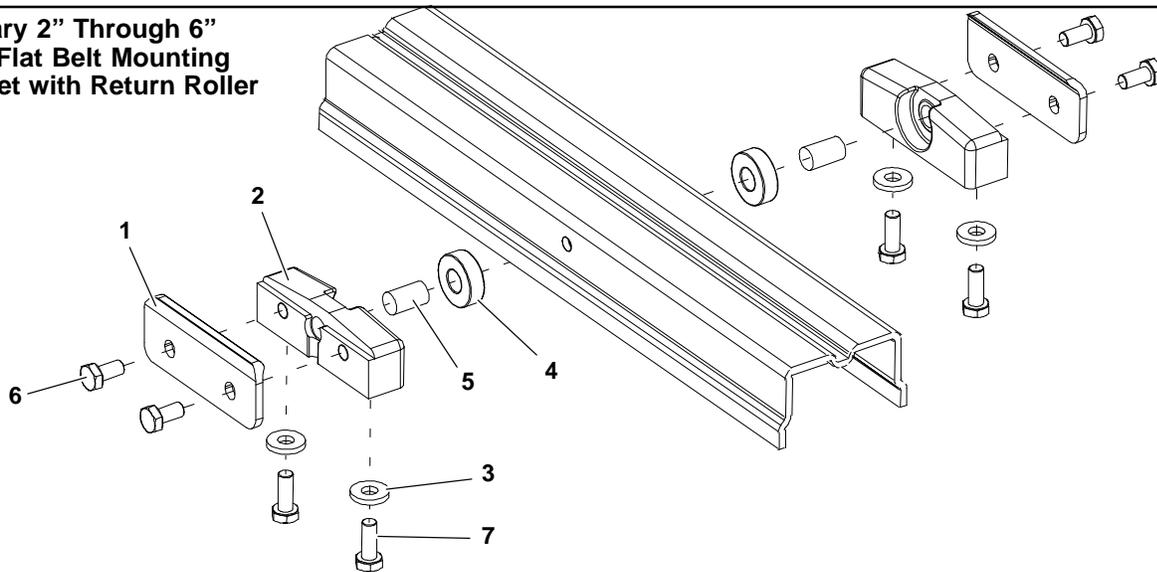

Item	Part Number	Description
1	492564SS	Clamp Plate
2	493026MSS	Mounting Block
3	911-201	Washer
4	802-123	Bearing


5	913-103	Dowel Pin
6	960612MSS	Hex Head Screw (Metric) M6 – 1.0 x 12mm
7	960616MSS	Hex Head Screw (Metric) M6-1.0 x 16mm

Sanitary 8" Through 18" Wide Flat Belt Mounting Bracket with Return Roller

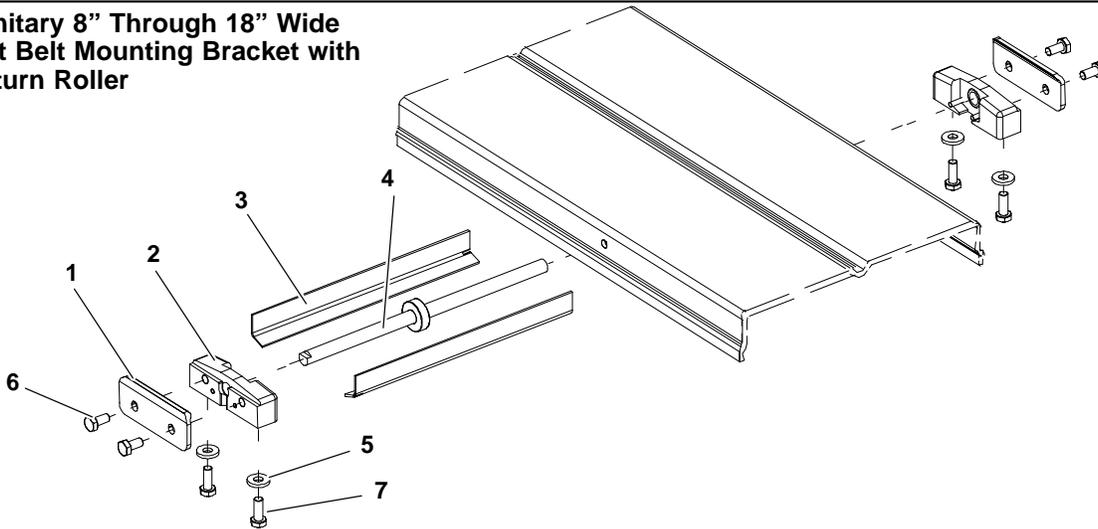

Item	Part Number	Description
1	492564SS	Clamp Plate
2	492571MSS	Mounting Block
3	493108SS	Bottom Roller Guard 8" (203mm)
	493110SS	Bottom Roller Guard 10" (254mm)
	493112SS	Bottom Roller Guard 12" (305mm)
	493118SS	Bottom Roller Guard 18" (457mm)

4	493308SS	Shaft Assembly Belt Support 8" (203mm)
	493310SS	Shaft Assembly Belt Support 10" (254mm)
	493312SS	Shaft Assembly Belt Support 12" (305mm)
	493318SS	Shaft Assembly Belt Support 18" (457mm)
5	911-201	Hard Washer
6	960612MSS	Hex Head Screw (Metric) M6-1.0 x 12mm
7	960616MSS	Hex Head Screw (Metric) M6-1.0 x 16mm

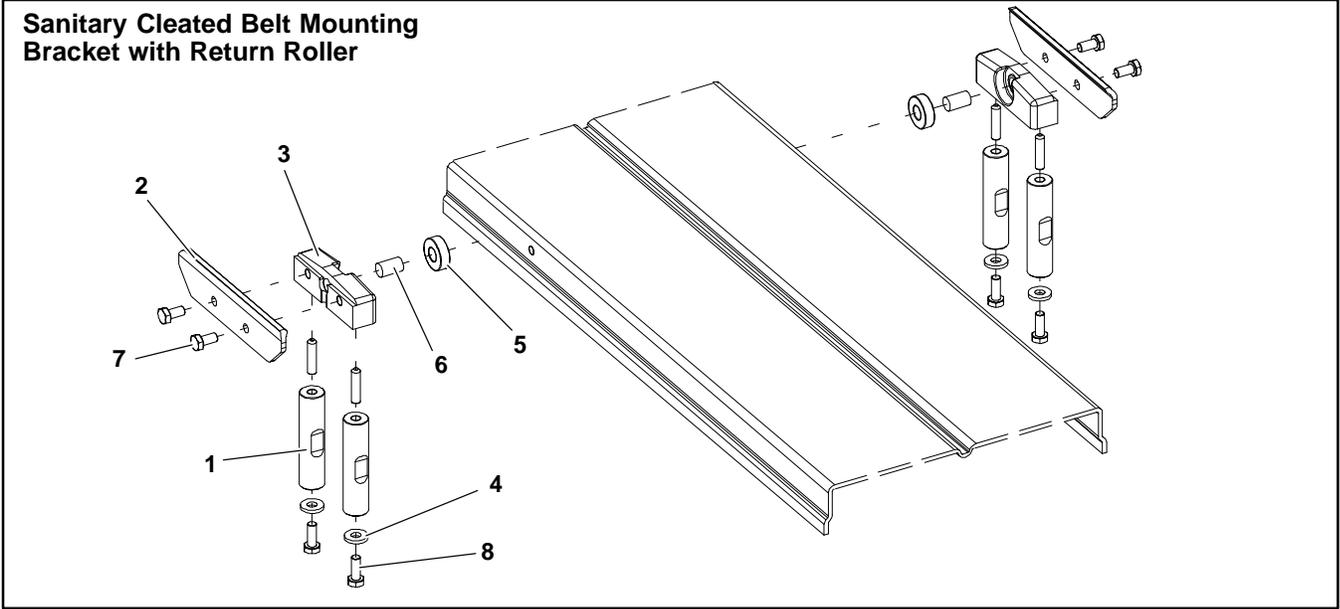

Item	Part Number	Description
1	492563MSS	Standoff Post
2	492566SS	Clamp Plate
3	493026MSS	Mounting Block
4	911-201	Washer
5	802-123	Bearing

6	913-103	Dowel Pin
7	960612MSS	Hex Head Screw (Metric) M6-1.0 x 12mm
8	970625MSS	Socket Head Set Screw (Metric) M6-1.0 x 25mm

Configuring Conveyor Belt Part Number

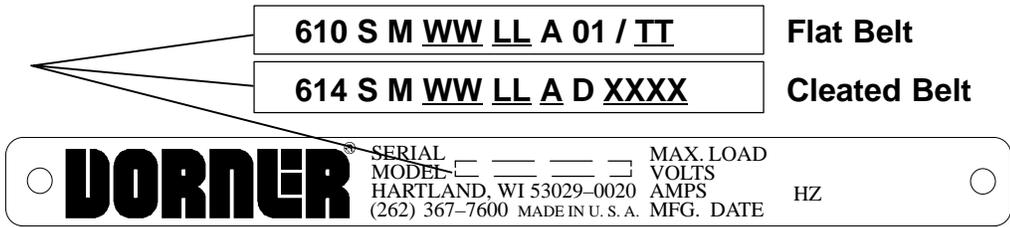


Figure 45

Flat Belt Conveyor

Refer to your serial and model number plate (Figure 45). Determine conveyor length ("LL"), width ("WW") and belt type ("TT").

61- WW LL / TT

61- _____ / _____
(Fill In)

Cleated Belt Conveyor

Refer to your serial and model number plate (Figure 45). Determine conveyor length ("LL"), width ("WW"), cleat type ("AA") and cleat spacing ("XXXX").

64- WW LL AA XXXX

64 - _____
(Fill In)

Return Policy

No returns will be accepted without prior written factory authorization. When calling for authorization, please have the following information ready for the Dorner Factory representative or your local distributor:

1. Name and address of customer.
2. Item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number.

A representative will discuss action to be taken on the Returned items and provide a Returned Goods Authorization Number to reference.

There will be a 15% restocking charge on all new items returned for credit where Dorner was not at fault. These will not be accepted after 60 days from original invoice date. The restocking charge covers inspection, cleaning, disassembly, and reissuing to inventory.

If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Feel free to contact Dorner for the name of your local representative. Our technical sales and service staff will gladly help with your questions on Dorner products.

For a copy of Dorner's Limited Warranty, contact factory, distributor, service center or visit our website @ www.dorner.com

**For replacement parts, contact an authorized
Dorner Service Center or the factory.**

DORNER[®]

Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. ©Dorner Mfg. Corp. 2000

DORNER MFG. CORP.

580 Industrial Drive, PO Box 20
Hartland, WI 53029-0020 USA
USA

TEL 1-800-397-8664 (USA)
FAX 1-800-369-2440 (USA)

Outside the USA:
TEL 1-262-367-7600, FAX
1-262-367-5027

DORNER

Arnold-Sommerfeld-Ring 2
D-52499 Baesweiler
Germany

TEL (02401) 80 52 90
FAX (02401) 80 52 93

Internet: www.dorner.com