



# Pulley Transfer Plates for 2200 Series Conveyors

Installation, Maintenance & Parts Manual



DORNER MFG. CORP.  
P.O. Box 20 • 975 Cottonwood Ave.  
Hartland, WI 53029-0020 USA

INSIDE THE USA  
TEL: 1-800-397-8664  
FAX: 1-800-369-2440

OUTSIDE THE USA  
TEL: 262-367-7600  
FAX: 262-367-5827

For other service manuals visit our website at:  
[www.dorner.com/service\\_manuals.asp](http://www.dorner.com/service_manuals.asp)

---

# Table of Contents

---

Introduction .....	2	Required Tools .....	5
Warnings - General Safety .....	3	Cleaning.....	5
Installation .....	4	Service Parts.....	5
Required Tools.....	4	Return Policy.....	6
Pulley Transfer Plate Mounting.....	4		
Preventive Maintenance & Adjustment.....	5		

---

## Introduction

---

<b>IMPORTANT</b>
------------------

<i>Some illustrations may show guards removed. DO NOT operate equipment without guards.</i>
---

Dorner 2200 Series conveyors are covered by Patent Nos. 5174435, 5131529 and corresponding patents and patent applications in other countries.

Dorner's Limited Warranty applies.

Dorner reserves the right to make changes at any time without notice or obligation.

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage.
- Accessories may be shipped loose. See accessory instructions for installation.

# Warnings - General Safety

## ⚠ WARNING

The safety alert symbol, black triangle with white exclamation, is used to alert you to potential personal injury hazards.

## ⚠ DANGER



Climbing, sitting, walking or riding on conveyor will cause severe injury.  
**KEEP OFF CONVEYORS.**

## ⚠ DANGER



**DO NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.**

## ⚠ WARNING



Exposed moving parts can cause severe injury.  
**LOCK OUT POWER** before removing guards or performing maintenance.

## ⚠ WARNING



Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.  
When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, **CHECK FOR POTENTIAL PINCH POINTS** and other mechanical hazards before system start-up.

## ⚠ WARNING



Exposed moving parts can cause severe injury.  
**REPLACE ALL GUARDS BEFORE RUNNING CONVEYOR.**

## ⚠ DANGER




Use of transfer plate with high friction conveyor belt will cause severe injury.  
**DO NOT** use transfer plate with /03, /08, /55, /62, /64, or other high friction belts.


# Installation

## Required Tools

- Hex key wrenches:  
2.5 mm
- Torque wrench

## Pulley Transfer Plate Mounting


<b>⚠ DANGER</b>

<b>Use of transfer plate with high friction conveyor belt will cause severe injury. DO NOT use transfer plate with /03, /08, /55, /62, /64, or other high friction belts.</b>

<b>⚠ WARNING</b>

<b>Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.</b>

### Illustration References:

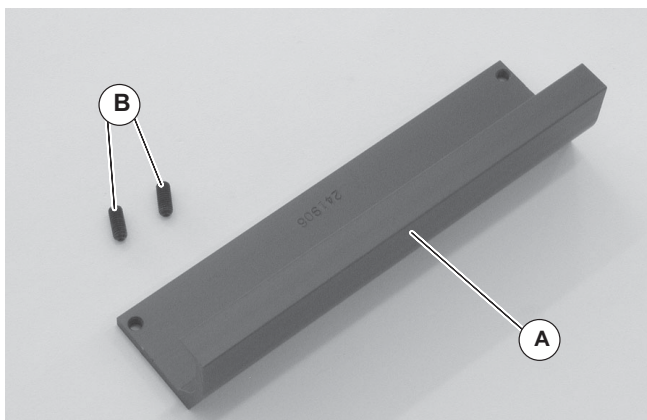
A	Transfer Plate
B	M5 x 10 mm Set Screw (2x)

1. Gather components (Figure 1).




**Figure 1**

2. Locate assembly slot (Figure 2, item C) in conveyor head plates.

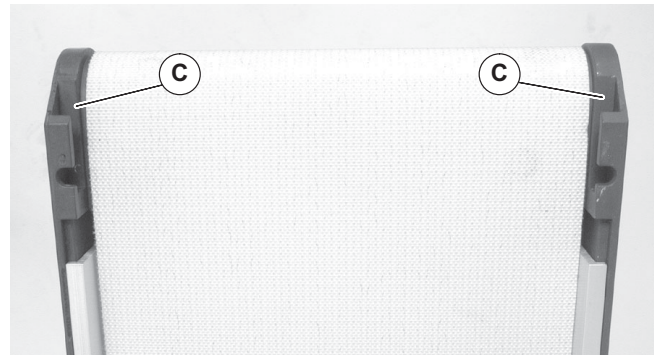


**Figure 2**

3. Install transfer plate (Figure 3, item A) into assembly slot as shown in Figure 3.

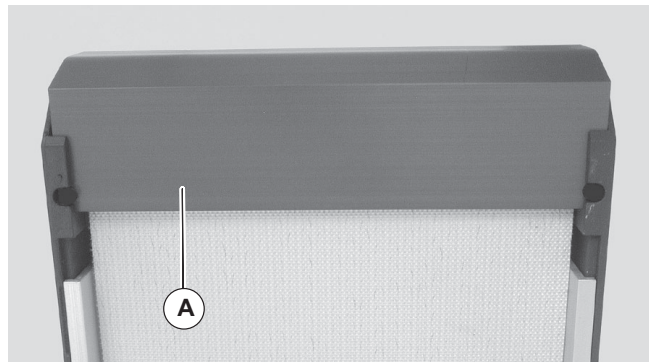

**Figure 3**

4. Insert two (2) set screws (Figure 4, item B) through access notches (D) and into transfer plate (A). Tighten to 28 in-lb (3 Nm).

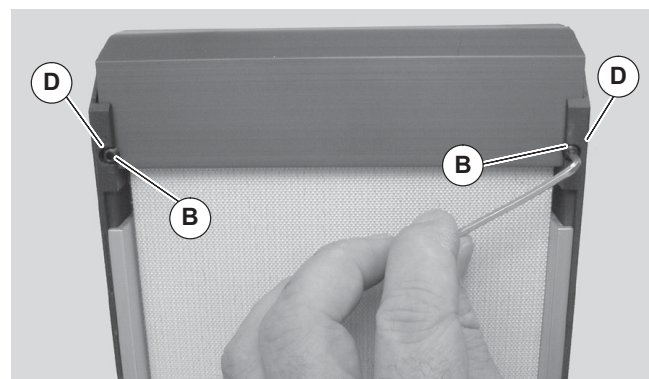

**Figure 4**


# Preventive Maintenance & Adjustment

## Required Tools

- Hex key wrenches:  
2.5 mm
- Torque wrench

See steps 2 through 4.

## Cleaning

<b>⚠ WARNING</b>

<p><b>Exposed moving parts can cause severe injury.</b></p> <p><b>LOCK OUT POWER</b> before removing guards or performing maintenance.</p>

Periodically, remove two (2) set screws (Figure 5, item B) and remove transfer plate (A). Clean any debris from between plate and conveyor belt. Replace transfer plate (A).

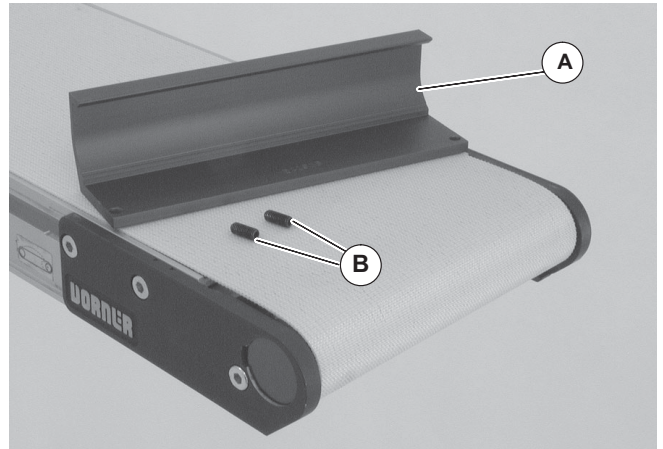


Figure 5

## Service Parts

<b>NOTE</b>
<p><i>For replacement parts other than those shown on this page, contact an authorized Dorner Service Center or the factory.</i></p>

Item	Part Number	Part Description
1	241902	Transfer Plate 2" (51mm)
	241903	Transfer Plate 3" (76mm)
	241904	Transfer Plate 4" (102mm)
	241905	Transfer Plate 5" (127mm)
	241906	Transfer Plate 6" (152mm)
	241907	Transfer Plate 7" (178mm)
	241908	Transfer Plate 8" (203mm)
	241909	Transfer Plate 9" (229mm)
	241910	Transfer Plate 10" (254mm)
	241912	Transfer Plate 12" (305mm)
	241918	Transfer Plate 18" (457mm)
	241921	Transfer Plate 21" (533mm)
241924	Transfer Plate 24" (610mm)	
2	970510M	Socket Head Set Screw Metric M5 x 10mm

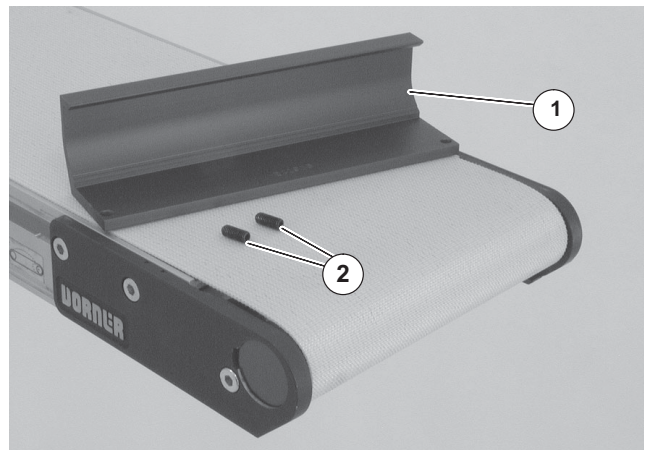


Figure 6

# Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

1. Name and address of customer.
2. Dorner part number(s) of item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number.

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization number for reference.

There will be a return charge on all new undamaged items returned for credit where Dorner was not at fault. Dorner is not responsible for return freight on such items.

Conveyors and conveyor accessories	
Standard catalog conveyors	30%
MPB Series, cleated and specialty belt conveyors	50%
7400 & 7600 Series conveyors	non-returnable items
Engineered special products	case by case
Drives and accessories	30%
Sanitary stand supports	non-returnable items

Parts	
Standard stock parts	30%
MPB, cleated and specialty belts	non-returnable items

Returns will not be accepted after 60 days from original invoice date.

The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory.

If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Technical Sales, Catalog Sales and Service Teams will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at [www.dorner.com](http://www.dorner.com).

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2006

#### DORNER MFG. CORP.

975 Cottonwood Ave., PO Box 20  
Hartland, WI 53029-0020 USA  
USA  
TEL 1-800-397-8664 (USA)  
FAX 1-800-369-2440 (USA)  
Internet: [www.dorner.com](http://www.dorner.com)

Outside the USA:  
TEL 1-262-367-7600  
FAX 1-262-367-5827