


- 1. Disconnect power from Motion Monitor control box.
- 2. Open control box and determine which plug requires replacement.

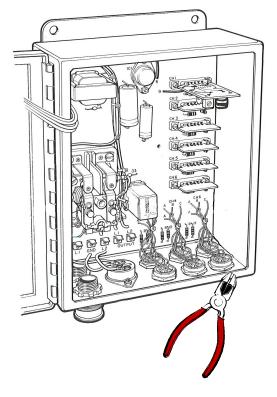


- 3. With a side cutter pliers or other wire cutter cut the A B C wires running from the control box panel to the plug replacing close to the plug connections.
- 4. Loosen the locking nut from the plug being replaced and remove plug body.
- 5. Trim the green "B" wire off close to the control board. Remove the ½" of the insulation from the ends of the red "A" wire and blue "C" wire that was cut in step 3.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. Dorner Mfg. Corp 975 Cottonwood Ave PO Box 20 Hartland, WI 53029-0020 USA TEL 1-800-397-8664 (USA) FAX 1-800-369-2440 (USA) Outside the USA: TEL 1-262-367-7600 FAX 1-262-367-7600 FAX 1-262-367-5827 Dorner Arnold-Sommerfeld-Ring 2 D-52499 Baesweiler Germany TEL (02401) 80 52 90 FAX (02401) 80 52 93

www.dorner.com

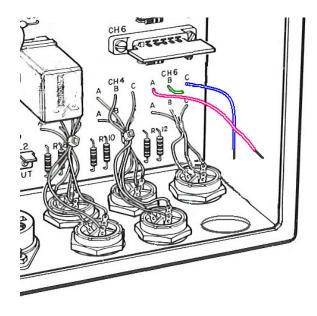

Motion Monitor plug

cord with banana plug

replacement from 3 pin plug to

6. Insert conversion cable from the outside of the control box into removed plug opening with the banana plugs outside the control box and secure with locknut.



- 7. Connect cord wires to red "A" and blue "C" wires stripped in step 5 and secure with wire nuts supplied. Which cord wire connects to each does not matter.
- 8. Close and secure control box cover and reconnect power.