

Components As Shipped

Illustration References

A	62MD1134R or 62MD1132 DC Controllers
B	(2) 6100 Series Accessory Mounting Clips (450186M)
C	Socket Head Screws, M5 x 8 mm (4)
D	Socket Head Screws, M6 x 16 mm (2)
E	(2) T-Bars (639971M)
F	Socket Head Screws, M6 x 20 mm (2)
G	(2) Spring Nut, M6 (990605M)
H	(2) Controller Mounting Bar (300459)
I	(2) Controller Cover Mounting Screws
J	4 mm hex key wrench (not supplied)
K	Screwdriver (not supplied) being used to align T-bar while inserting screw




WARNING





To prevent injury, make sure all electrical power sources have been disconnected and locked-out before you perform any assembly or adjustments. NEVER operate equipment without guards or other protective devices properly secured in place.


Conveyor Mounting

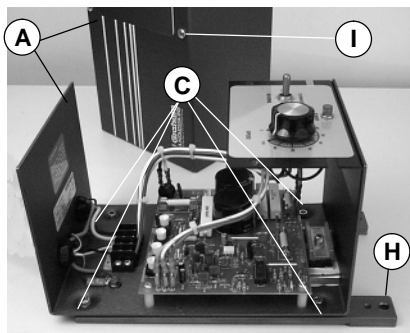


Step 1: Remove cover by loosening mounting screws (I). Use mounting screws (C), to attach mounting bars (H) as shown.

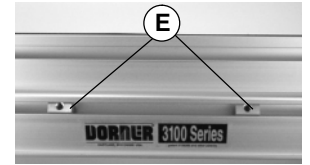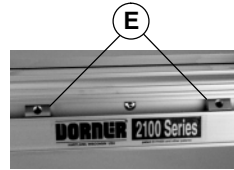


Step 2a: Mount T-bar in 2100 Series (left) and 3100 Series (right) conveyor T-slots as shown.

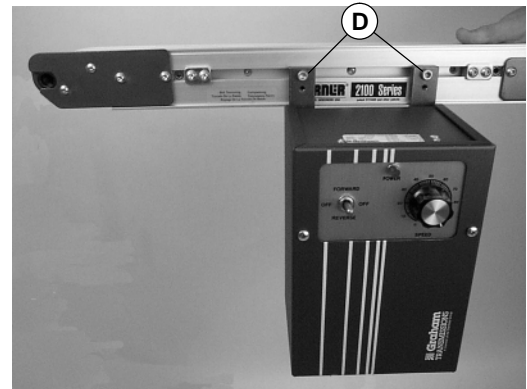

Step 3a: Secure box to 2100 Series conveyor by installing M6 Screws (D). (3100 Mounting Similar)

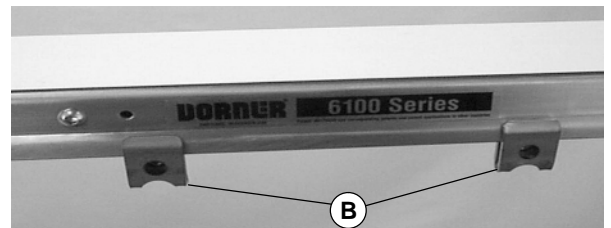

Step 2b: Accessory clips positioned on 6100 Series conveyor.

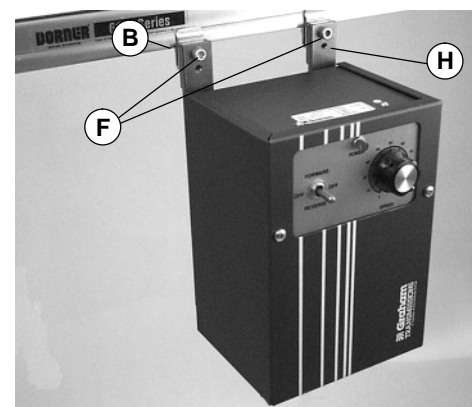


Step 3b: Secure box to 6100 Series conveyor by installing M6 Screws (F) through holes in mounting bars (H) and into accessory clips (B).


<continued on next page>

Stand Leg Mounting

Bar Attachment for Vertical Mounting

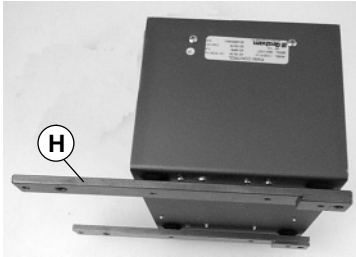


Step 1: Remove cover by loosening mounting screws (I). Then, properly orient and attach the mounting bars (H) in the “stand leg mounting” position. Attachment details similar to Step 1 on opposite side of this page.

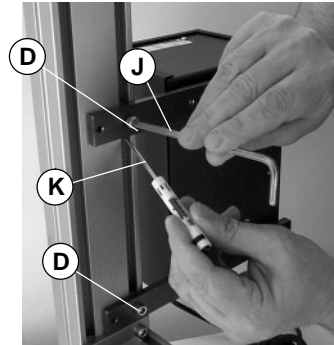


Step 3: Using screwdriver, raise 2nd T-bar (E) to align it with hole in the top mounting bar and insert a screw (D) and partially thread into T-bar as shown.


Aluminum Stand Legs

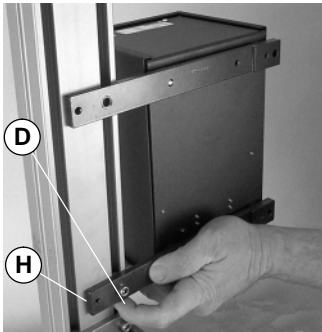

Step 1: Install 1st T-bar (E), insert screw (D) through hole in bottom mounting bar (H) and, using 4 mm hex key wrench, partially thread into one T-bar.


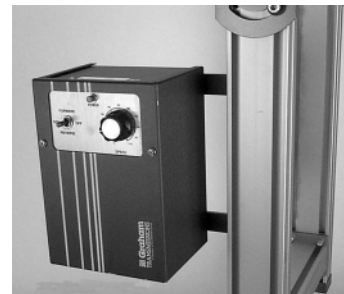


Step 4: Slide controller to its desired mounting location and tightly secure both screws (D).

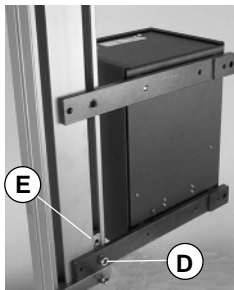

Step 2: Temporarily fix controller mounting position by tightening screw (D). Then, insert 2nd T-bar (E) into T-slot as shown.

Steel Stand Leg

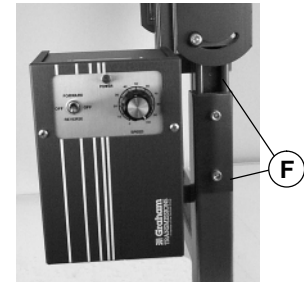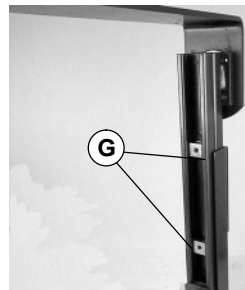

Step 1: Properly orient and install spring nuts (G) as shown. Then, secure controller by installing two (2) M6 x 20 screws (F). Adjust controller position and secure the M6 screws.

NOTE: For electrical wiring or troubleshooting, refer to information provided by controller manufacturer.

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. ©Dorner Mfg. Corp. 1997

DORNER MFG. CORP.

975 Industrial Ave, PO Box 20
 Hartland, WI 53029-0020 USA

USA
 TEL 1-800-397-8664 (USA)
 FAX 1-800-369-2440 (USA)
 Internet: www.dorner.com

Outside the USA
 TEL 1-414-367-7600,
 FAX 1-414-367-5827