

Flat Belt Center Drive LPZ Conveyors

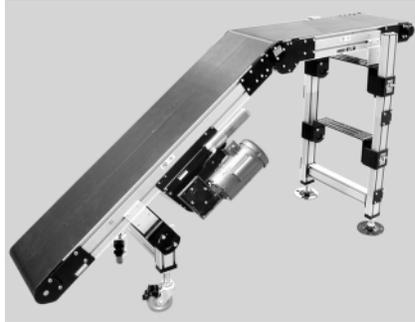


Table of Contents

Warnings – General Safety	2	Center Drive Pulleys Removal	22
Introduction	2	A – Tensioner Pulley Removal	22
Product Description	3	B – Idler Pulley Removal	23
Specifications	3	C – Drive Pulley Removal	25
Installation	6	Bearing Replacement	26
Required Tools	6	A – Idler Bearing Replacement	27
Recommended Installation Sequence	6	B – Drive Bearing Removal and Replacement	27
Conveyors Up to 13 ft (3962 mm)	6	C – Transfer Tail Pulley	28
Conveyors Longer Than 13 ft (3962 mm)	6	D – Knuckle Idler Pulley	29
Mounting Brackets	7	E – Knuckle Return Roller	29
Return Rollers	8	Pulley Replacement	29
4 – 6" (102 – 152 mm) Wide Flat Belt Conveyors	8	Idler Pulley	29
8 – 48" (203 – 1219 mm) Wide Flat Belt Conveyors	8	Drive Pulley	29
Gearmotor Installation	9	Transfer Tail Pulley	29
Preventative Maintenance & Adjustment	10	Service Parts	31
Required Tools	10	Drive End Tail Assembly	30
Standard Tools	10	Center Drive 90 Deg Industrial Gearmotors	32
Checklist	10	Transfer Tail Assembly	33
Lubrication	10	Idler End Tail Assembly	34
Maintaining Conveyor Belt	10	Knuckle Assembly	35
Troubleshooting	10	Frame Assembly	36
Cleaning	10	Conveyor Configurations	38
Conveyor Belt Replacement	11	Guiding Options	38
Conveyor Belt Replacement Sequence	11	Section and Length Determination	38
Belt Removal for Conveyor Without Stands	11	Walk Through Frame – Section L1	39
Belt Removal for Conveyor With Stands	13	Walk Through Frame – Section L2	40
Belt Installation for Conveyor Without Stands	14	Walk Through Frame – Section L3	41
Belt Installation for Conveyor With Stands	14	Noseover Frame – Section L2	42
Conveyor Belt Tensioning	15	Noseover Frame – Section L3	43
Conveyor Belt Tracking	15	–13 Adjustable Guiding	44
V – Guided Belts	15	Flat Belt Mounting Bracket	45
Non V–Guided Belts	15	Connecting Assembly without Stand Mount	46
Conveyor Angle Adjustment	17	Flat Belt Connecting Assembly without	
End and Knuckle Pulley Removal	18	Stand Mount	46
A – Idler Pulley Removal	18	4" (102mm) to 6" (152mm) Flat Belt Return Roller	46
B – Transfer Tail Pulley Removal	19	8" (203mm) to 48" (1219mm) Flat Belt Return Roller	47
C – Knuckle Idler Pulley Removal	20	Conveyor Belt Part Number Configuration	48
D – Knuckle Return Roller Removal	21	Return Policy	50

Warnings – General Safety

	WARNING	
<p>The safety alert symbol, black triangle with white exclamation, is used to alert you to potential personal injury hazards.</p>		

	DANGER
<p>Climbing, sitting, walking or riding on conveyor will cause severe injury. KEEP OFF CONVEYORS.</p>	

	DANGER
<p>DO NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.</p>	

	WARNING
<p>LPZ Series Conveyors are not reversible. Reversing creates pinch points which can cause severe injury. DO NOT REVERSE LPZ SERIES CONVEYORS.</p>	

	WARNING
<p>Gearmotors may be HOT. DO NOT TOUCH Gearmotors.</p>	

	WARNING
<p>Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.</p>	

	WARNING
<p>Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.</p> <p>When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, CHECK FOR POTENTIAL PINCH POINTS and other mechanical hazards before system start-up.</p>	

	WARNING
<p>Loosening stand height or angle adjustment screws may cause conveyor sections to drop down, causing severe injury. SUPPORT CONVEYOR SECTIONS PRIOR TO LOOSENING STAND HEIGHT OR ANGLE ADJUSTMENT SCREWS.</p>	

Introduction

IMPORTANT: Some illustrations may show guards removed. **DO NOT** operate equipment without guards.

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage.
- Accessories may be shipped loose. See accessory instructions for installation.

Dorner's Limited Warranty applies.

Dorner 3200 series conveyors are covered by Patent Numbers 5,156,260, and corresponding patents and patent applications in other countries.

Dorner reserves the right to make changes at any time without notice or obligation.

Product Description

Refer to Figure 1 for typical conveyor components.

Typical Components	
A	Conveyor
B	Center Drive Module
C	Gearmotor
D	Guiding & Accessories
E	Mounting Brackets
F	Knuckle
G	Support Stand
H	Idler/Tension End


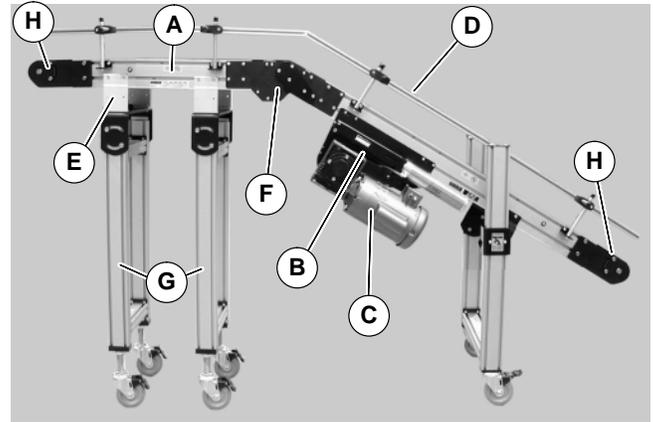


Figure 1

Specifications

Models:

Flat Belt LPZ Series Center Drive Conveyor
3 E 1 5 M WW LLLL-LLLL-LLLLA PP BB

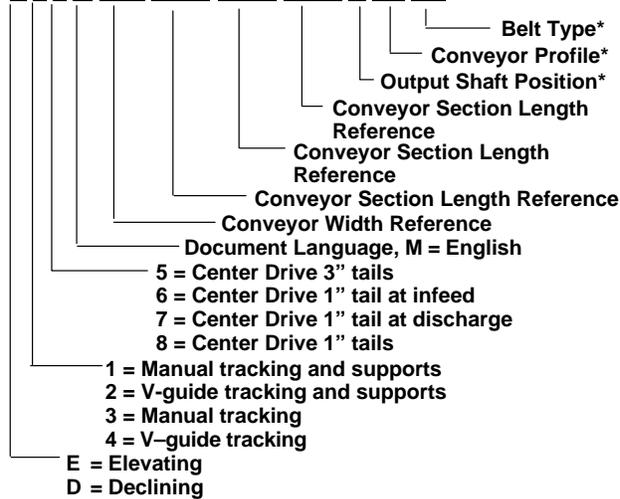

* See Ordering and Specifications Catalog for details.

Conveyor Supports:

Maximum Distances:

I = 24" (610 mm) (Drive End)

J = 12 ft (3658 mm)

K = 36" (914 mm) (Idler End)

Maximum Angle:

L = 0 to 35 degrees



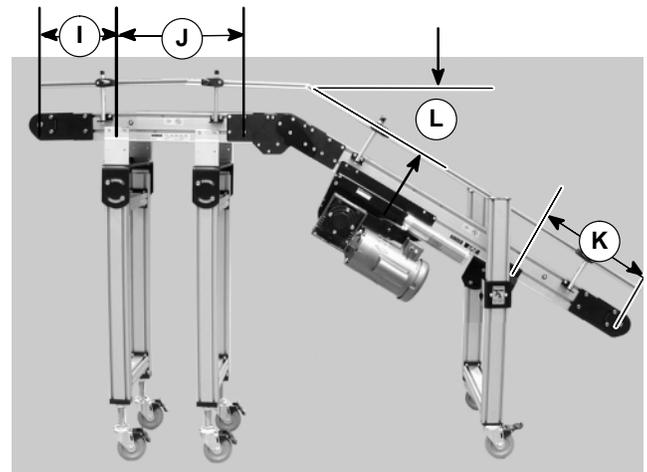


Figure 2

Specifications

Specifications:

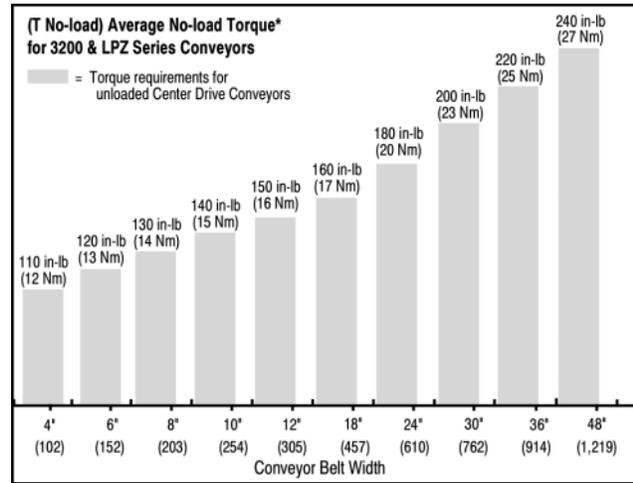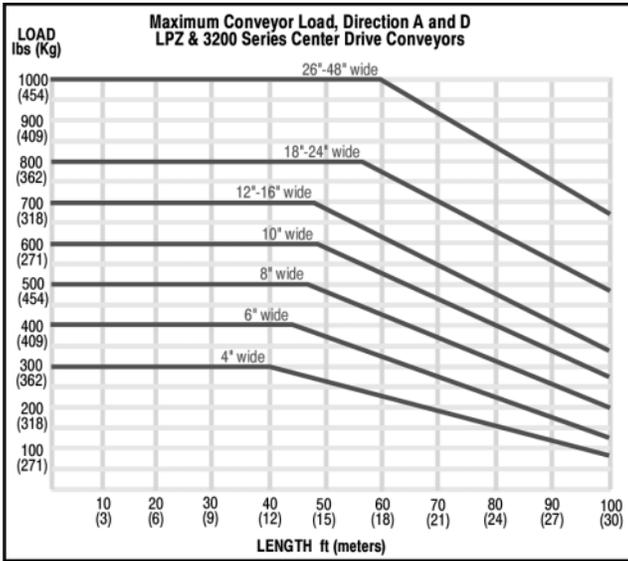

Conveyor Width Reference (WW)	04	06	08	10	12	18	24	30	36	48	
Conveyor Belt Width	3.75" (95mm)	6" (152mm)	8" (203mm)	10" (254mm)	12" (305mm)	18" (457mm)	24" (609mm)	30" (762mm)	36" (915mm)	48" (1220mm)	
Conveyor Length Reference (LLLL)	0300 to 9900 in 0001 increments										
Conveyor Length	4 ft (1219mm) to 99 ft (30175mm) in 0.12" (0.31mm) increments										
Belt Travel	18.8" (478 mm) per revolution of pulley										
Maximum Belt Speed*	600 ft/minute (183 m/minute)										
Belt Takeup	16" (407 mm) of Belt Takeup										

* See Ordering and Specifications Catalog for details.

NOTE: Maximum conveyor loads based on:

- Non-accumulating product
- Product moving towards gearmotor
- Conveyor being mounted horizontal

Table 1: Belt Speeds for Variable Speed 90° VDC Gearmotors

Standard Load Gearmotors				Belt Speed	
Part Number	RPM	In-lb	N-m	Ft/min	M/min
32M100HHD9DEN	25	630	71	4.0–40.0	1.2–12.2
32M080HHD9DEN	31	575	65	5.0–50.0	1.5–15.2
32M060HHD9DEN	42	469	53	6.7–66.7	2.0–20.3

(vp) = voltage and phase
 11 = 115 V, 1-phase
 23 = 208 – 230/460 V, 3-phase

Table 2: Belt Speeds for Fixed Speed 90° Gearmotors

Standard Load Gearmotors				Belt Speed	
Part Number	RPM	In-lb	N-m	Ft/min	M/min
32M100HHvpfN	17	913	103	27.6	8.4
32M080HHvpfN	22	833	94	34.5	10.5
32M060HHvpfN	29	680	77	46.0	14.0
32M050HHvpfN	35	1206	136	55.2	16.8
32M040HHvpfN	43	1023	116	69.0	21.0
32M030HHvpfN	58	1217	138	92.0	28.0
32M025HHvpfN	69	1069	121	110.4	33.7
32M020HHvpfN	86	1184	134	138.0	42.1
32M015HHvpfN	115	910	103	184.0	56.1
32M010HHvpfN	173	636	72	276.0	84.1
32M008HHvpfN	230	482	54	368.0	112.2

Table 3: Belt Speeds for Variable Speed 90° VFD Gearmotors

Standard Load Gearmotors				Belt Speed	
Part Number	RPM	In-lb	N-m	Ft/min	M/min
32M100HHvpfN	17	913	103	2.8–27.6	0.8–8.4
32M080HHvpfN	22	833	94	3.5–34.5	1.1–10.5
32M060HHvpfN	29	680	77	4.6–46.0	1.4–14.0
32M050HHvpfN	35	1206	136	5.5–55.2	1.7–16.8
32M040HHvpfN	43	1023	116	6.9–69.0	2.1–21.0
32M030HHvpfN	58	1217	138	9.2–92.0	2.8–28.0
32M025HHvpfN	69	1069	121	11.0–110.4	3.4–33.7
32M020HHvpfN	86	1184	134	13.8–138.0	4.2–42.1
32M015HHvpfN	115	910	103	18.4–184.0	5.6–56.1
32M010HHvpfN	173	636	72	27.6–276.0	8.4–84.1
32M008HHvpfN	230	482	54	36.8–368.0	11.2–112.2

Table 4: Belt Speeds for Variable Speed 90° VFD Integrated Motor Control Gearmotors

Standard Load Gearmotors				Belt Speed	
Part Number	RPM	In-lb	N-m	Ft/min	M/min
32M100HH411EC	17	913	103	4.6–36.7	1.4–11.2
32M060HH411EC	29	680	77	7.7–61.2	2.3–18.7
32M040HH411EC	43	1023	116	11.5–91.8	3.5–28.0
32M015HH411EC	69	712	80	18.4–146.8	5.6–44.8
32M020HH411EC	86	592	67	23.0–183.5	7.0–56.0
32M015HH411EC	115	455	51	30.7–244.7	9.4–74.6

(vp) = voltage and phase
 11 = 115 V, 1-phase
 23 = 208 – 230/460 V, 3-phase

NOTE: For belt speed other than those listed, contact factory for details.

Installation

	 WARNING
	LPZ Series Conveyors are not reversible. Reversing creates pinch points which can cause severe injury. DO NOT REVERSE LPZ SERIES CONVEYORS.

NOTE: Conveyor **MUST** be mounted straight, flat and level within confines of conveyor. Use a level (**M** of Figure 3) for setup.

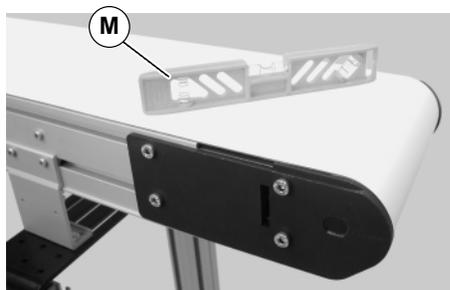


Figure 3

Required Tools

- Hex-key wrenches:
4 mm, 5 mm
- Level
- Torque wrench
- 8mm hex, open end wrench

Recommended Installation Sequence

- Install support stands (see accessory instructions)
- Assemble conveyor (if required)
- Attach mounting brackets to conveyor (see page 7 for instructions)
- Adjust angle (see page 17 for instructions)
- Attach conveyor to stands
- Install return rollers on conveyor (see page 8 for instructions)
- Mount gearmotor mounting package (see page 9 for instructions)
- Attach guides/accessories (see page 38 through 44 of “Service Parts” section for details)

Conveyors Up to 13 ft (3962 mm)

No assembly is required. Install mounting brackets and return rollers. Refer to “Mounting Brackets” on page 7 and “Return Rollers” on page 8.

Conveyors Longer Than 13 ft (3962 mm)

1. Locate components (see Figure 4).

Installation Component List

N	Conveyor frame with knuckle
O	Conveyor frame with idler end
P	Belt
Q	Knuckle
R	Intermediate Conveyor Frame (required for conveyor sections over 13' (3962 mm) long)

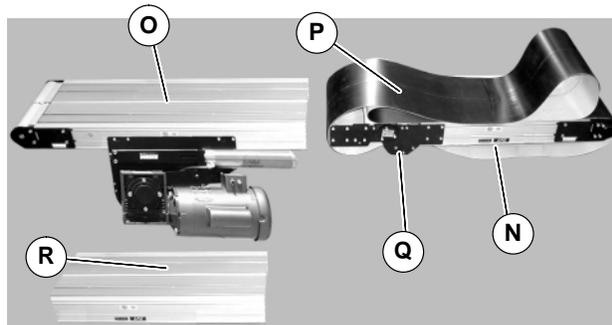


Figure 4

2. On tension end of the conveyor, identified by the pinion locking screw (S of Figure 5), push in head plate assembly (U): Loosen the pinion locking screw (S), adjust the pinion torque screw (V of Figure 6). On both sides of conveyor, loosen the two tail clamp bolts (T of Figure 5), and push head plate assembly (U) inward.

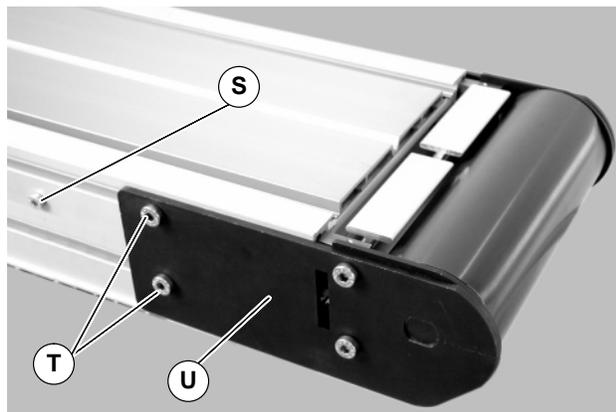


Figure 5



Figure 6

3. Roll out conveyor belt (P of Figure 7). Loosen (4) screws (W) on both sides of knuckle (Q). Slide frame (O) into knuckle (Q). Tighten screws (W) to 60 in-lb (7 N-m) on both sides of conveyor.

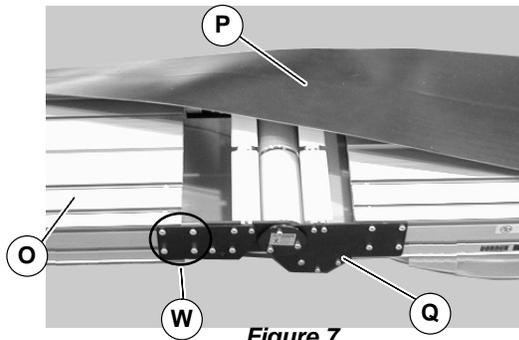


Figure 7

4. Join additional conveyor sections if necessary and install connector brackets (X of Figure 8) or connector/mount brackets (XA) and screws (Y) on both sides as indicated. Tighten screws to 60 in-lb (7 Nm).

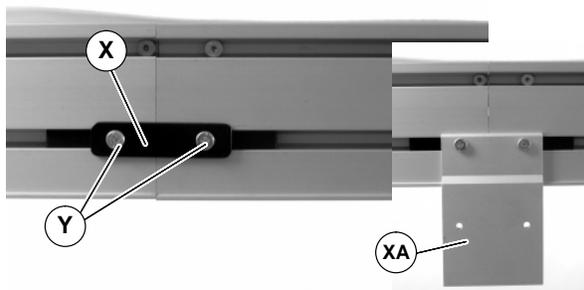


Figure 8

5. Slide belt (P of Figure 9) over assembled conveyor sections (Z).


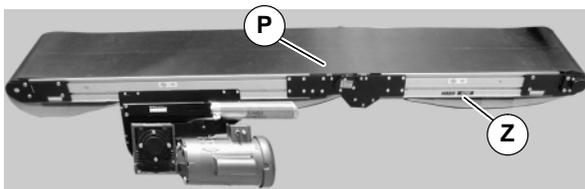


Figure 9

6. Tension conveyor belt, refer to “Conveyor Belt Tensioning” on page 15.
7. Install mounting brackets and return rollers. Refer to “Mounting Brackets” on page 7 and “Return Roller” on page 8.
8. Adjust conveyor angle. See “Conveyor Angle Adjustment” on page 17.

Mounting Brackets

1. Locate brackets. Exploded views shown in Figure 10.

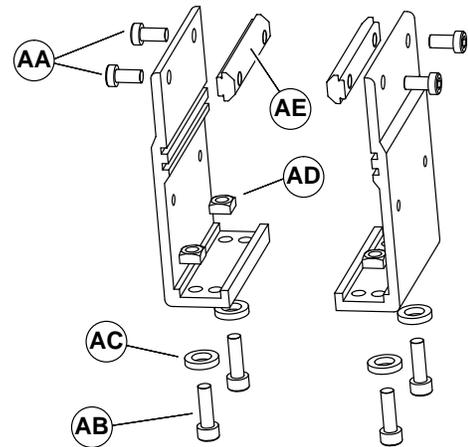

Mounting Brackets for Flat Belt Conveyor

Figure 10

2. Remove screws (AA & AB of Figure 10), washers (AC), nuts (AD) and T-bars (AE) from brackets.
3. Insert T-bars (AE of Figure 10) into conveyor side slots (AE of Figure 11). Fasten brackets (AF of Figure 11) to conveyor with mounting screws (AA).

Installation

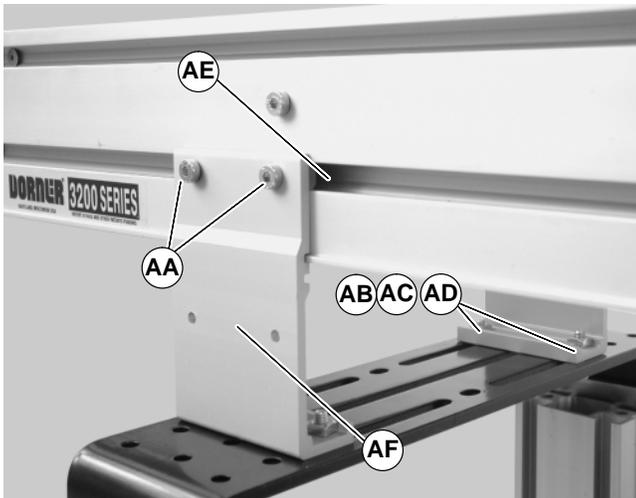



Figure 11

4. Fasten brackets to support stand with mounting screws (AB of Figure 11), washers (AC) and nuts (AD).
5. Tighten screws (AA & AB of Figure 11) to 60 in-lb (7 Nm).

Return Rollers

4–6" (102–152 mm) Wide Flat Belt Conveyors

1. Locate return rollers. Exploded view shown in Figure 12.

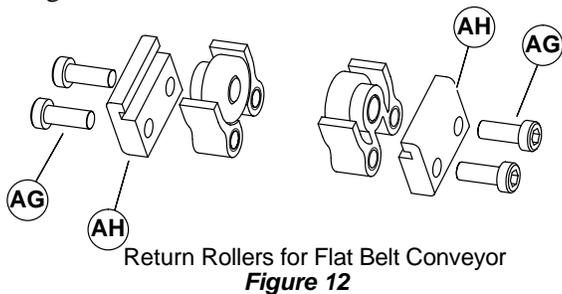

2. Remove screws (AG of Figure 12) and clips (AH) from roller assembly.
3. Install roller assemblies (AI of Figure 13) as shown. Tighten screws (AG) to 60 in-lb (7 Nm).

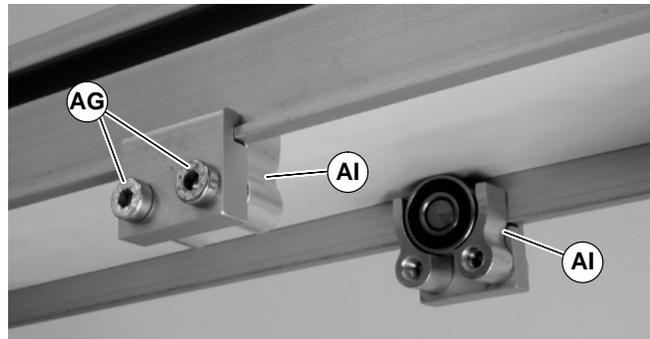


Figure 13

8–48" (203–1219 mm) Wide Flat Belt Conveyors

1. Locate return rollers. Exploded view shown in Figure 14.

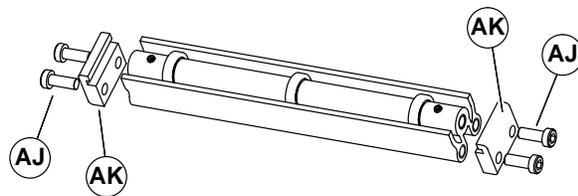


Figure 14

2. Remove screws (AJ of Figure 14) and clips (AK) from roller assembly.
3. Install roller assembly as shown (AL of Figure 15). Tighten screws (AJ) to 60 in-lb (7 Nm).

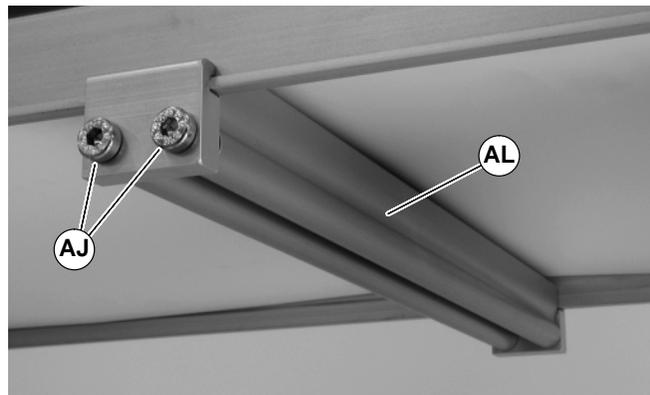


Figure 15

Gearmotor Installation

Required Tools

- Hex key wrenches:
2 mm, 2.5 mm, 3 mm, 5 mm
- Torque wrench

Mounting



1. Locate components of Figure 16.

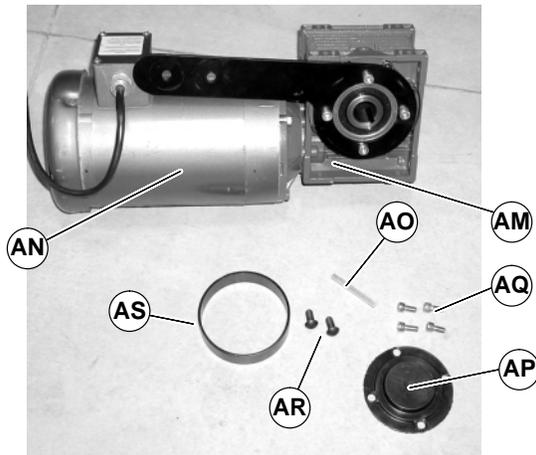


Figure 16

Gearmotor Installation Component List	
AM	Gearhead with mounting bracket
AN	Motor
AO	Gear Reducer Key
AP	Cover
AQ	Cover Bolts
AR	Motor Mount Bolts
AS	Spacer Ring

NOTE: Gearmotor may be operated in positions 1, 3 or 4 (Figure 17).

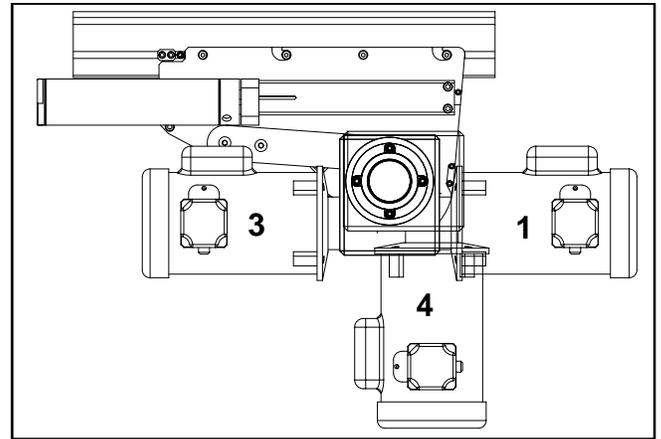


Figure 17

2. If required, change gearmotor position by removing four (4) screws (AT of Figure 18). Rotate gearmotor mounting plate to other position and replace screws (AT). Tighten to 200 in-lb (22.5 Nm).

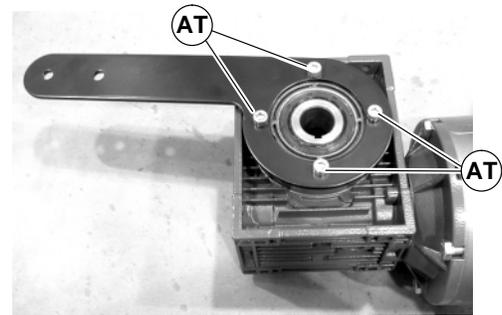


Figure 18



3. Install key (AO of Figure 19) on drive shaft(AU). Install cover (AP) over bearing housing (AV)

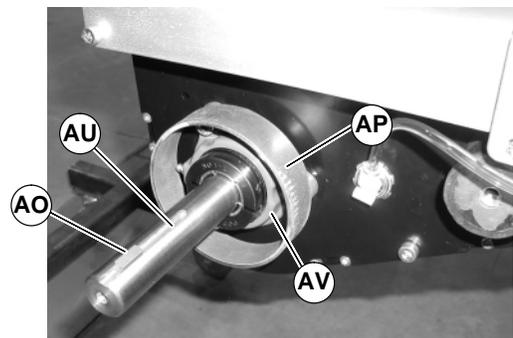


Figure 19

Installation

4. Install cover (AP of Figure 20) with four (4) screws (AQ).

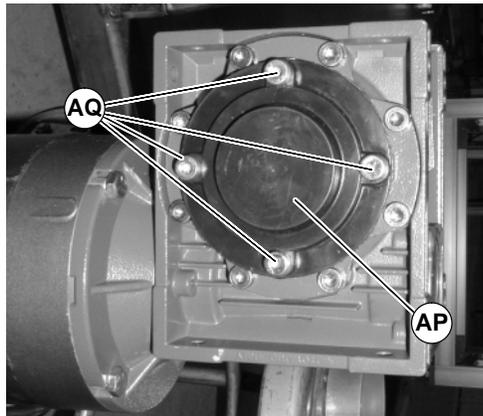


Figure 20

5. Slide gearmotor (AM of Figure 21) on to drive shaft (AU of Figure 19). Tighten mounting screws (AR) to 200 in-lbs (22.5 N-m).

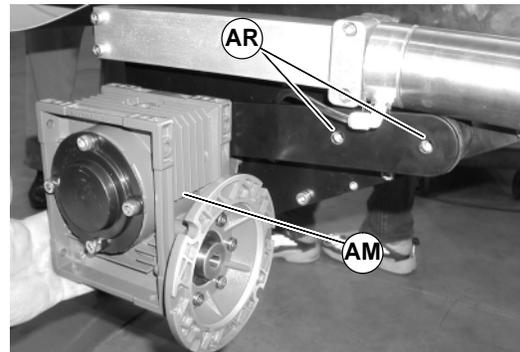


Figure 21

Preventive Maintenance and Adjustment

Required Tools

Standard Tools

- Hex-key wrenches:
2.5 mm, 4 mm, 5 mm
- 8mm hex, open end wrench

Checklist

- Keep service parts on hand (see “Service Parts” section for recommendations)
- Keep supply of belt cleaner (part # 625619)
- Clean entire conveyor and knurled pulley while disassembled
- Replace worn or damaged parts

Lubrication

No lubrication is required. Replace bearings if worn.

Maintaining Conveyor Belt

Troubleshooting

Inspect conveyor belt for:

- Surface cuts or wear
- Stalling or slipping
- Damage to V-guide

Surface cuts and wear indicate:

- Sharp or heavy parts impacting belt
- Jammed parts

- Improperly installed bottom wipers (if installed)
- Accumulated dirt in wipers (if installed)
- Foreign material inside the conveyor
- Improperly positioned accessories
- Bolt-on guiding is pinching belt

Stalling or slipping indicates:

- Excessive load on belt
- Conveyor belt or drive timing belt are not properly tensioned
- Worn knurl or impacted dirt on drive pulley
- Intermittent jamming or drive train problems

Damage to V-guide indicates:

- Twisted or damaged conveyor frame
- Dirt impacted on pulleys
- Excessive or improper side loading

NOTE: Visit www.dorner.com for complete list of troubleshooting solutions.

Cleaning

IMPORTANT: Do not use belt cleaners that contain alcohol, acetone, Methyl Ethyl Ketone (MEK) or other harsh chemicals.

Use Dorner Belt Cleaner (part # 625619). Mild soap and water may also be used. Do not soak the belt.

For /05 woven polyester and /06 black anti-static belts, use a bristled brush to improve cleaning.

Preventive Maintenance and Adjustment

Conveyor Belt Replacement



Conveyor Belt Replacement Sequence

- Release Tension
- Remove old conveyor belt:
 - Conveyor without Stands or Gearmotor Mounting Package
 - Conveyor with Stands and Gearmotor Mounting Package
- Install new conveyor belt
- Tension conveyor belt

Belt Removal for Conveyor Without Stands

1. Remove air supply and remove hose (AW of Figure 22) from center drive.



Figure 22

2. If equipped, remove return rollers and guiding and accessories from one side of conveyor.
3. Temporarily support idler guard assembly (AX of Figure 23). Remove screws (AY).

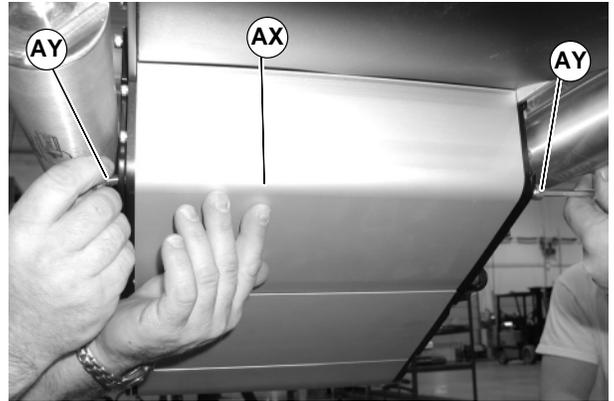


Figure 23

4. Swing down idler guard assembly (AX of Figure 24). Remove screw (AZ) from both sides of center drive and remove idler guard assembly (AX).



Figure 24

5. Remove screws (BA of Figure 25) and tensioning guards (BB) from both sides of center drive.

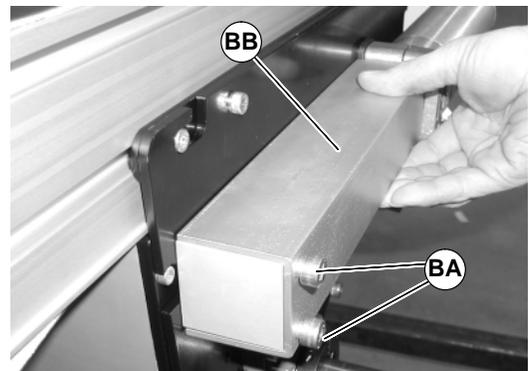


Figure 25

Preventive Maintenance and Adjustment

6. Temporarily support the tensioning roller guard (BD of figure 26). Remove screws (BC of Figure 26) on both sides of center drive and remove tensioning roller guard (BD of Figure 26 and 27).

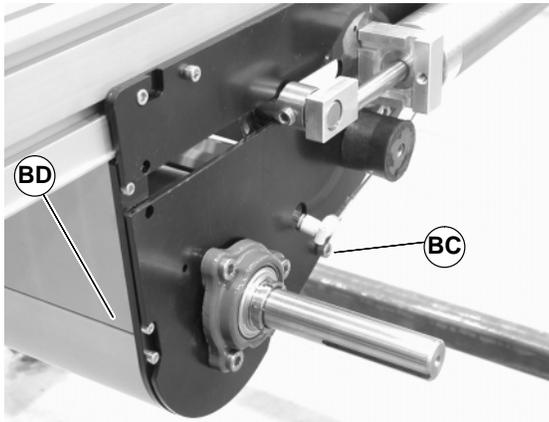


Figure 26

7. Loosen tensioning roller set screws (BE of Figure 27).

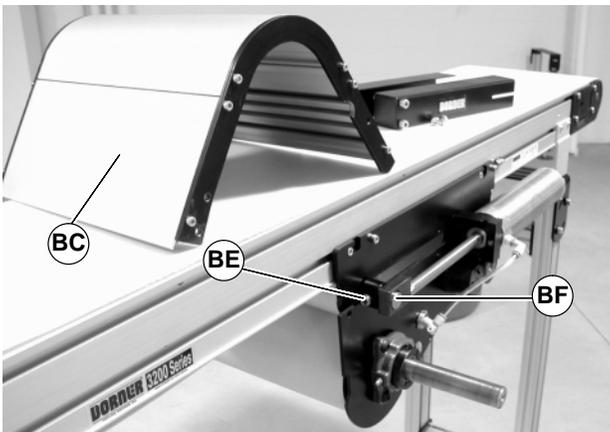


Figure 27

8. Push shaft (BF of Figure 27) through block, slide block (BG of Figure 28) towards air cylinder (BH).

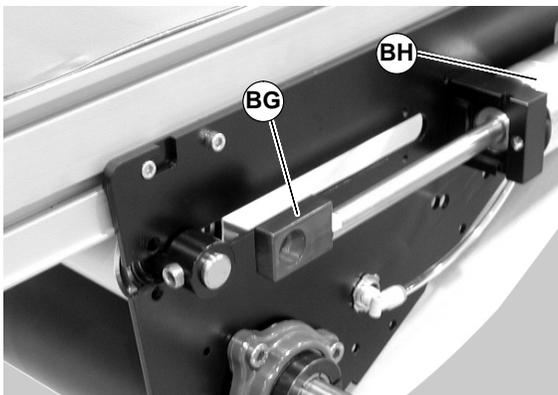


Figure 28

9. Push shaft (BF of Figure 29) through block (BG) on opposite side of center drive, slide block toward air cylinder (BH).

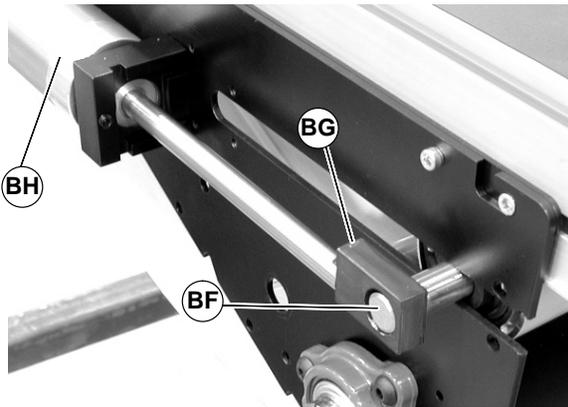


Figure 29

10. Slide out tensioning roller (BI of Figure 30).

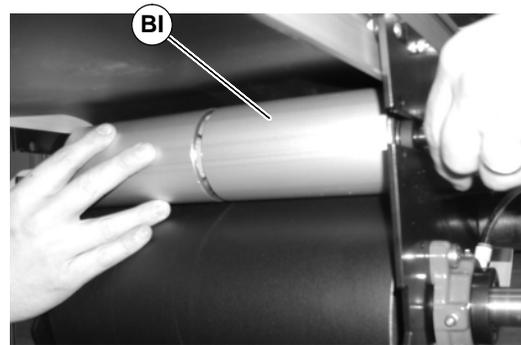


Figure 30

11. Remove belt (BJ of Figure 31) from center drive module (B) and conveyor.

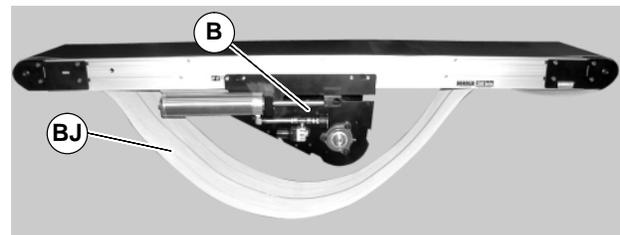


Figure 31

Preventive Maintenance and Adjustment

12. Remove screws (BK of Figure 32) on both sides of knuckle and remove guard (BL).

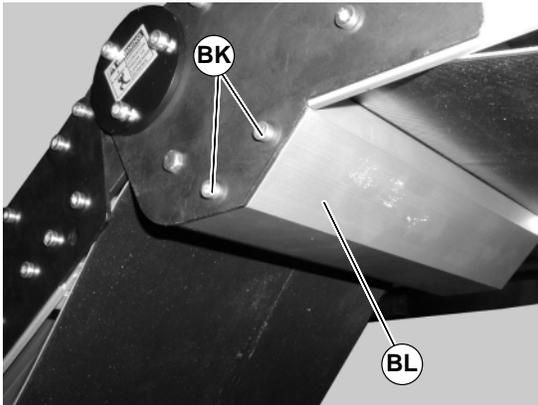


Figure 32

13. Push in hex posts (BM of Figure 33) and remove roller (BN).

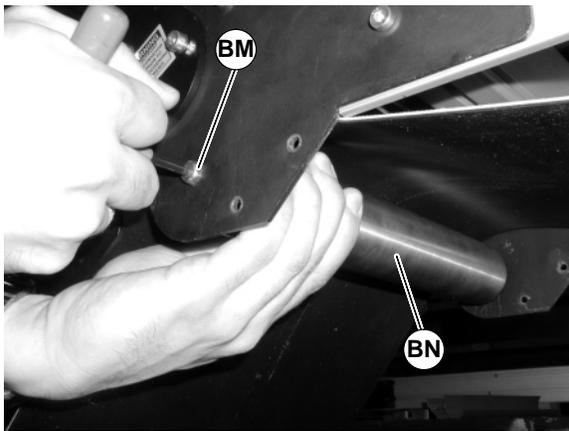


Figure 33

14. Remove belt (BJ of Figure 34) from conveyor.

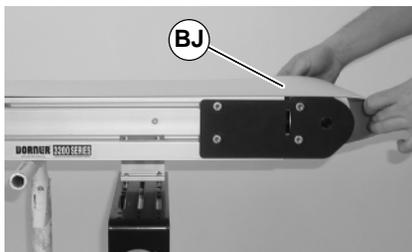


Figure 34

Belt Removal for Conveyor With Stands



1. Place temporary support stands (BO of Figure 37) at both ends of the conveyor. See WARNING.

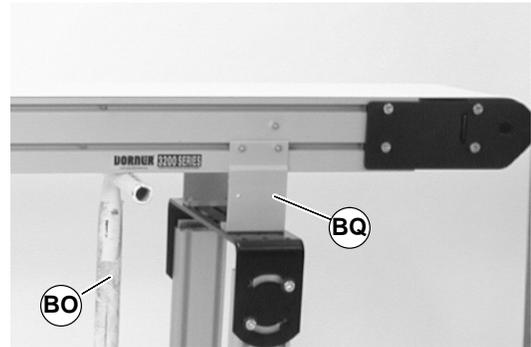


Figure 35

2. If equipped, remove return rollers, guiding and accessories from one side of conveyor.
3. Repeat steps 1 thru 13 of the "Belt Removal for Conveyors Without Stands" section on page 11.
4. Remove first mounting brackets (BQ of Figure 37) from one side of conveyor. (Reverse steps 3 & 4 of "Mounting Brackets" section on page 7).
5. Remove belt (BJ of Figure 36) from conveyor, one stand at a time. Start on one end of conveyor and work down to opposite end.

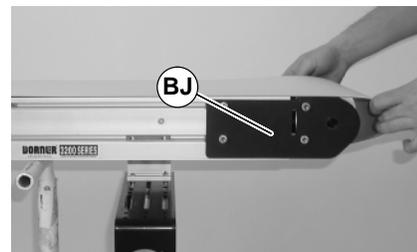


Figure 36

Preventive Maintenance and Adjustment

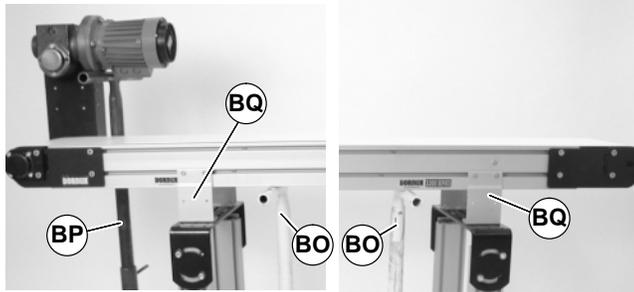


Figure 37

Belt Installation for Conveyor with Stands



Belt Installation for Conveyor without Stands

1. Orient belt so splice leading fingers (BR of Figure 40) point in the direction of belt travel as identified by the conveyor directional label (BS).

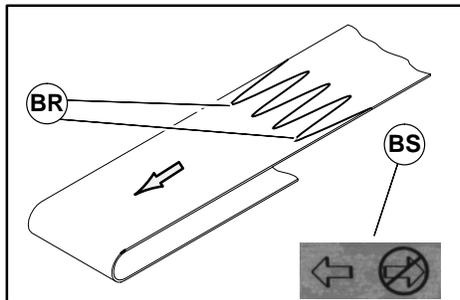


Figure 38

2. Slide belt onto the conveyor frame assembly.
3. Reverse steps 1 thru 13 of the “Belt Removal for Conveyors Without Stands” section on page 11.
4. If equipped, install wipers, return rollers and guiding.
5. Reattach air supply (AW of Figure 39) to center drive. Refer to “Conveyor Belt Tensioning” section on page 15 for more information.

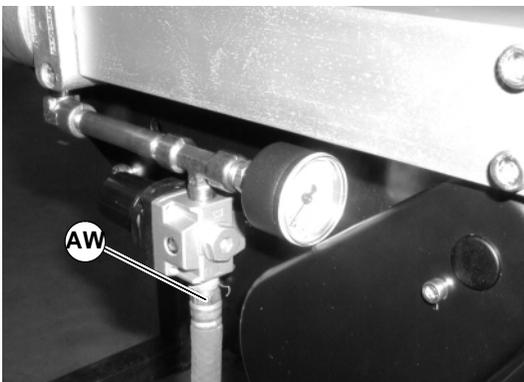


Figure 39

6. Track conveyor and center drive if required. See “Center Drive Module Tracking” section on page 16 and “Conveyor Belt Tracking” section on page 15.

1. Ensure temporary support stands (BO of Figure 37) are placed at both ends of the conveyor. See WARNING.
2. Orient belt so splice leading fingers (BR of Figure 40) point in the direction of belt travel as identified by the conveyor directional label (BS).

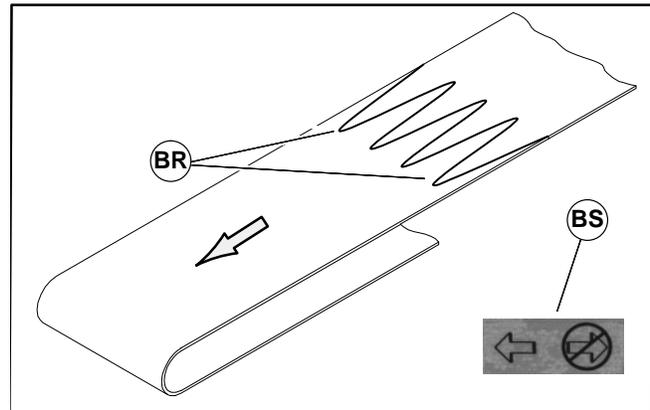


Figure 40

3. Install belt (BJ of Figure 40) on conveyor. Lift conveyor slightly to avoid pinching belt on temporary support stands.

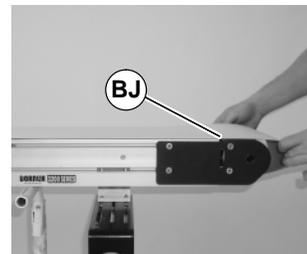


Figure 41

4. Re-install conveyor mounting brackets. Refer “Mounting Brackets” on page 7, steps 3 through 5.
5. Reverse steps 1 thru 13 of the “Belt Removal for Conveyors Without Stands” section on page 11.
6. If equipped, install wipers, return rollers and guiding.

Preventive Maintenance and Adjustment

7. Reattach air supply (AW of Figure 39) to center drive. Refer to “Conveyor Belt Tensioning” section on page 15 for more information.

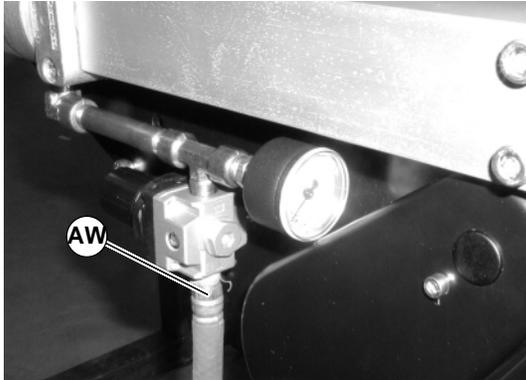


Figure 42

8. Track conveyor and center drive if required. See “Center Drive Module Tracking” section on page 16 and “Conveyor Belt Tracking” section on page 15.

Conveyor Belt Tensioning



! WARNING

Exposed moving parts can cause severe injury.

LOCK OUT POWER before removing guards or performing maintenance.

1. Connect air supply (AW of Figure 43) to regulator (BT).
2. Adjust regulator (BT of Figure 43) until gage reads the appropriate pressure. See following table for suggested pressures.

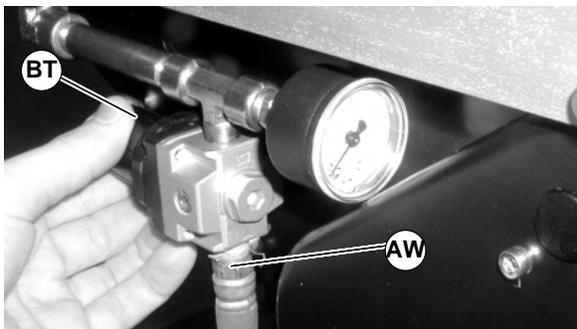


Figure 43

Suggested Tensioning Air Pressure for LPZ & 3200 Series Flat Belt Center Drive Conveyors	
Width	Pressure
4" (95 mm)	20 psi (138 kPa)
6" (152 mm)	30 psi (207 kPa)
8" (203 mm)	40 psi (276 kPa)
10" (254 mm)	50 psi (345 kPa)
14" (356 mm)	60 psi (414 kPa)
18" (457 mm)	70 psi (483 kPa)
24" (610 mm) & wider	80 psi (552 kPa)

3. If proper belt tension cannot be achieved before the out of tension indicator (BU of Figure 44) begins to turn red, the belt must be replaced.

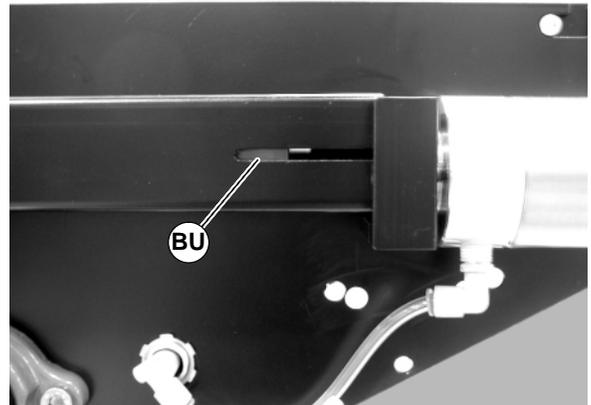


Figure 44

4. If belt tracking is necessary, refer to “Conveyor Belt Tracking” on page 15 and “Center Drive Module Tracking” on page 16.

Conveyor Belt Tracking

V-Guided Belts

V-guided belts do not require tracking adjustment.

Non V-Guided Belts

Non V-guided belt conveyors are equipped with belt tracking assemblies.

When adjusting belt tracking, always adjust the discharge end of the conveyor first. To adjust belt tracking:

1. On the side of conveyor which the belt is tracking towards, loosen the head plate fastening screws (BV of Figure 45).

Preventive Maintenance and Adjustment

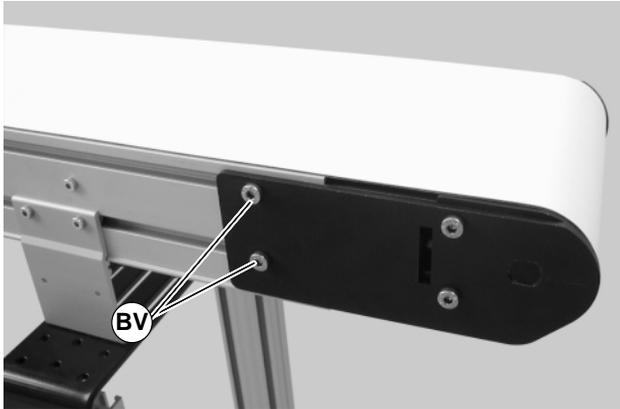


Figure 45

2. With the conveyor running, use wrench (BW of Figure 46) to rotate the tracking screw (BX of Figure 47) in small increments until the belt tracks in the center of the conveyor.

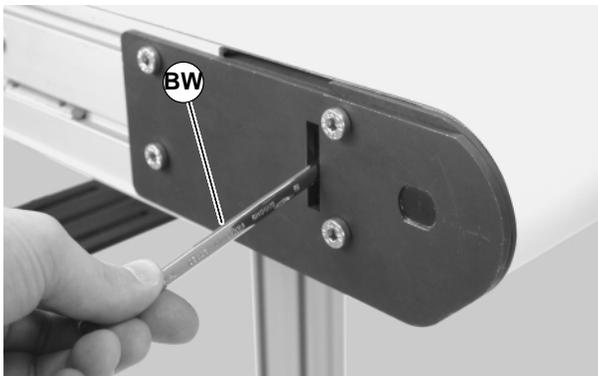


Figure 46

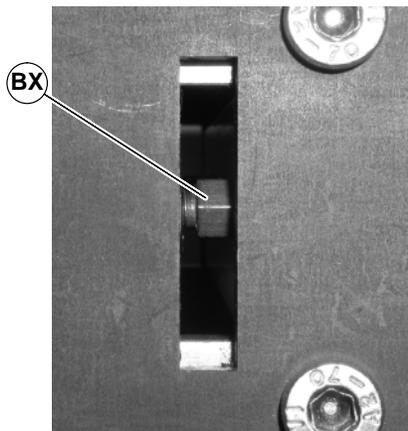


Figure 47

3. Re-tighten the head plate fastening screws (BV of Figure 45) with a 5 mm hex-key wrench to 146 in-lb (16.5 Nm).

Center Drive Module Tracking

V-Guided Belts

V-guided belts do not require tracking adjustment.

Non V-Guided Belts

Non V-guided belt center drives are equipped with cam tracking assemblies.

To adjust center drive tracking, with the conveyor running:

1. Inspect belt as it exits the center drive:
Figure 48 – Normally tracked belt, do nothing
Figure 49 – Tracking necessary, adjust tight side cam



Figure 48



Figure 49

2. If necessary, adjust the tracking cam: loosen the center drive fastening screws (BY of Figure 50) on the side of center drive to be tracked.

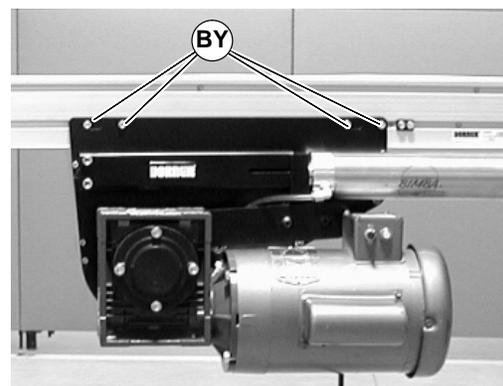


Figure 50

3. Rotate the tracking cam (BZ of Figure 51) in small increments, each time inspecting the belt as it exits

Preventive Maintenance and Adjustment

the center drive. Continue to rotate the tracking cam until conveyor belt is tracking normally.

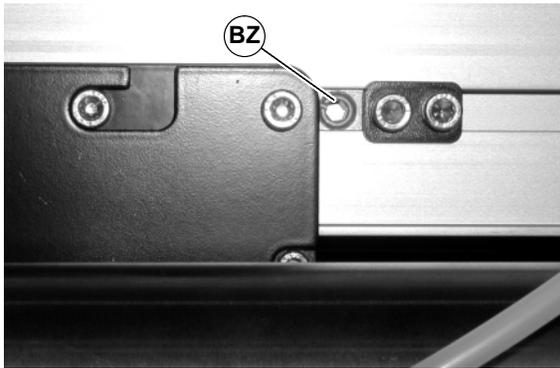


Figure 51

4. Tighten the center drive fastening screws (BY of Figure 50) to 146 in-lbs (16.5 N-m).

Conveyor Angle Adjustment

	<p>! WARNING</p> <p>Removing mounting brackets or adjustment screws without support under gearmotor and conveyor will cause conveyor to tip or drop, causing severe injury.</p> <p>PROVIDE SUPPORT UNDERNEATH THE GEARMOTOR WHEN ADJUSTING THE CONVEYOR ANGLE</p>
--	---

	<p>! WARNING</p> <p>Exposed moving parts can cause severe injury.</p> <p>LOCK OUT POWER before removing guards or performing maintenance.</p>
--	---

1. Place temporary support (CA of Figure 52) under conveyor sections.

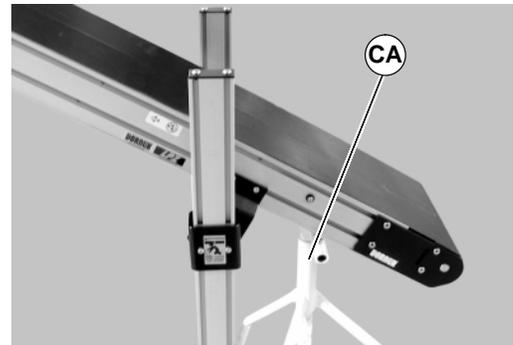


Figure 52

2. Loosen screws (CB of Figure 53) on both sides of knuckle.

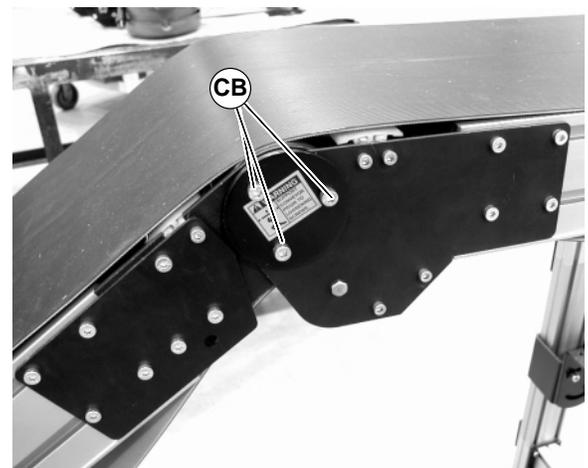


Figure 53

3. Move conveyor to desired angle as indicated by angle label (CC of Figure 54).

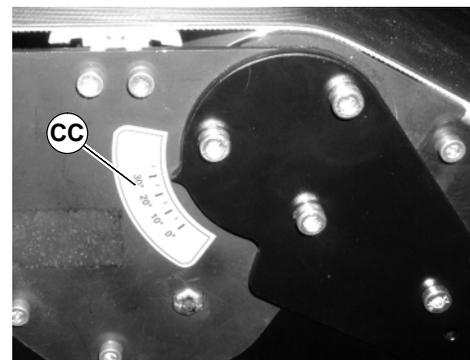


Figure 54

4. Tighten screws (CB of Figure 53) on both sides of knuckle to 100 in-lbs (12 N-m).

Preventive Maintenance and Adjustment

End and Knuckle Pulley Removal

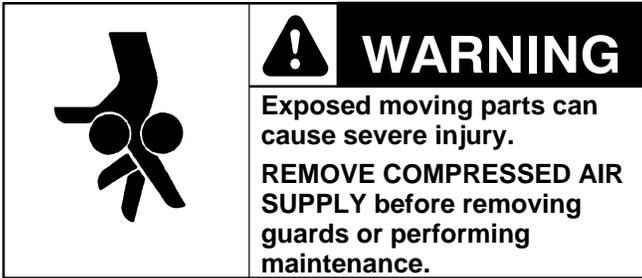


Figure 57

Remove the desired pulley following the corresponding instructions below:

- **A** – Idler Pulley Removal
- **B** – Transfer Tail Pulley Removal
- **C** – Knuckle Idler Pulley Removal
- **D** – Knuckle Return Roller Removal

1. Remove air supply and remove hose (AW of Figure 55) from center drive.



Figure 55

A – Idler Pulley Removal

1. Temporarily support the idler pulley.



Figure 58

2. Temporarily support idler guard assembly (AX of Figure 23). Remove screws (AY).

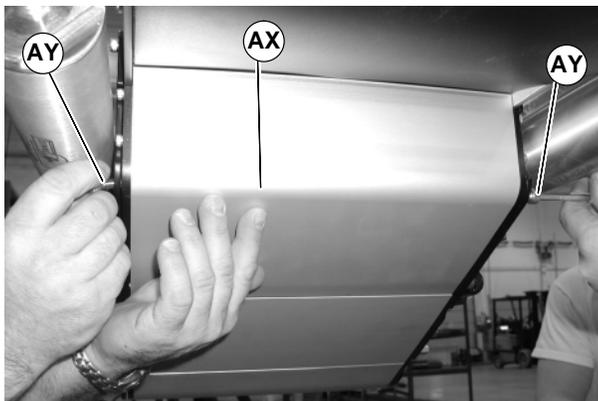


Figure 56

2. On one side of conveyor, loosen the two (2) back fastening screws (T of Figure 59) and remove two (2) front fastening screws (CD).

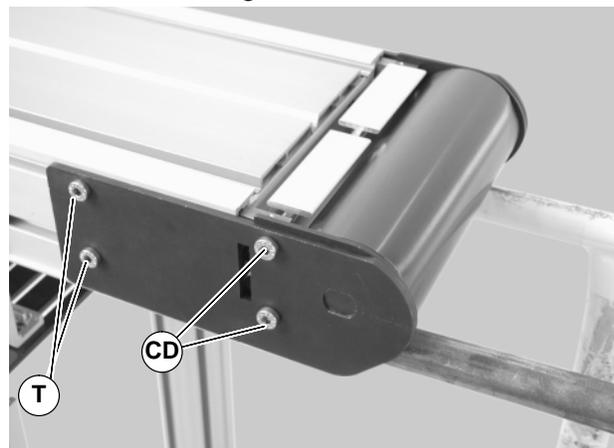


Figure 59

3. Swing down idler guard assembly (AX of Figure 57).

Preventive Maintenance and Adjustment

3. Pull back the outer headplate (U of Figure 60) and remove the inner spacer (CE).

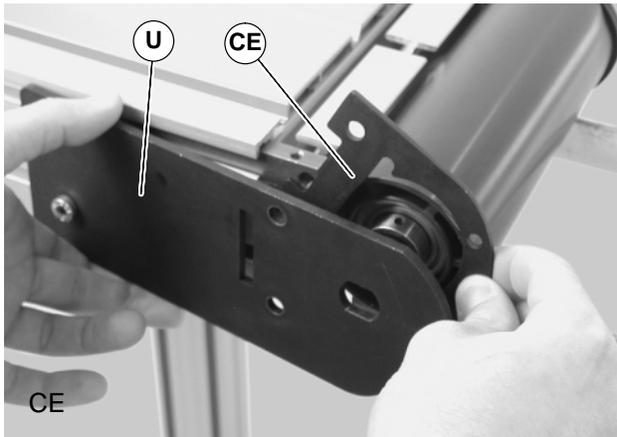


Figure 60

6. Slide the shaft assembly (CI of Figure 63) out of the pulley (CF).

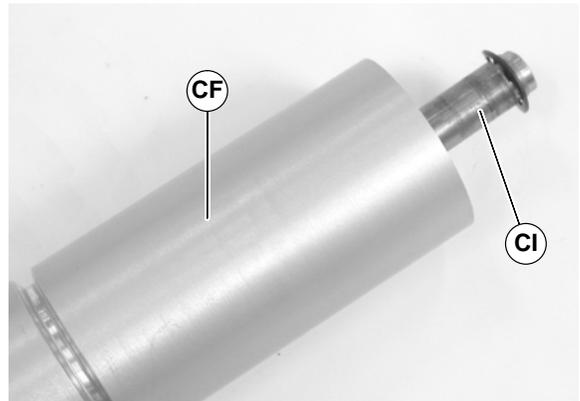


Figure 63

4. Slide the idler pulley assembly (CF of Figure 61) out of the headplate on the opposite side.

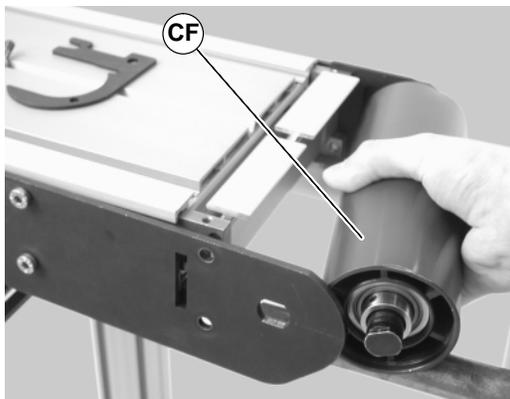


Figure 61

B – Transfer Tail Pulley Removal

1. Temporarily support the transfer tail assembly.



Figure 64

5. Remove the pulley shaft assembly: remove the clip ring (CG of Figure 62) and washer (CH) from one side of the pulley assembly.

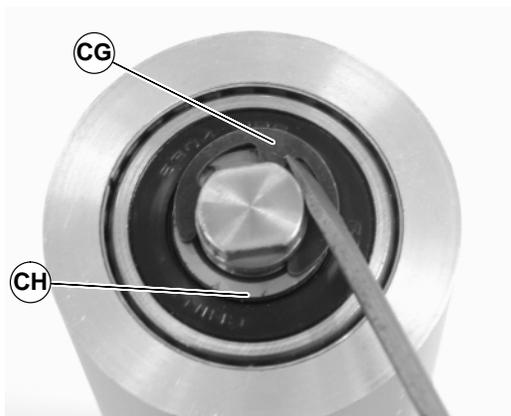


Figure 62

2. On one side of conveyor, loosen the two (2) back fastening screws (T of Figure 65), and remove the two (2) front fastening screws (CD).

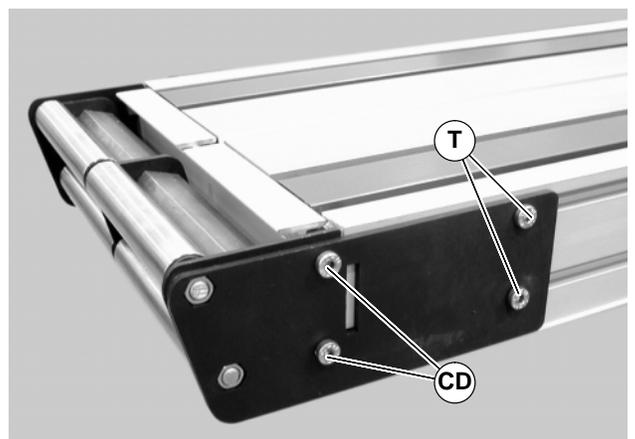


Figure 65

Preventive Maintenance and Adjustment

3. Pull back the outer headplate (U of Figure 66) and remove the inner spacer (CE).

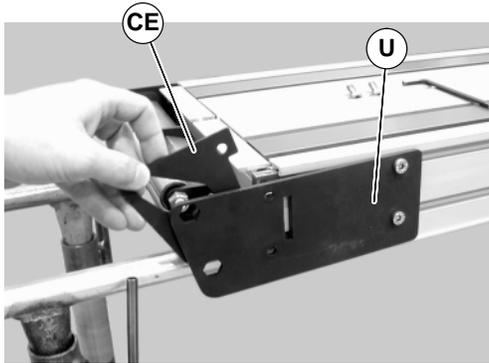


Figure 66

4. Slide the transfer tail pulley assembly (CJ of Figure 67) out of the headplate on the opposite side.

NOTE: Transfer tail assembly must be removed as on piece. Removal may require removing screws T of Figure 65 and headplate U of Figure 66 as shown in Figure 67

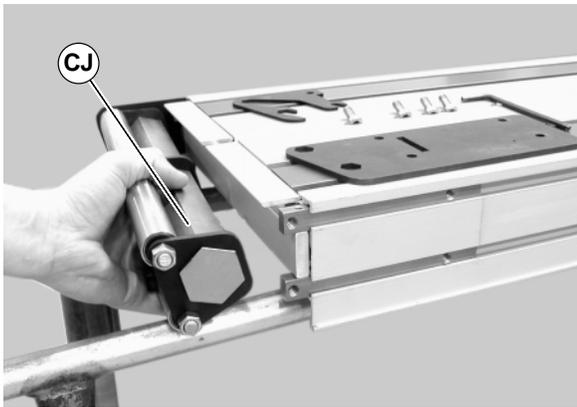


Figure 67

5. Remove hex nuts (CK of Figure 68).

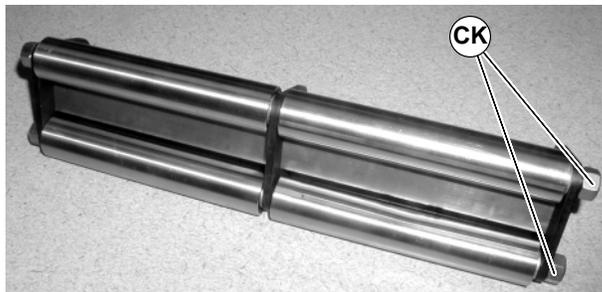


Figure 68

6. Remove support plates (CL of Figure 69) and washers (CM).

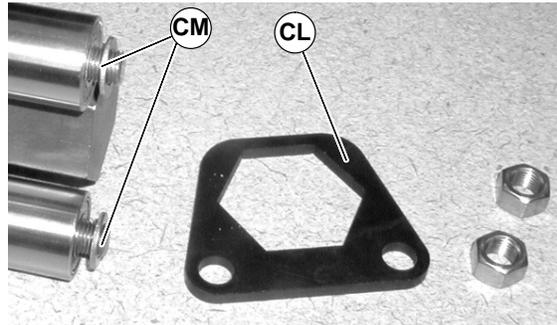


Figure 69

7. Remove pulleys (CN of Figure 70) and additional washers (CO).

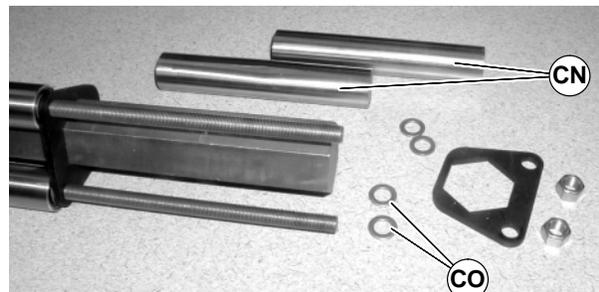


Figure 70

8. To remove additional pulleys, repeat steps 6 through 7.

C – Knuckle Idler Pulley Removal

1. Remove knuckle return roller and guard see “Knuckle Return Roller Removal” on page 21.
2. Temporarily support the knuckle idler pulley.



Figure 71

3. On one side of knuckle, remove screws (CP of Figure 72) and knuckle plate assembly (CQ).

Preventive Maintenance and Adjustment

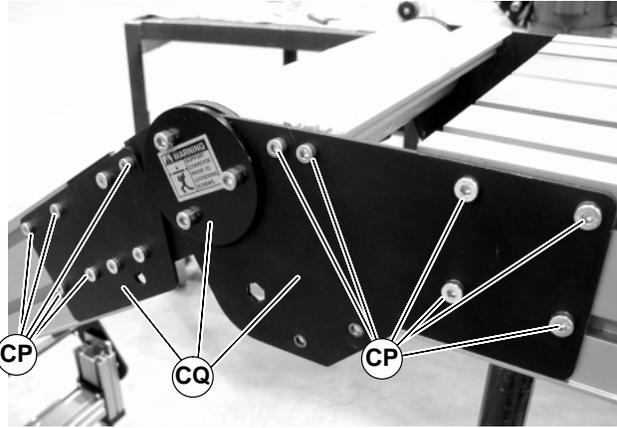


Figure 72

- Slide the idler pulley assembly (CR of Figure 73) out of the knuckle plate on the opposite side.



Figure 73

- Remove the pulley shaft assembly: remove the clip ring (CG of Figure 74) and washer (CH) from one side of the pulley assembly.

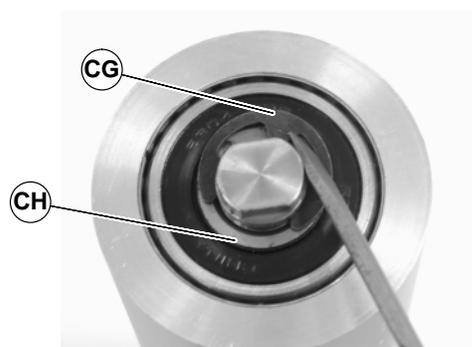


Figure 74

- Slide the shaft assembly (CI of Figure 63) out of the pulley (CR).

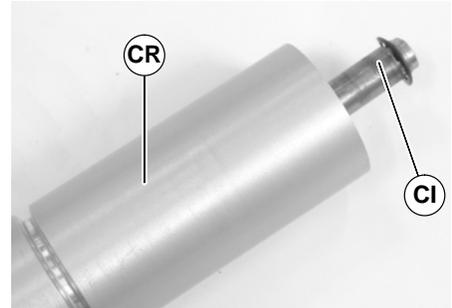


Figure 75

D – Knuckle Return Roller Removal

- Remove screws (BK of Figure 76) on both sides of knuckle and remove guard (BL).

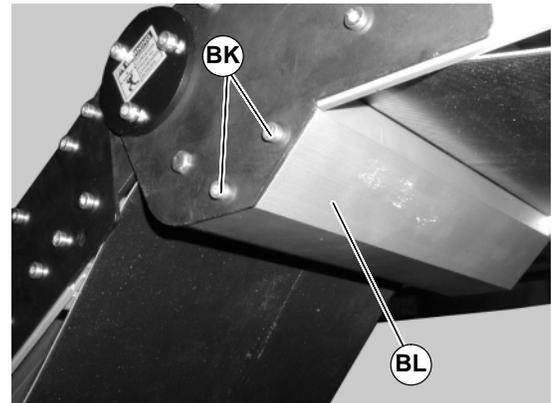


Figure 76

- Push in hex posts (BM of Figure 77) and remove pulley (BN).


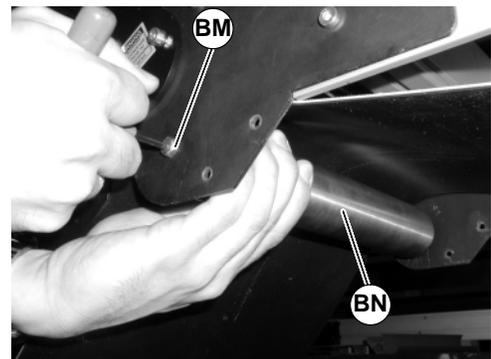


Figure 77

Preventive Maintenance and Adjustment

Center Drive Pulleys Removal

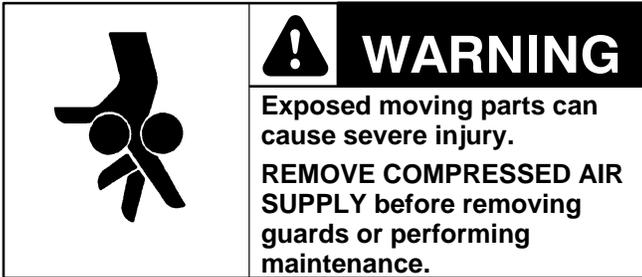

- **A** – Tensioner Pulley Removal
- **B** – Idler Pulley Removal
- **C** – Drive Pulley Removal

A – Tensioner Pulley Removal

1. Remove air supply and remove hose (AW of Figure 78) from center drive.

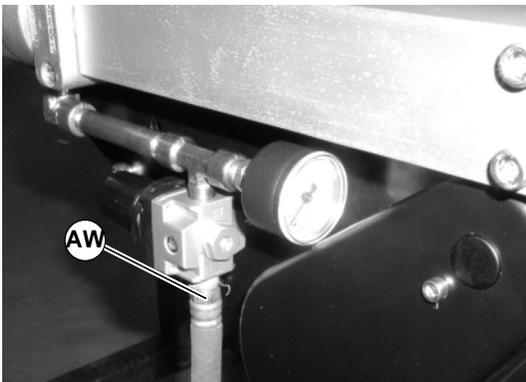


Figure 78

2. Remove screws (BA of Figure 79) and tensioning guards (BB) from both sides of center drive.

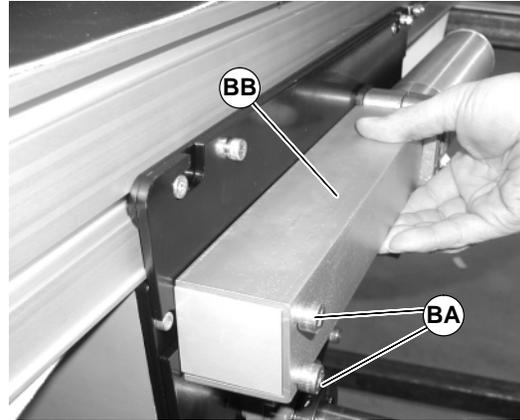


Figure 79

3. Temporarily support the tensioning roller guard (BD of figure 80). Remove screws (BC) on both sides of center drive and remove tensioning roller guard (BD of Figure 80 and 81).

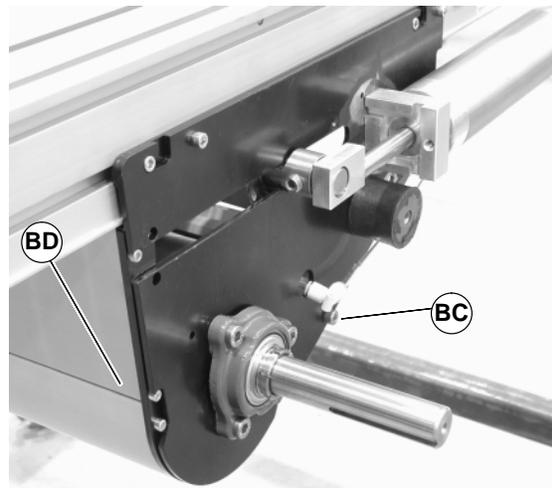


Figure 80

4. Loosen tensioning roller set screws (BE of Figure 81) on one side of center drive.

Preventive Maintenance and Adjustment

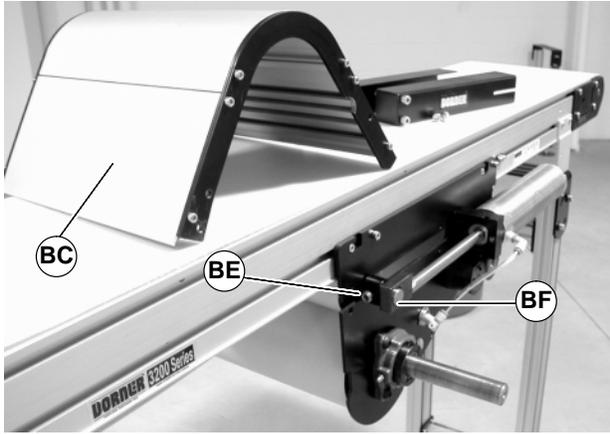


Figure 81

5. Push shaft (BF of Figure 80) through block, slide block (BG of Figure 82) towards air cylinder (BH).

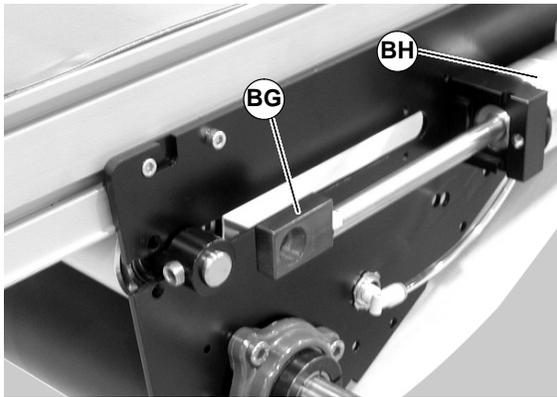


Figure 82

6. Push shaft (BF of Figure 83) through block (BG) on opposite side of center drive, slide block toward air cylinder (BH).

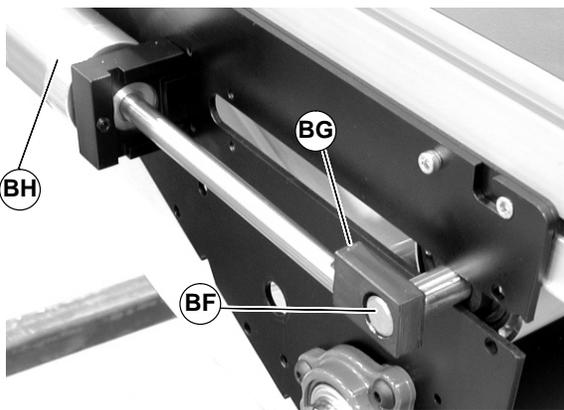


Figure 83

7. Slide out tensioning pulley (BI of Figure 84).

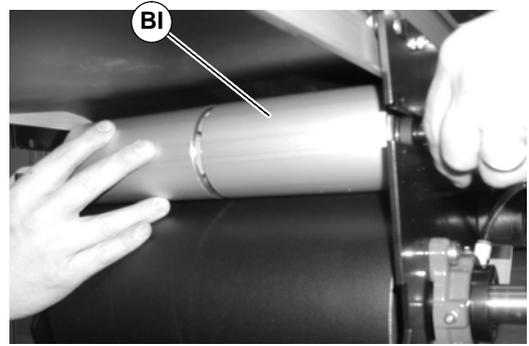


Figure 84

8. Remove the tension pulley locking collar (CS of Figure 85), spacer (CT) and pulley shaft (CU) from the roller pulley shaft assembly.

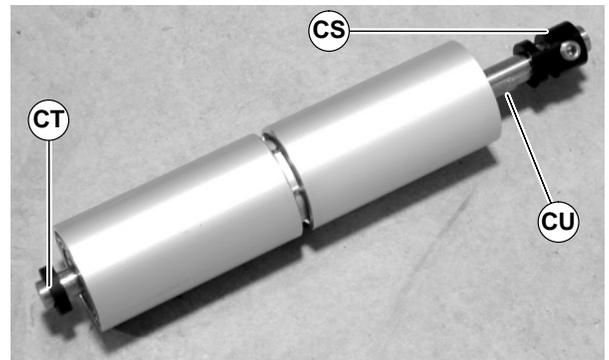


Figure 85

B – Idler Pulley Removal

1. Remove air supply and remove hose (AW of Figure 86) from center drive.

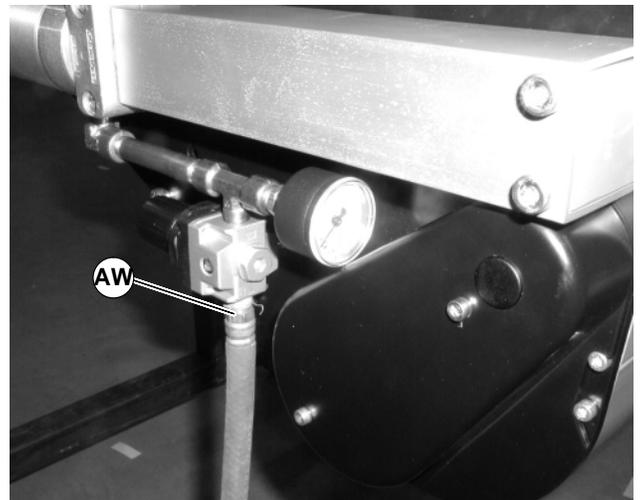


Figure 86

Preventive Maintenance and Adjustment

2. Temporarily support idler guard assembly (AX of Figure 87). Remove screws (AY).

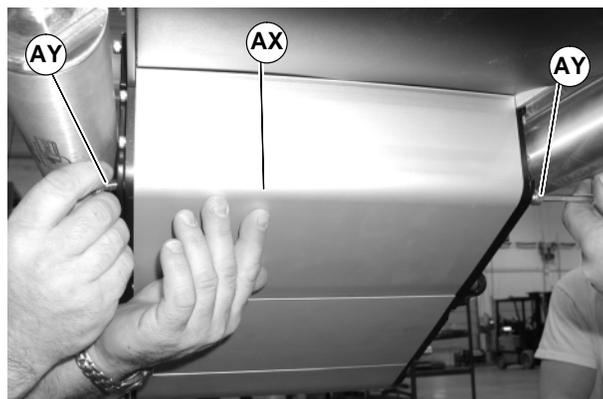


Figure 87

3. Swing down idler guard assembly (AX of Figure 88). Remove screw (AZ) from both sides of center drive and remove idler guard assembly (AX).



Figure 88

4. Remove screws (CV of Figure 89) and idler guide side plate (CW).

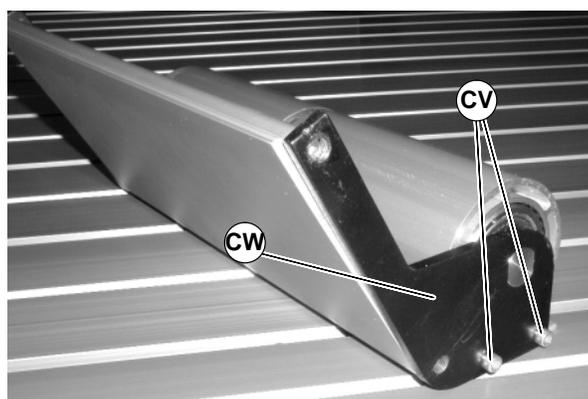


Figure 89

5. Slide the idler pulley assembly (CX of Figure 90) out of the idler guide side plate on the opposite side.

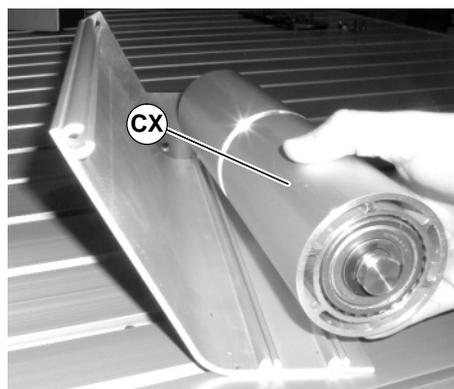


Figure 90

6. Remove the pulley shaft assembly: remove the clip ring (CG of Figure 91) and washer (CH) from one side of the pulley assembly.

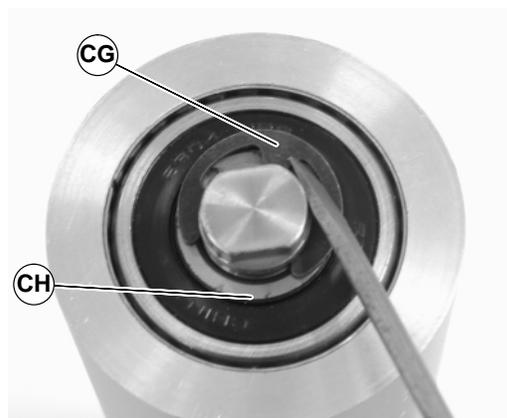


Figure 91

7. Slide the shaft assembly (CI of Figure 92) out of the pulley (CF).

Preventive Maintenance and Adjustment

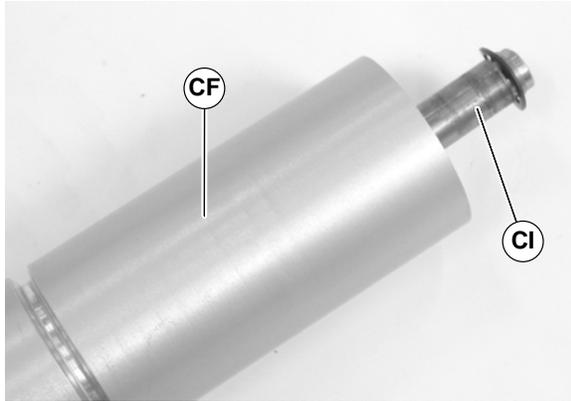


Figure 92

NOTE: Gearhead shown with motor removed for clarity, motor can remain attached to gearhead.

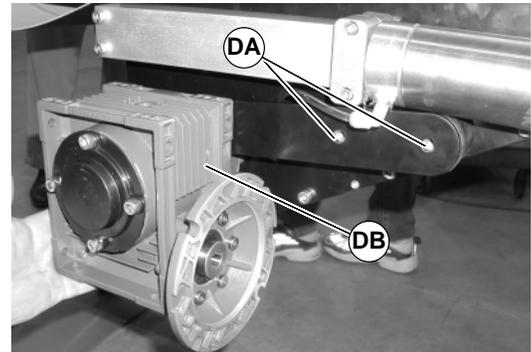


Figure 94

C – Drive Pulley Removal



1. Remove air supply and remove hose (AW of Figure 93) from center drive.

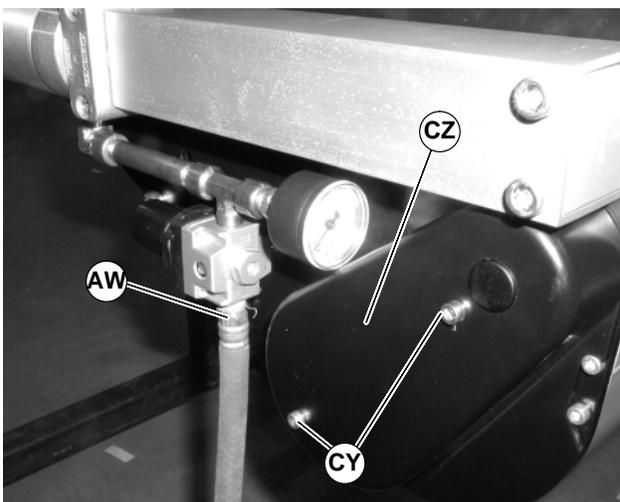


Figure 93

2. Remove screws (CY of Figure 93) and guard (CZ).
3. Remove screws (DA of Figure 94) and remove gearmotor (DB) (NOTE: Gearhead shown with motor removed for clarity, motor can remain attached to gearhead).

4. Remove spacer ring (AS of Figure 95) and key (AO).

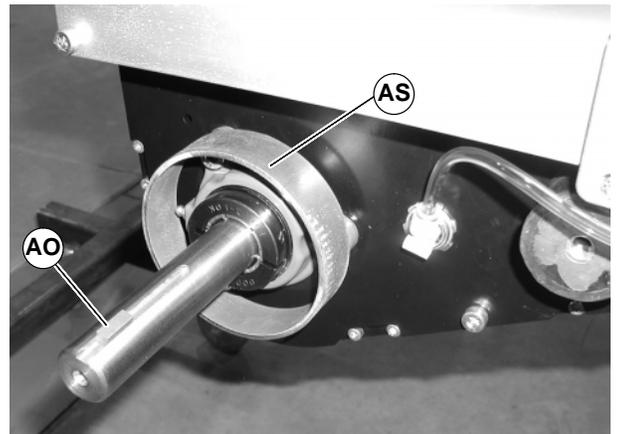


Figure 95

5. Reverse steps 3 thru 10 of the “Belt Removal for Conveyors Without Stands” section on page 11.
6. Loosen clamp screw (DC of Figure 96) and remove bearing collar (DD).

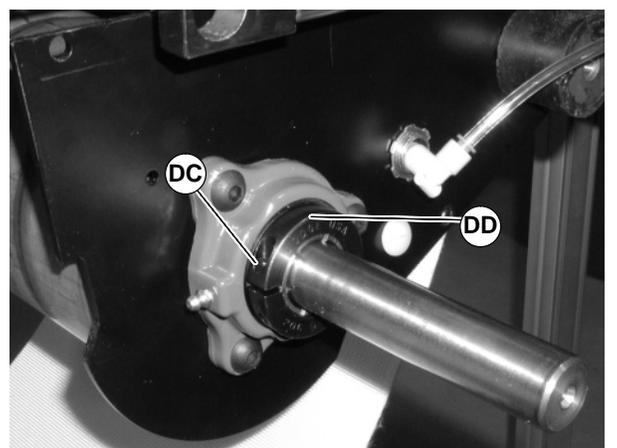


Figure 96

Preventive Maintenance and Adjustment

7. Disconnect flexible air hose (DE of Figure 97) from fitting (DF).

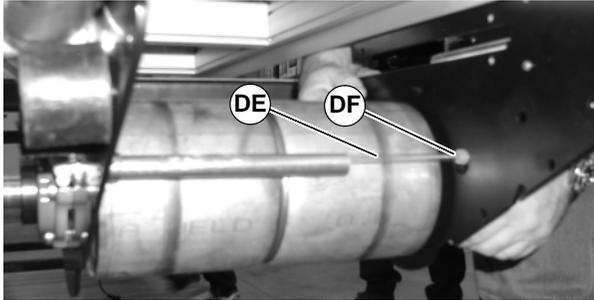


Figure 97

8. Temporarily support the drive pulley (DG of Figure 98).

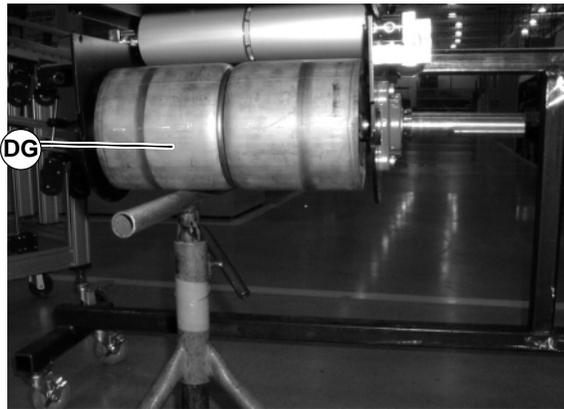


Figure 98

9. Loosen clamp screw (DC of Figure 99) and remove bearing collar (DD).

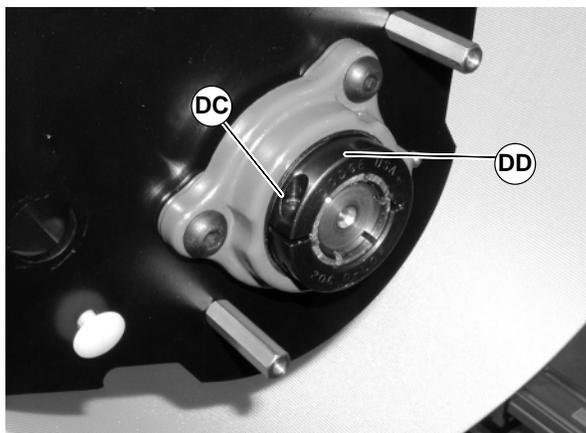


Figure 99

10. Remove screws (DH) and pull side plate assembly (DI) off conveyor.

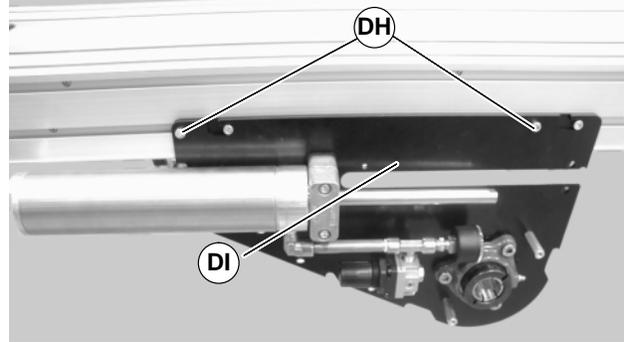


Figure 100

11. Slide drive pulley (DG of Figure 101) out of attached side plate.

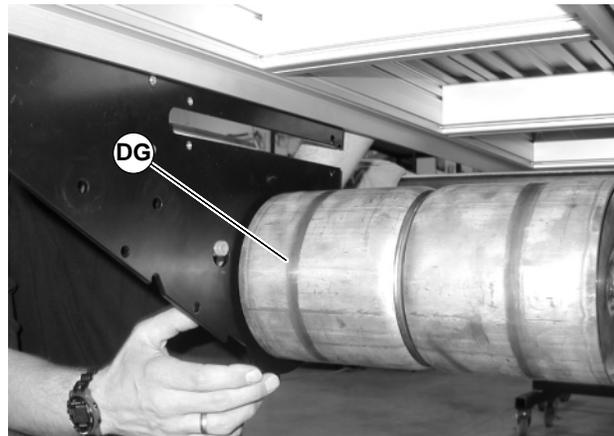


Figure 101

Bearing Replacement

		WARNING
	<p>Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.</p>	

		WARNING
	<p>Exposed moving parts can cause severe injury. REMOVE COMPRESSED AIR SUPPLY before removing guards or performing maintenance.</p>	

- A – Idler Bearing
- B – Drive Bearing
- C – Transfer Tail Bearing
- D – Knuckle Idler Bearing

Preventive Maintenance and Adjustment

- **E** – Knuckle Return Roller Bearing

A – Idler Bearing Replacement

The bearings in a 3200 Series Idler Pulley can not be removed. Replace the entire pulley assembly when worn.

B – Drive Bearing Removal and Replacement



Drive Side Bearing

1. Remove air supply (AW of Figure 102) from center drive module.

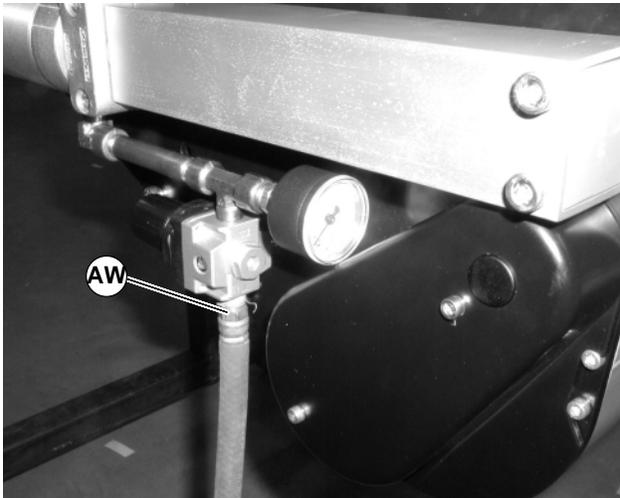


Figure 102

2. Remove screws (DA of Figure 103) and remove gearmotor (DB) (NOTE: Gearhead shown with motor removed for clarity, motor can remain attached to gearhead).

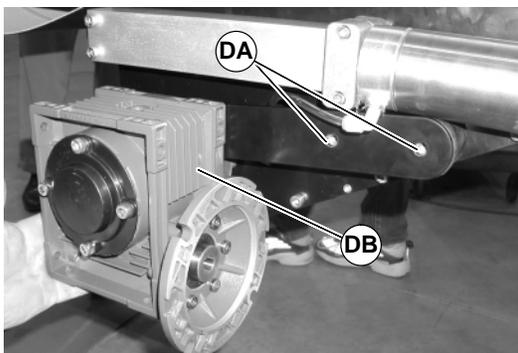


Figure 103

3. Remove spacer ring (AS of Figure 104) and key (AO). Loosen clamp screw (DC) and remove bearing collar (DD).

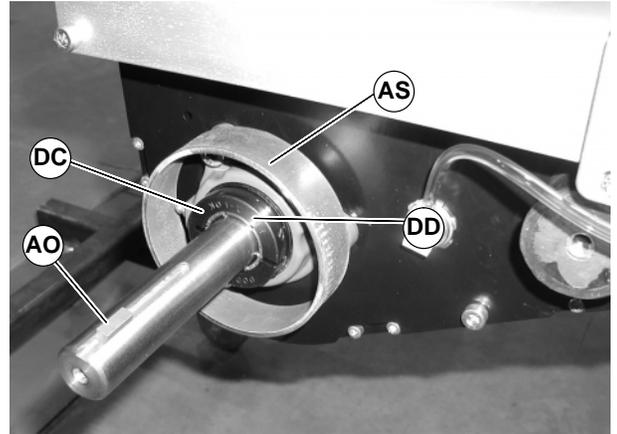


Figure 104

4. Remove the three (3) mounting screws (DJ of Figure 105).

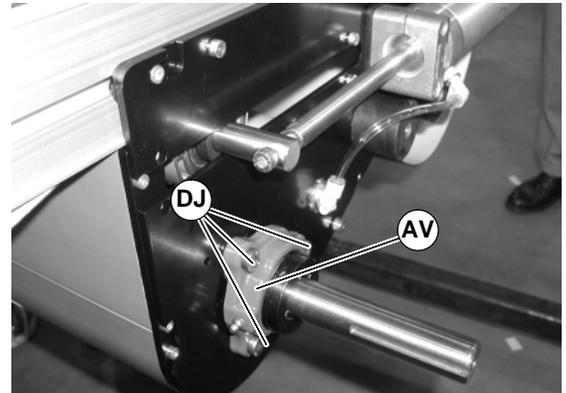


Figure 105

5. Remove and replace bearing housing assembly (AV of Figure 105).
6. Tighten three (3) mounting screws (DJ of Figure 106) to 200 in-lbs (22.5 N-m).

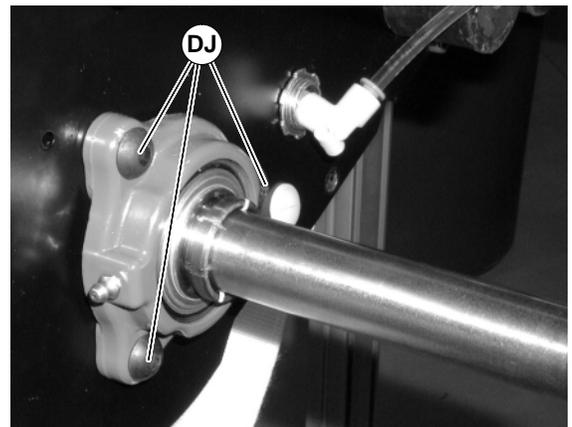


Figure 106

Preventive Maintenance and Adjustment

7. Reinstall bearing collar (DD of Figure 104). Tighten clamp screw (DC) to 95 in-lbs (11 N-m).
8. Reinstall key (AO of Figure 104).
9. Reinstall spacer ring (AS of Figure 107) and gearmotor (DB). Tighten screws (DA of Figure 103) to 150 in-lbs (17 N-m).

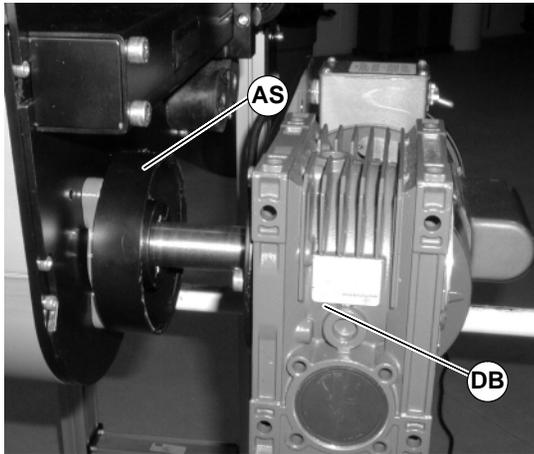


Figure 107

Idler Side Bearing

1. Remove air supply (AW of Figure 108) from center drive module.

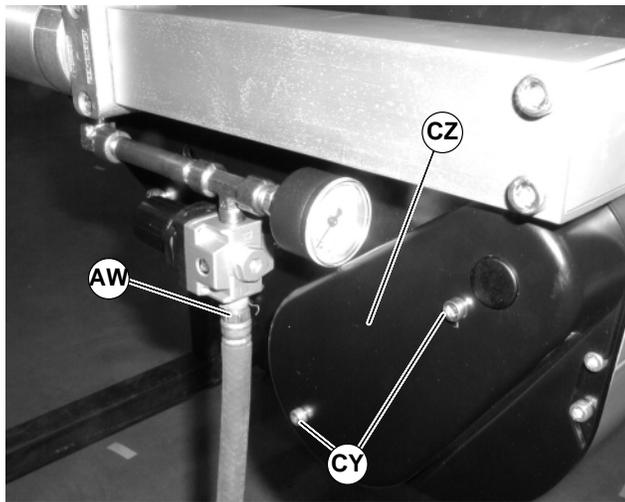


Figure 108

2. Remove screws (CY of Figure 108) and cover (CZ).
3. Loosen clamp screw (DC of Figure 109) and remove bearing collar (DD).

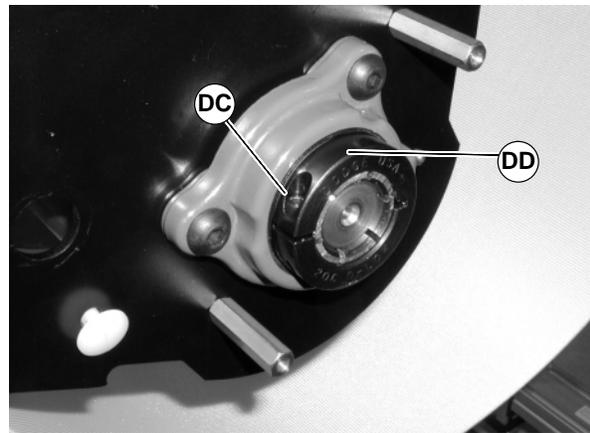


Figure 109

4. Remove the three (3) mounting screws (DJ of Figure 110).

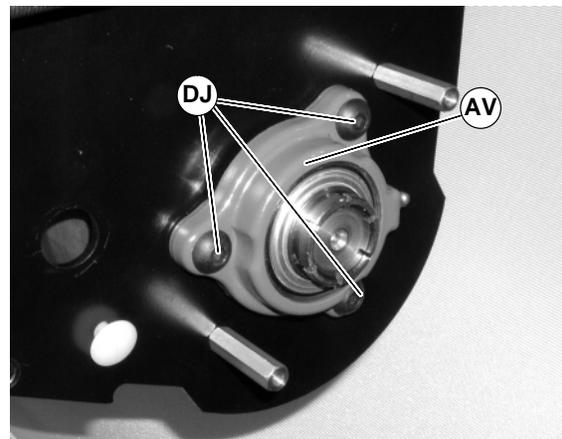


Figure 110

5. Remove and replace housing assembly (AV of Figure 110).
6. Tighten three (3) mounting screws (DJ of Figure 110) to 200 in-lbs (22.5 N-m).
7. Reinstall bearing collar (DD of Figure 109). Tighten clamp screw (DC) to 95 in-lbs (11 N-m).
8. Reinstall cover (CZ of Figure 108). Tighten screws (CY) to 69 in-lbs (8 N-m).

C – Transfer Tail Bearing Replacement

The bearings in a 3200 Series Transfer Tail Pulley can not be removed. Replace the entire pulley assembly when worn.

Preventive Maintenance and Adjustment

D – Knuckle Idler Bearing Replacement

The bearings in a 3200 Series Knuckle Idler Pulley can not be removed. Replace the entire pulley assembly when worn.

E – Knuckle Return Roller Bearing Replacement

The bearings in a 3200 Series Knuckle Return Roller can not be removed. Replace the entire roller assembly when worn.

Pulley Replacement

Idler Pulley

To replace the idler pulley, reverse the “Idler Pulley Removal” procedure on page 18.

Drive Pulley

To replace the drive pulley, reverse the “Drive Pulley Removal” procedure on page 25.

Transfer Tail Pulley

To replace the transfer tail pulley, reverse the “Transfer Tail Pulley Removal” procedure on page 19.

Knuckle Pulley

To replace the knuckle pulley, reverse the “Knuckle Pulley Removal” procedure on page 29.


Knuckle Return Roller

To replace the knuckle return roller, reverse the “Knuckle Return Roller Removal” procedure on page 21.

Service Parts

NOTE: For replacement parts other than those shown in this section, contact an authorized Dorner Service Center or the factory.

Center Drive Assembly

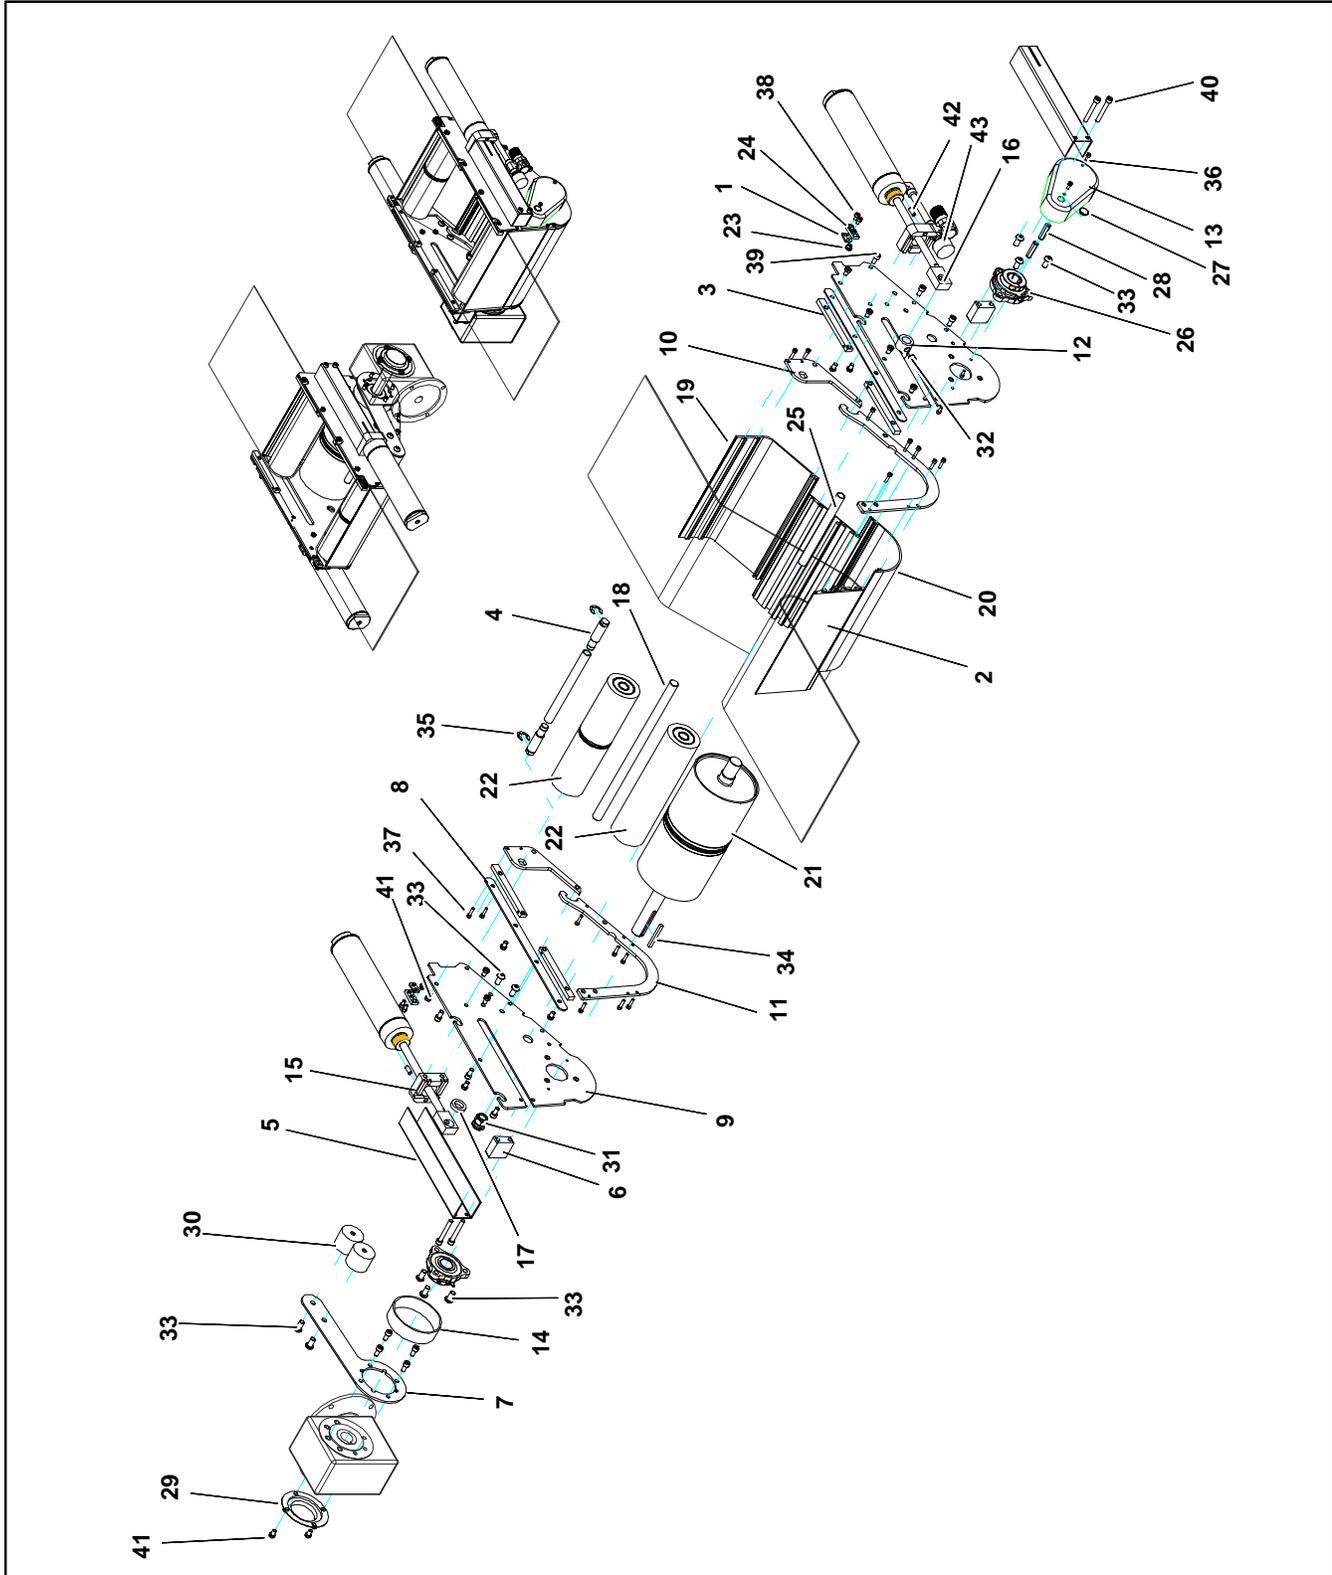

Service Parts

Item	Part Number	Description
1	200038	Cam Clamping Plate
2	See Table 1	Flat Guard <u>WW</u>
3	301088	Tail Clamping Bar
4	301098	Idler Stub Shaft
5	301214	Cylinder Channel Guard
6	301216	Cylinder Guard Mounting Block
7	301217	Torsion Arm Plate
8	301218	Side Plate Spacer
9	301219	Center Drive Side Plate
10	301220	End Roller Mounting Plate
11	301221	Horseshoe Guard Mount Plate
12	301222	Center Drive Tension Pulley Spacer
13	301278	Center Drive Bearing Guard
14	301281	Pipe Guard
15	301355	Cylinder Mounting Block
16	301356	Cylinder-Rod Mounting Block
17	301357	Tension Pulley Spacer
18	3242 <u>WW</u>	Tension Pulley Axle Shaft <u>WW</u>
19	3243 <u>WW</u>	Bottom End Guard <u>WW</u>
20	3244 <u>WW</u>	Bottom Corner Guard <u>WW</u>
21	3287 <u>WW</u>	6" Diameter Pulley <u>WW</u>
22	3290 <u>WW</u>	3" Center Drive Pulley
23	200039P	Belt Tracking Cam
24	200341M	Cam Retaining Block
25	See Table 1	Inner Shaft Tube
26	802-138	3 Bolt Bearing
27	807-226	Snap Out Plastic Plug
28	807-1162	Hex Stand Off
29	807-1167	Gearhead Cover
30	812-061	Anti-rotation Bushing
31	824-331	1/2" EMT Steel Connector
32	825-160	1/4" BSPT Pipe Plug
33	911020M	Button Head Screw M10 x 20mm
34	912-111	Square Key
35	915-265	E Retaining Ring
36	920512M	Socket Head Screw M5 x 12mm
37	920520M	Socket Head Screw M5 x 20mm
38	920610M	Socket Head Screw M6 x 10mm

39	920816M	Socket Head Screw M8 x 16mm
40	920860M	Socket Head Screw M8 x 60mm
41	920892M	Low Head Screw M8 x 12mm
42	970820M	Cup Set Screw M8 x 20mm
43	301213	Pneumatic Tension Assy
<u>WW</u> = Conveyor width reference: 04 – 60 in 02 increments		

Conveyor Width	Item 2 – Flat Guard	Item 25 – Inner Shaft Tube
4"	300895-00374	301164
6"	300895-00599	301198-00209
8"	300895-00799	301198-00409
10	300895-00999	301198-00609
12	300895-01199	301198-00809
14	300895-01399	301198-01009
16	300895-01599	301198-01209
18	300895-01799	301198-01409
20	300895-01999	301198-01609
22	300895-02199	301198-01809
24	300895-02399	301198-02009
26	300895-02599	301198-02209
28	300895-02799	301198-02409
30	300895-02999	301198-02609
32	300895-03199	301198-02809
34	300895-03399	301198-03009
36	300895-03599	301198-03209
38	300895-03799	301198-03409
40	300895-03999	301198-03609
42	300895-04199	301198-03809
44	300895-04399	301198-04009
46	300895-04599	301198-04209
48	300895-04799	301198-04409
50	300895-04999	301198-04609
52	300895-05199	301198-04809
54	300895-05399	301198-05009
56	300895-05599	301198-05209
58	300895-05799	301198-05409
60	300895-05999	301198-05609

Service Parts

3200 Center Drive 90° Industrial Gearmotors


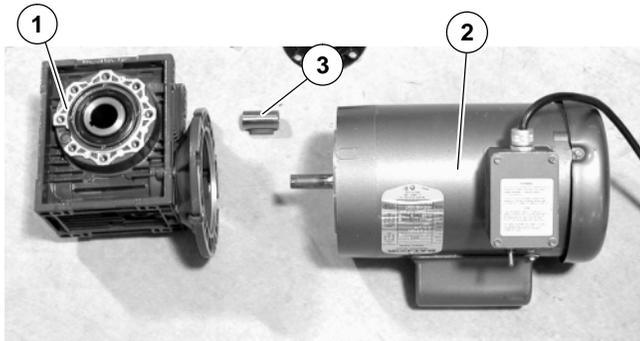


Figure 111

Item	Part No.	Part Description	
1	820-314	Gear Reducer, 7.5:1 NEMA 140TC	
	820-315	Gear Reducer, 10:1 NEMA 140TC	
	820-316	Gear Reducer, 15:1 NEMA 140TC	
	820-317	Gear Reducer, 20:1 NEMA 140TC	
	820-318	Gear Reducer, 25:1 NEMA 140TC	
	820-319	Gear Reducer, 30:1 NEMA 140TC	
	820-320	Gear Reducer, 40:1 NEMA 140TC	
	820-321	Gear Reducer, 50:1 NEMA 140TC	
	820-322	Gear Reducer, 60:1 NEMA 56C	
	820-323	Gear Reducer, 80:1 NEMA 56C	
	820-324	Gear Reducer, 100:1 NEMA 56C	
	2	826-328	Motor, 0.25hp (0.19Kw), 115/230 Volts, 60 Hz, 1-Phase
		826-017	Motor, 0.5hp (0.37Kw), 115/230 Volts, 60Hz, 1-Phase
826-025		Motor, 0.5hp (0.37Kw) 208-230/460 Volts, 60Hz, 3 Phase	
826-173		Motor, 1 hp (0.75Kw), 230 Volts, 3 Phase	
826-399		Motor, 0.5hp (0.37Kw), 230 Volts, 3 Phase Inverter Duty	
826-400		Motor, 1hp (0.75Kw), 230 Volts, 3 Phase Inverter Duty	
826-401		Motor, 1.5hp (1.1Kw), 230 Volts, 3 Phase Inverter Duty	
826-279		Motor, 1.5hp (1.1Kw), 230 Volts, 3 Phase	
826-333		Motor, 0.5hp (0.37Kw), 90 Volts DC,	
826-402		Motor, 2.0hp (1.5Kw), 230 Volts, 3 Phase Inverter Duty	
826-393		Motor, 2.0hp (1.5Kw), 230 Volts, 3 Phase	
826-394		Motor, 1.0hp (0.75Kw), 115 Volts, Integrated Controller	
826-395	Motor, 0.5hp (0.37Kw), 115 Volts, Integrated Controller		
3	820-329	Bushing Shaft Adapter, 56C to 140TC	

Transfer Tail Assembly

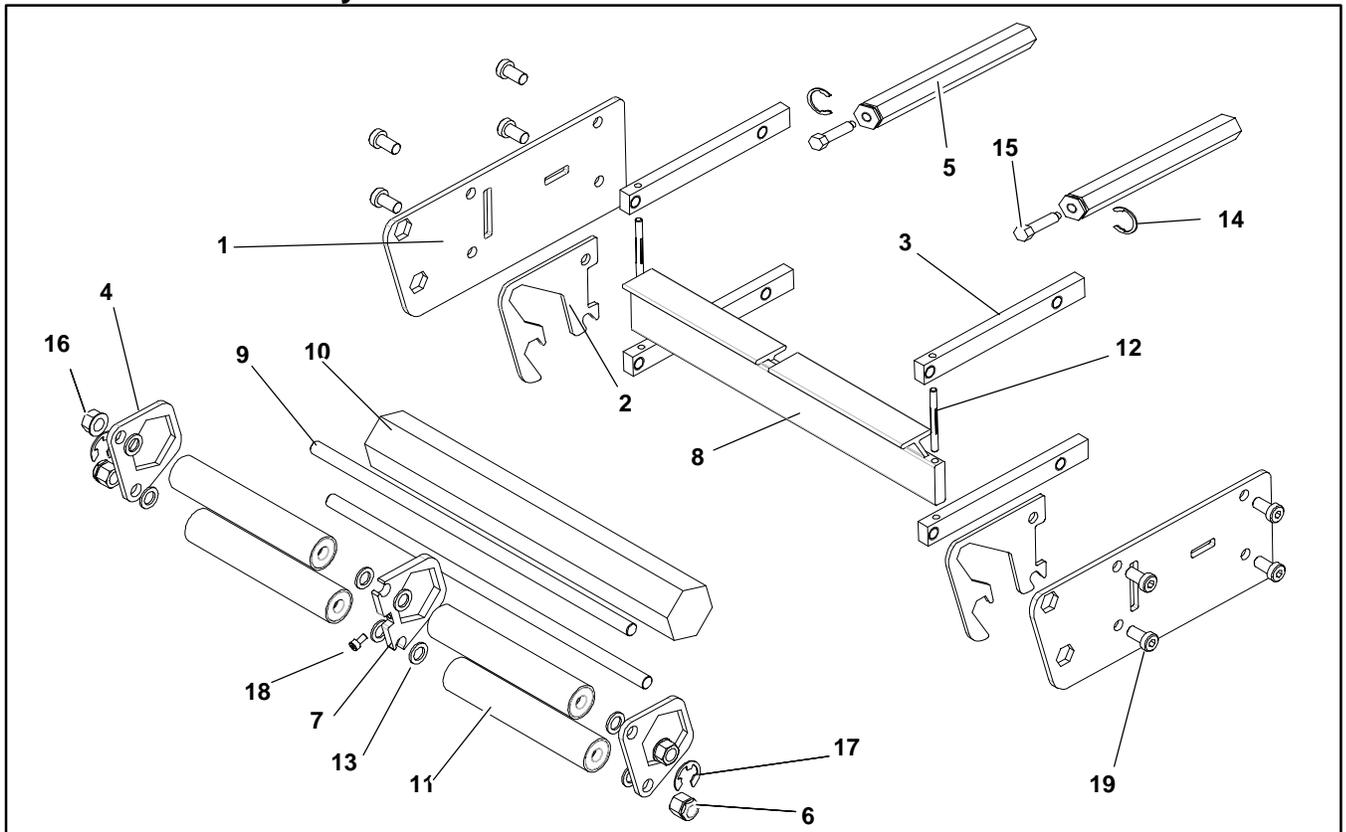


Item	Part Number	Description
1	301082	Nosebar Cover Plate
2	301084	1" Inner Tail Plate
3	301088	Tail Bar Clamp
4	301090	Transfer Tail Support Plate
5	301196	Hex Tension Tracking Shaft
6	301352	Nut, E-ring, Brace
7	301354	Inner Transfer Tail Support Plate
8	3202WW	Tail Articulation Bar
9	3217WW	1" Idler Tail Axle Shaft
10	3219WW	Roller Assy Support Bar

11	3237WW	Transfer Tail Roller
12	807-1125	Groove Pin
13	807-1136	Washer
14	807-1151	Retaining Ring
15	807-1152	Hex Head Cap Screw M6 x 20mm
16	910-203	3/8" Hex Nut
17	915-319	Retaining Ring
18	920408M	Hex Head Cap Screw M4 x 8mm
19	920893M	Low Head Socket Screw M8 x 16mm

WW = Conveyor width reference: 04 – 48 in 02 increments

Service Parts


Idler End Tail Assembly

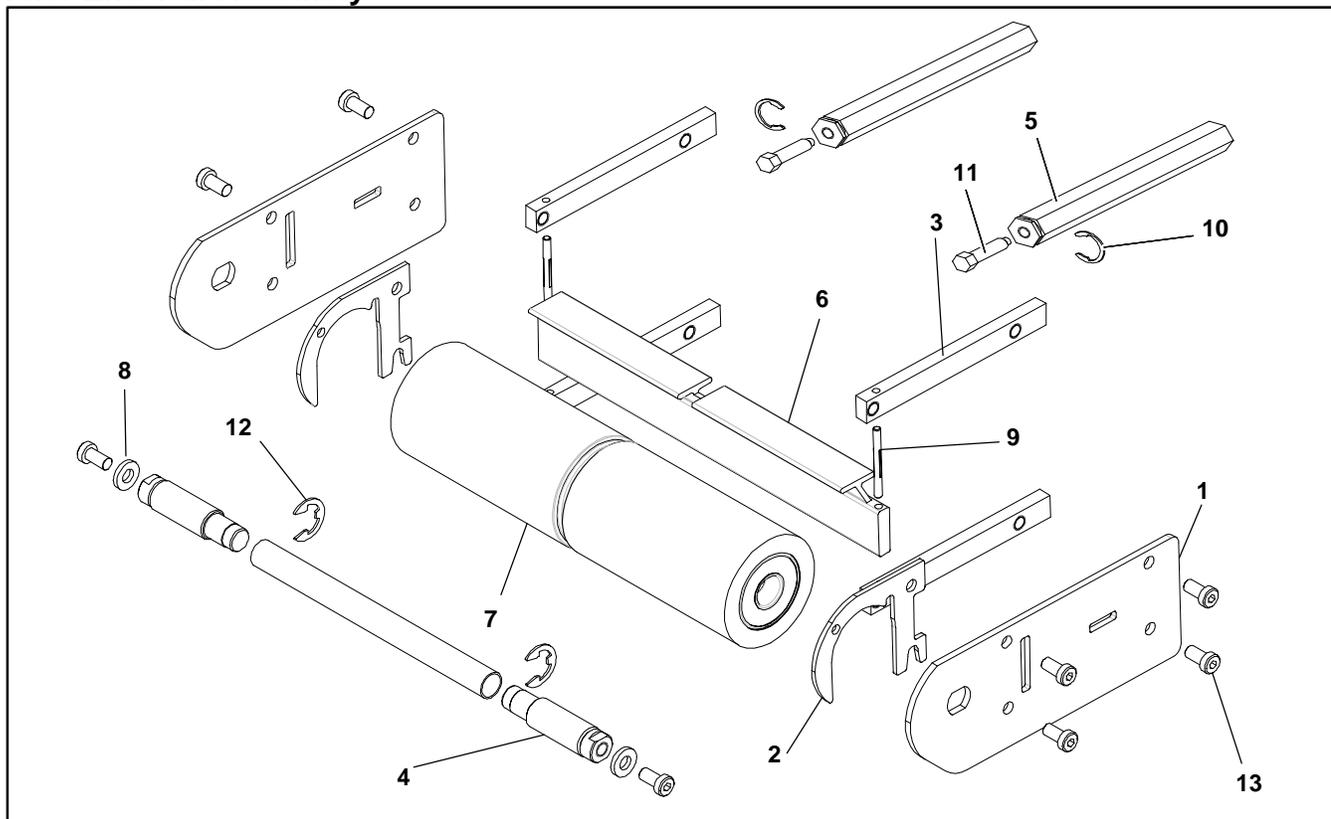

Item	Part Number	Description
1	301049	Idler Cover Plate
2	301083	Inner 3" Tail Plate
3	301088	Tail Bar Clamp
4	301353	Idler Tail Stub Shaft
5	301196	Hex Tension Tracking Shaft
6	3202WW	Tail Articulation Bar
7	3284WW	3" Idler Pulley

8	605280P	Hard Washer
9	807-1125	Groove Pin
10	807-1151	Tracking Shaft Retaining Ring
11	807-1152	Hex Head Cap Screw M6 x 20mm
12	915-235	Stub Shaft Retaining Ring
13	920893M	Low Head Socket Screw M8 x 16mm
WW = Conveyor width reference: 04 – 48 in 02 increments		

Knuckle Assembly

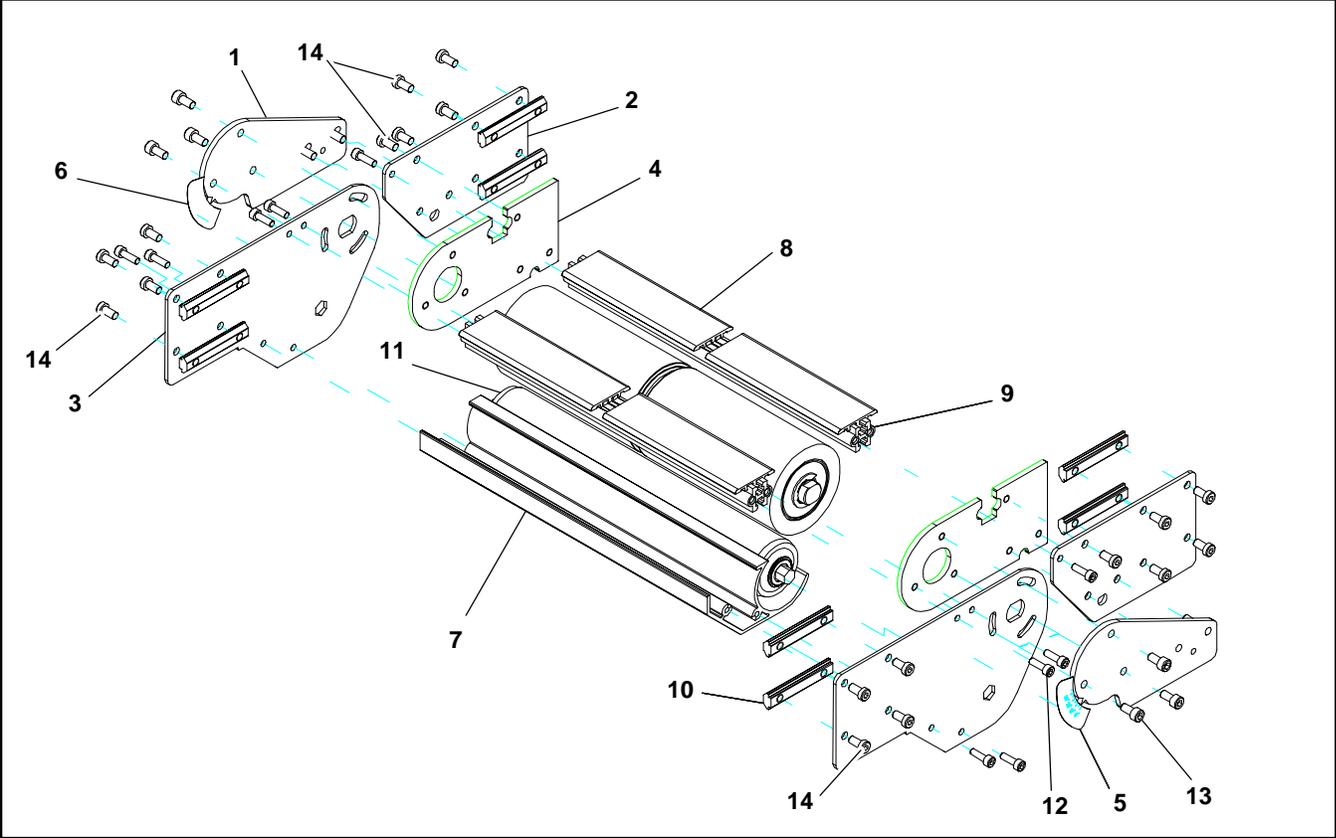


Item	Part Number	Description
1	300657	Slots Pointer Cover Disc
2	301155	Short LPZ Cover Plate
3	301156	Flat Upper Outside Plate
4	301160	LPZ Inside Pivot Plate
5	301223	LH Angle Label 0-35
6	301224	RH Angle Label 0-35
7	3225WW	Return Roller Cover

8	3276WW	Belt Support Rail Assy
9	3285WW	LPZ-CD Idler Pulley Assy
10	300150M	Drop In Tee Bar
11	3252WW	Return Roller
12	920516M	Socket Head Screw M5 x 16mm
13	920612M	Socket Head Screw M6 x 12mm
14	920692M	Socket Low Head Screw M6 x 12mm
WW = Conveyor width reference: 04 – 48 in 02 increments		

Service Parts

Frame Assembly

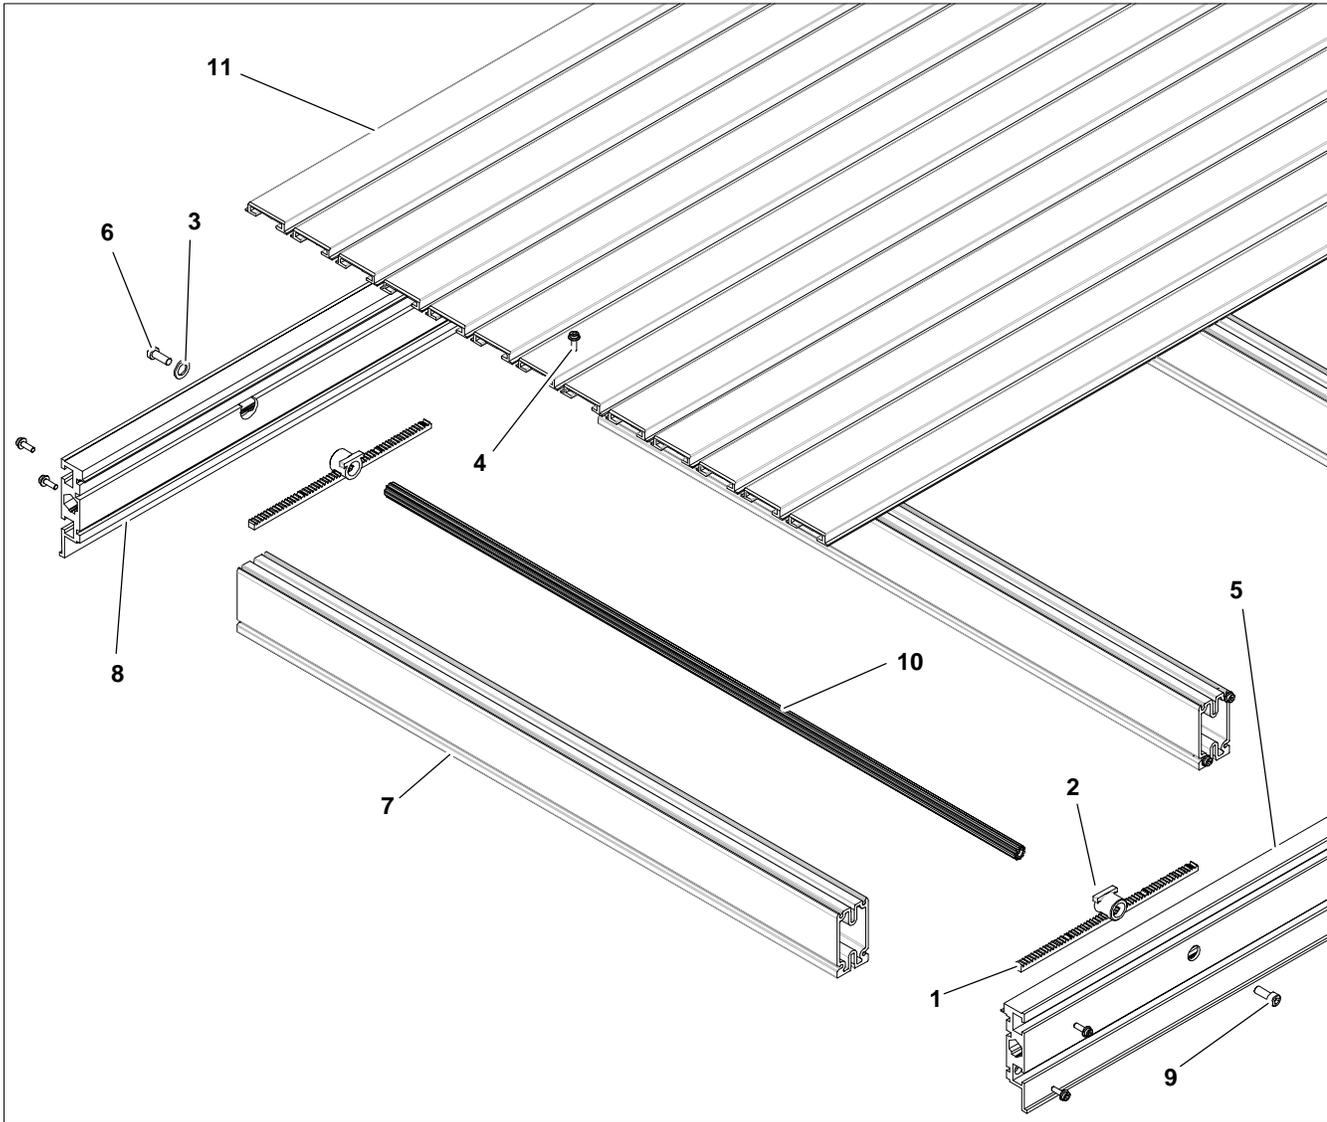

Item	Part Number	Description
1	240420	Rack Gear
2	301091	Pinion Bearing
3	807-1136	Washer
4	920482M	Flange Socket Screw M4 x 12mm
5	920616M	Socket Head Screw M6 x 16mm
6	920693M	Low Head Socket Screw M6 x 16mm
7	3245WW	Cross Support Rail
8	301041-LLLLL	RH Side Rail
9	301042-LLLLL	LH Side Rail
10	3229WW	Pinion
11		Bed Plate Rail

WW = Conveyor width reference: 04 – 48 in 02 increments
 LLLLL = Frame Length (see Bed Plate & Frame Formulas)

Item 11: Bed Plate Rail	
Width	Part Number
1.75" (mm)	300887-LLLLL
2" (54mm)	300888-LLLLL
4" (102mm)	300889-LLLLL
6" (152mm)	300890-LLLLL

LLLLL = Bed Plate Length (see Bed Plate & Frame Formulas)

Bed Plate and Frame Formulas


Bed Plate LLLLL = Frame LLLLL – 00013

Frame LLLLL = $\frac{\text{Conveyor Length LLLL} \times 12}{\text{\# of Sections of Conveyor}}$ – Tail Adder

Tail Adder = 00600 for each Tension End
 00425 for each Non-Tension End
 00600 for each Knuckle Attachment

Width	Bed Plate Configuration												
4"							1.75"						
6"							4"						
8"							6"						
10"						2"	4"	2"					
12"						2"	6"	2"					
14"						4"	4"	4"					
16"						4"	6"	4"					
18"						6"	4"	6"					
20"						6"	6"	6"					
22"					4"	4"	4"	4"	4"				
24"					4"	4"	6"	4"	4"				
26"					6"	4"	4"	4"	6"				
28"					6"	4"	6"	4"	6"				
30"					6"	6"	4"	6"	6"				
32"					6"	6"	6"	6"	6"				
34"				4"	4"	6"	4"	6"	4"	4"			
36"				4"	4"	6"	6"	6"	4"	4"			
38"				4"	6"	6"	4"	6"	6"	4"			
40"				4"	6"	6"	6"	6"	6"	4"			
42"				6"	6"	6"	4"	6"	6"	6"			
44"				6"	6"	6"	6"	6"	6"	6"			
46"			4"	4"	6"	6"	4"	6"	6"	4"	4"		
48"			4"	4"	6"	6"	6"	6"	6"	4"	4"		
50"			4"	6"	6"	6"	4"	6"	6"	6"	4"		
52"			4"	6"	6"	6"	6"	6"	6"	6"	4"		
54"			6"	6"	6"	6"	4"	6"	6"	6"	6"		
56"			6"	6"	6"	6"	6"	6"	6"	6"	6"		
58"		4"	4"	6"	6"	6"	4"	6"	6"	6"	4"	4"	
60"		4"	4"	6"	6"	6"	6"	6"	6"	6"	4"	4"	
62"		4"	6"	6"	6"	6"	4"	6"	6"	6"	6"	4"	
64"		4"	6"	6"	6"	6"	6"	6"	6"	6"	6"	4"	
66"		6"	6"	6"	6"	6"	4"	6"	6"	6"	6"	6"	
68"		6"	6"	6"	6"	6"	6"	6"	6"	6"	6"	6"	
70"	4"	4"	6"	6"	6"	6"	4"	6"	6"	6"	6"	4"	4"
72"	4"	4"	6"	6"	6"	6"	6"	6"	6"	6"	6"	4"	4"

Walk Through Frame – Section L1

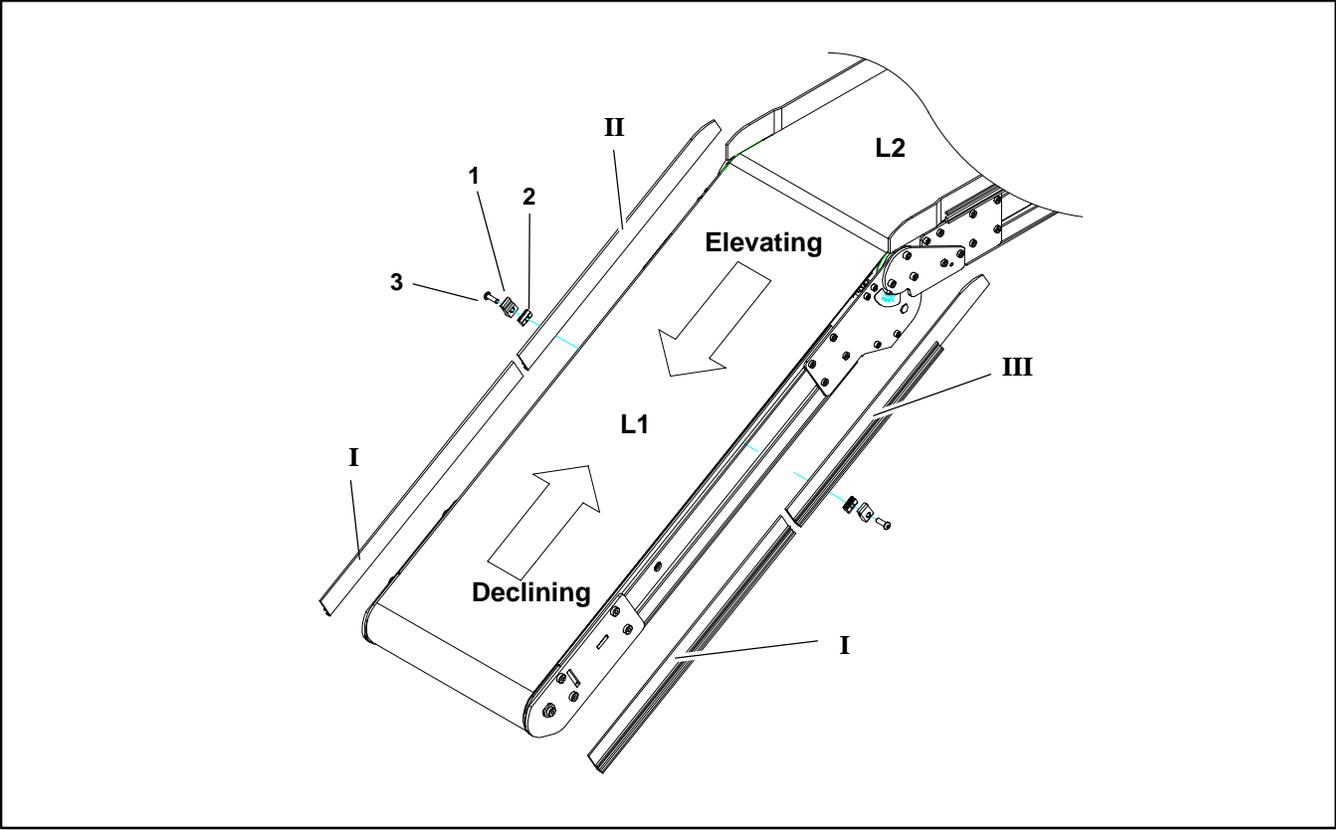

Item	Part Number	Description
1	200121	Guide Retaining Clip

2	639971M	Single Drop-in Tee Bar
3	920694M	Socket Head Screw M6 x 20mm

Elevating Belt Travel

Section L1 Length – LLLL	I	II	III
0200	No Guiding Section	38TT17	38TT18
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT17–LLLLL LLLLL = (LLLL x 6) + 00038	38TT18–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT17	38TT18

For TT options see “Guide Options” section on page 38


Declining Belt Travel

Section L1 Length – LLLL	I	II	III
0200	No Guiding Section	38TT15	38TT16
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT15–LLLLL LLLLL = (LLLL x 6) + 00038	38TT16–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT15	38TT16

For TT options see “Guide Options” section on page 38

Service Parts

Walk Through Frame – Section L2

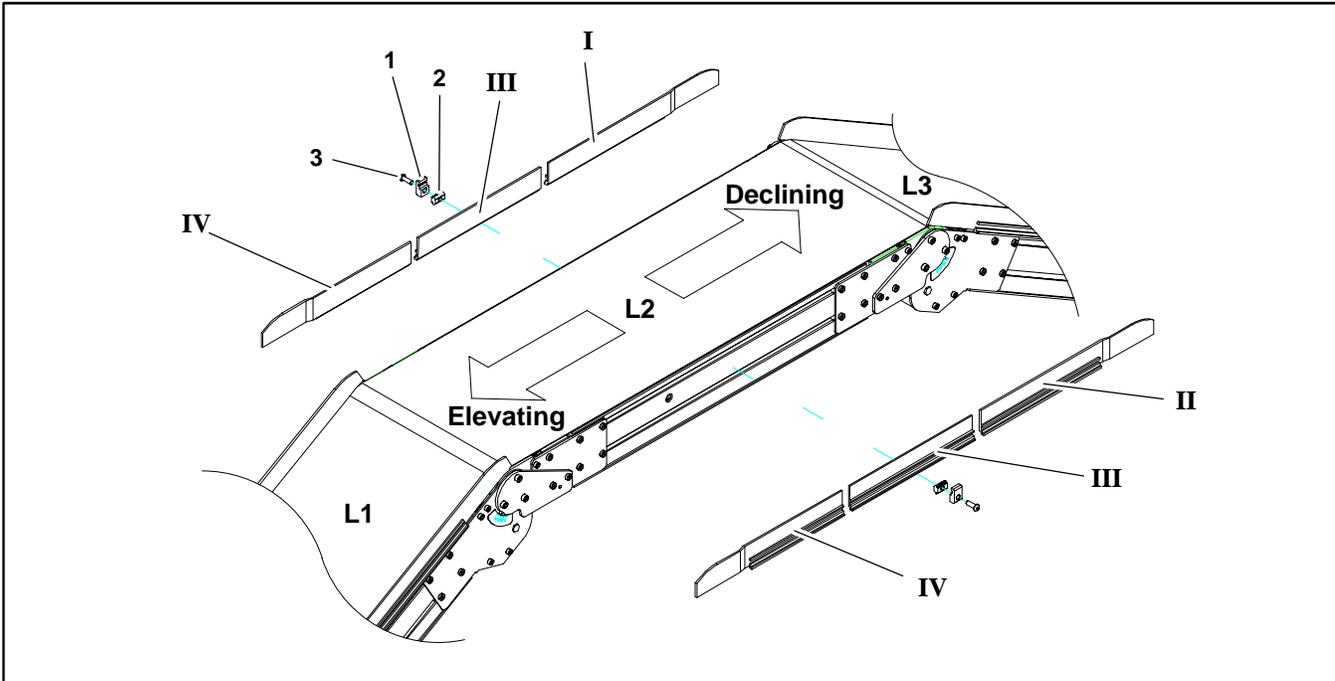

Item	Part Number	Description
1	200121	Guide Retaining Clip

2	639971M	Single Drop-in Tee Bar
3	920694M	Socket Head Screw M6 x 20mm

Elevating Belt Travel

Section L2 Length – LLLL	I	II	III	IV	V
0200 – 0383	38TT17–LLLLL LLLLL = (LLLL x 6) + 00075	38TT18–LLLLL LLLLL = (LLLL x 6) + 00075	No Guiding Section	38TT15–LLLLL LLLLL = (LLLL x 6) + 00075	38TT16–LLLLL LLLLL = (LLLL x 6) + 00075
0384 – 0600	38TT17–LLLLL LLLLL = (LLLL x 4) + 00050	38TT18–LLLLL LLLLL = (LLLL x 4) + 00050	38TT00–LLLLL LLLLL = (LLLL x 4) + 00050	38TT15–LLLLL LLLLL = (LLLL x 4) + 00050	38TT16–LLLLL LLLLL = (LLLL x 4) + 00050
0601 and up	38TT17	38TT18	38TT00–LLLLL LLLLL = (LLLL x 12) – 04600	38TT15	38TT16


For TT options see "Guide Options" section on page 38

Declining Belt Travel

Section L2 Length – LLLL	I	II	III	IV	V
0200 – 0373	38TT15–LLLLL LLLLL = (LLLL x 6) + 00075	38TT16–LLLLL LLLLL = (LLLL x 6) + 00075	No Guiding Section	38TT17–LLLLL LLLLL = (LLLL x 6) + 00075	38TT18–LLLLL LLLLL = (LLLL x 6) + 00075
0373 – 0600	38TT15–LLLLL LLLLL = (LLLL x 4) + 00050	38TT16–LLLLL LLLLL = (LLLL x 4) + 00050	38TT00–LLLLL LLLLL = (LLLL x 4) + 00050	38TT17–LLLLL LLLLL = (LLLL x 4) + 00050	38TT18–LLLLL LLLLL = (LLLL x 4) + 00050
0601 and up	38TT15	38TT16	38TT00–LLLLL LLLLL = (LLLL x 12) – 04600	38TT17	38TT18

For TT options see "Guide Options" section on page 38

Walk Through Frame – Section L3

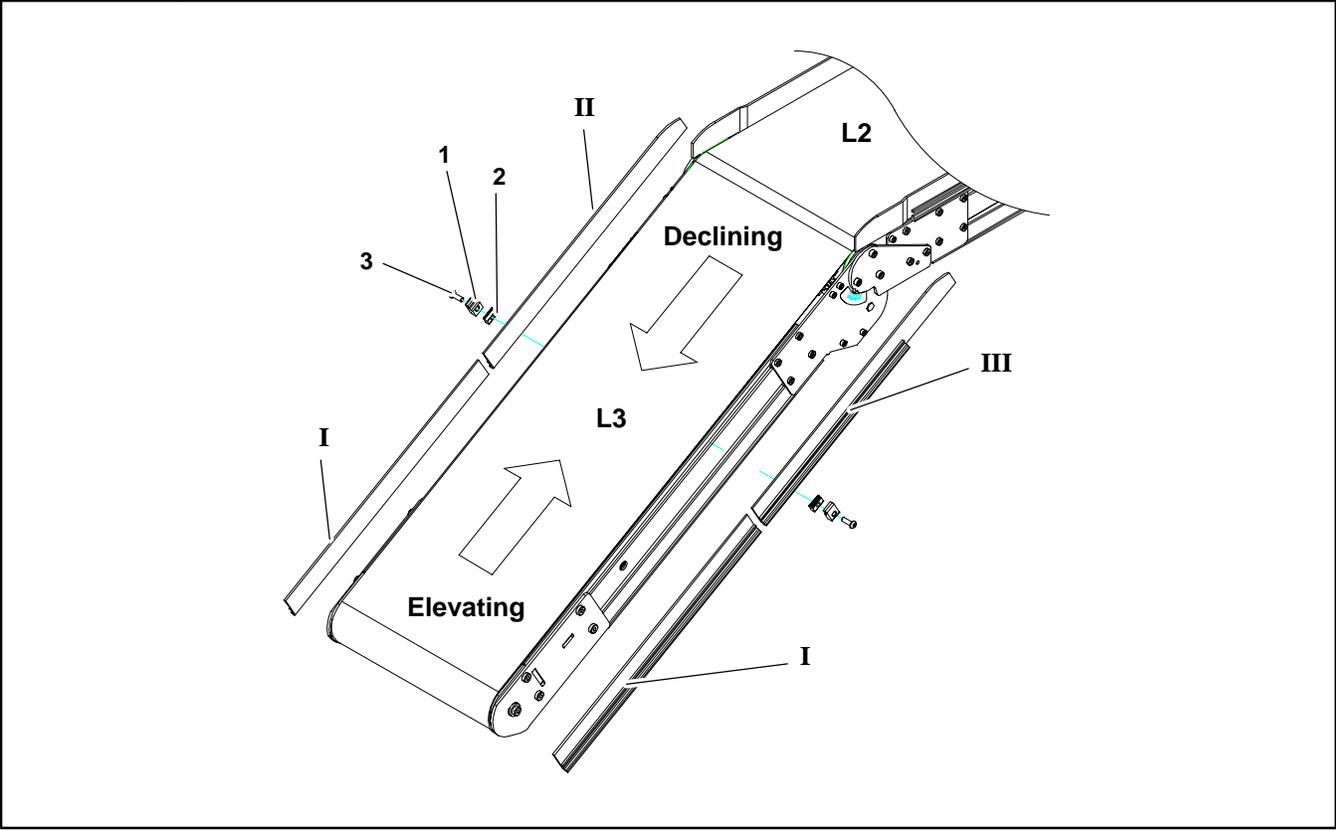

Item	Part Number	Description
1	200121	Guide Retaining Clip

2	639971M	Single Drop-in Tee Bar
3	920694M	Socket Head Screw M6 x 20mm

Elevating Belt Travel

Section L3 Length – LLLL	I	II	III
0200	No Guiding Section	38TT15	38TT16
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT15–LLLLL LLLLL = (LLLL x 6) + 00038	38TT16–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT15	38TT16

For TT options see "Guide Options" section on page 38


Declining Belt Travel

Section L3 Length – LLLL	I	II	III
0200	No Guiding Section	38TT17	38TT18
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT17–LLLLL LLLLL = (LLLL x 6) + 00038	38TT18–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT17	38TT18

For TT options see "Guide Options" section on page 38

Service Parts

Nose Over Frame – Section L2

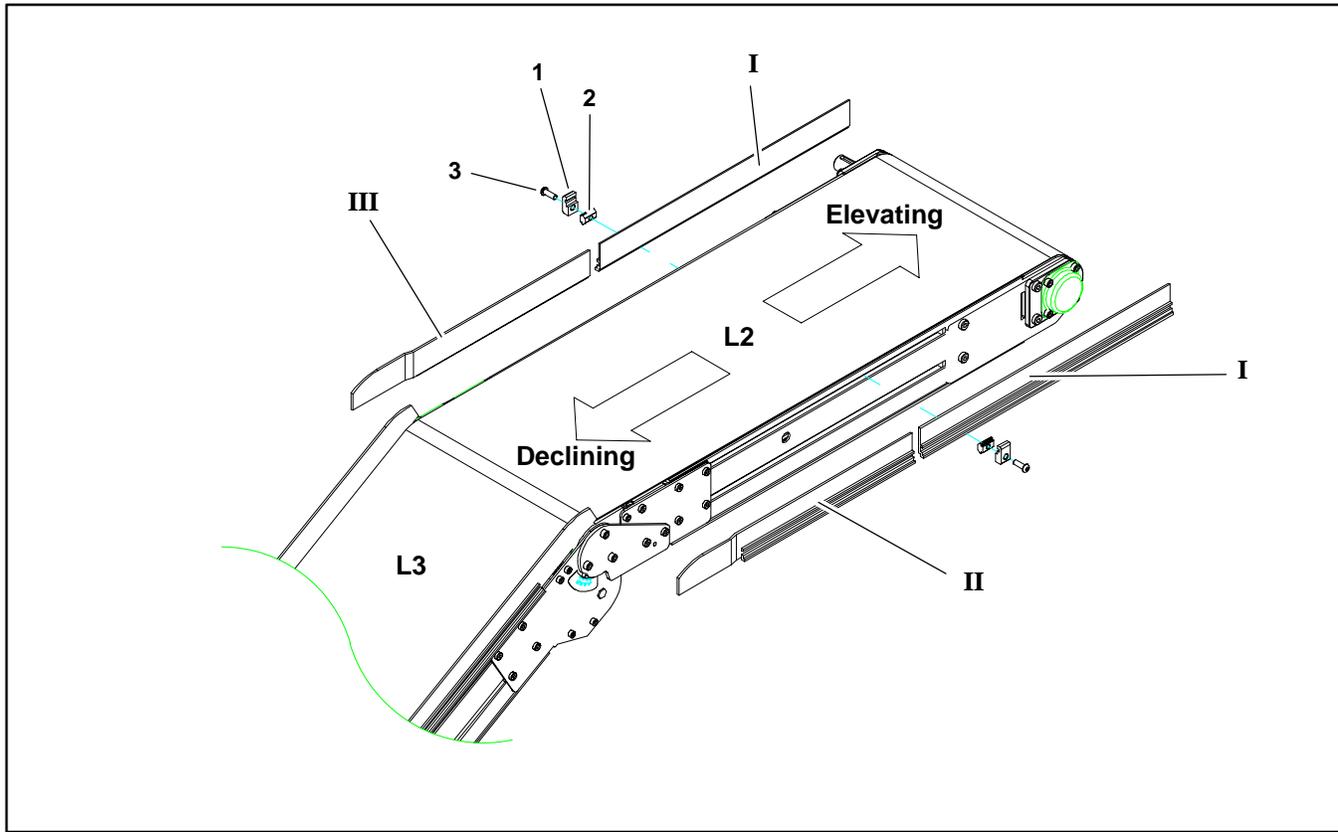

Item	Part Number	Description
1	200121	Guide Retaining Clip

2	639971M	Single Drop-in Tee Bar
3	920694M	Socket Head Screw M6 x 20mm

Elevating Belt Travel

Section L2 Length – LLLL	I	II	III
0200	No Guiding Section	38TT17	38TT18
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT17–LLLLL LLLLL = (LLLL x 6) + 00038	38TT18–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT17	38TT18


For TT options see "Guide Options" section on page 38

Declining Belt Travel

Section L2 Length – LLLL	I	II	III
0200	No Guiding Section	38TT15	38TT16
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT15–LLLLL LLLLL = (LLLL x 6) + 00038	38TT16–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT15	38TT16

For TT options see "Guide Options" section on page 38

Nose Over Frame – Section L3

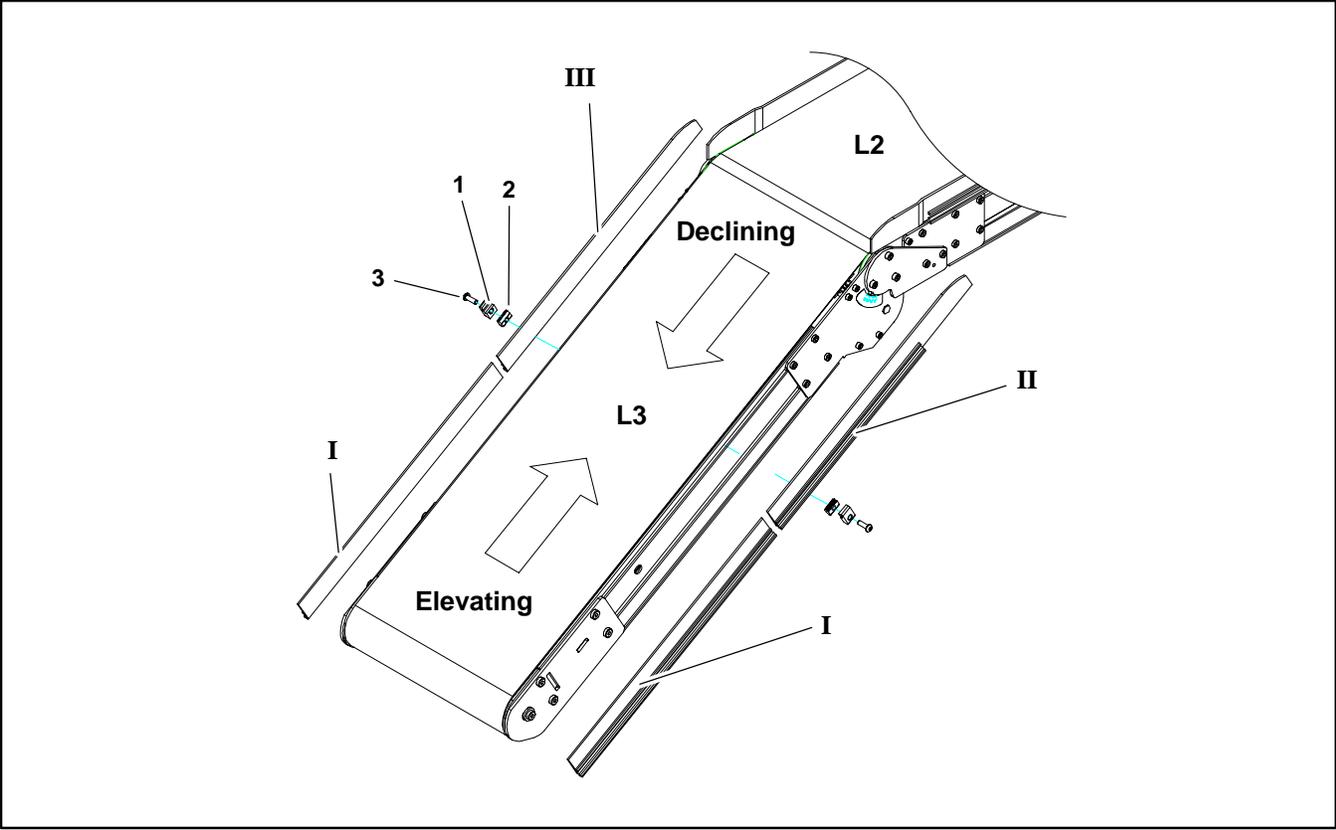

Item	Part Number	Description
1	200121	Guide Retaining Clip

2	639971M	Single Drop-in Tee Bar
3	920694M	Socket Head Screw M6 x 20mm

Elevating Belt Travel

Section L3 Length – LLLL	I	II	III
0200	No Guiding Section	38TT15	38TT16
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT15–LLLLL LLLLL = (LLLL x 6) + 00038	38TT16–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT15	38TT16

For TT options see “Guide Options” section on page 38


Declining Belt Travel

Section L3 Length – LLLL	I	II	III
0200	No Guiding Section	38TT17	38TT18
0201 – 0399	38TT00–LLLLL LLLLL = (LLLL x 6) + 00038	38TT17–LLLLL LLLLL = (LLLL x 6) + 00038	38TT18–LLLLL LLLLL = (LLLL x 6) + 00038
0400 and up	38TT00–LLLLL LLLLL = (LLLL x 12) – 02400	38TT17	38TT18

For TT options see “Guide Options” section on page 38

Service Parts


-13 Adjustable Guiding

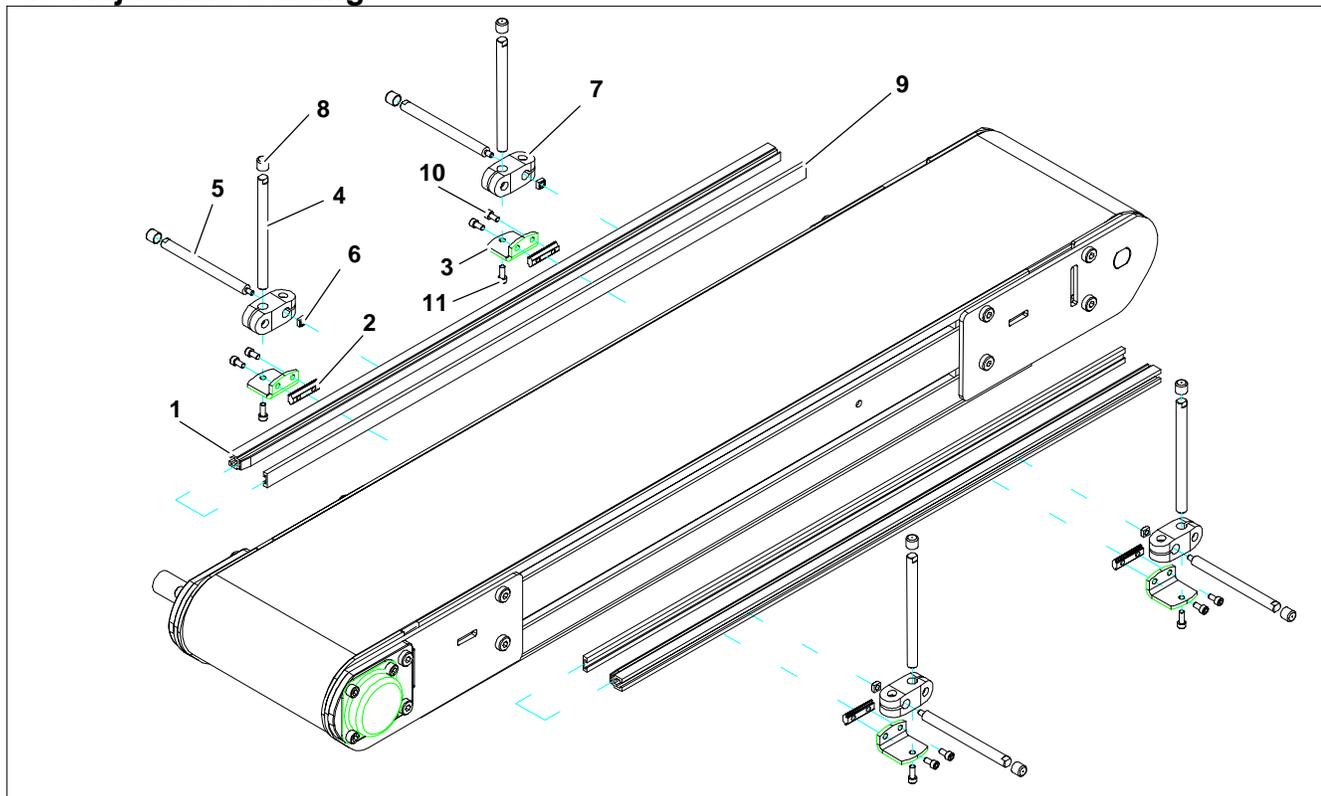

Item	Part Number	Description
1	202983	Aluminum Profile Guide 2' (610mm)
	202984	Aluminum Profile Guide 3' (914mm)
	202985	Aluminum Profile Guide 4' (1219mm)
	202986	Aluminum Profile Guide 5' (1524mm)
	202987	Aluminum Profile Guide 6' (1829mm)
	202988	Aluminum Profile Guide 7' (2134mm)
	202989	Aluminum Profile Guide 8' (2438mm)
	202990	Aluminum Profile Guide 9' (2743mm)
	202991	Aluminum Profile Guide 10' (3048mm)
	202992	Aluminum Profile Guide 11' (3353mm)
	202993	Aluminum Profile Guide 12' (3658mm)

	202994	Aluminum Profile Guide 13' (3962mm)
2	200830M	Drop-In Tee Bar
3	202004	Mounting Bracket
4	202027M	Guide Mounting Shaft Vertical
5	202028M	Guide Mounting Shaft Horizontal
6	674175MP	Square Nut
7	807-652	Cross Block
8	807-948	Vinyl Shaft Cap
9	614068P	Flat Extruded Guide (per foot)
10	920612M	Socket Head Screw M6 x 12mm
11	920616M	Socket Head Screw M6 x 16mm


Flat Belt Mounting Brackets

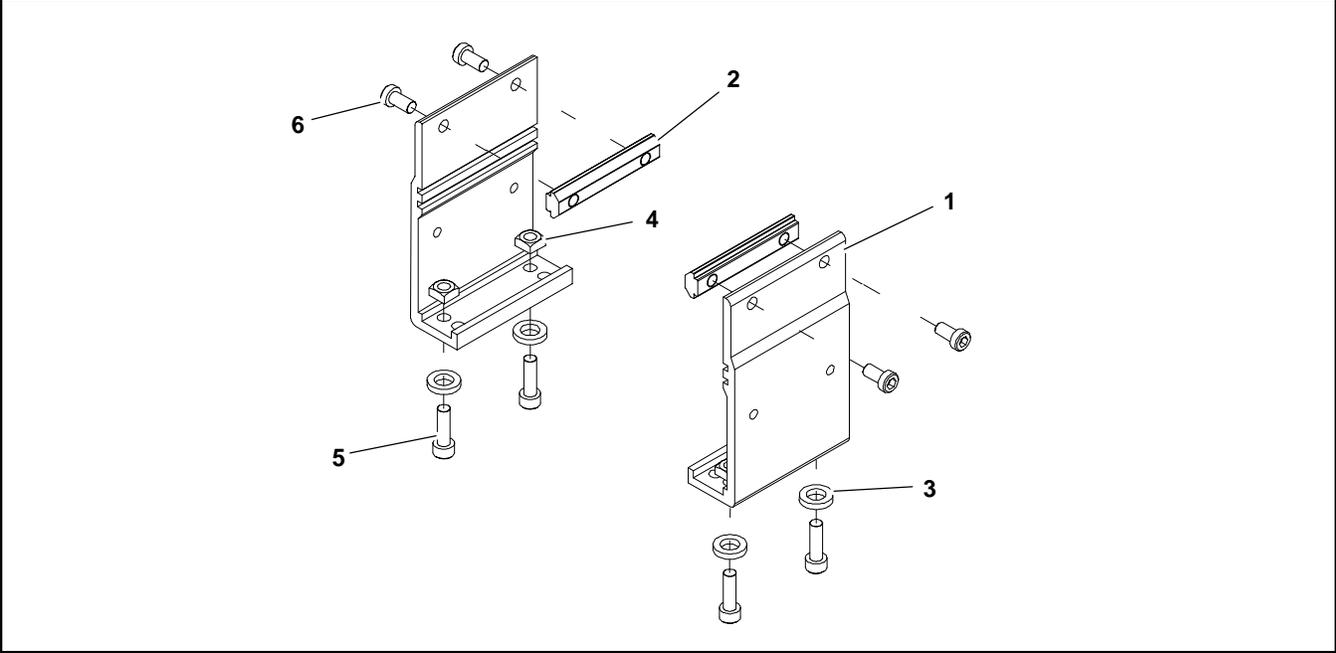

Item	Part Number	Description
1	240831	Stand Mount
2	300150M	Drop-In Tee Bar
3	605279P	Washer

4	807-920	Square Nut M6 5mm x 10mm
5	920620M	Socket Head Screw M6 x 20mm
6	920692M	Socket Head Screw M6 x 12mm

Connecting Assembly without Stand Mount

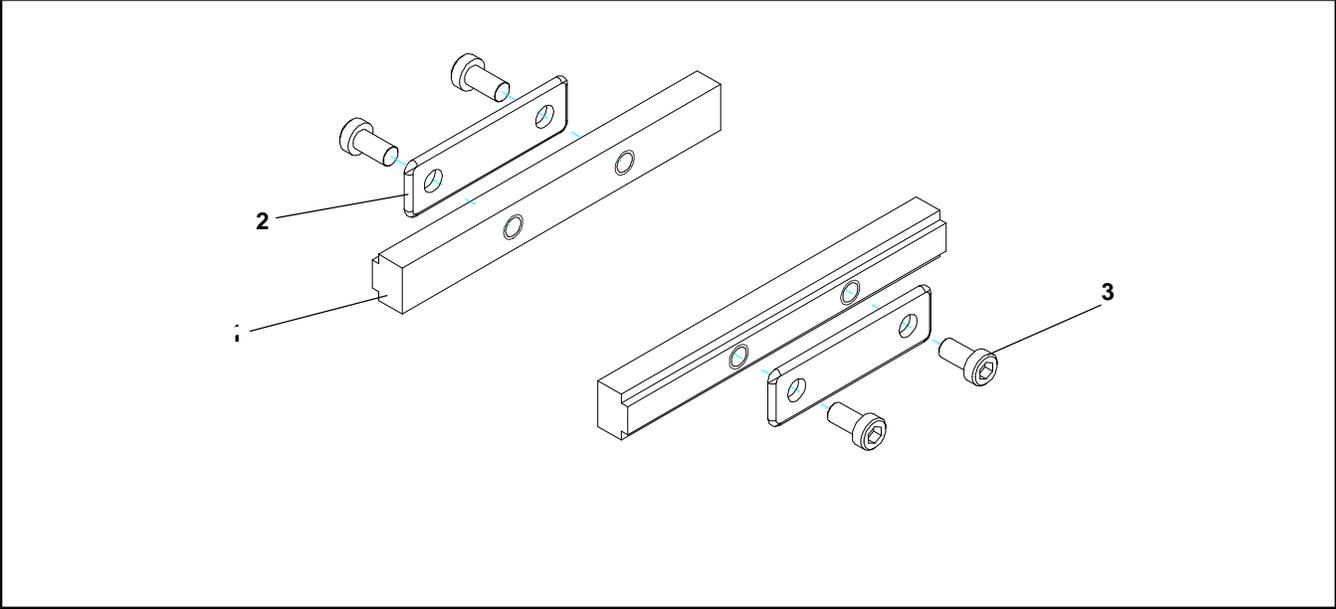


Item	Part Number	Description
1	240858	Frame Bar Connector

2	240859	Intermediate Clamp Plate
3	920692M	Socket Head Screw M6 x 12mm

Service Parts


Flat Belt Connecting Assembly with Stand Mount

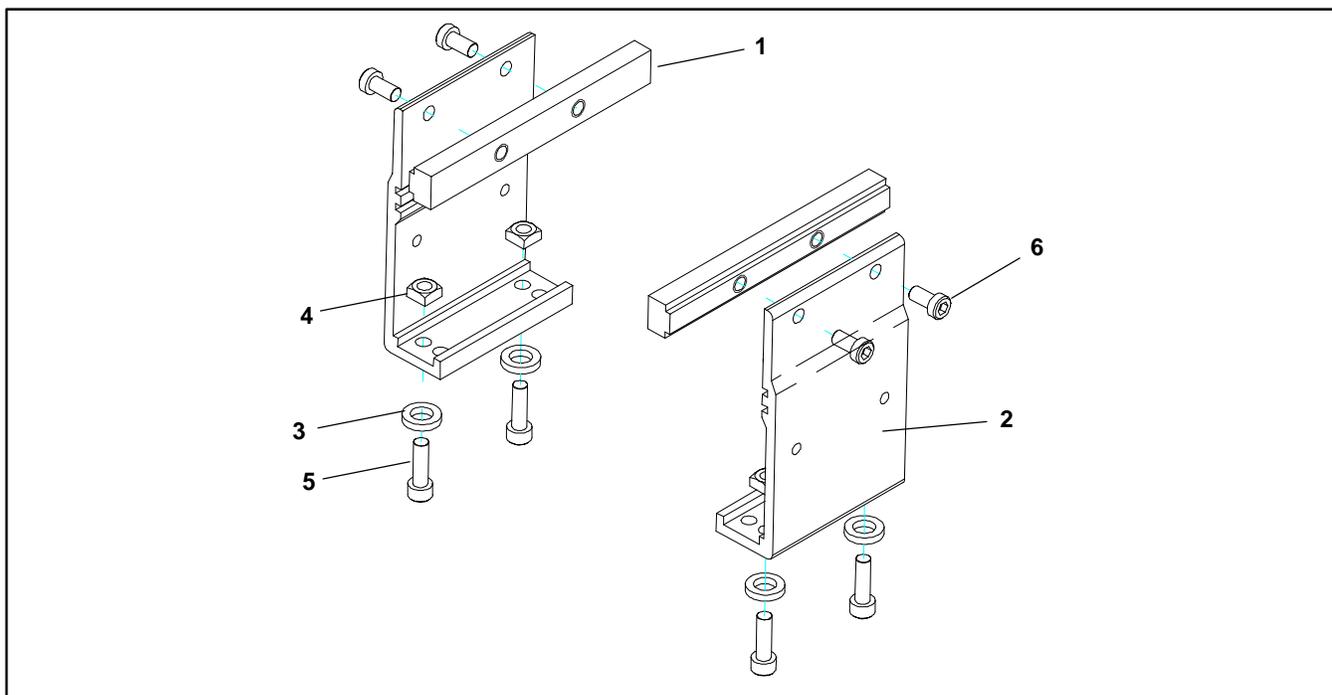

Item	Part Number	Description
1	240858	Frame Connector Bar
2	240837	Stand Mount Joint
3	605279P	Washer

4	807-920	Square Nut M6 5mm x 10mm
5	920620M	Socket Head Screw M6 x 20mm
6	920692M	Socket Head Screw M6 x 12mm


4" (102mm) to 6" (152mm) Flat Belt Return Roller

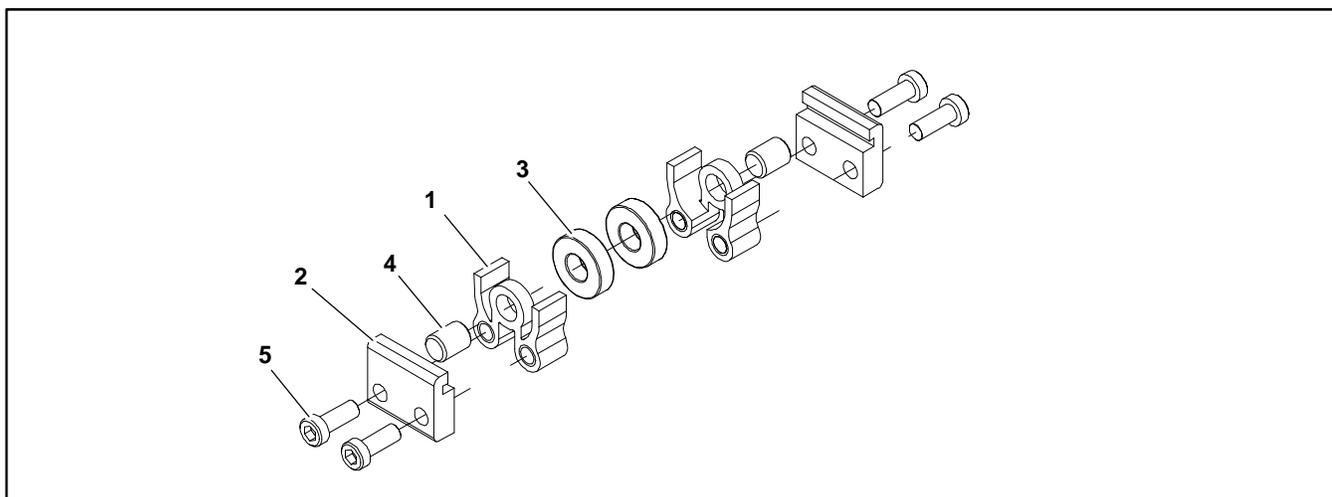

Item	Part Number	Description
1	240825	Short Return Roller Guard
2	240827	Return Roller Clip

3	802-123	Bearing
4	913-100	Dowel Pin
5	920693M	Socket Head Screw M6 x 16mm

8" (203mm) to 48" (1219mm) Flat Belt Return Roller

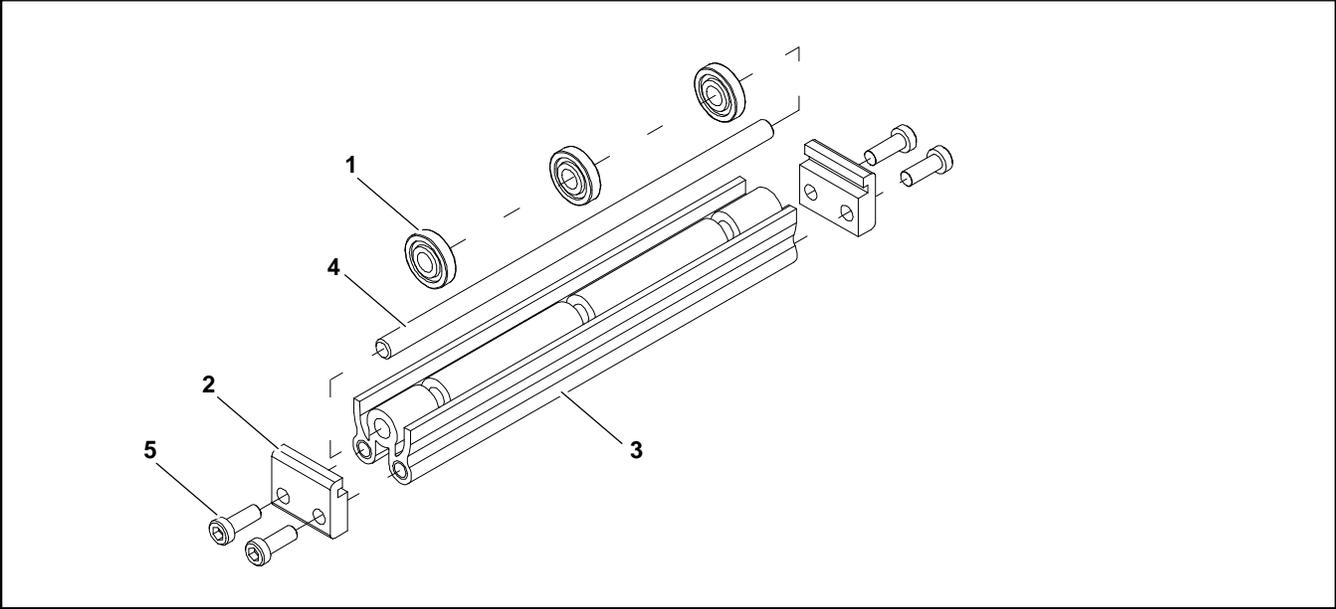

Item	Part Number	Description
1	240826	Return Roller
2	240827	Return Roller Clip
3	2409 WW	Return Roller Guard

4	2410 WW	Return Roller Rod
5	920693M	Socket Head Screw M6 x 16mm
WW = Conveyor width reference: 08 – 48 in 02 increments		

Service Parts

Conveyor Belt Part Number Configuration

Flat Belt Conveyor Model Number

3 T D M WW LLLL A PP BB

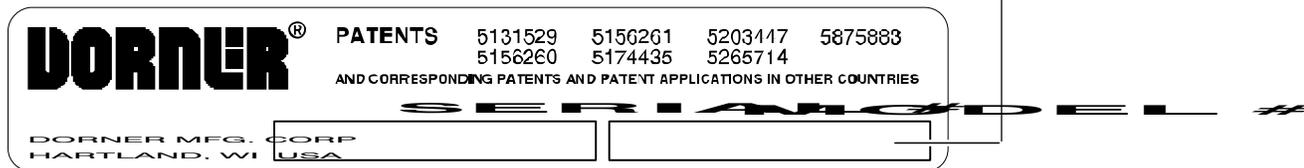


Figure 112

Flat Belt Part Number Configuration

Refer to Dorner patent plate (Figure 112). From the model number, determine conveyor tracking ("T"), drive/tail type ("D"), width ("WW"), length ("LLLL") and belt type ("BB"). Use data to configure belt part number as indicated below.

3 T D M WW LLLL / BB

3 _ _ M (Fill In) / _ _

Return Policy

No returns will be accepted without prior written factory authorization. When calling for authorization, please have the following information ready for the Dorner Factory representative or your local distributor:

1. Name and address of customer.
2. Item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number.

A representative will discuss action to be taken on the Returned items and provide a Returned Goods Authorization Number to reference.

There will be a 15% restocking charge on all new items returned for credit where Dorner was not at fault. These will not be accepted after 60 days from original invoice date. The restocking charge covers inspection, cleaning, disassembly, and reissuing to inventory.

If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Feel free to contact Dorner for the name of your local representative. Our technical sales and service staff will gladly help with your questions on Dorner products.

For a copy of Dorner's Limited Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

**For replacement parts, contact an authorized
Dorner Service Center or the factory.**

DORNER[®]

Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. ©Dorner Mfg. Corp. 2000

DORNER MFG. CORP.

975 Cottonwood Ave., PO Box 20
Hartland, WI 53029-0020 USA

USA

TEL 1-800-397-8664 (USA)

FAX 1-800-369-2440 (USA)

Internet: www.dorner.com

Outside the USA:

TEL 1-262-367-7600

FAX 1-262-367-5827