



7400 Series CE Nose Bar Conveyors

Installation, Maintenance and Parts Manual



DORNER MFG. CORP.
P.O. Box 20 • 975 Cottonwood Ave.
Hartland, WI 53029-0020 USA

INSIDE THE USA
TEL: 1-800-397-8664
FAX: 1-800-369-2440

OUTSIDE THE USA
TEL: 262-367-7600
FAX: 262-367-5827

For other service manuals visit our website at:
www.dorner.com/service_manuals.asp

Table of Contents

Introduction	2	Conveyor Belt Replacement	18
Warnings – General Safety	3	Conveyors with Guides	18
Product Description	4	Standard Belts	18
Specifications	4	Replacing a Section of Belt	18
Flat Belt 7400 Series Conveyor	4	Replacing the Entire Belt	19
Flat Belt 7400 Series LPZ Conveyor	4	Specialty Intralox 1100 Series Belts	19
Conveyor Supports	5	Replacing a Section of Belt	19
Specifications	5	Replacing the Entire Belt	20
Installation	6	Conveyor Belt Tensioning	20
Required Tools	6	Sprocket and Puck Removal	20
Recommended Installation Sequence	6	A - Drive Sprocket Removal	21
Conveyors Longer than 3048 mm	6	B - Nose Bar Puck Removal	22
LPZ Conveyors	7	C - Idler Puck Removal	23
Knuckles	7	Reassembling Tail Assemblies	24
Belt	7	Nose Bar Drive Tail	24
Guides	8	Nose Bar Assembly	24
All Conveyors	8	Drive Tail Assembly	24
Stand Installation	8	Nose Bar Idler and Tip Up Tail	24
Tail Assembly Installation	9	Idler Tail and Tip Up Tail	25
Nose Bar Drive Tail	9	Bearing Replacement	26
Nose Bar Idler Tail	9	LPZ Knuckles	26
Nose Bar Tip Up Tail	10	Wearstrips and Belt Returns	26
Idler Tail	11	Notes	27
Tip Up Tail	12	Service Parts	28
Lifter Installation	13	Nose Bar Drive End Components	28
Wear Strip Installation	13	Nose Bar Tension End	30
Belt Installation	14	Nose Bar Tip Up Tension End	31
Belt Return Installation	15	Tension End Components	32
Preventive Maintenance and Adjustment	16	Tip Up Tension End	33
Required Tools	16	Upper Knuckle for 5° - 15°	34
Checklist	16	Upper Knuckle for 30°	35
Cleaning	16	Lower Knuckle for 5° - 15°	36
Routine Cleaning	16	Lower Knuckle for 30°	37
Standard Conveyors	16	Conveyor Frame and Extension	38
Conveyors with Tip Up Tails and Lifters	17	76 mm High Sides	39
Periodic Cleaning	17	Flat Belt Returns	40
Lubrication	17	Flat Belt Chain Repair Kit	40
Conveyor Bearings	17	Belt Removal Tool	40
Wearstrips and Belt Returns	17	Ordering a Replacement Chain	41
Maintaining the Conveyor Belt	17	Configuring a Conveyor Part Number	41
Troubleshooting	17	Return Policy	42

Introduction

CAUTION

Some illustrations may show guards removed. DO NOT operate equipment without guards.


Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage. Accessories may be shipped loose.
- See accessory instructions for installation.

The Dorner Limited Warranty applies.

Dorner AquaPruf conveyors are covered by Patent Numbers 7,207,435, 7,246,697, 7,383,944, additional patent pending applications, and corresponding patents in other countries.

Dorner reserves the right to make changes at any time without notice or obligation.

Dorner has convenient, pre-configured kits of Key Service Parts for all conveyor products. These time saving kits are easy to order, designed for fast installation, and guarantee you will have what you need when you need it. Key Parts and Kits are marked in the Service Parts section of this manual with the Performance Parts Kits logo .

Intralox is a registered trademark of Laitram L.L.C. in the United States and / or other countries.

Warnings – General Safety

DANGER



SEVERE HAZARD!

KEEP OFF CONVEYORS. Climbing, sitting, walking or riding on conveyor will result in death or serious injury.

DANGER



EXPLOSION HAZARD!

- **DO NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.** The electric gearmotor generates heat and could ignite combustible vapors.
- Failure to comply will result in death or serious injury.

WARNING



CRUSH HAZARD!

- **DO NOT** place hands or fingers inside the conveyor while it is running.
- **DO NOT** wear loose garments while operating the conveyor. Loose garments can become caught up in the conveyor.
- Failure to comply could result in serious injury.

WARNING



CRUSH HAZARD!

- **SUPPORT CONVEYOR SECTIONS PRIOR TO LOOSENING STAND HEIGHT OR ANGLE ADJUSTMENT SCREWS.**
- Loosening stand height or angle adjustment screws may cause conveyor sections to drop down, causing serious injury.

WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

WARNING



BURN HAZARD!

DO NOT TOUCH the motor while operating, or shortly after being turned off. Motors may be **HOT** and can cause serious burn injuries.

WARNING



PUNCTURE HAZARD!

Handle drive shaft keyway with care. It may be sharp and could puncture the skin, causing serious injury.

WARNING



SEVERE HAZARD!

- Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.
- When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, **CHECK FOR POTENTIAL PINCH POINTS** and other mechanical hazards before system start-up.
- Failure to comply could result in serious injury.

Product Description

Refer to **(Figure 1)** for typical conveyor components.

Typical Components	
1	Conveyor
2	Gearmotor
3	Belt
4	Return
5	Support Stands
6	Motor Controller
7	Drive End
8	Tension End


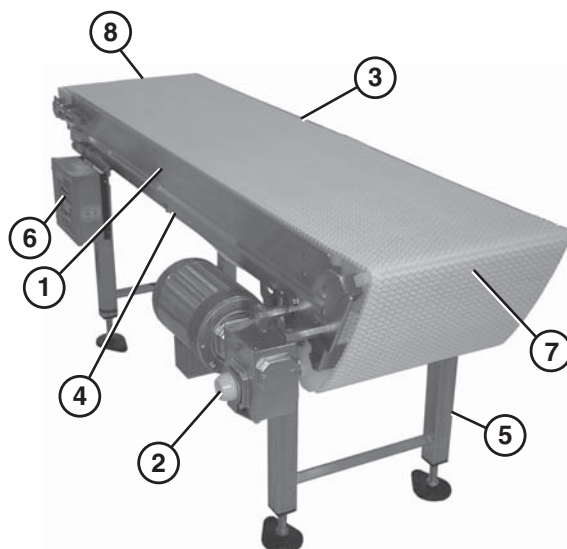



Figure 1

Specifications

Flat Belt 7400 Series Conveyor

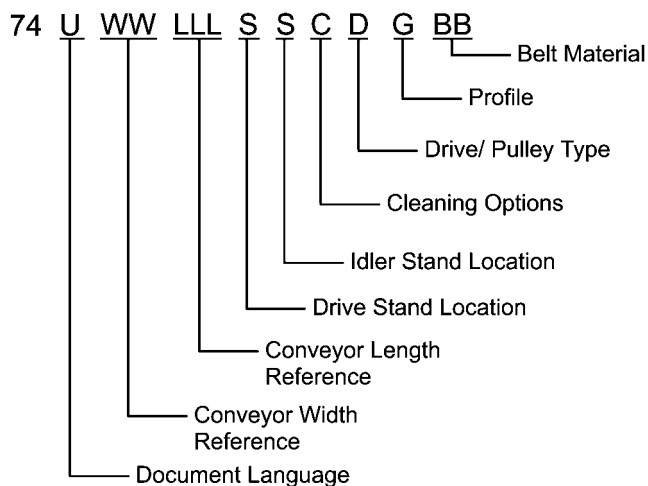

Flat Belt 7400 Series LPZ Conveyor

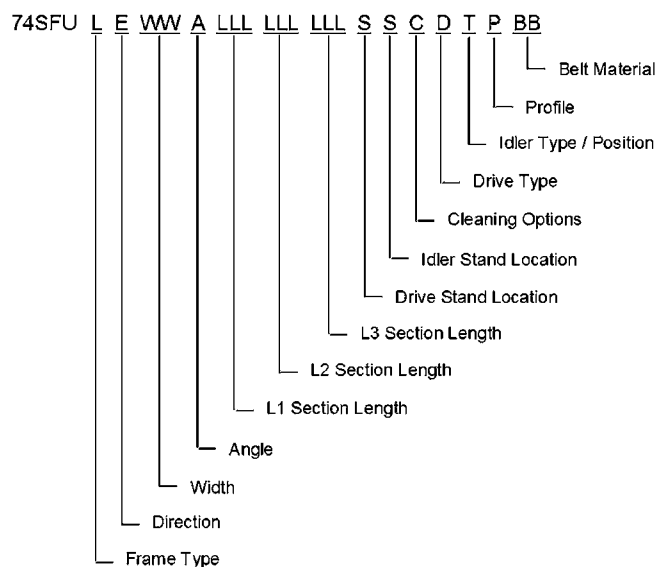

Conveyor Supports

Maximum Distances:

1 = 914 mm

2 = 2438 mm**

3 = 914 mm

** For conveyors longer than 3.05 m, install support at frame joint.

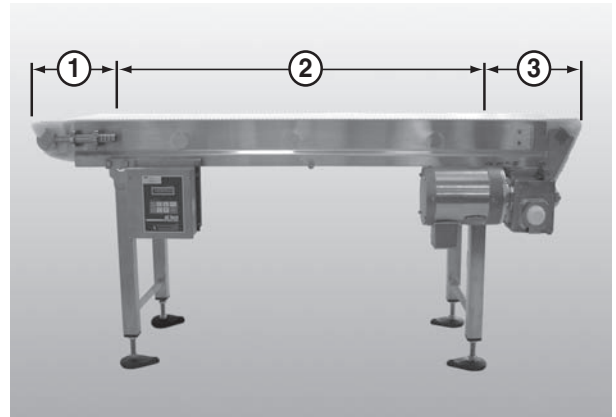


Figure 2

Specifications

Conveyor Width Reference (<u>WW</u>)	06 – 60 in 02 increments
Conveyor Belt Width	6" (152 mm) – 60" (1524 mm) in 2" (51 mm) increments
Maximum Conveyor Load	97 kg / m ² (20 lb / ft ²) with a maximum of 4882 kg / m ² (1000 lb / ft ²)
Belt Travel	305 mm (12") per revolution of pulley
Maximum Belt Speed	71 m / minute (233 ft / minute)
Belt Take-up	51 mm (2")

Conveyor Length Reference (<u>LLL</u>)	036 – 999 in 001 increments
Conveyor Length	36" (914 mm) – 999" (25.4 m) in 1" (25 mm) increments
LPZ Section Lengths (<u>LLL</u>)	024 – 252 in 001 increments
LPZ Section Length	24" (610 mm) – 252" (6401 mm) in 1" (25 mm) increments
Total LPZ Conveyor Length	(L1 +L2 + L3) = Maximum 11.6 m (38') long conveyor

IMPORTANT

Maximum conveyor loads are based on:

- Non-accumulating product
- Product moving toward gearmotor
- Conveyor being mounted horizontally
- Conveyor being located in a dry environment
- Conveyor equipped with standard belt only

Installation

⚠ CAUTION

Dorner recommends cleaning all the “food zones” prior to placing conveyor into service. Ensure adequate access is provided for cleaning and servicing equipment so that the required level of hygiene can be maintained.

⚠ CAUTION

Conveyor **MUST** be mounted straight, flat, and level within confines of conveyor. Use a level (Figure 3, item 1), during setup.

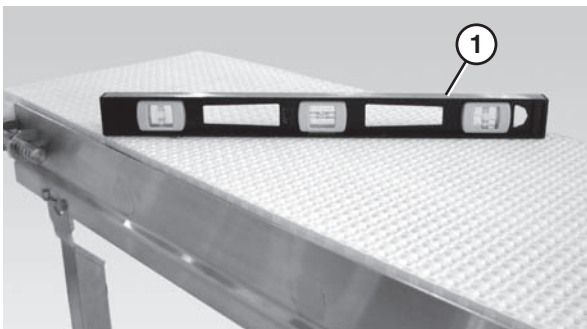


Figure 3

Required Tools

- 17 mm wrench (for hexagonal head fasteners)
- 4 mm hex wrench (for bearing shaft assembly fasteners)
- Level
- Torque wrench

Recommended Installation Sequence

1. Attach the stands to the conveyor. Refer to “Stand Installation” on page 8.
2. Attach the tail assemblies to the frame. Refer to “Tail Assembly Installation” on page 9.
3. Attach the lifters, if applicable. Refer to “Lifter Installation” on page 13.
4. Install the gearmotor, if applicable. Refer to the “7400 Series Drive Package Installation, Maintenance and Parts Manual.”
5. Attach the wearstrips. Refer to “Wear Strip Installation” on page 13.
6. Install the belt. Refer to “Belt Installation” on page 14.
7. Attach the belt returns. Refer to “Belt Return Installation” on page 15.
8. Attach any guides / accessories. Refer to the “Service Parts” section starting on page 28.

Conveyors Longer than 3048 mm

Typical Connection Components (Figure 4).

- | | |
|---|---------------------------------------|
| 1 | M10 x 1.5 mm hex head cap screws (x4) |
| 2 | Connector hex rods (x2) |
| 3 | Conveyor frames |

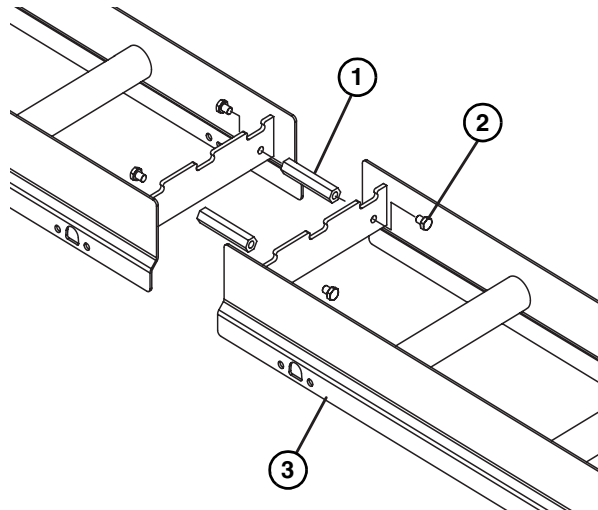


Figure 4

1. Locate the section number sequence etched on each section of frame (Figure 5, item 1).

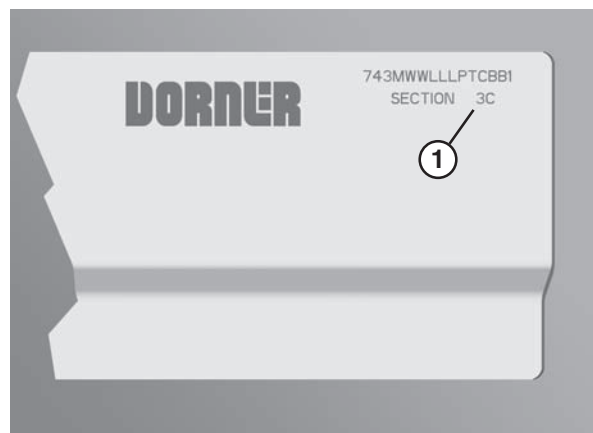


Figure 5

2. Position the frame sections in the correct order.

3. Connect the frame sections by bolting the hex post connectors (**Figure 6, item 1**) the sections of frame.

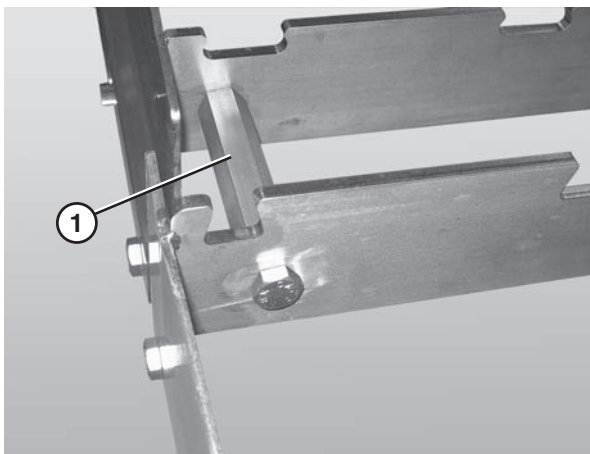


Figure 6

LPZ Conveyors

Knuckles

1. Attach upper knuckle (**Figure 7, item 1**) to frame (**Figure 7, item 2**) with hex rods (**Figure 7, item 3**) and bolts (**Figure 7, item 4**).

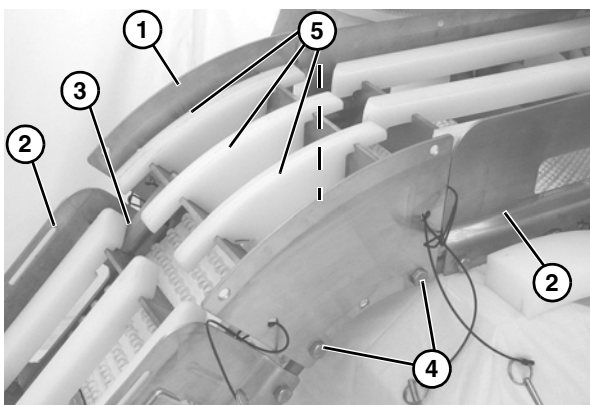


Figure 7

2. Install wear strips (**Figure 7, item 5**).

3. Attach lower knuckle (**Figure 8, item 1**) to frame (**Figure 8, item 2**) with hex rods (**Figure 8, item 3**) and bolts (**Figure 8, item 4**).

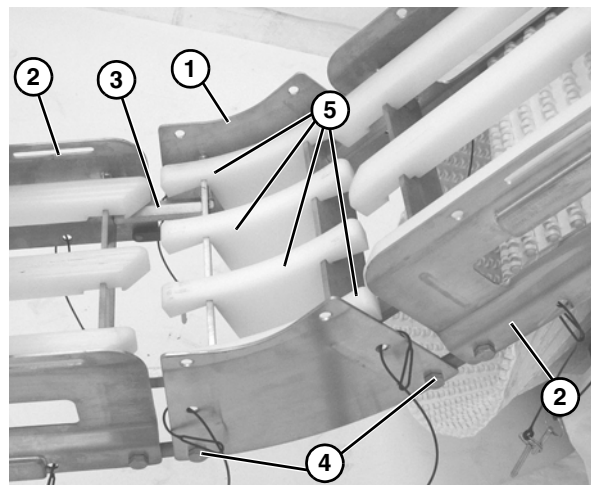


Figure 8

4. Install wear strips (**Figure 8, item 5**).

Belt

- Slide belt (**Figure 9, item 1**) over knuckles on top of the wear strips.



Figure 9

Installation

Guides

1. Slide guides (**Figure 10, item 1**) on to the knuckle frame, and secure with pull pins (**Figure 10, item 2**).

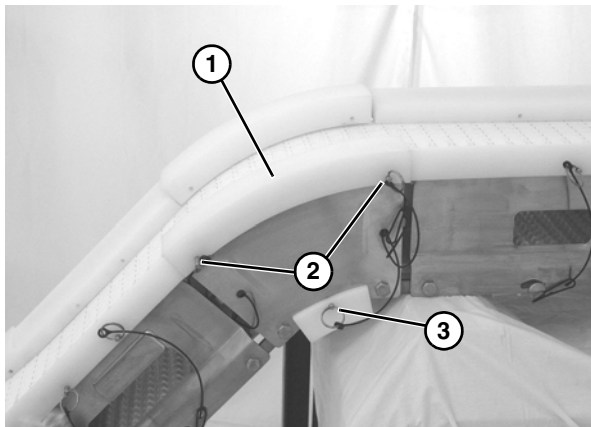


Figure 10

2. Install return guides and secure with pull pin (**Figure 10, item 3**).
3. Slide guides (**Figure 11, item 1**) onto lower knuckle frame, and secure with pull pins (**Figure 11, item 2**).

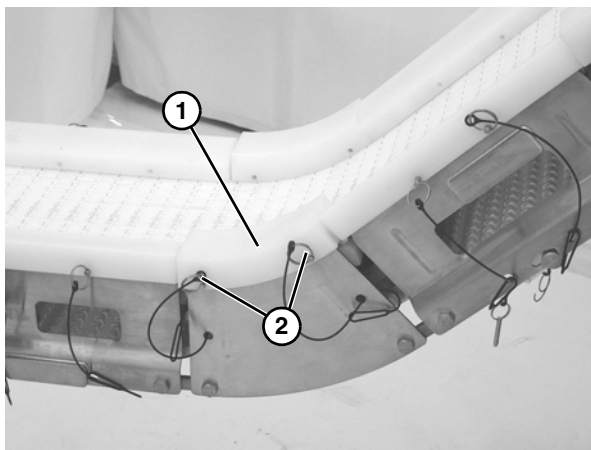


Figure 11

All Conveyors

Stand Installation

Typical Stand Components (**Figure 12**)

1	Conveyor frame
2	Stand
3	M10 - 1.5 x 12 mm hex head cap screws (x4)

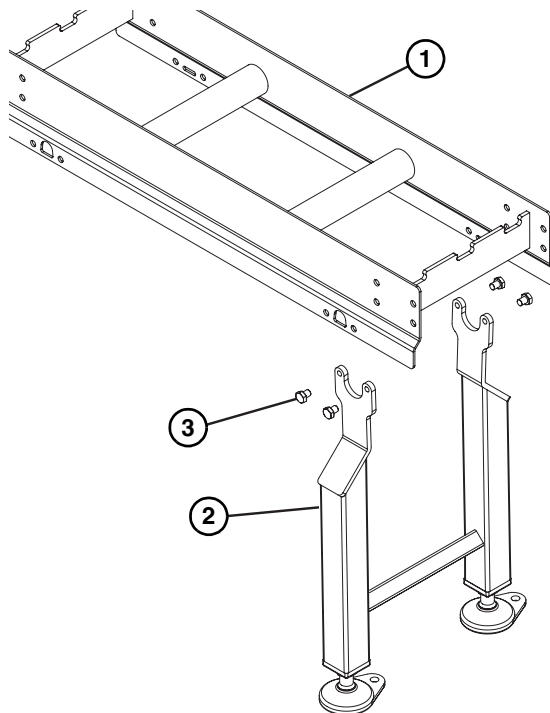


Figure 12

1. Position the stands on a flat, level surface.
2. Attach the stands to the frame (**Figure 13**).



Figure 13

Tail Assembly Installation

Nose Bar Drive Tail

Typical Nose Bar Drive Tail Components (Figure 14)

1	Nose bar drive tail assembly
2	M10 x 1.5 x 12mm hex head cap screws (x4)
3	Conveyor frame

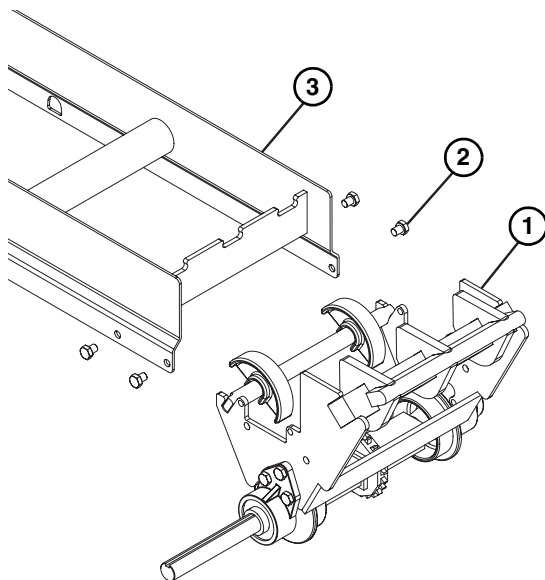


Figure 14

1. Bolt the nose bar drive tail assembly to the conveyor frame (Figure 15).

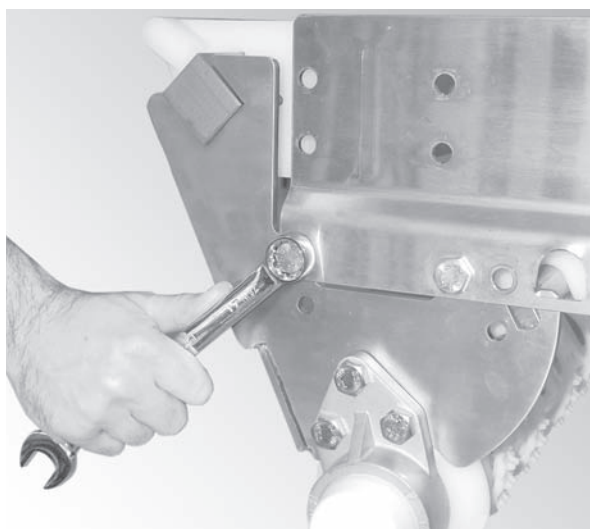


Figure 15

2. Install the drive package, if applicable. Refer to the "7400 Series Drive Package Installation, Maintenance and Parts Manual."

Nose Bar Idler Tail

Typical Nose Bar Idler Tail Components (Figure 16)

1	Nose bar idler tail assembly
2	Pull pin (x2)
3	Conveyor frame

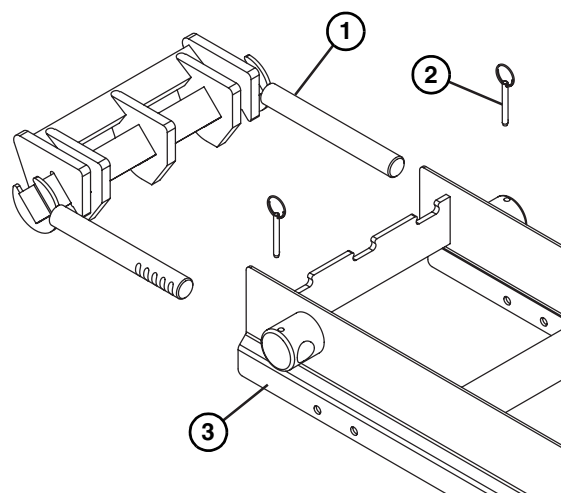


Figure 16

1. Slide the nose bar idler shaft hands (Figure 17, item 1) into the take up blocks (Figure 17, item 2).
2. Attach the nose bar transfer post (Figure 17, item 3) to the nose bar idler shaft hands.

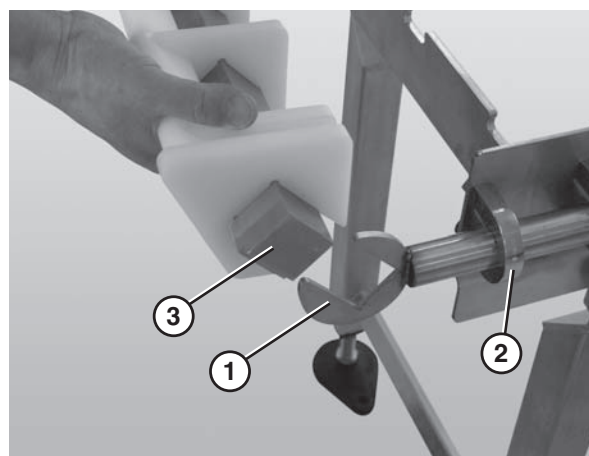


Figure 17

Installation

3. Ensure that the nose bar pucks (**Figure 18, item 1**) are in line with the conveyor frame (**Figure 18, item 2**).

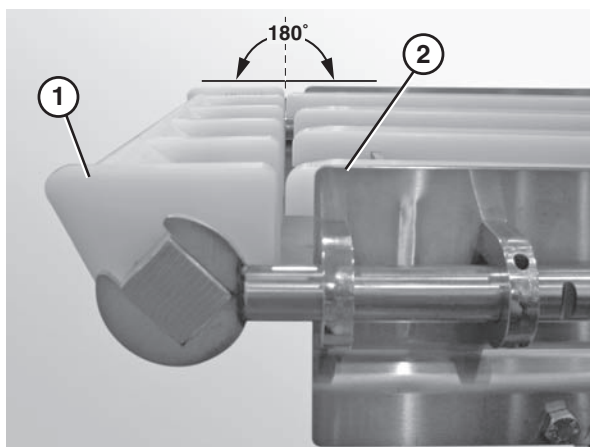


Figure 18

NOTE

Do not insert the pull pins on the tension end of the conveyor until the belt has been installed.

Nose Bar Tip Up Tail

Typical Nose Bar Tip Up Tail Components (**Figure 19**)

- | | |
|---|----------------------|
| 1 | Tip up tail assembly |
| 2 | Pull pin (x2) |
| 3 | Tip up shaft |
| 4 | Key stops (x2) |

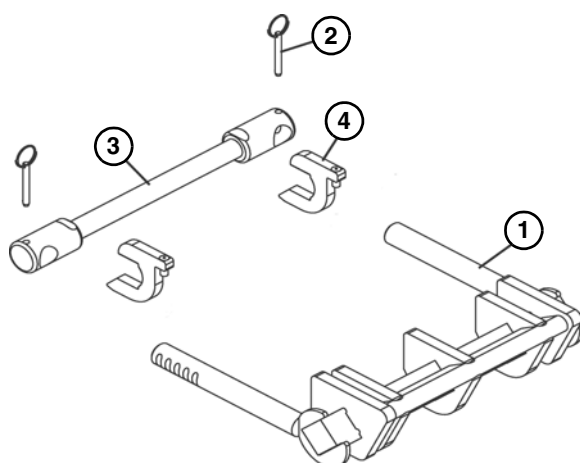


Figure 19

1. Slide the tip up shaft (**Figure 20, item 1**) through the designated slots in the frame.

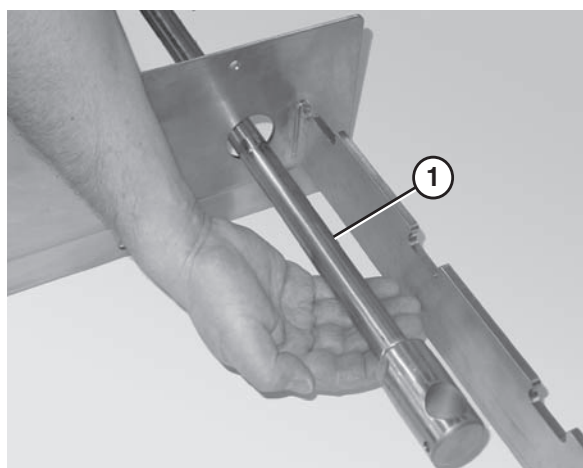


Figure 20

2. Attach the key stops (**Figure 21, item 1**) to the tip up shaft (**Figure 21, item 2**). The rounded end of the key stop should face the tail.

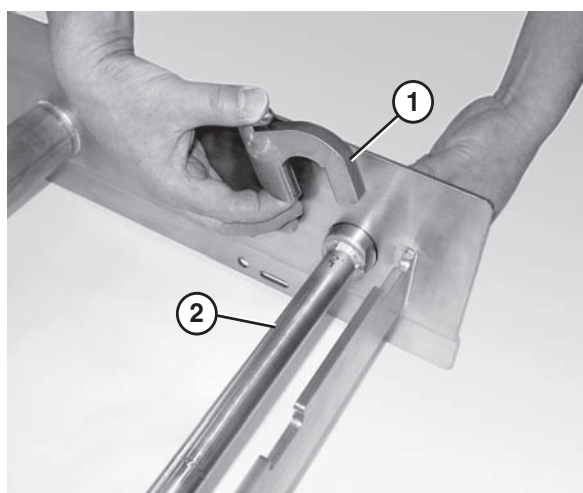


Figure 21

3. Attach the nose bar idler shaft hands (Figure 22, item 1) to the tip up shaft (Figure 22, item 2).

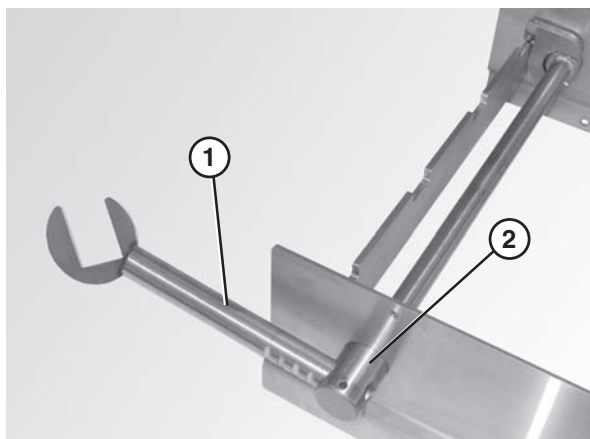


Figure 22

4. Attach the nose bar transfer post (Figure 23, item 1) to the nose bar idler shaft hands (Figure 23, item 2).

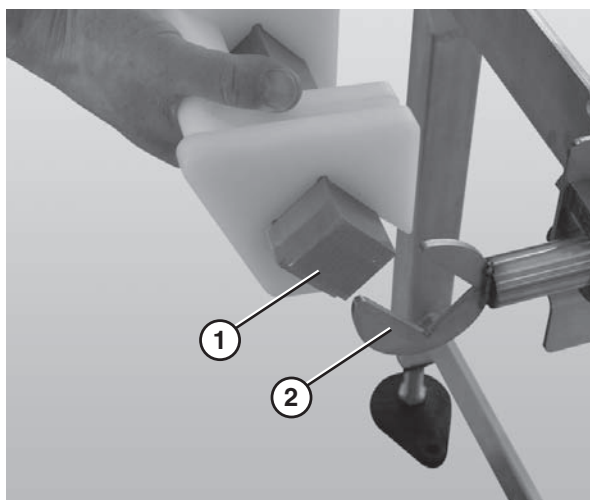


Figure 23

5. Ensure that the nose bar pucks (Figure 24, item 1) are in line with the conveyor frame (Figure 24, item 2).

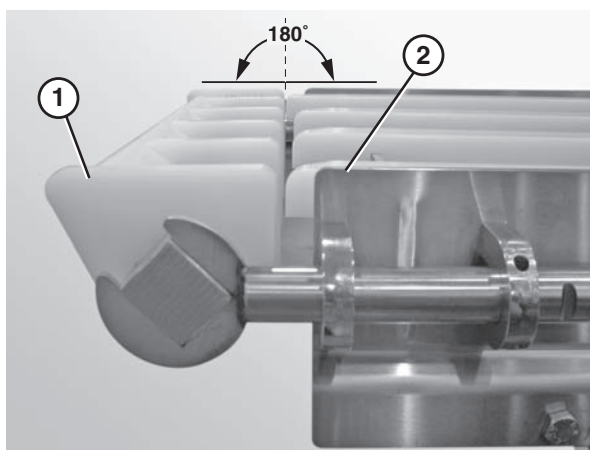


Figure 24

NOTE

Do not insert the pull pins on the tension end of the conveyor until the belt has been installed.

Idler Tail

Typical Idler Tail Components (Figure 25)

- | | |
|---|---------------------|
| 1 | Idler tail assembly |
| 2 | Pull pin (x2) |
| 3 | Conveyor frame |

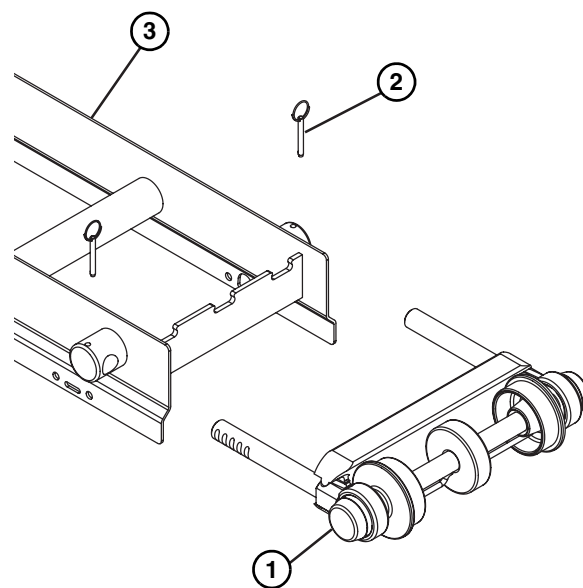


Figure 25

Installation

1. Slide the bearing shafts (**Figure 26, item 1**) into the take up blocks (**Figure 26, item 2**).

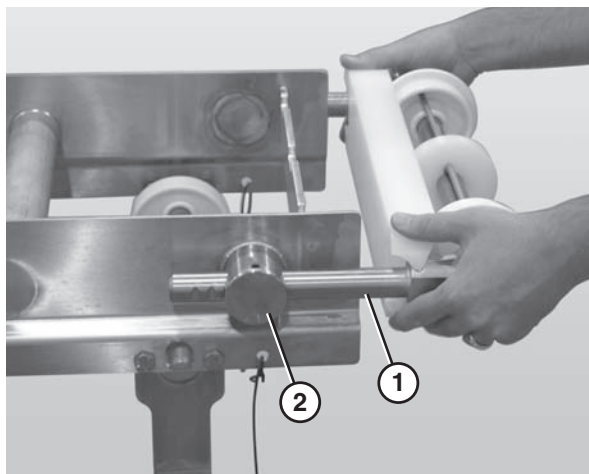


Figure 26

NOTE

Do not insert the pull pins on the tension end of the conveyor until the belt has been installed.

Tip Up Tail

Typical Tip Up Tail Components (**Figure 27**)

- | | |
|---|----------------------|
| 1 | Tip up tail assembly |
| 2 | Pull pin (x2) |
| 3 | Tip up shaft |
| 4 | Key stops (x2) |

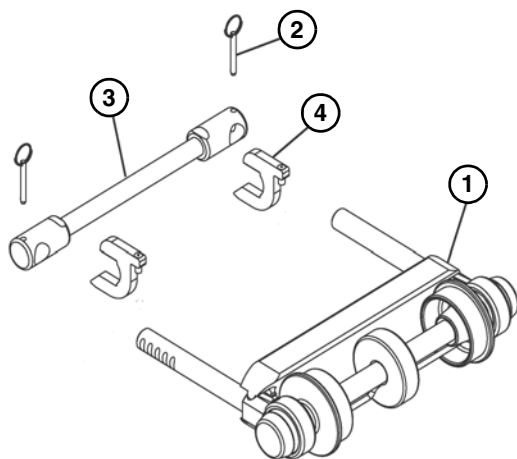


Figure 27

1. Slide the tip up shaft (**Figure 28, item 1**) through the designated slots in the frame.

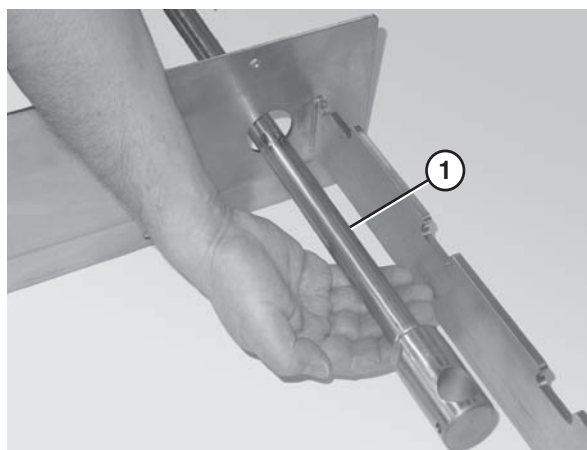


Figure 28

2. Attach the key stops (**Figure 29, item 1**) to the tip up shaft (**Figure 29, item 2**). The rounded end of the key stop should be facing the tail.

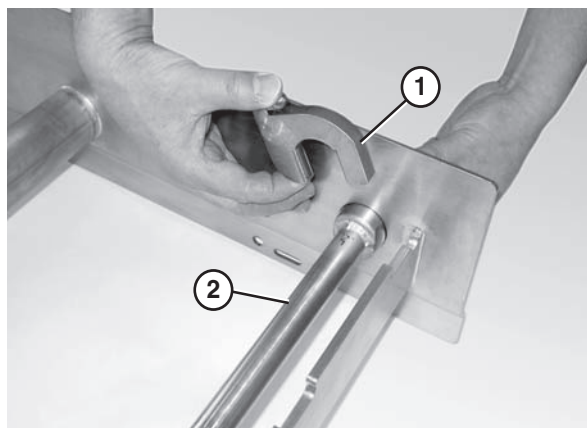


Figure 29

3. Slide the bearing shafts (**Figure 30, item 1**) into the holes in the tip up shaft (**Figure 30, item 2**).

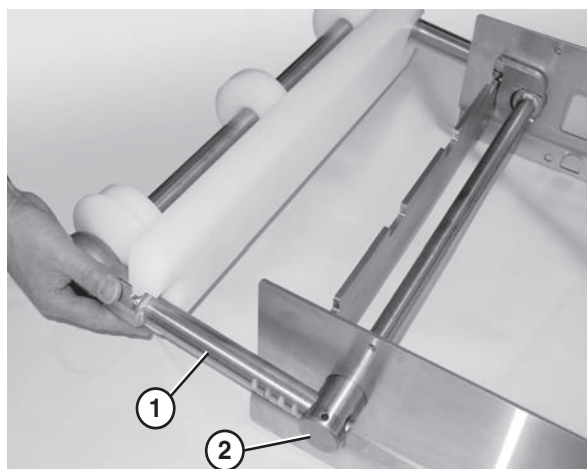


Figure 30

NOTE

Do not insert the pull pins on the tension end of the conveyor until the belt has been installed.

Lifter Installation

Typical Lifter Components (**Figure 31**)

- | | |
|---|--------------------------------------|
| 1 | Belt lift pivot bar |
| 2 | Lifter bars |
| 3 | Belt lift handle |
| 4 | M8 - 1.25 x 16 mm hex head cap screw |

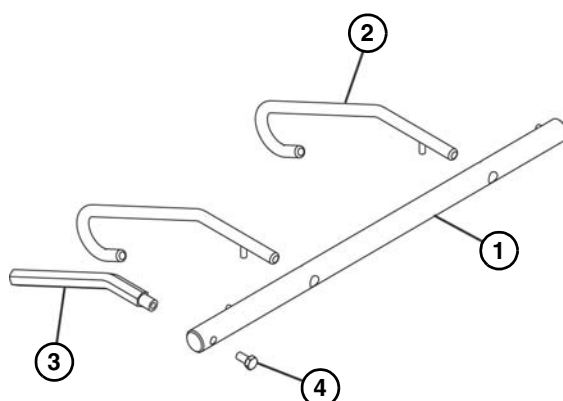


Figure 31

1. Slide the belt lift pivot bar (**Figure 32, item 1**) through the designated holes in the frame.

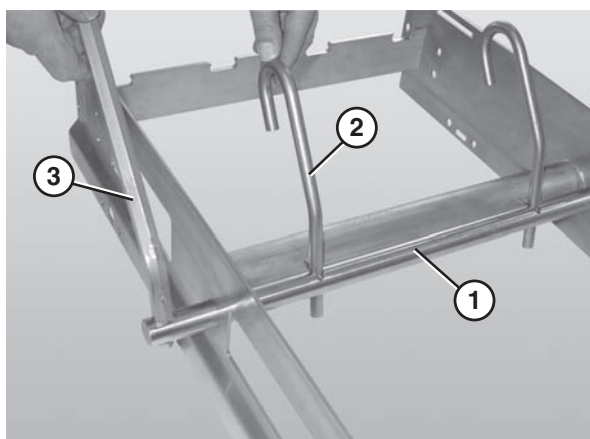


Figure 32

2. Attach the lifter bars (**Figure 32, item 2**) to the belt lift pivot bar (**Figure 32, item 1**). Make sure the hooked ends of the lifter bars are facing down when resting against the frame.
3. Attach the lifter handle (**Figure 32, item 3**) to the belt lift pivot rod.

Wear Strip Installation

Typical Wear Strip Components (**Figure 33**)

- | | |
|---|------------|
| 1 | Wear strip |
|---|------------|

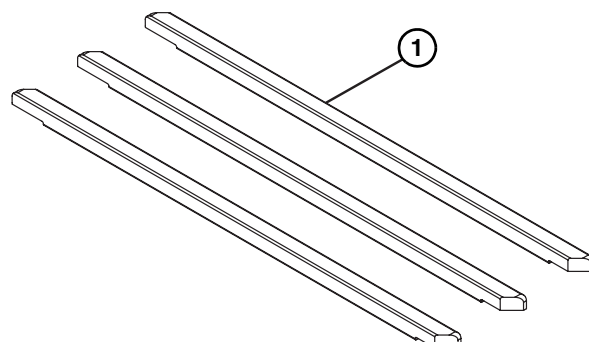


Figure 33

1. Position the wear strips (**Figure 34, item 1**) on the frame.

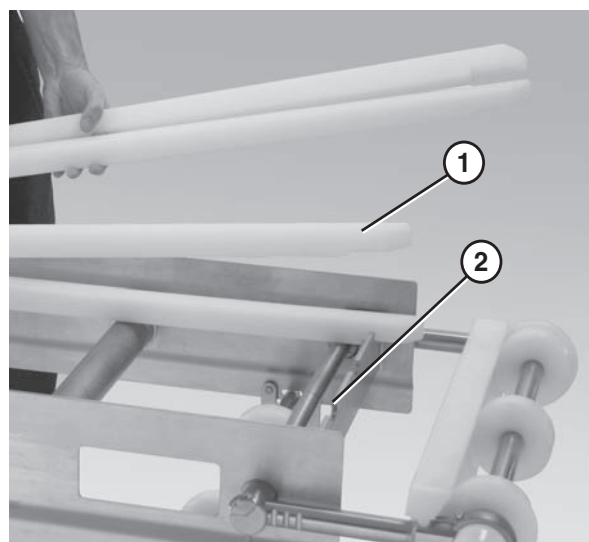


Figure 34

2. Make sure the wear strips are situated securely in the frame slots (**Figure 34, item 2**).

Installation

Belt Installation

Typical Belt Components (Figure 35)

1	Chain belt
2	Belt rod

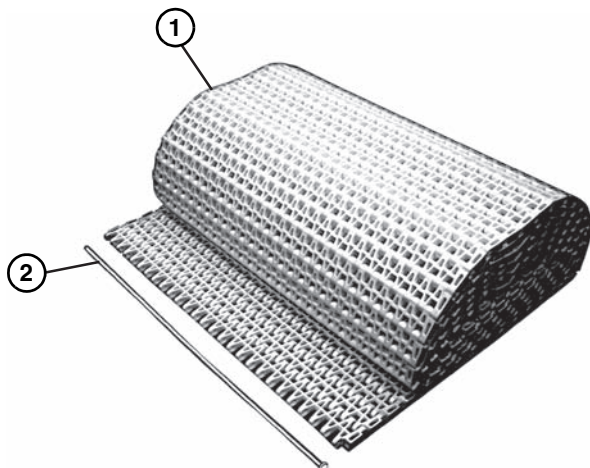


Figure 35

1. Position the belt on the conveyor frame (Figure 36).



Figure 36

2. Wrap the belt around the conveyor, making sure the sprocket teeth have engaged the belt.
3. Bring the ends of the belt together (Figure 37).



Figure 37

4. Insert the belt rod (Figure 38, item 1).

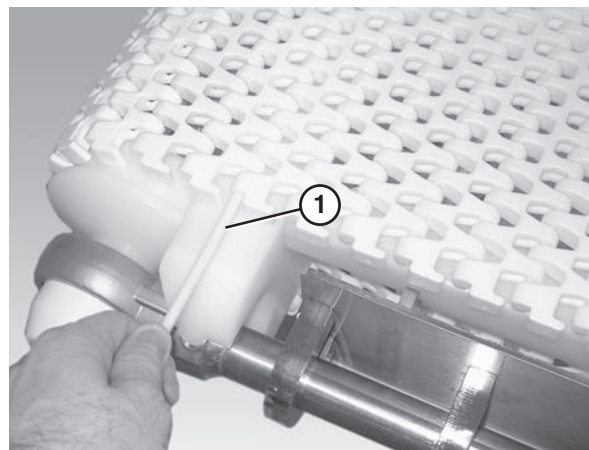


Figure 38

5. Push the belt rod in as far as possible.
6. Lightly tap the head of the rod with a hammer until it snaps into position.
7. Extend the tension end to remove excess slack in the belt (Figure 39).



Figure 39

8. Insert the pull pins (Figure 40, item 1) on the tension end of the conveyor.

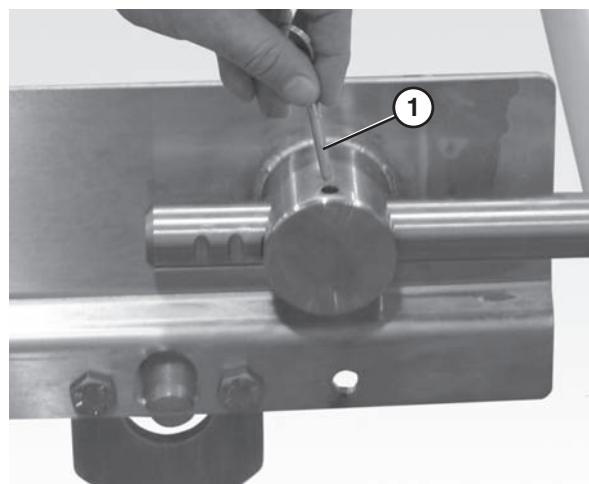


Figure 40

9. If no more travel is available, remove one or more belt links to take up the tension. Refer to "Standard Belts: Replacing a Section of Belt" on page 18.

Belt Return Installation

Typical Belt Return Components (**Figure 41**)

1	Return shaft
2	Chain return shoe

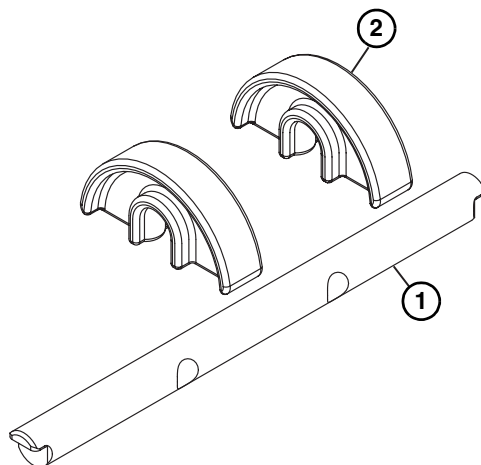


Figure 41

1. Attach the chain return shoes (**Figure 42, item 1**) to the return shaft (**Figure 42, item 2**).

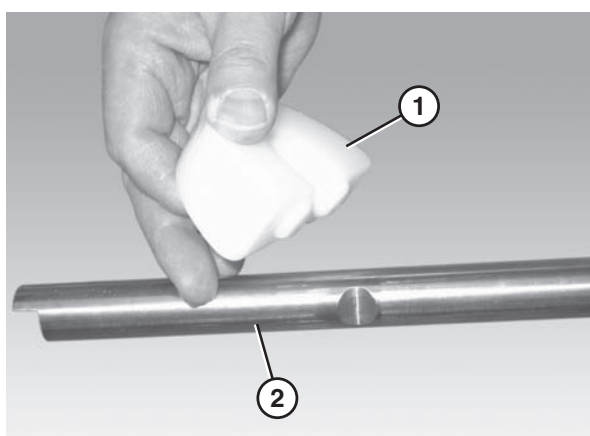


Figure 42

2. Slide the return shaft (**Figure 43, item 1**) up and through the large slot (**Figure 43, item 2**) in the frame (picture shown without the belt or wear strips).

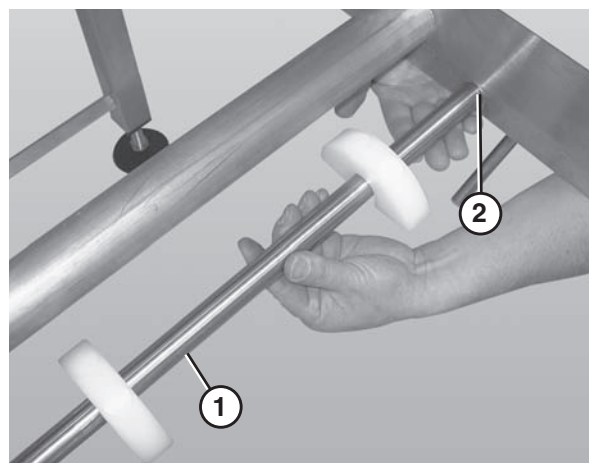


Figure 43

3. Push up on the return shaft (**Figure 43, item 1**) and slide the notched end of the shaft through the small slot on the opposite side of the frame.
4. Check belt sag by measuring from the top of the return (**Figure 44**). Belt sag should not exceed 102 mm. Follow steps 7 – 9 in the “Belt Installation” section on page 14 to remove slack from the belt.

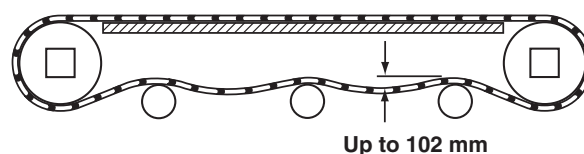


Figure 44

⚠ CAUTION

Belt sag should not exceed 102 mm from the top of the returns.

Preventive Maintenance and Adjustment

Required Tools

- 17 mm wrench (or adjustable wrench)
- 4 mm hex wrench (for bearing shaft assembly fasteners)
- 3 mm hex wrench
- Punch and hammer (to remove belt rod)

Checklist

- Keep service parts on hand. Refer to the "Service Parts" section starting on page 28 for recommendations.
- Replace any worn or damaged parts.

Cleaning

NOTE

Proper conveyor application, cleaning, and sanitation are the responsibility of the end user.

⚠ CAUTION

Dorner recommends cleaning all the "food zones" prior to placing conveyor into service. Ensure adequate access is provided for cleaning and servicing equipment so that the required level of hygiene can be maintained.

Routine Cleaning

⚠ WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

Dorner recommends cleaning the inside and the outside of the conveyor on a daily basis. Refer to the following steps to access the inside of the conveyor.

Standard Conveyors

1. Remove the guides, if applicable, by removing the pull pins (**Figure 45, item 1**) that connect the guide (**Figure 45, item 2**) to the frame.

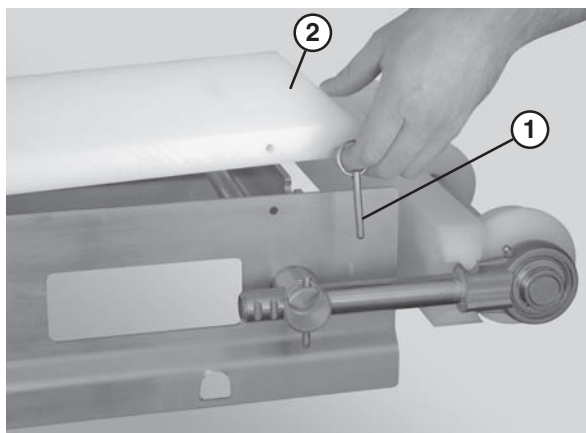


Figure 45

2. Remove the pull pin (**Figure 46, item 1**) on the tension end of the conveyor to release belt tension.

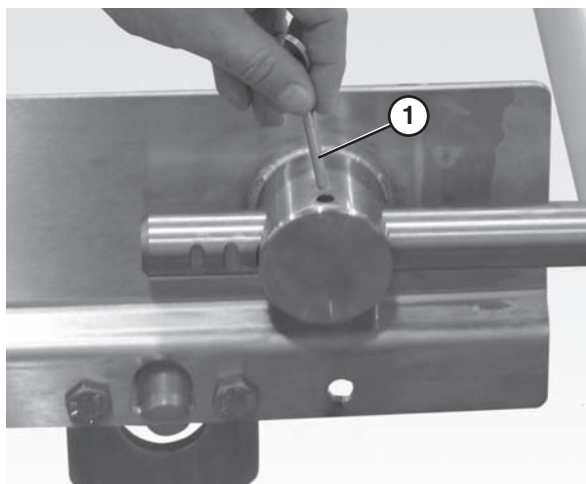


Figure 46

3. Lift up on the belt (**Figure 47**).



Figure 47

Preventive Maintenance and Adjustment

Conveyors with Tip Up Tails and Lifters

1. Remove the guides, if applicable, by removing the pull pins (**Figure 45, item 1**) that connect the guide (**Figure 45, item 2**) to the frame.
2. Use the lifter handle (**Figure 48, item 1**) to raise the lifters (**Figure 48, item 2**) and raise the tip up tail (**Figure 48, item 3**).

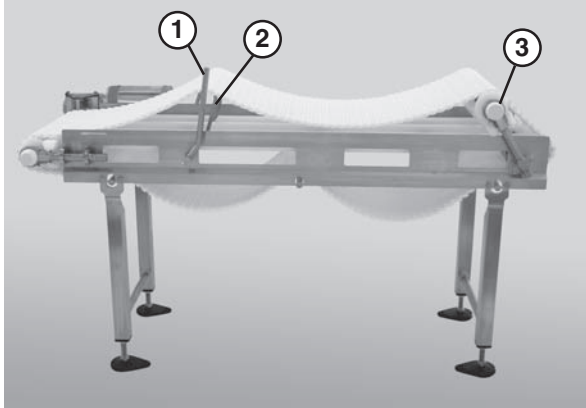


Figure 48



CAUTION

DO NOT submerge or soak bearing assemblies. This will reduce the life of the bearing.

Periodic Cleaning

Dorner recommends complete disassembly of the conveyor periodically for thorough cleaning.

For conveyor disassembly and reassembly instructions:

- Refer to “Conveyor Belt Replacement” on page 18.
- Refer to “Sprocket and Puck Removal” on page 20.
- Refer to “Reassembling Tail Assemblies” on page 24.

Lubrication

Conveyor Bearings

Conveyor bearing lubrication is required. Dorner recommends using an H-1 food grade grease.

NOTE

Although bearings are sealed, re-greasing is recommended to increase bearing life. An H-1 food grade grease is recommended. The frequency of bearing re-greasing is dependent upon the application in which the conveyor is being used. Frequency of re-greasing will increase with the frequency of conveyor washing.

1. Add grease to the bearing using the zerk fitting (**Figure 49, item 1**) on the exterior of the bearing shaft assembly.

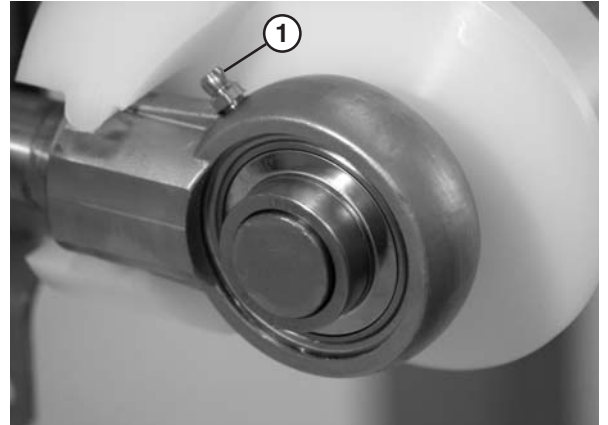


Figure 49

2. Replace the bearings if they become worn.

Wearstrips and Belt Returns

Replace the wearstrips and belt returns if they become worn.

For wearstrip and belt return installation instructions:

- Refer to “Wear Strip Installation” on page 13.
- Refer to “Belt Return Installation” on page 15.

Maintaining the Conveyor Belt

Troubleshooting

NOTE

Visit www.dorner.com for complete list of troubleshooting solutions.

Inspect conveyor belt for:

- Surface cuts or wear
- Skipping

Damage to belt links or rods, surface cuts and / or wear indicate:

- Sharp or heavy parts impacting belt
- Jammed parts
- Accumulated dirt
- Foreign material inside the conveyor
- Improperly positioned accessories

Skipping indicates:

- Excessive load on belt
- Worn sprockets or impacted dirt on drive pulley

Preventive Maintenance and Adjustment

Damage to belt links or rods indicate:

- Excessive load on belt
- Dirt impacted on sprockets
- Excessive or improper side loading
- Improperly positioned accessories

Conveyor Belt Replacement

WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

Conveyors with Guides

1. Remove the pull pins (**Figure 50, item 1**) that connect the guide (**Figure 50, item 2**) to the frame.

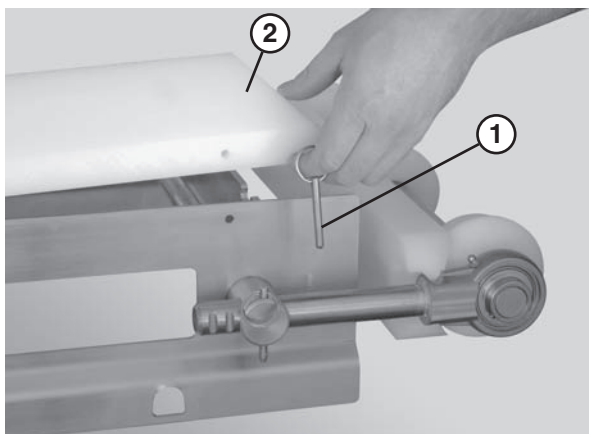


Figure 50

2. Remove the guide (**Figure 51, item 1**).

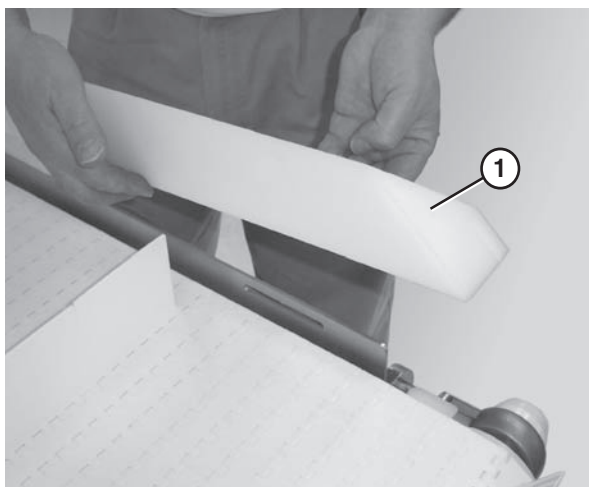


Figure 51

3. Follow the belt replacement procedures described in “Standard Belts” on page 18, “Specialty Intralox 1100 Series Belts” on page 19, or “Specialty Intralox 1600 Series Belts” on page 19.

Standard Belts

Replacing a Section of Belt

1. Remove the pull pins (**Figure 52, item 1**) on the tension end of the conveyor to release tension on the belt.

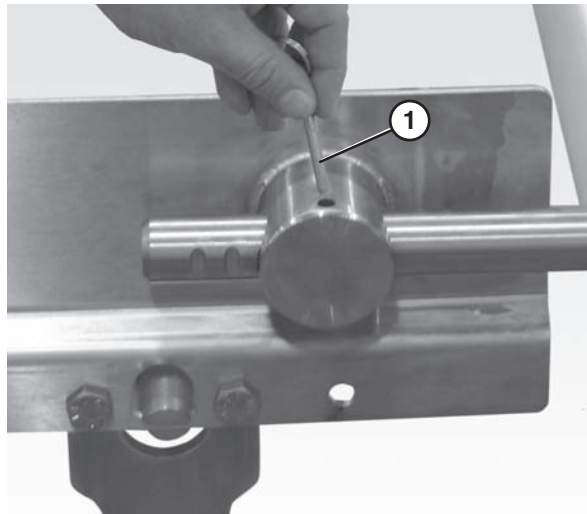


Figure 52

CAUTION

Secure the retaining head side of the belt prior to removing a belt rod in order to prevent damaging the belt.

2. Secure the retaining head side of the belt. Use the belt removal tool (**Figure 53, item 1**) for 1" pitch belts. For all other belts, position the section of belt so that it is braced by the flanged puck (**Figure 53, item 2**).

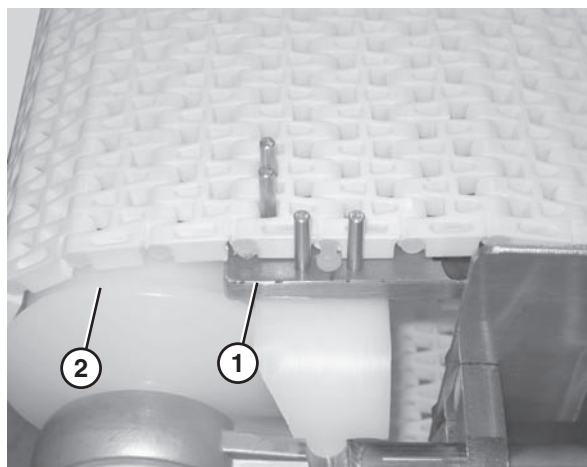


Figure 53

Preventive Maintenance and Adjustment

3. Use a punch and hammer to push the belt rod out by striking the rod end opposite the retaining head (**Figure 54**).



Figure 54

4. Remove the belt rods on both sides of the section of belt being replaced.
5. Replace the old section with a new section of belt.

⚠ CAUTION

DO NOT reuse belt rods that are damaged or show signs of wear.

Replacing the Entire Belt

1. Remove the belt returns by pushing up on the return shaft (**Figure 55, item 1**) and sliding it through the large hole (**Figure 55, item 2**) in the frame.

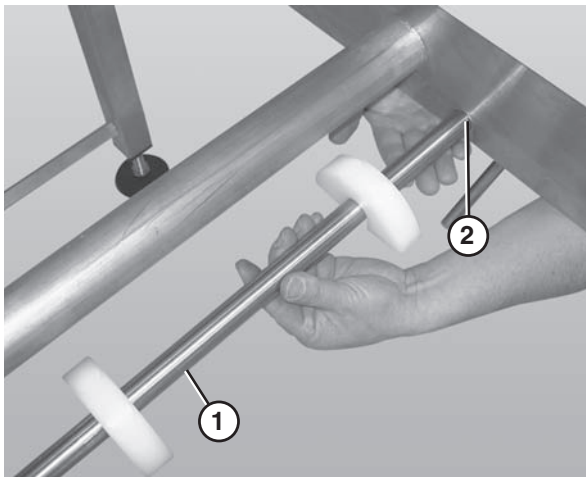


Figure 55

2. Lower the opposite end of the return shaft (**Figure 55, item 1**) and slide it out of the frame.
3. Follow steps 1 – 3 in "Standard Belts: Replacing a Section of Belt" on page 18.
4. Remove the belt.
5. Replace the damaged or worn belt. Refer to "Belt Installation" on page 14 and "Belt Return Installation" on page 15.

Specialty Intralox 1100 Series Belts

Replacing a Section of Belt

1. Place the edge of a flat head screwdriver between the two belt links and turn clockwise (**Figure 56**).

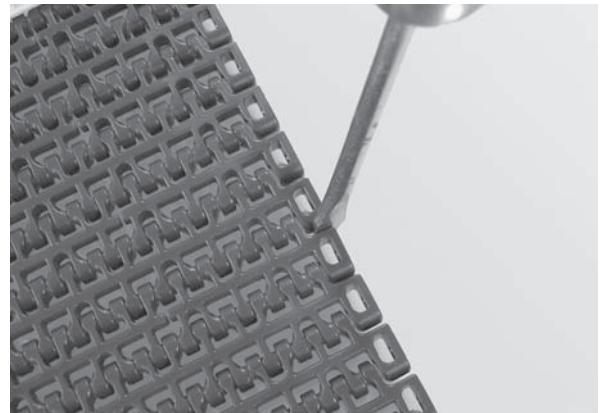


Figure 56

2. Use a second belt rod of the same size to push on the opposite end of the belt rod. (**Figure 57**).

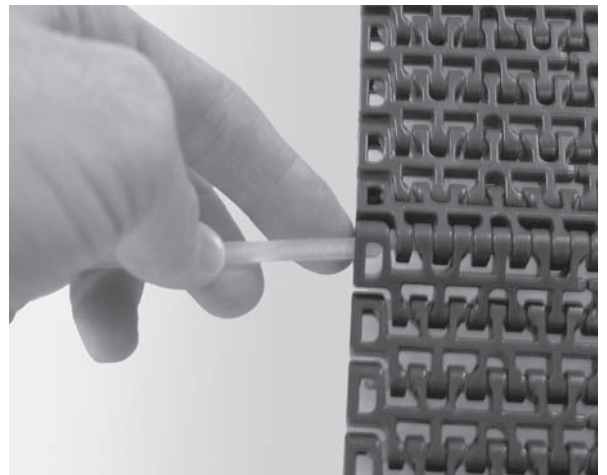


Figure 57

3. Remove the belt rods on both sides of the section of belt being replaced.
4. Replace the old section with a new section of belt.

⚠ CAUTION

DO NOT reuse belt rods that are damaged or show signs of wear.

Replacing the Entire Belt

1. Remove the belt returns.
2. Follow steps 1 – 2 in "Specialty Intralox 1100 Series Belts: Replacing a Section of Belt" on page 19.
3. Remove the belt.
4. Replace the damaged or worn belt. Refer to "Belt Installation" on page 14 and "Belt Return Installation" page 15.

Preventive Maintenance and Adjustment

Conveyor Belt Tensioning

WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

CAUTION

Belt sag should not exceed 102 mm from the top of the returns.

1. Remove both pull pins (**Figure 58, item 1**) on the tension end of the conveyor.

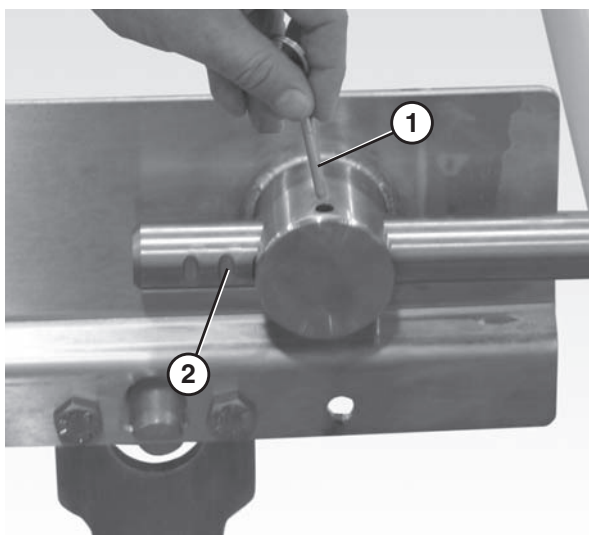


Figure 58

2. Extend the idler tail to the next groove (**Figure 58, item 2**) on the bearing shaft.

3. Continue extending the tension end until the belt is sufficiently tight (**Figure 59**).

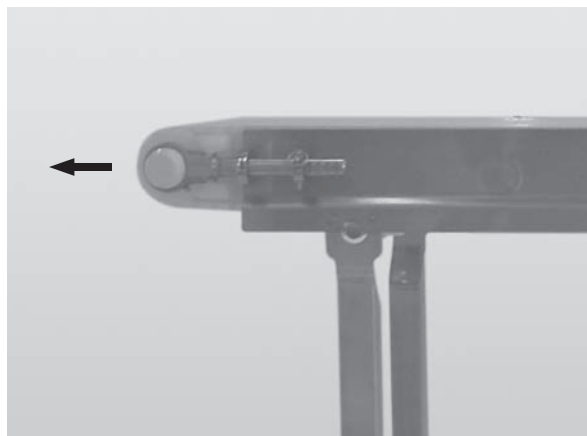


Figure 59

4. Reinsert the pull pins.
5. If no more travel is available, remove one or more belt links to take up the tension. Refer to “Replacing a Section of Belt” on page 18.

Sprocket and Puck Removal

WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

1. Remove the conveyor belt to access the sprockets / pucks. Refer to “Conveyor Belt Replacement” starting on page 18.
2. Remove the desired sprocket / puck by following these instructions:
 - A - Drive Sprocket Removal
 - B - Nose Bar Puck Removal
 - C - Idler Puck Removal

Preventive Maintenance and Adjustment

A - Drive Sprocket Removal

⚠ WARNING

PUNCTURE HAZARD! Handle drive shaft keyway with care. It may be sharp and could puncture the skin, causing serious injury.

1. Remove the plastic cap on the end of the motor and remove the socket head screw (Figure 60, item 1) and the bore plug (Figure 60, item 2).

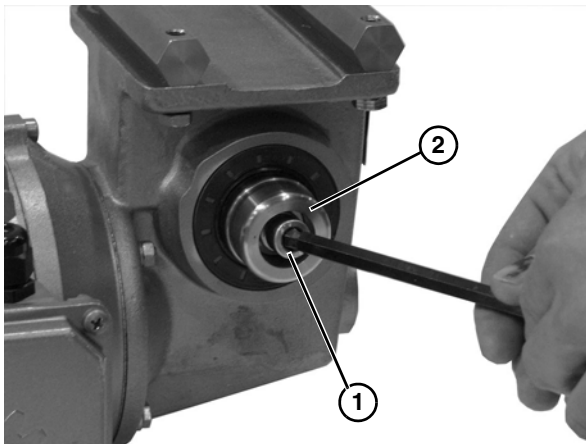


Figure 60

2. Remove the gearmotor assembly (Figure 61, item 1) from the gearhead mounting posts (Figure 61, item 2).

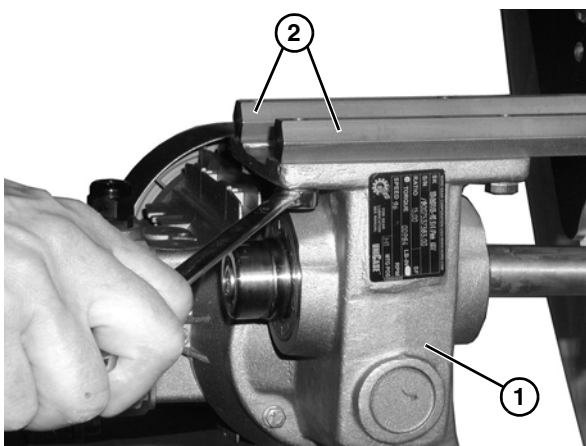


Figure 61

3. Slide the gearmotor assembly (Figure 62, item 1) off of the drive spindle (Figure 62, item 2).

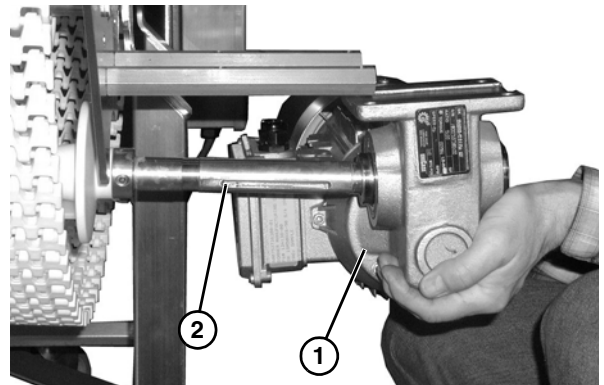


Figure 62

4. Remove the drive spindle key (Figure 63, item 1) from the drive spindle keyway (Figure 63, item 2).

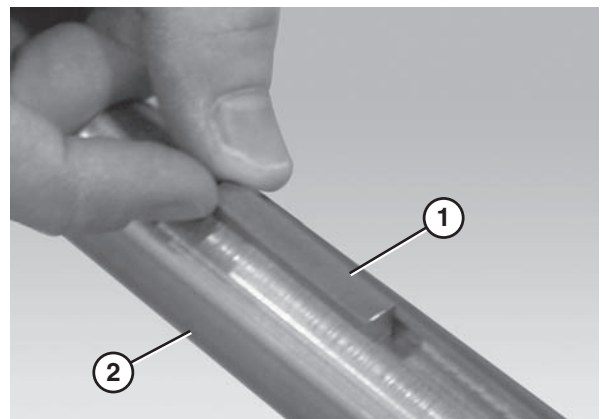


Figure 63

5. Remove the gear reducer mounting posts (Figure 64, item 1) from the nose bar side plate (Figure 64, item 2).

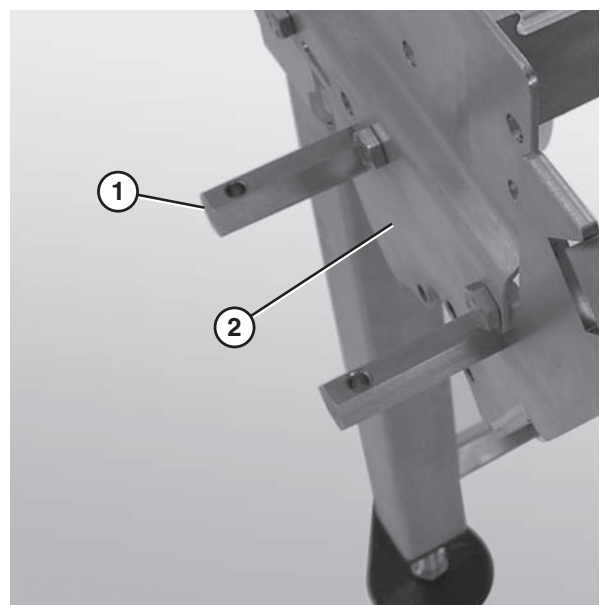


Figure 64

Preventive Maintenance and Adjustment

6. Remove the bearing cover and loosen the 3 hole flange (**Figure 65, item 1**) with bearing fasteners using a hex wrench (**Figure 65, item 2**).

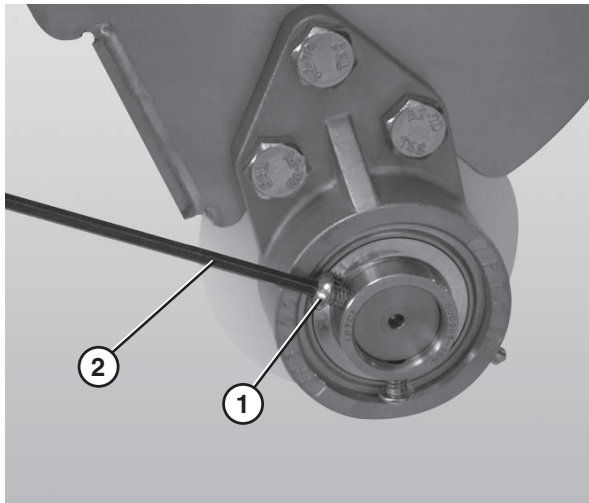


Figure 65

7. Disconnect the 3 hole flange bearing (**Figure 66, item 1**) from the nose bar drive weldment (**Figure 66, item 2**).

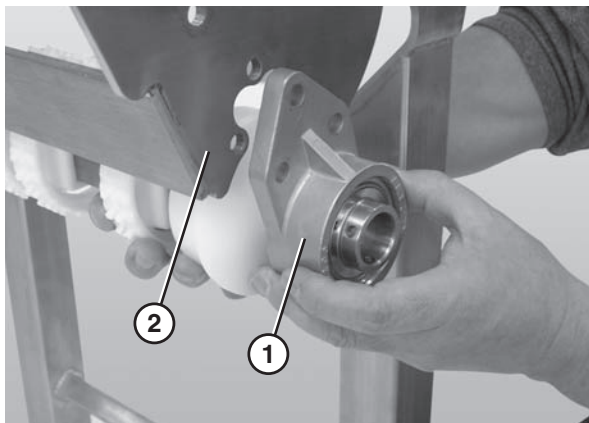


Figure 66

8. Lower the entire drive assembly.
9. Slide the 3 hole flange with bearing (**Figure 67, item 1**) and flanged puck (**Figure 67, item 2**) off the drive spindle.

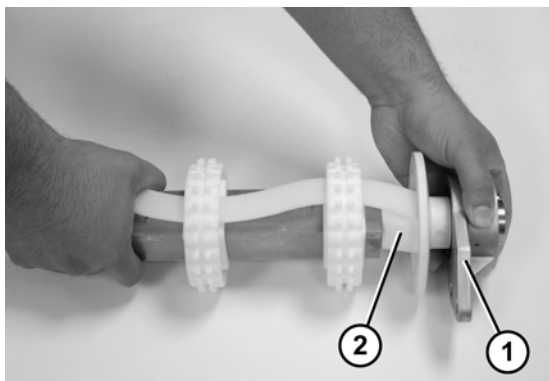


Figure 67

10. Slide the sprockets (**Figure 68, item 1**) and the sprocket alignment bar (**Figure 68, item 2**) off the drive spindle (**Figure 68, item 3**).

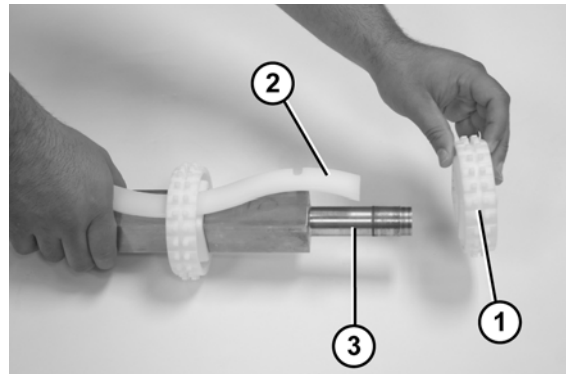


Figure 68

B - Nose Bar Puck Removal

1. Slide the nose bar drive or transfer post (**Figure 69, item 1**) out of the nose bar drive weldment or idler hands (**Figure 69, item 2**).

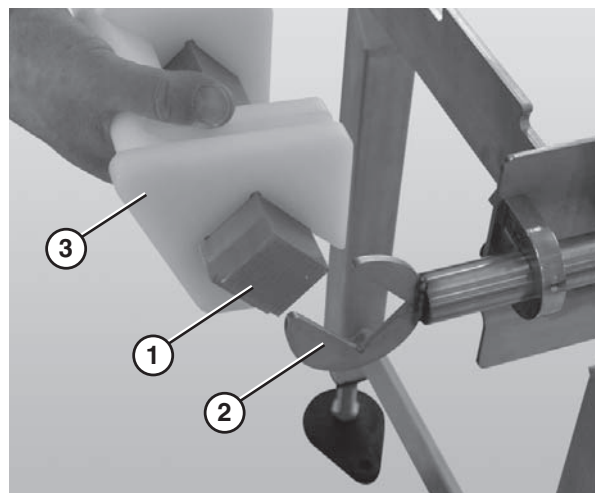


Figure 69

2. Remove the nose bar tracking pucks (**Figure 69, item 3**), if applicable.
3. Remove the nose bar wear strip (**Figure 70, item 3**).

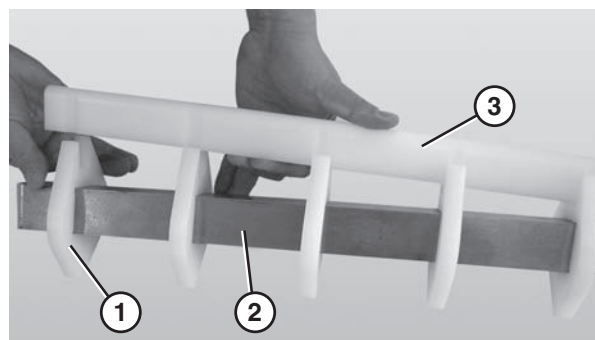


Figure 70

4. Slide the nose bar pucks (**Figure 70, item 1**) off the nose bar shaft (**Figure 70, item 2**).

Preventive Maintenance and Adjustment

C - Idler Puck Removal

1. Remove the pull pins (**Figure 71, item 1**).

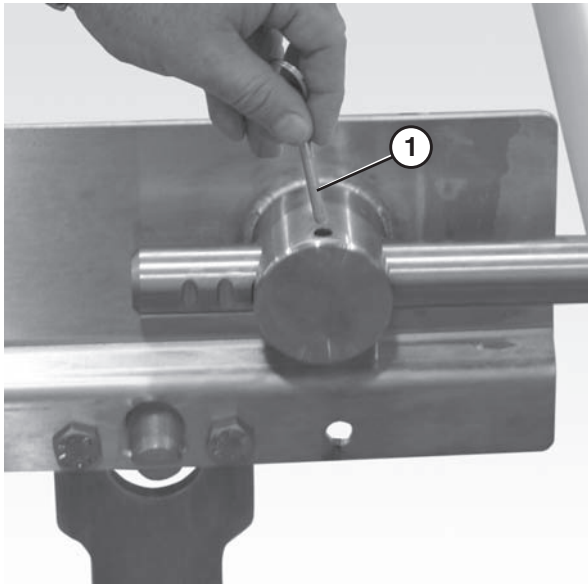


Figure 71

2. Slide the idler tail assembly (**Figure 72, item 1**) out of the take up blocks (**Figure 72, item 2**).

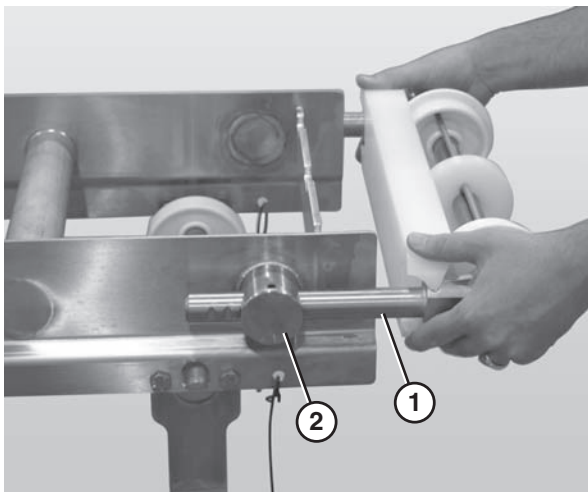


Figure 72

3. Remove the bearing cover (**Figure 73, item 1**).

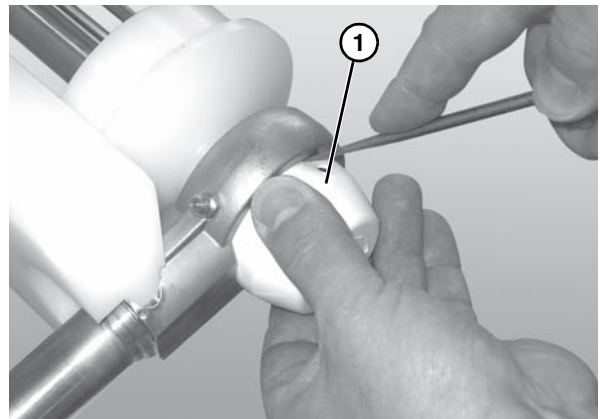


Figure 73

4. Use a hex wrench (**Figure 74, item 1**) to loosen the bearing shaft assembly fasteners (**Figure 74, item 2**).

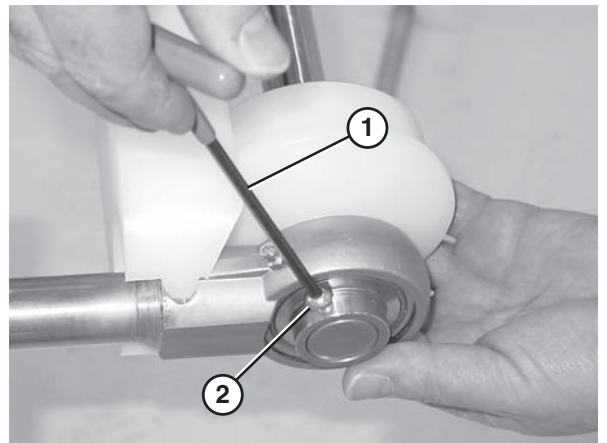


Figure 74

5. Slide the bearing shaft assembly (**Figure 75, item 3**) off the idler shaft.

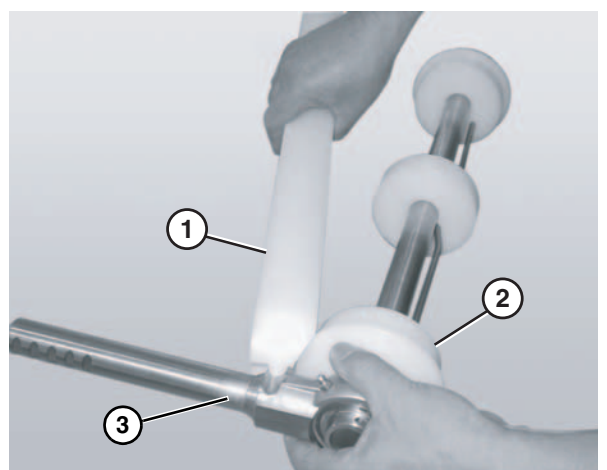


Figure 75

6. Remove the guard bar (**Figure 75, item 1**).
7. Slide the pucks (**Figure 75, item 2**) off the idler shaft.

Preventive Maintenance and Adjustment

Reassembling Tail Assemblies

Refer to the "Service Parts" section starting on page 28 for complete diagrams and lists of all tail assembly components.

Nose Bar Drive Tail

Nose Bar Assembly

1. Slide the nose bar pucks (Figure 76, item 1) onto the nose bar drive post (Figure 76, item 2).

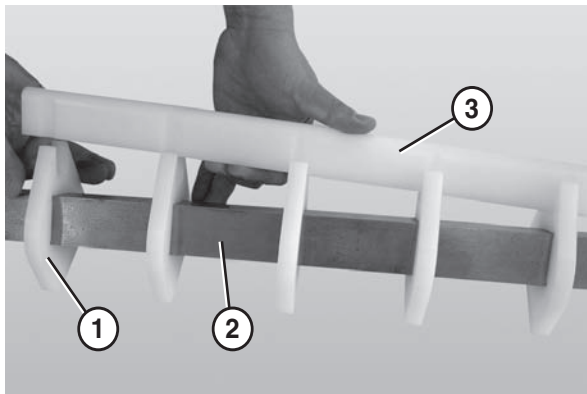


Figure 76

2. Attach the nose bar wear strip (Figure 76, item 3).

Drive Tail Assembly

1. Slide the first sprocket (Figure 77, item 1) onto the drive spindle (Figure 77, item 2).

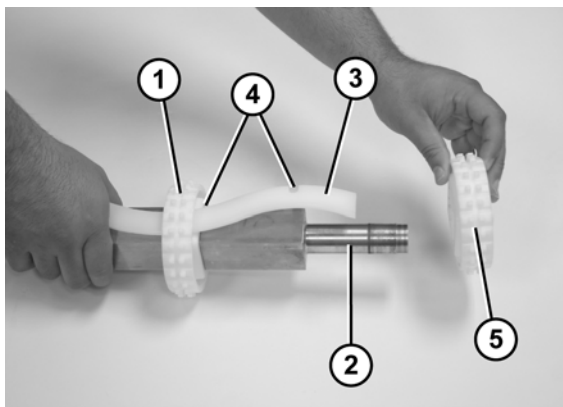


Figure 77

2. Insert the sprocket alignment bar (Figure 77, item 3) into the first sprocket and align the sprocket with the notch (Figure 77, item 4) in the sprocket alignment bar.
3. Slide the remaining sprockets (Figure 77, item 5) onto drive spindle and align each sprocket with the notches (Figure 77, item 4) in the sprocket alignment bar.

4. Attach the flanged pucks (Figure 78, item 1) and the 3 hole flange with bearing (Figure 78, item 2) to the drive spindle.

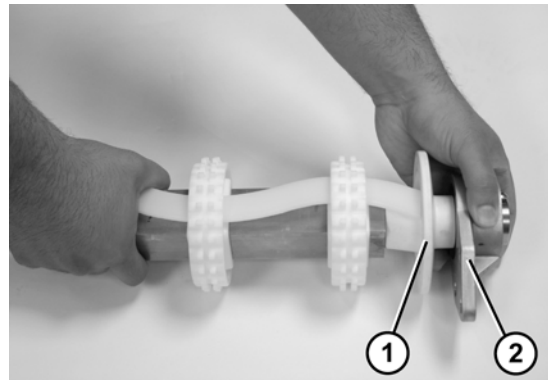


Figure 78

5. Tighten the 3 hole flange with bearing fasteners (Figure 79, item 1) using a hex wrench (Figure 79, item 2) to 6 N•m. Check after 24 hours of conveyor use.

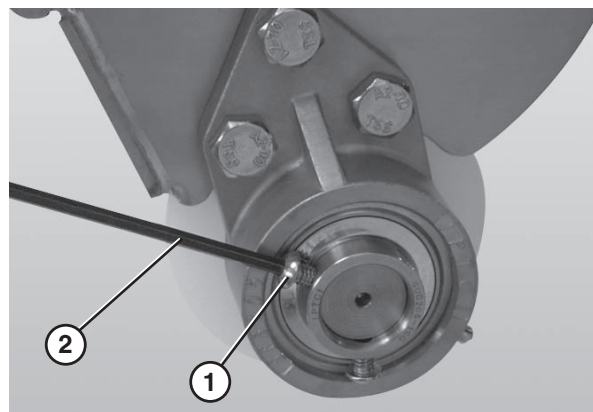


Figure 79

Preventive Maintenance and Adjustment

Nose Bar Idler and Tip Up Tail

1. Slide the nose bar pucks (Figure 80, item 1) onto the nose bar drive post (Figure 80, item 2).

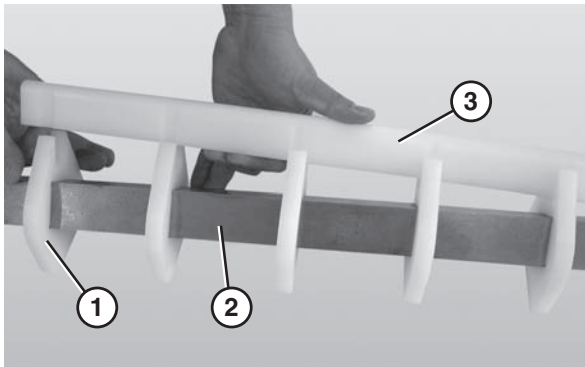


Figure 80

2. Attach the nose bar wear strip (Figure 80, item 3).
3. Attach the nose bar tracking pucks (Figure 81, item 1) to the nose bar drive post (Figure 81, item 2).

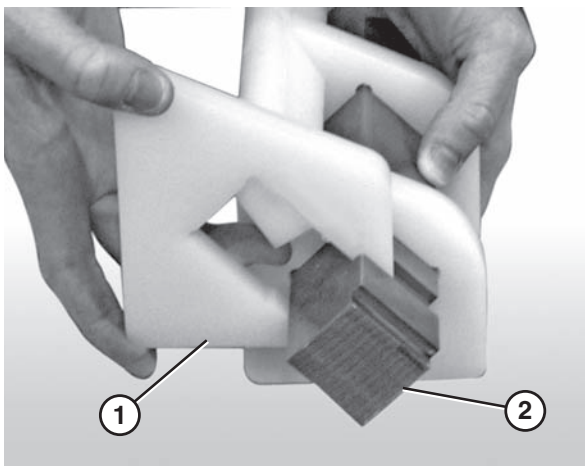


Figure 81

Idler Tail and Tip Up Tail

1. Place the idler puck (Figure 82, item 1) at the center of the bent retaining bar (Figure 82, item 2).
2. Slide the idler puck onto the idler shaft (Figure 82, item 3). Make sure to center the idler puck.

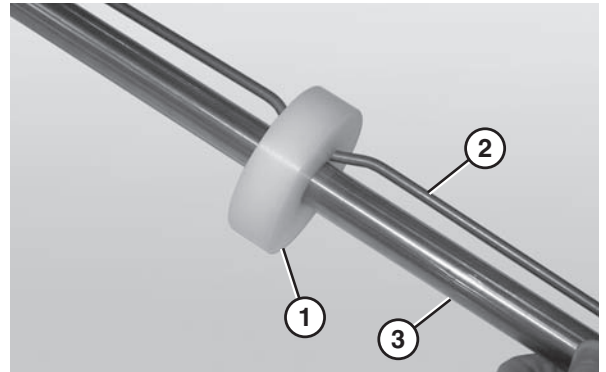


Figure 82

3. Attach the flanged pucks (Figure 83, item 2) and bearing shaft assemblies to the idler shaft.
4. Attach the guard bar (Figure 83, item 1).

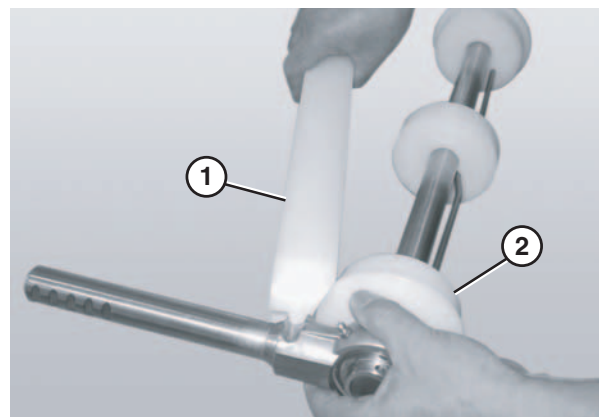


Figure 83

5. Use a hex wrench (Figure 84, item 1) to tighten the bearing shaft fasteners (Figure 84, item 2) to 6 N•m. Check after 24 hours of conveyor use.

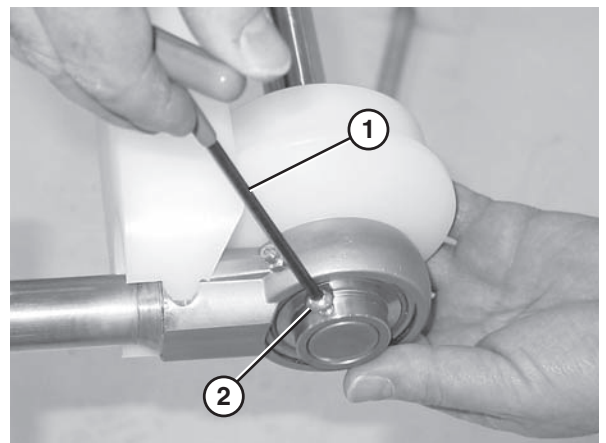


Figure 84

6. Attach the bearing covers.

Preventive Maintenance and Adjustment

Bearing Replacement

1. Secure the bearing shaft in the take up blocks.
2. Insert the rod end of a second bearing shaft through the bearing (**Figure 85**).

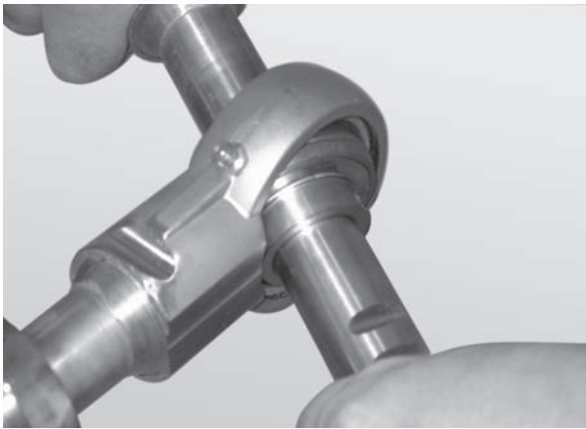


Figure 85

3. Apply lateral pressure to the rod until the bearing comes loose.
4. Remove the worn or damaged bearing (**Figure 86**).

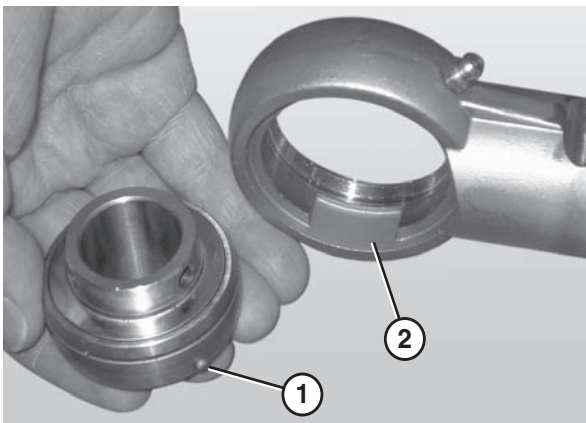


Figure 86

5. Replace the bearing.

NOTE
<i>When inserting the new bearing, make sure the anti-rotation notch (Figure 86, item 1) on the bearing lines up with the groove inside the housing (Figure 86, item 2).</i>

LPZ Knuckles

Wearstrips and Belt Returns


Replace the wearstrips and belt returns if they become worn.

For wearstrip and belt return installation instructions:


- For wearstrips, replace as needed, making sure wear strips are situated securely in the frame slots.
- For belt returns, Refer to “Belt Return Installation” on page 15.

Service Parts

NOTE

For replacement parts other than those shown in this section, contact an authorized Dorner Service Center or the factory. Key Service Parts and Kits are identified by the Performance Parts Kits logo . Dorner recommends keeping these parts on hand.

Nose Bar Drive End Components

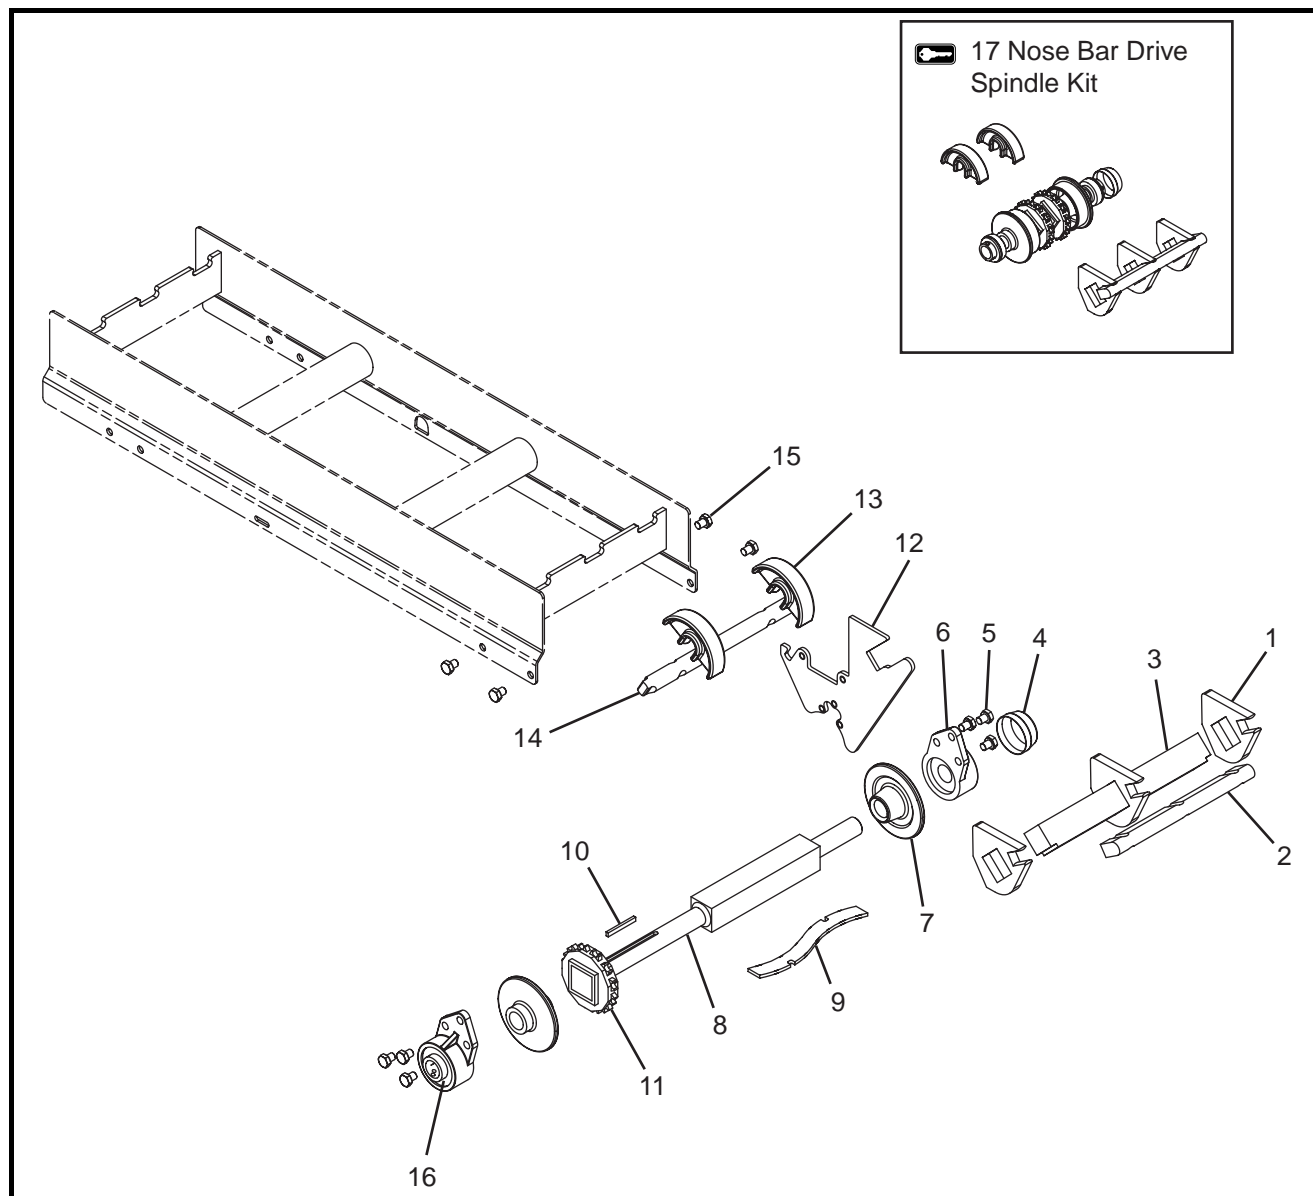

Item	Part Number	Description
1	500278	Nose Bar Puck
2	<u>5055WW</u>	.5" Pitch Nose Bar Wear Strip
	<u>5057WW</u>	1" Pitch Nose Bar Wear Strip
3	<u>5038WW</u>	Nose Bar Drive Post
4	807-1454	Cover
5	961016MSS	Hex Head Cap Screw M10-1.5x16mm
6	500288	3 Hole Flange with Bearing


Item	Part Number	Description
7	<u>5053WW</u>	Flange Puck for Standard Belt
	<u>5071WW</u>	Flange Puck for Specialty Intralox Belt
8	<u>5295WW</u>	Drive Spindle for Standard Belt
	<u>5294WW</u>	Drive Spindle for Specialty Intralox Belt
9	<u>5086WW</u>	Sprocket Alignment Bar for Standard .50" Pitch Belt
	<u>5087WW</u>	Sprocket Alignment Bar for Specialty Intralox .60" Pitch Belt

Item	Part Number	Description
10	912-111SS	Square Key .25" x 2.50"
11	807-1443	Sprocket for Standard .50" Pitch Belt
	807-1446	Sprocket for Specialty Intralox .60" Pitch Belt
12	500279	Nose Bar Drive Plate
13	500075	Chain Return
14	5039WW	Return Shaft
15	961012MSS	Hex Head Cap Screw M10-1.5x12mm
16	802-162	Bearing
17	74NBDD12-WW	Nose Bar Drive Spindle Kit with a Dorner Gearmotor Mounting Package for Standard .50" Pitch Belt (Includes Items 1, 2, 4, 7, 11, 13 and 16)
	74NBDD11-WW	Nose Bar Drive Spindle Kit with a Dorner Gearmotor Mounting Package for Specialty Intralox .60" Pitch Belt (Includes Items 1, 2, 4, 7, 11, 13 and 16)
	74NBDC12-WW	Nose Bar Drive Spindle Kit without a Dorner Gearmotor Mounting Package for Standard .50" Pitch Belt (Includes Items 1, 2, 4, 7, 11, 13 and 16)
	74NBDC11-WW	Nose Bar Drive Spindle Kit without a Dorner Gearmotor Mounting Package for Specialty Intralox .60" Pitch Belt (Includes Items 1, 2, 4, 7, 11, 13 and 16)
WW = Conveyor width ref: 06 - 60 in 02 increments		

Sprocket Quantity (Item 11)	
Width	Sprocket Quantity
152 mm	2
203 mm	2
254 mm	3
305 mm	3
356 mm	4
406 mm	4
457 mm	5
508 mm	5
559 mm	6
610 mm	6
660 mm	7
711 mm	7
762 mm	8
813 mm	8
864 mm	9
914 mm	9
965 mm	10
1016 mm	10
1067 mm	11
1118 mm	11
1168 mm	12
1219 mm	12
1270 mm	13
1321 mm	13
1372 mm	14
1422 mm	14
1473 mm	15
1524 mm	15

Service Parts


Nose Bar Tension End

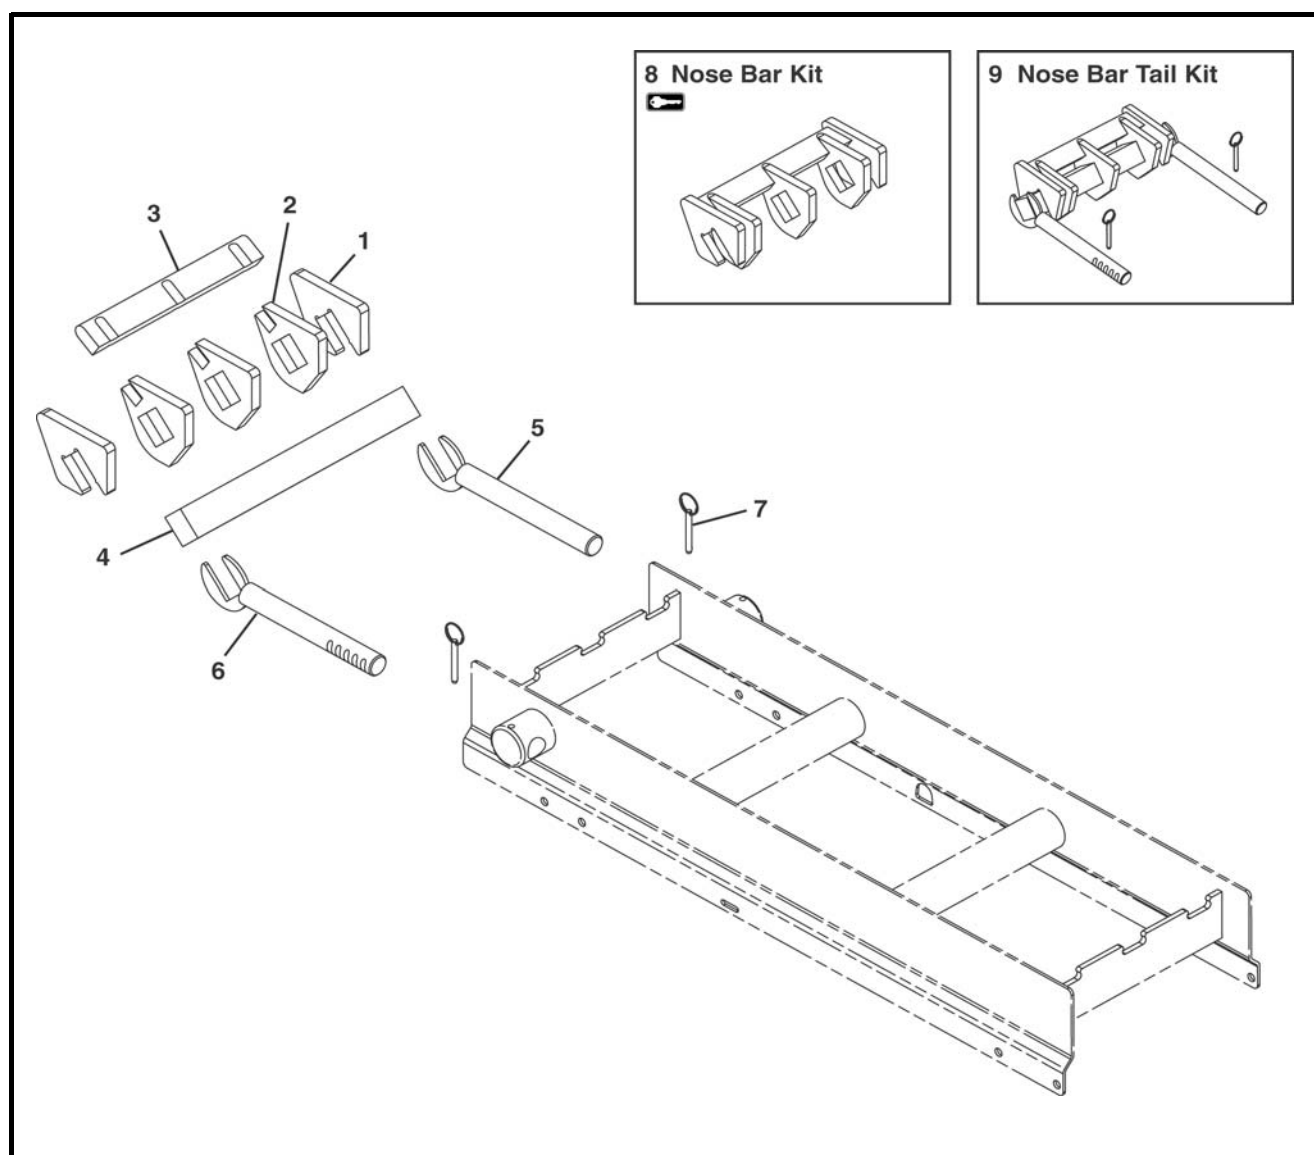

Item	Part Number	Description
1	500490	Nose Bar Tracking Puck
2	500278	Nose Bar Puck
3	5056 WW	.5" Pitch Nose Bar Wear Strip
	5058 WW	1" Pitch Nose Bar Wear Strip
4	5037 WW	Nose Bar Transfer Post for Standard Belt
	5076 WW	Nose Bar Transfer Post for Specialty Intralox Belt
5	500487	Nose Bar Idler Shaft Left Hand
6	500488	Nose Bar Idler Shaft Right Hand
7	807-1469	Pull Pin
8	74NB5- WW	.5" Nose Bar Kit (Includes Items 1 through 3)
	74NB1- WW	1" Nose Bar Kit (Includes Items 1 through 3)

Item	Part Number	Description
9	74NBT5- WW	.5" Nose Bar Tail Kit, for Standard Belt (Includes Items 1 through 6)
	74NBT1- WW	1" Nose Bar Tail Kit, for Standard Belt (Includes Items 1 through 6)
	74NBT5S- WW	.5" Nose Bar Tail Kit, for Specialty Intralox Belt (Includes Items 1 through 6)
	74NBT1S- WW	1" Nose Bar Tail Kit, for Specialty Intralox Belt (Includes Items 1 through 6)
WW = Conveyor width ref: 06 - 60 in 02 increments		

Nose Bar Tip Up Tension End

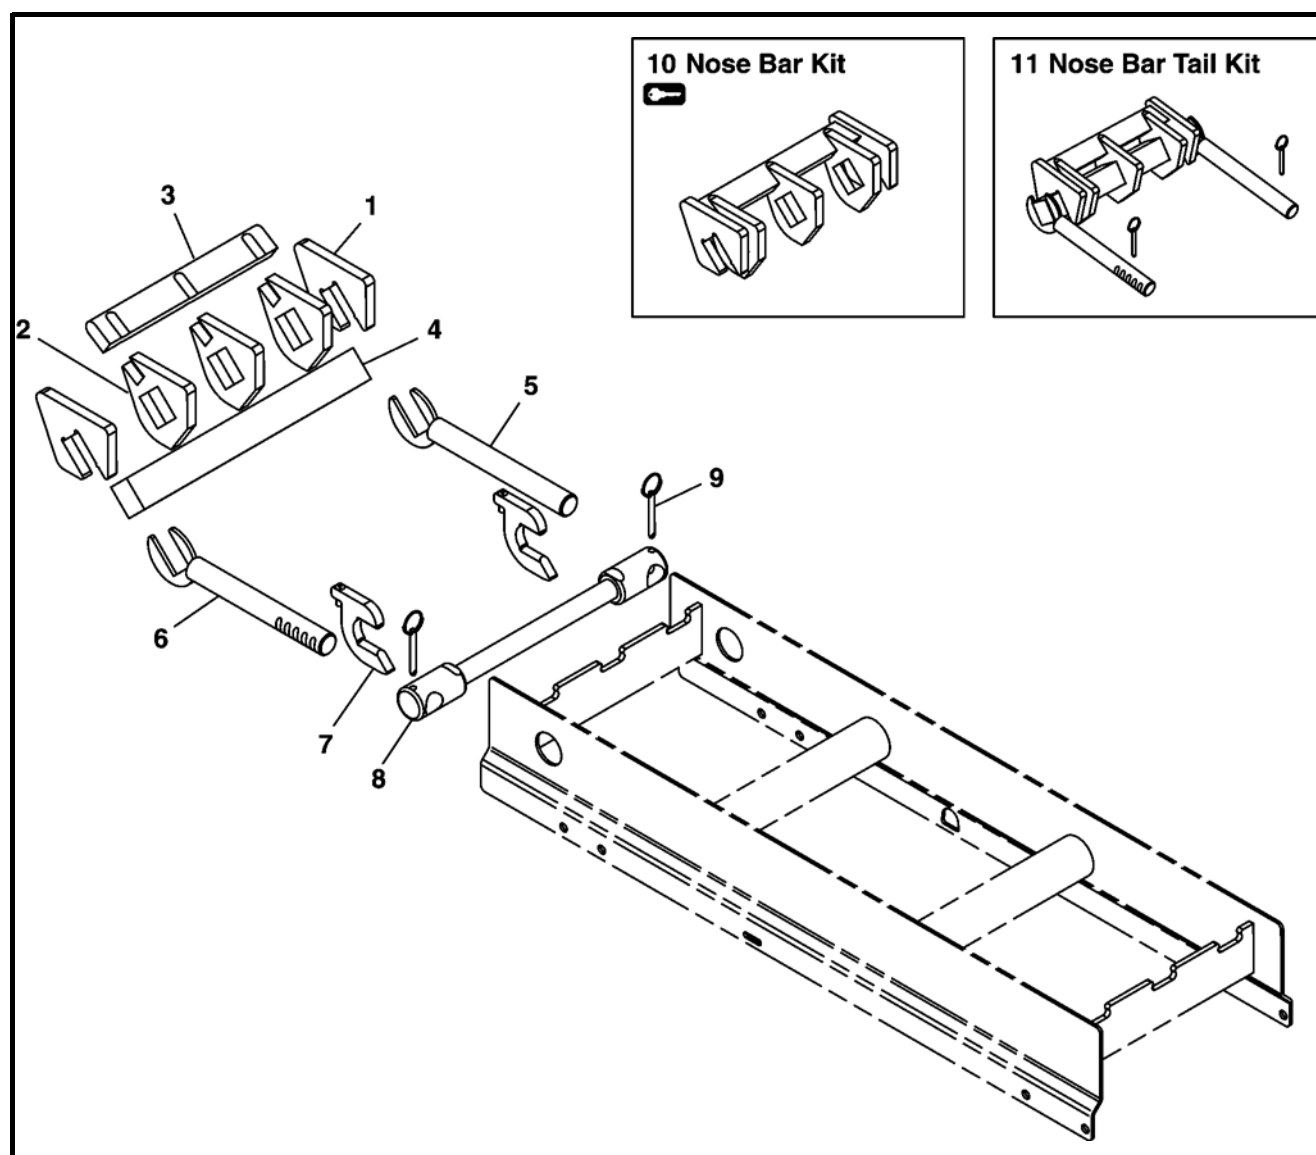


Item	Part Number	Description
1	500490	Nose Bar Tracking Puck
2	500278	Nose Bar Puck
3	5056 WW	.5" Pitch Nose Bar Wear Strip
	5058 WW	1" Pitch Nose Bar Wear Strip
4	5037 WW	Nose Bar Transfer Post for Standard Belt
	5076 WW	Nose Bar Transfer Post for Specialty Intralox Belt
5	500487	Nose Bar Idler Shaft Left Hand
6	500488	Nose Bar Idler Shaft Right Hand
7	500675	Key Stop
8	5005 WW	Tip Up Shaft Assembly

Item	Part Number	Description
9	807-1469	Pull Pin
10	74NB5- WW	.5" Nose Bar Kit (Includes Items 1 through 3)
	74NB1- WW	1" Nose Bar Kit (Includes Items 1 through 3)
11	74NBT5- WW	.5" Nose Bar Tail Kit, for Standard Belt (Includes Items 1 through 6)
	74NBT1- WW	1" Nose Bar Tail Kit, for Standard Belt (Includes Items 1 through 6)
	74NBT5S- WW	.5" Nose Bar Tail Kit, for Specialty Intralox Belt (Includes Items 1 through 6 and 9)
	74NBT1S- WW	1" Nose Bar Tail Kit, for Specialty Intralox Belt (Includes Items 1 through 6 and 9)

~~WW~~ = Conveyor width ref: 06 - 60 in 02 increments

Service Parts

Tension End Components

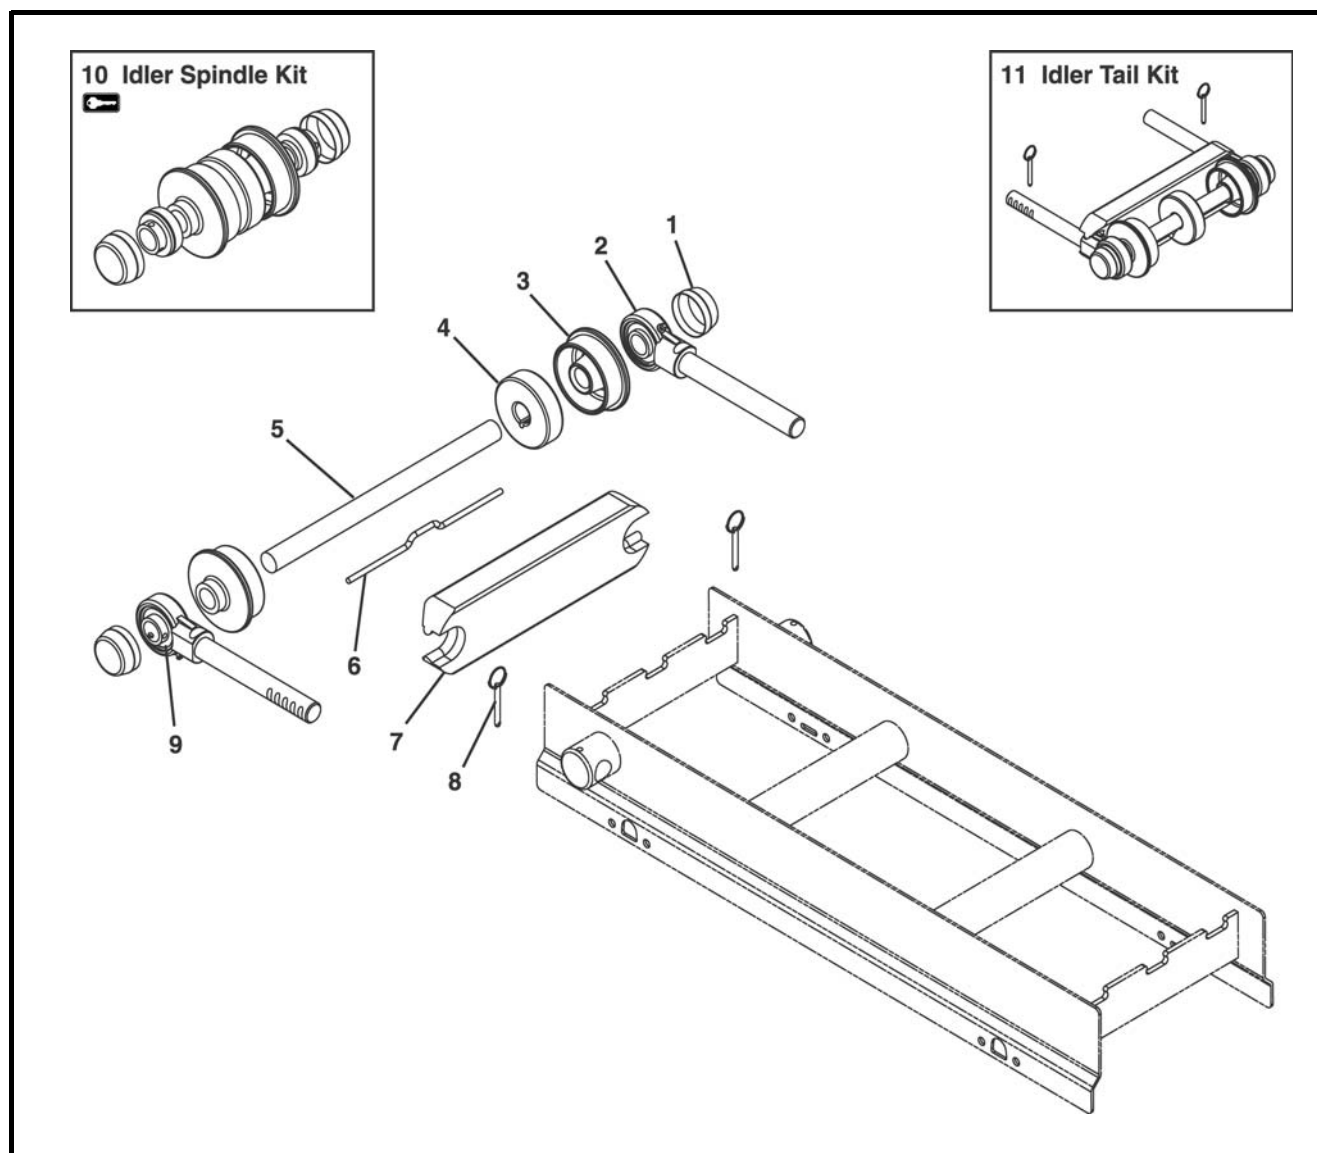


Item	Part Number	Description
1	807-1454	Bearing Cover
2	500079	Shaft Assembly with Bearing
3	5017 WW	Flanged Puck, Idler Tail for Standard Belt
	5072 WW	Flanged Puck, Idler Tail for Specialty Intralox Belt
4	500175	Idler Puck (for 8" - 60" wide conveyors only)
5	5007 WW	Idler Shaft
6	5008 WW	Bent Retaining Bar for Standard Belt (for 8" - 60" wide conveyors only)
	5073 WW	Bent Retaining Bar for Specialty Intralox Belt (for 8" - 60" wide conveyors only)

Item	Part Number	Description
7	5009 WW	Guard Bar
8	807-1469	Pull Pin
9	802-162	Bearing
10	74I- WW	Idler Spindle Kit for Standard Belt (Includes Items 1, 3, 4 and 9)
	74IS- WW	Idler Spindle Kit for Specialty Intralox Belt (Includes Items 1, 3, 4 and 9)
11	74IT- WW	Idler Tail Kit for Standard Belt (Includes Items 1 through 8)
	74ITS- WW	Idler Tail Kit for Specialty Intralox Belt (Includes Items 1 through 8)

~~WW~~ = Conveyor width ref: 06 - 60 in 02 increments

Tip Up Tension End

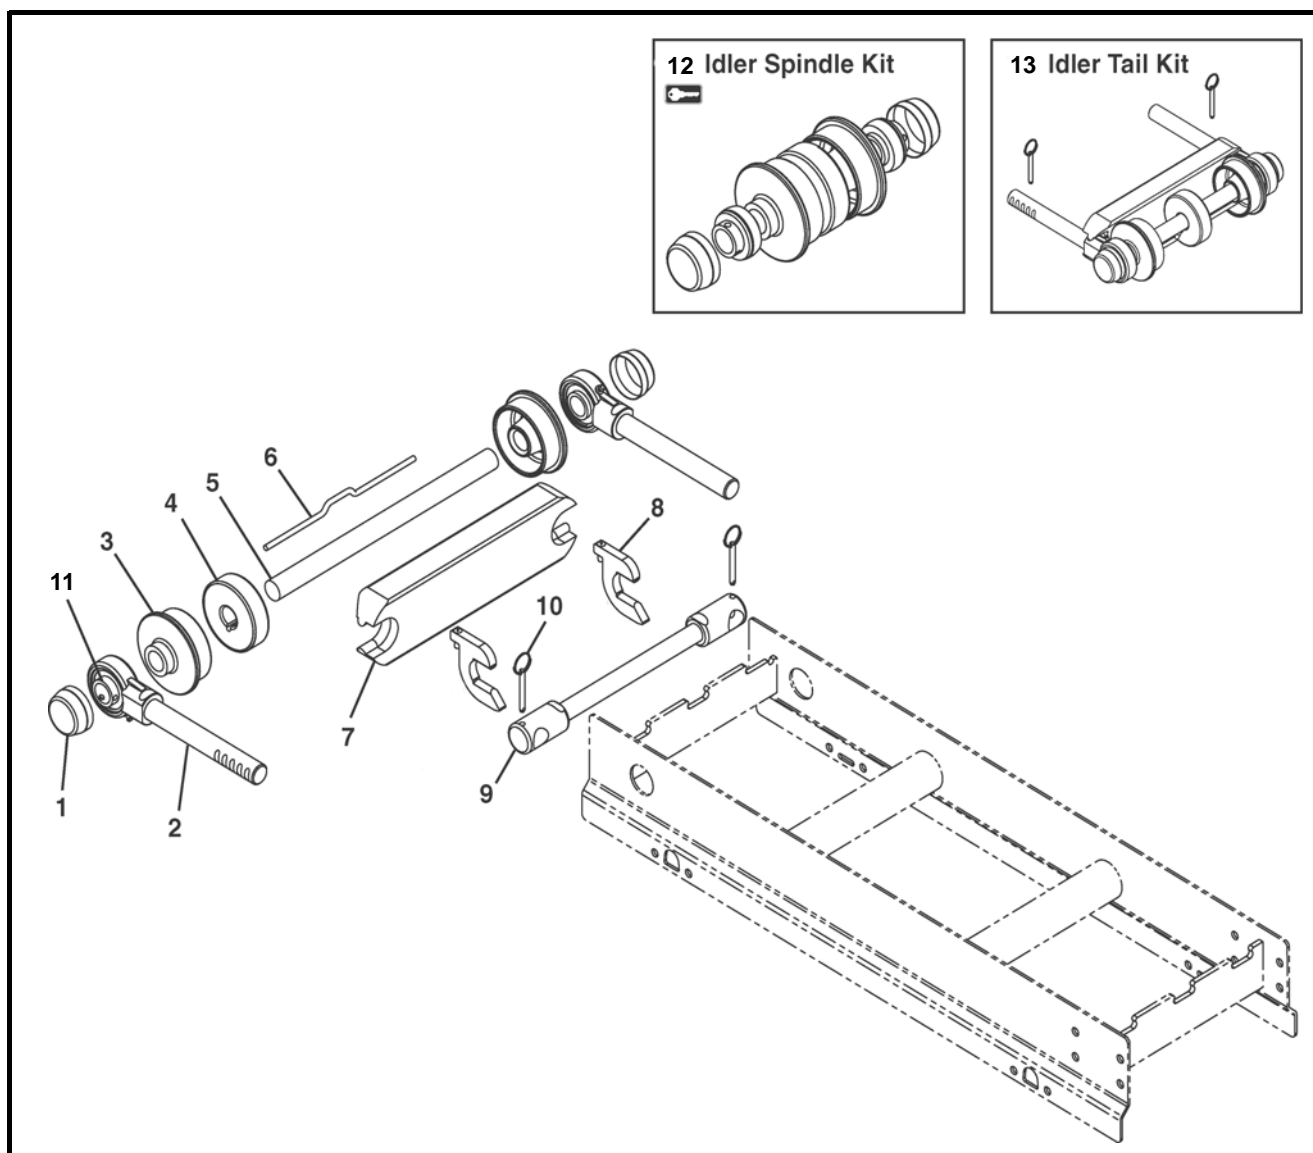


Item	Part Number	Description
1	807-1454	Bearing Cover
2	500079	Shaft Assembly with Bearing
3	5017 WW	Flanged Puck, Idler Tail for Standard Belt
	5072 WW	Flanged Puck, Idler Tail for Specialty Intralox Belt
4	500175	Idler Puck (for 8" - 60" wide conveyors only)
5	5007 WW	Idler Shaft
6	5008 WW	Bent Retaining Bar for Standard Belt (for 8" - 60" wide conveyors only)
	5073 WW	Bent Retaining Bar for Specialty Intralox Belt (for 8" - 60" wide conveyors only)
7	5009 WW	Guard Bar
8	500675	Key Stop
9	5005 WW	Tip Up Shaft Assembly

Item	Part Number	Description
10	807-1469	Pull Pin
11	802-162	Bearing
12	74I- WW	Idler Spindle Kit for Standard Belt (Includes Items 1, 3, 4 and 11)
	74IS- WW	Idler Spindle Kit for Specialty Intralox Belt (Includes Items 1, 3, 4 and 11)
13	74IT- WW	Idler Tail Kit for Standard Belt (Includes Items 1 through 7 and 10)
	74ITS- WW	Idler Tail Kit for Specialty Intralox Belt (Includes Items 1 through 7 and 10)

~~WW~~ = Conveyor width ref: 06 - 60 in 02 increments

Service Parts


Upper Knuckle for 5° - 15°

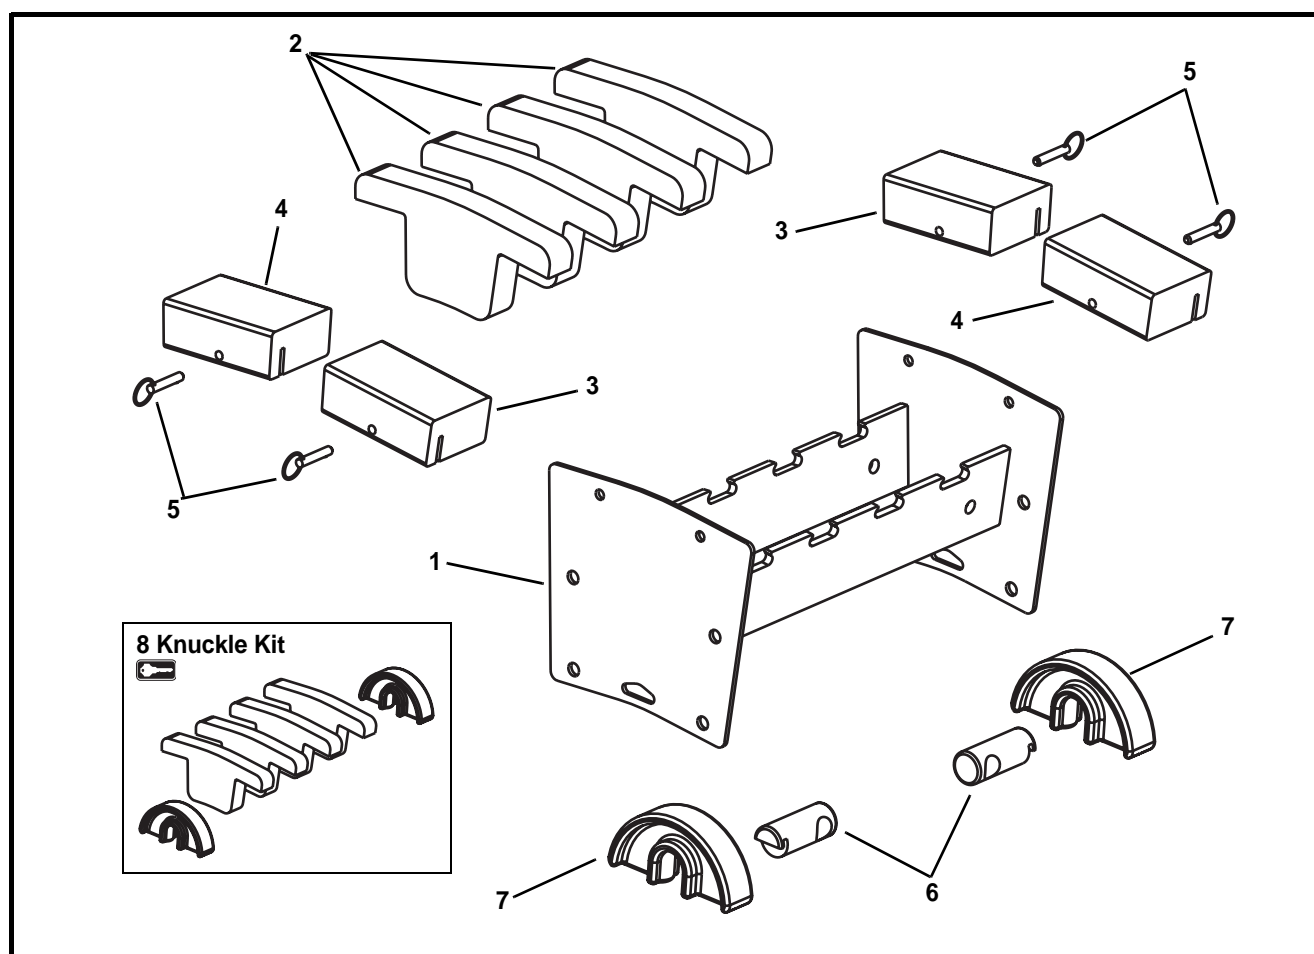

Item	Part Number	Description
1	5224 <u>WW</u>	Frame Assembly for 5° Knuckle
	5225 <u>WW</u>	Frame Assembly for 10° Knuckle
	5226 <u>WW</u>	Frame Assembly for 15° Knuckle
2	501695- <u>AA</u>	Wear Strips for 5° - 15° Knuckle
3	501893- <u>AA</u>	38 mm Hold Down Guide for 5° - 15° Knuckle Right Hand 6"-16" wide
	501685- <u>AA</u>	38 mm Hold Down Guide for 5° - 15° Knuckle Right Hand 18"-24" wide
	501883- <u>AA</u>	76 mm Hold Down Guide for 5° - 15° Knuckle Right Hand 6"-16" wide
	501684- <u>AA</u>	76 mm Hold Down Guide for 5° - 15° Knuckle Right Hand 18"-24" wide

Item	Part Number	Description
4	501699- <u>AA</u>	38 mm Hold Down Guide for 5° - 15° Knuckle Left Hand 6"-16" wide
	501687- <u>AA</u>	38 mm Hold Down Guide for 5° - 15° Knuckle Left Hand 18"-24" wide
	501698- <u>AA</u>	76 mm Hold Down Guide for 5° - 15° Knuckle Left Hand 6"-16" wide
	501686- <u>AA</u>	76 mm Hold Down Guide for 5° - 15° Knuckle Left Hand 18"-24" wide
5	807-1553	Pull Pin
6	500196	Return Shaft
7	500075	Return Shoe
8	74UKL- <u>WW-AA</u>	Upper Knuckle Kit (Includes items 2 and 7)
<u>WW</u> = Conveyor width ref: 06 - 24 in 02 increments		
<u>AA</u> = Angle 05, 10 or 15		

Upper Knuckle for 30°

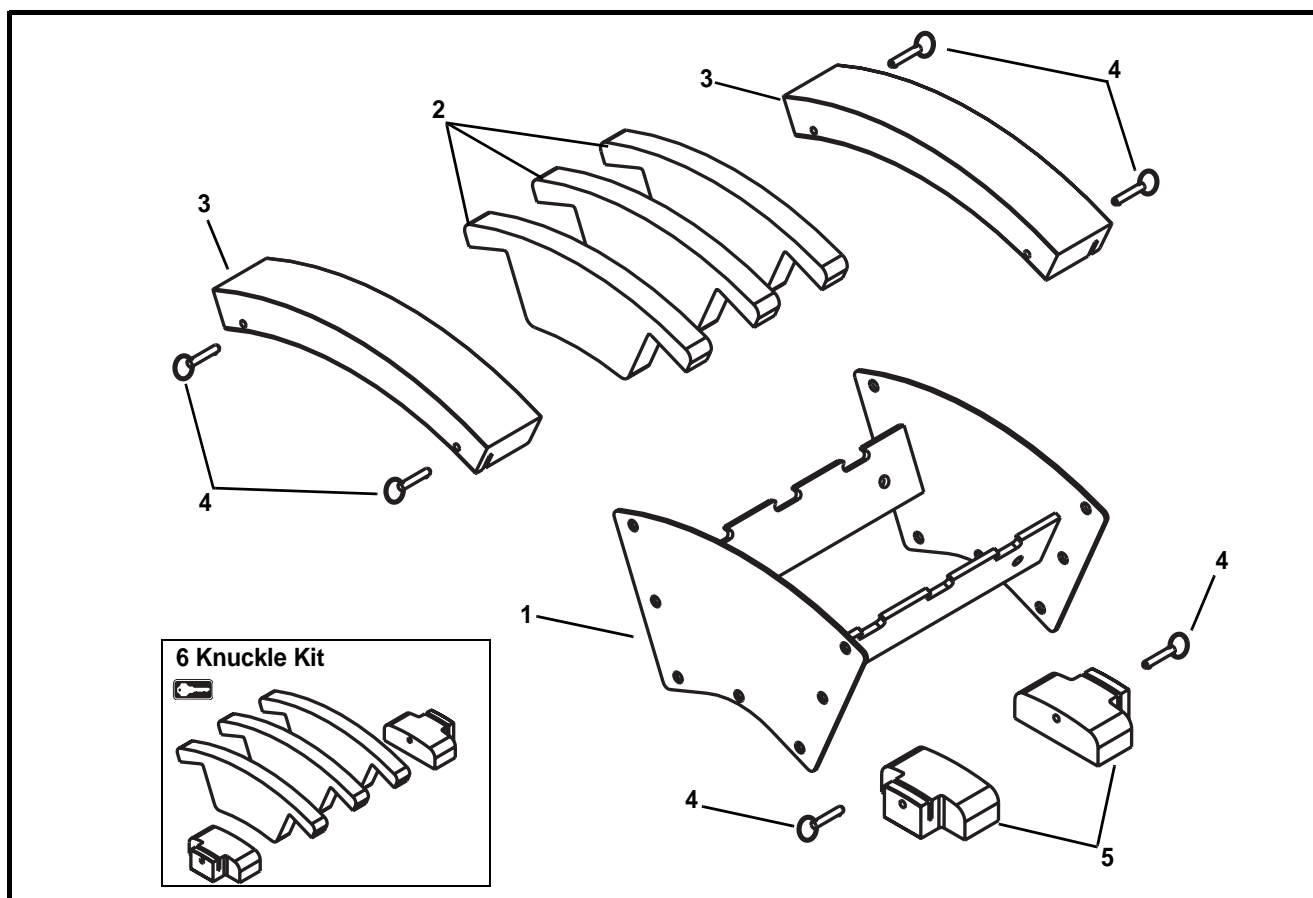


Item	Part Number	Description
1	5227 <u>WW</u>	Frame Assembly for 30° Knuckle
2	501693-30	Wear Strips for 30° Knuckle
3	501697-30	38 mm Hold Down Guide for 30° Knuckle
	501879-30	76 mm Hold Down Guide for 30° Knuckle

Item	Part Number	Description
4	807-1553	Pull Pin
5	501683	Return Guide
6	74UKH- <u>WW</u> -30	Upper Knuckle Kit (Includes items 2 and 5)

WW = Conveyor width ref: 06 - 24 in 02 increments

Service Parts


Lower Knuckle for 5° - 15°

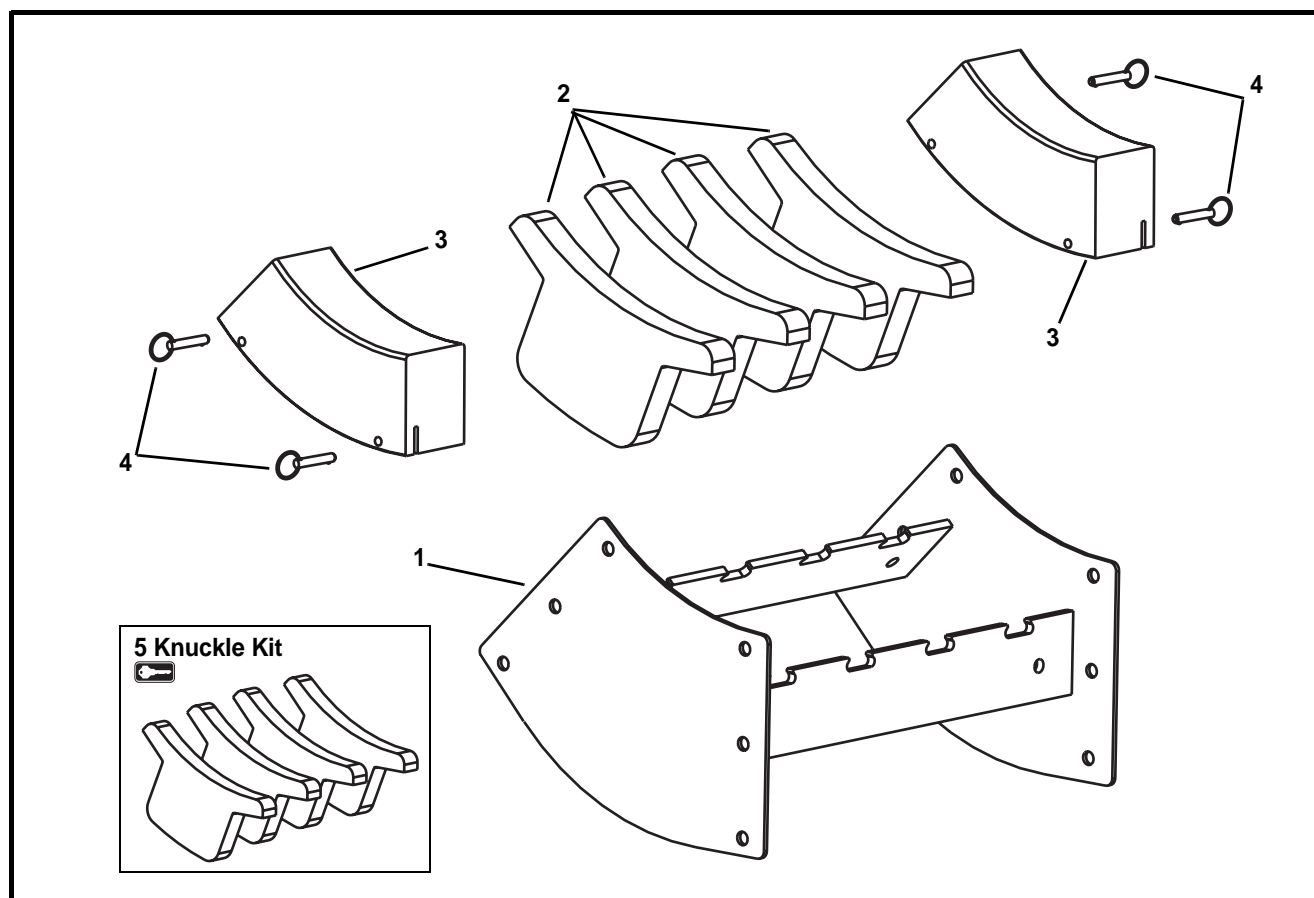

Item	Part Number	Description
1	5218 <u>WW</u>	Frame Assembly for 5° Knuckle
	5219 <u>WW</u>	Frame Assembly for 10° Knuckle
	5220 <u>WW</u>	Frame Assembly for 15° Knuckle
2	501694- <u>AA</u>	Wear Strips for 5° - 15° Knuckle
3	501692- <u>AA</u>	38 mm Hold Down Guide for 5° - 15° Knuckle 6"-16" wide
	501974- <u>AA</u>	38 mm Hold Down Guide for 5° - 15° Knuckle 18"-24" wide
	501878- <u>AA</u>	76 mm Hold Down Guide for 5° - 15° Knuckle 6"-16" wide
	501973- <u>AA</u>	76 mm Hold Down Guide for 5° - 15° Knuckle 18"-24" wide

Item	Part Number	Description
4	807-1553	Pull Pin
5	74LKL- <u>WW</u> - <u>AA</u>	Lower Knuckle Kit (Includes item 2)
<u>WW</u> = Conveyor width ref: 06 - 24 in 02 increments		
<u>AA</u> = Angle 05, 10 or 15		

Lower Knuckle for 30°

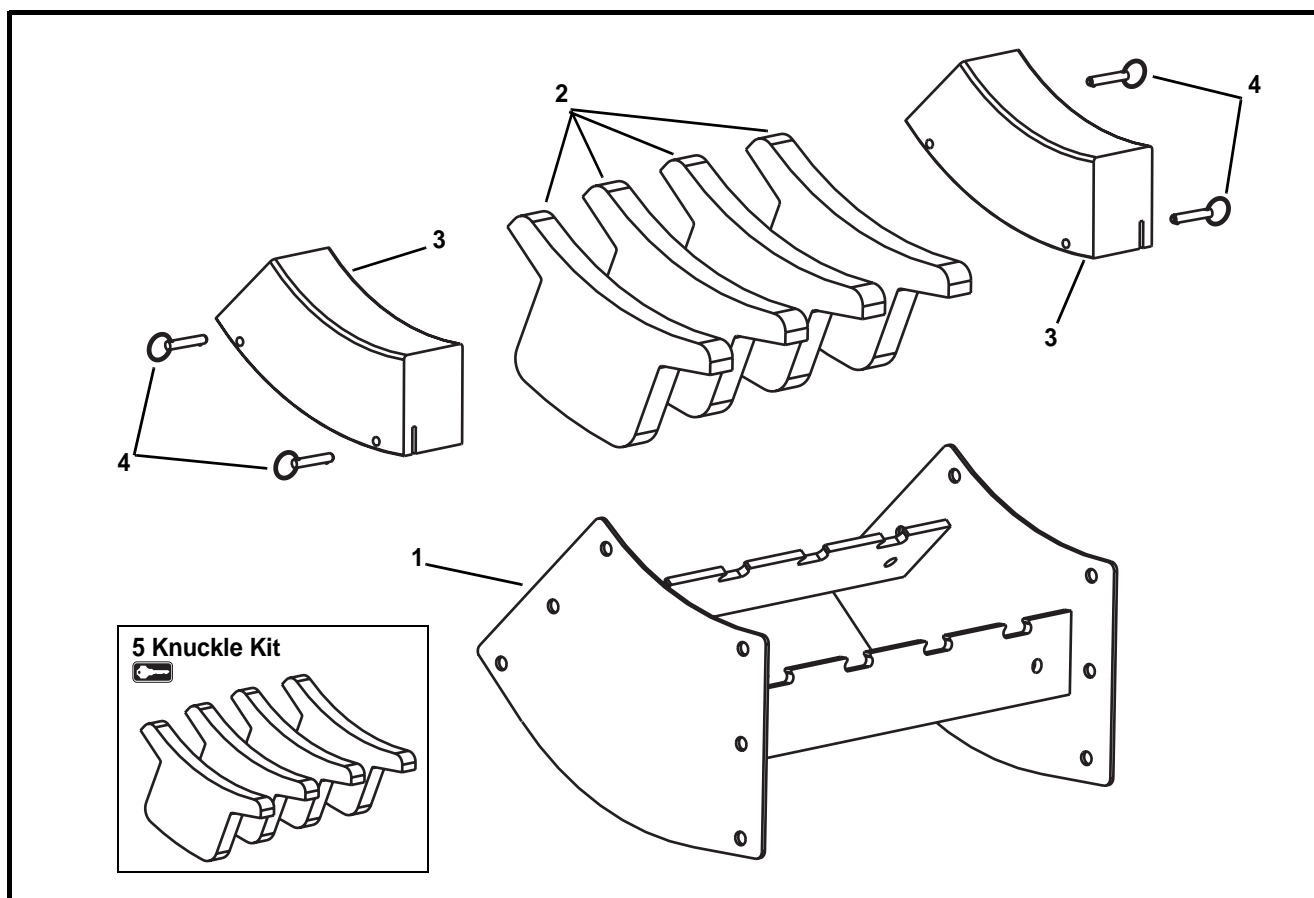


Item	Part Number	Description
1	5221 <u>WW</u>	Frame Assembly for 30° Knuckle
2	501691-30	Wear Strips for 30° Knuckle
3	501692-30	38 mm Hold Down Guide, for 30° Knuckle
	501878-30	76 mm Hold Down Guide, for 30° Knuckle

Item	Part Number	Description
4	807-1553	Pull Pin
5	74LKH- <u>WW</u> -30	Lower Knuckle Kit (Includes item 2)

WW = Conveyor width ref: 06 - 24 in 02 increments

Service Parts

Conveyor Frame and Extension

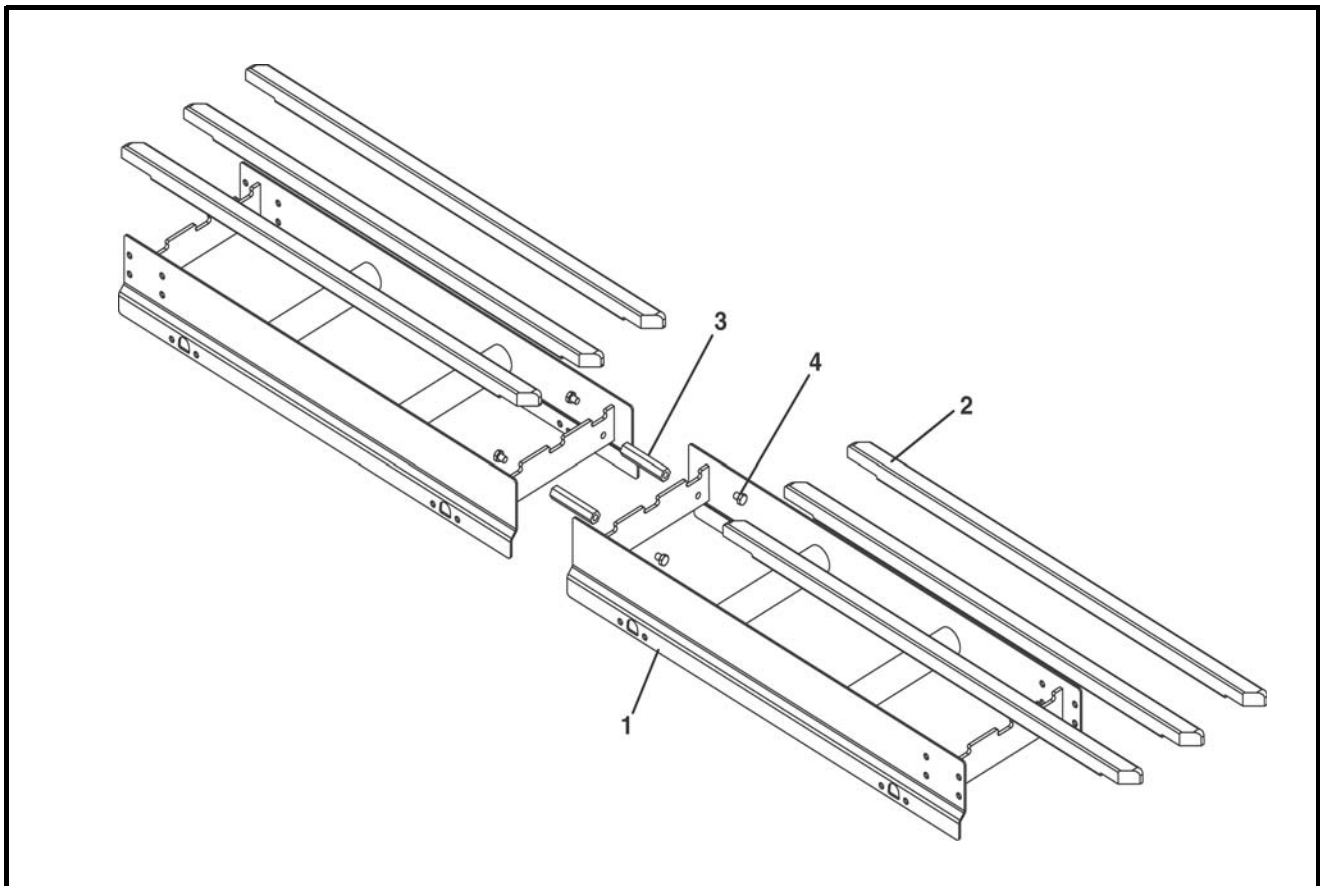


Item	Part Number	Description
1	-----	Consult Factory for Frame Part Number
2	501800-LLL	Straight Wear Strip
3	500193	Hex Post Connector
4	961016MSS	Hex Head Cap Screw M10-1.5x16mm

LLL = Conveyor length ref: 036 - 999 in 001 increments

Wear Strip Quantity (Item 2)									
		Conveyor Length (LLL)							
		036-132	133-252	253-372	373-492	493-612	613-732	733-852	853-999
Conveyor Width (WW)	06	2	4	6	8	10	12	14	16
	08	2	4	6	8	10	12	14	16
	10	3	6	9	12	15	18	21	24
	12	3	6	9	12	15	18	21	24
	14	3	6	9	12	15	18	21	24
	16	4	8	12	16	20	24	28	32
	18	4	8	12	16	20	24	28	32
	20	5	10	15	20	25	30	35	40
	22	5	10	15	20	25	30	35	40
	24	5	10	15	20	25	30	35	40

Wear Strip Quantity (Item 2)									
		Conveyor Length (LLL)							
		036-132	133-252	253-372	373-492	493-612	613-732	733-852	853-999
Conveyor Width (WW)	26	6	12	18	24	30	36	42	48
	28	6	12	18	24	30	36	42	48
	30	6	12	18	24	30	36	42	48
	32	7	14	21	28	35	42	49	56
	34	7	14	21	28	35	42	49	56
	36	8	16	24	32	40	48	56	64
	38	8	16	24	32	40	48	56	64
	40	8	16	24	32	40	48	56	64
	42	9	18	27	36	45	54	63	72
	44	9	18	27	36	45	54	63	72
	46	9	18	27	36	45	54	63	72
	48	10	20	30	40	50	60	70	80
	50	10	20	30	40	50	60	70	80
	52	11	22	33	44	55	66	77	88
	54	11	22	33	44	55	66	77	88
	56	11	22	33	44	55	66	77	88
	58	12	24	36	48	60	72	84	96
	60	12	24	36	48	60	72	84	96

76 mm High Sides

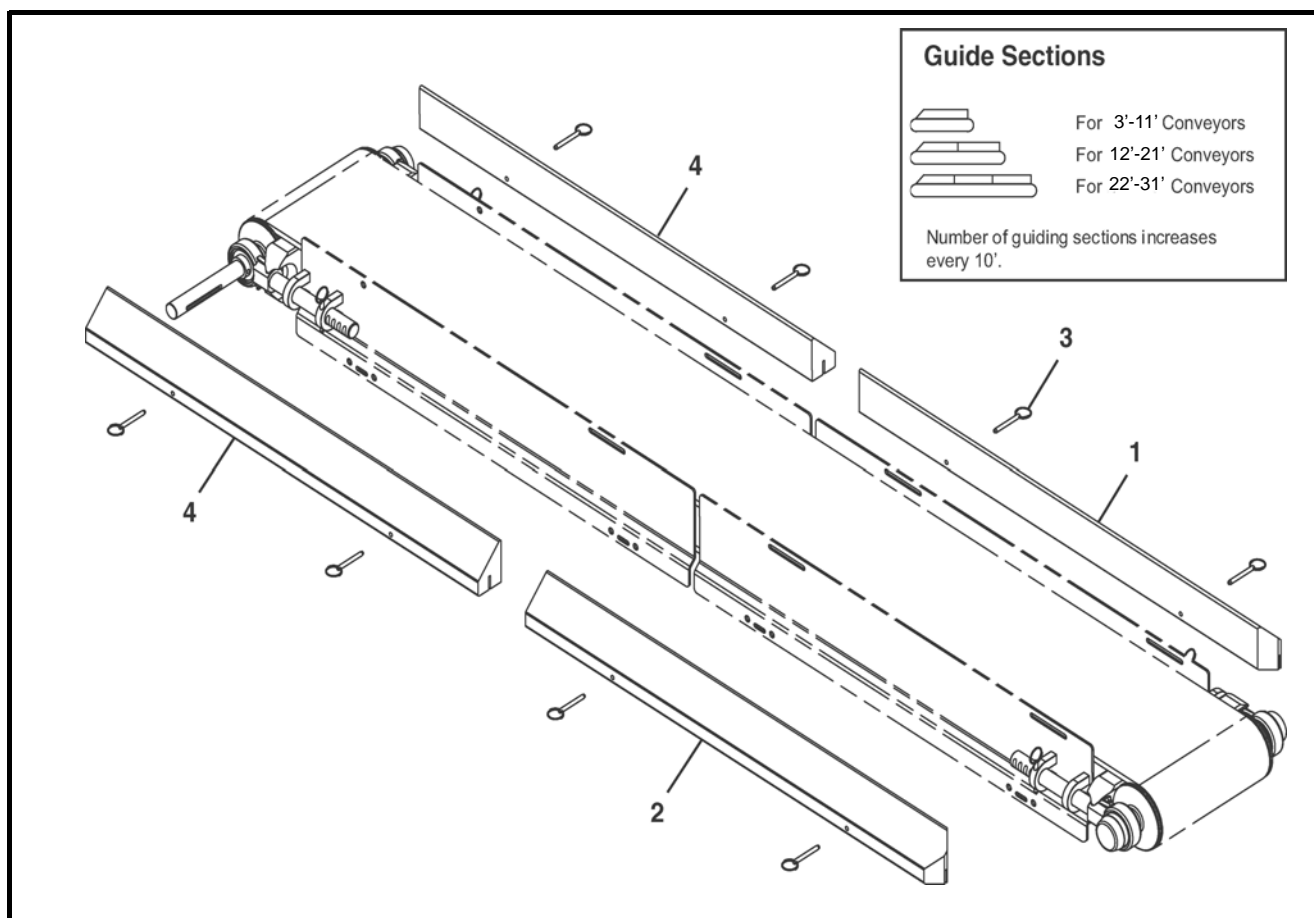


Item	Part Number	Description
1	503501-LLLLL	Right Hand High Side Guide
2	503601-LLLLL	Left Hand High Side Guide
3	807-1553	Pull Pin

Item	Part Number	Description
4	503401-LLLLL	Square End High Side Guide
LLLLL = Guide Length in inches with 2 decimal places.		
Example: Guide Length = 95.25" LLLLL = 09525		

Service Parts

Flat Belt Returns

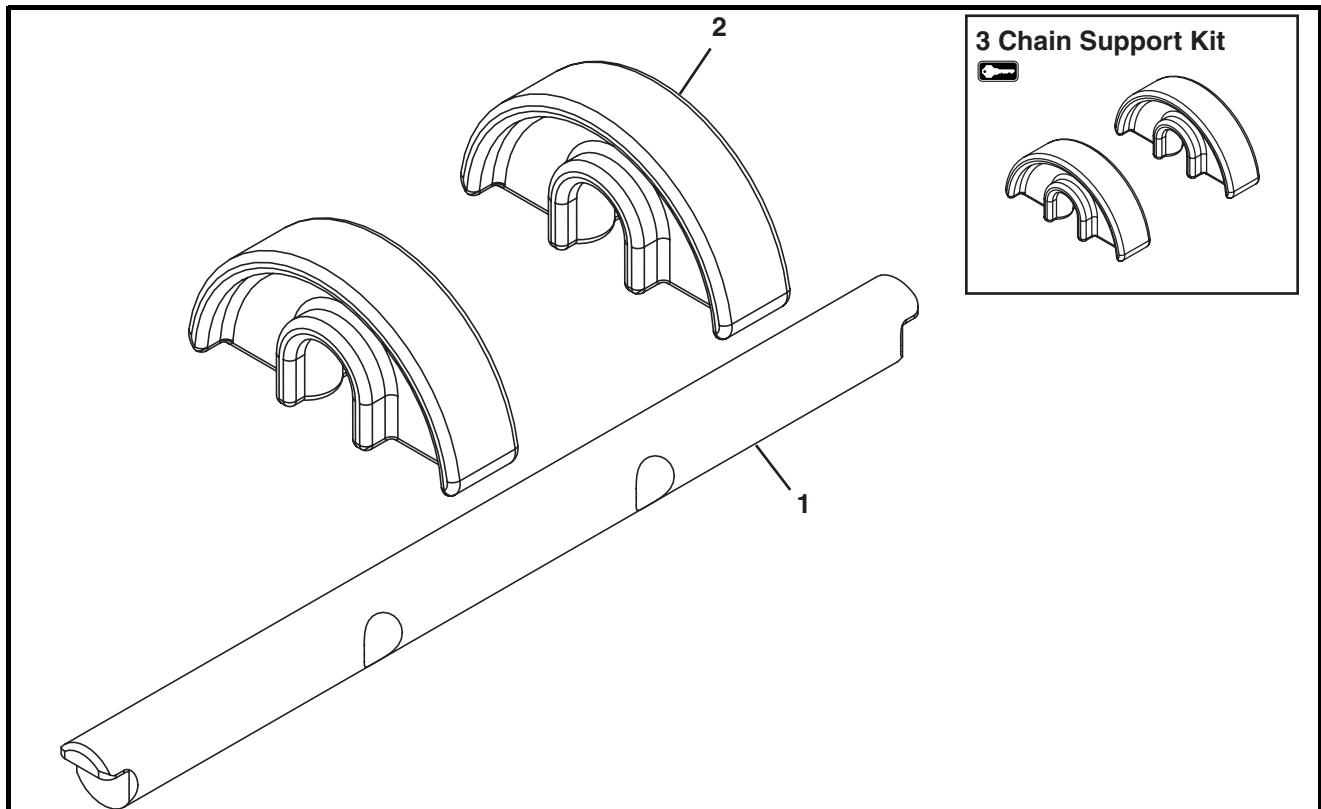


Item	Part Number	Description
1	5032 <u>WW</u>	Return Shaft
2	500075	Chain Return Shoe

Item	Part Number	Description
3	74R- <u>WW</u>	Chain Support Kit (Includes Item 2)

WW = Conveyor width ref: 06 - 60 in 02 increments


Flat Belt Chain Repair Kit

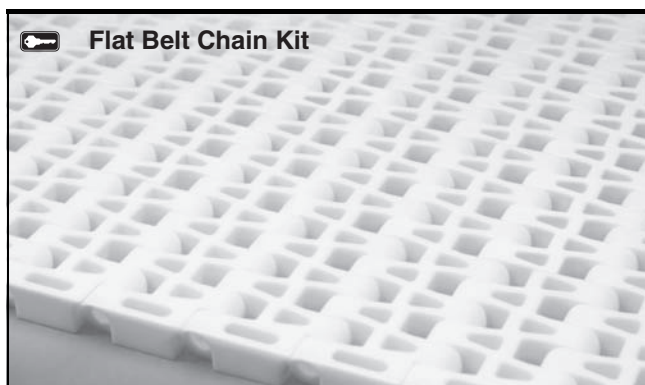

Item	Part Number	Description
1	74 <u>BB</u> - <u>WW</u>	Flat Belt Chain Repair Kit (Includes 1 ft (305 mm) of flat belt chain and assembly pins)

BB = Chain Reference Number
WW = Conveyor width ref: 06 - 60 in 02 increments

Belt Removal Tool

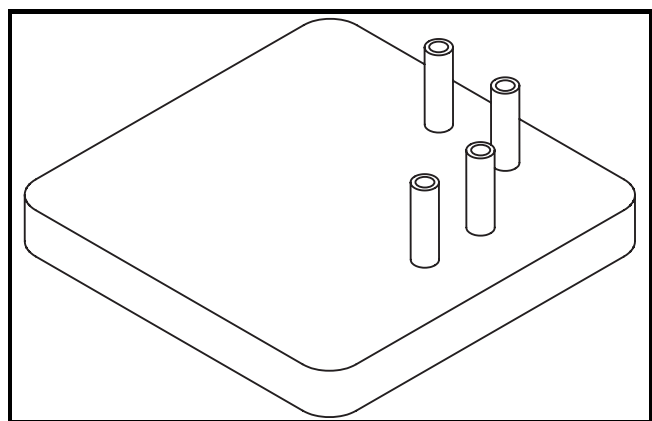

Item	Part Number	Description
1	500582	Tool Rod Removal for 1" Pitch Flush Grid Belt
	500494	Tool Rod Removal for 1/2" Pitch Flush Grid Belt

Ordering a Replacement Chain

Determine the length of chain required for the conveyor and round up to the nearest foot length. Order the proper number of chain repair kits (1' long each) for your conveyor. Dorner will ship chain kits that are of a reasonable length fully assembled.

Example:

Overall chain length = 42' 5" (rounded up = 43')

Order: Qty (43) of 74BB-WW

BB = Chain reference number

WW = Conveyor width ref: 06 - 60 in 02 increments

Configuring a Conveyor Part Number

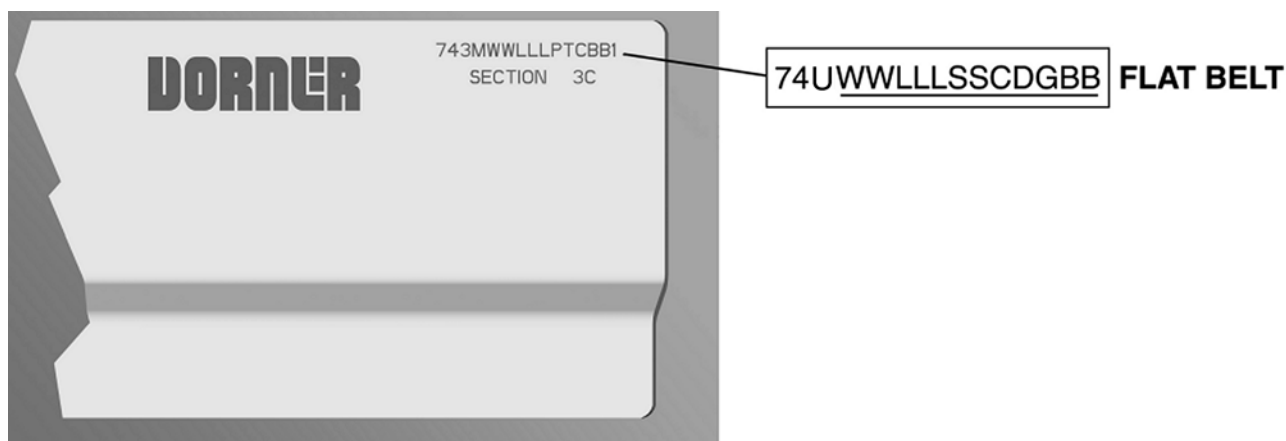


Figure 87

Flat Belt Conveyor

Refer to the model number on the conveyor frame (**Figure 87**). From the model number, determine conveyor width (WW), length (LLL), drive stand location (S), idler stand location (S), cleaning options (C), drive/pulley type (D), profile (G) and belt material (BB).

Example:

74U12072CC1NA10

7400 Series end drive, cleated belt conveyor, 12" (305mm) wide x 72" (1829mm) long, stands located 18" (457mm) from each end, frame cutout cleaning option, NA cleated belt material, side drive with standard pulleys on each end, and 10 link spacing for cleats.

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

1. Name and address of customer.
2. Dorner part number(s) of item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number.

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization number for reference.

There will be a return charge on all new undamaged items returned for credit where Dorner was not at fault. Dorner is not responsible for return freight on such items.

Conveyors and conveyor accessories

Standard catalog conveyors	30%
MPB Series, cleated and specialty belt conveyors	50%
7400 & 7600 Series conveyors	non-returnable items
Engineered special products	case by case
Drives and accessories	30%
Sanitary stand supports	non-returnable items

Parts

Standard stock parts	30%
MPB, cleated and specialty belts	non-returnable items

Returns will not be accepted after 60 days from original invoice date.

The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory.

If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Technical Sales, Catalog Sales and Service Teams will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2008

DORNER MFG. CORP.
975 Cottonwood Ave., PO Box 20
Hartland, WI 53029-0020 USA
USA
TEL 1-800-397-8664 (USA)
FAX 1-800-369-2440 (USA)
Internet: www.dorner.com

Outside the USA:
TEL 1-262-367-7600
FAX 1-262-367-5827