




2200 and 2300 Series Side Mount Drive Package for SEW 60 Hz Gearmotors

Installation, Maintenance & Parts Manual

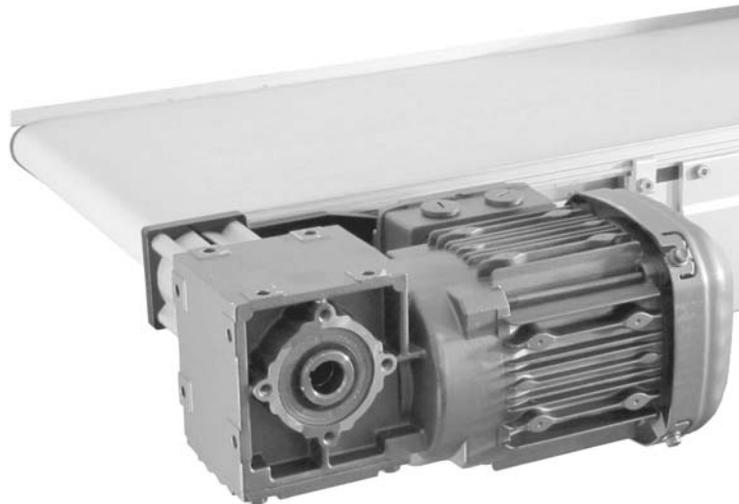

DORNER MFG. CORP.
P.O. Box 20 • 975 Cottonwood Ave.
Hartland, WI 53029-0020 USA

INSIDE THE USA
TEL: 1-800-397-8664
FAX: 1-800-369-2440

OUTSIDE THE USA
TEL: 262-367-7600
FAX: 262-367-5827

For other service manuals visit our website at:
www.dorner.com/service_manuals.asp

Table of Contents

Introduction	2	Mounting	6
Warnings – General Safety	3	For 2200 and 2300 Conveyors.....	6
Product Description	4	Motor Wiring.....	8
Specifications	4	Preventive Maintenance and Adjustment	9
Gearmotor Mounting Package Models:.....	4	Required Tools	9
Table 1: Gearmotor Specifications	5	Gearmotor Replacement.....	9
Table 2: Belt Speeds for Fixed Speed SEW Gearmotors	5	Service Parts.....	11
Table 3: Belt Speeds for		Side Mount Drive Package for SEW 60 Hz Gearmotors	11
Variable Speed SEW VFD Gearmotors.....	5	Gearmotor	12
Installation	6	Notes	13
Required Tools.....	6	Return Policy.....	14

Introduction

IMPORTANT

<i>Some illustrations may show guards removed. DO NOT operate equipment without guards.</i>

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage.
- Accessories may be shipped loose. See accessory instructions for installation.

Dorner 2200 Series conveyors are covered by patent number 5174435 and corresponding patents and patent applications in other countries.

Dorner's Limited Warranty applies.

Dorner reserves the right to make changes at any time without notice or obligation.

Dorner has convenient, pre-configured kits of Key Service Parts for all conveyor products. These time saving kits are easy to order, designed for fast installation, and guarantee you will have what you need when you need it. Key Parts and Kits are marked in the Service Parts section of this manual with the Performance Parts Kits logo .

Warnings – General Safety

⚠ WARNING

The safety alert symbol, black triangle with white exclamation, is used to alert you to potential personal injury hazards.

⚠ DANGER



Climbing, sitting, walking or riding on conveyor will cause severe injury.
KEEP OFF CONVEYORS.

⚠ DANGER



Do NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.

⚠ WARNING



Exposed moving parts can cause severe injury.
LOCK OUT POWER before removing guards or performing maintenance.

⚠ WARNING



Gearmotors may be **HOT**.
DO NOT TOUCH Gearmotors.

⚠ WARNING



Exposed moving parts can cause severe injury.
REPLACE ALL GUARDS BEFORE RUNNING CONVEYOR.

⚠ WARNING



Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.
When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, **CHECK FOR POTENTIAL PINCH POINTS** and other mechanical hazards before system start-up.

⚠ WARNING



MPB Series Conveyors are not reversible. Reversing creates pinch points which can cause severe injury.
DO NOT REVERSE MPB SERIES CONVEYORS.

Product Description

Refer to **Figure 1** for typical conveyor components.

- | | |
|---|------------------|
| 1 | Conveyor |
| 2 | Mounting Bracket |
| 3 | Gearmotor |
| 4 | Spacer (2x) |

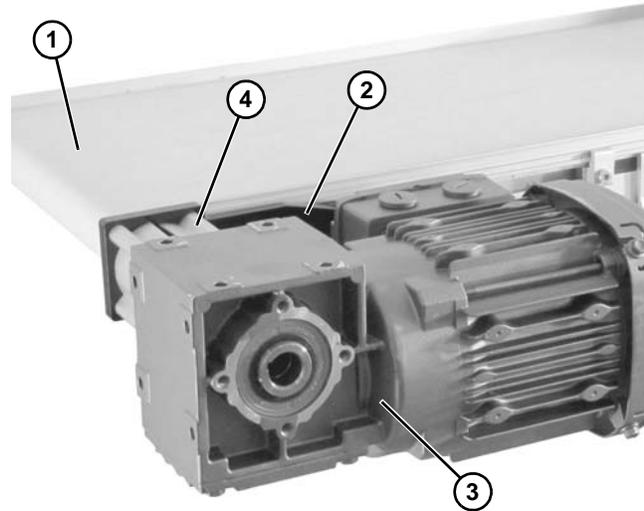



Figure 1

Specifications

Gearmotor Mounting Package Models:

Example:

22 M S W S W W A
 ———— Mount Position = A, B, C or D (see detail to the right)
 ———— Conveyor Width Reference*
 ———— Gearmotor Type = Standard Load, Industrial
 ———— Output Shaft Type = SEW
 ———— Mount Style = Side Mount
 ———— Language Code = U.S. English
 ———— 22 = 2200 and 2300 Series Conveyors

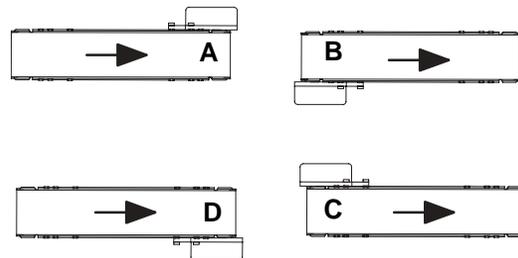

* See Ordering and Specifications Catalog for details.

Specifications

Table 1: Gearmotor Specifications

	Three Phase			VFD Vari Speed		
Output Power	0.25 Hp (0.19 Kw)	0.33 hp (0.25 kW)	0.5 Hp (0.37 kW)	0.25 Hp (0.19 Kw)	0.33 hp (0.25 kW)	0.5 Hp (0.37 kW)
Input Voltage	230/460			230/460		
Input Frequency	60 Hz			10 to 60 Hz		
Input Current	0.89/0.44	1.24/0.62	1.84/0.92	0.89/0.44	1.24/0.62	1.84/0.92
RPM	46	109	219	8 to 46	18 to 109	37 to 219
Ratio	39:1	16.5:1	8.2:1	39:1	16.5:1	8.2:1
Motor Frame	IEC71			IEC71		
Motor Type	IP54 Totally Enclosed Fan Cooled			IP54 Totally Enclosed Fan Cooled		

Table 2: Belt Speeds for Fixed Speed SEW Gearmotors

Part Number	RPM	In lb	N-m	Ft/min	M/min
22M039WS423EN	46	203	22.9	16.2	4.9
22M017WS423EN	109	159	18.0	38.2	11.6
22M008WS423EN	219	132	14.9	76.8	23.4

Table 3: Belt Speeds for Variable Speed SEW VFD Gearmotors

Part Number	RPM	In-lb	N-m	Ft/min (max)	Ft/min (min)	M/min (max)	M/min (min)
22M039WS423EN	8 to 46	203	22.9	16.2	2.7	4.9	0.8
22M017WS423EN	18 to 109	159	18.0	38.2	6.4	11.6	1.9
22M008WS423EN	37 to 219	132	14.9	76.8	12.8	23.4	3.9

NOTE

For belt speed other than those listed, contact factory for details.

Installation

Required Tools

- Hex key wrenches:
3 mm, 5 mm
- Large flat-blade screwdriver
- Torque wrench

Mounting

⚠ WARNING



Exposed moving parts can cause severe injury.
LOCK OUT POWER before removing guards or performing maintenance.

Installation Component List:

- | | |
|---|------------------|
| 1 | Drive Assembly |
| 2 | Spacer (2x) |
| 3 | Mounting Bracket |

1. Typical components (**Figure 2**)

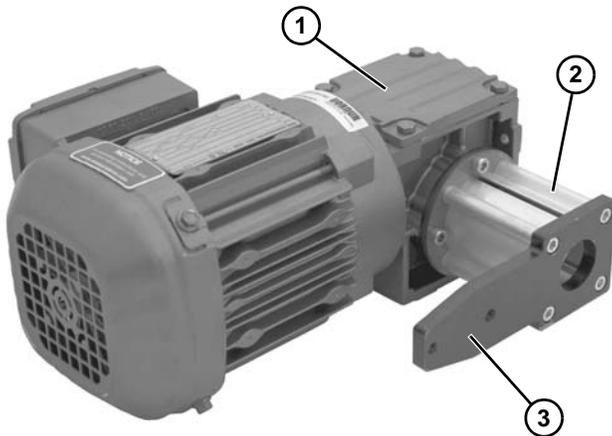


Figure 2

NOTE

Flat belt mounting package shown above (**Figure 2**), cleated belt mounting package similar.

NOTE

Gearmotor may be operated in positions 1, 2, 3 or 4 (**Figure 3**).

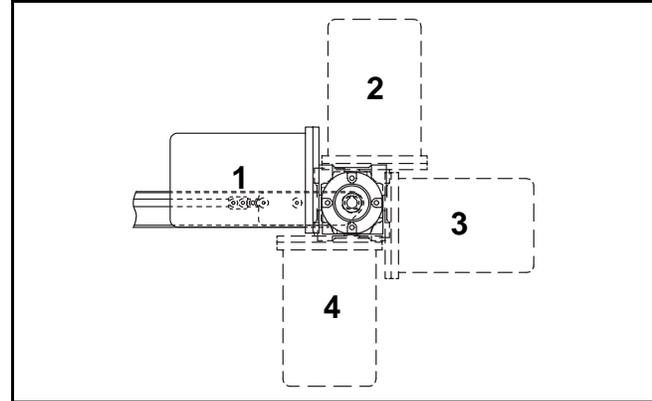


Figure 3

2. If required, change gearmotor position by removing four (4) screws (**Figure 4, item 1**). Rotate gearmotor to other position (**Figure 3**) and replace screws. Tighten to 100 in-lb (12 N-m).



Figure 4

For 2200 and 2300 Conveyors

⚠ WARNING



Drive shaft keyway may be sharp.
HANDLE WITH CARE.

Installation

1. Locate drive output shaft. Remove two screws (**Figure 5, item 1**).

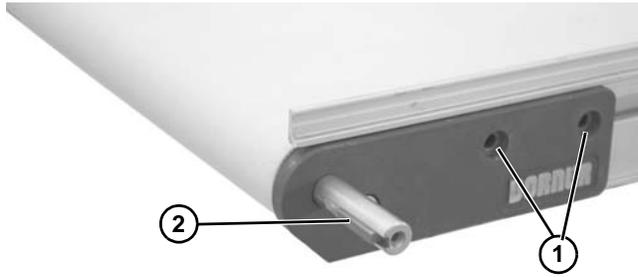


Figure 5

2. Install key (**Figure 5, item 2**) and rotate conveyor belt until key is facing towards end of conveyor.
3. Attach side drive assembly (**Figure 6, item 1**) with screws (**Figure 6, item 2**). Tighten to 80 in-lb (9 N-m).

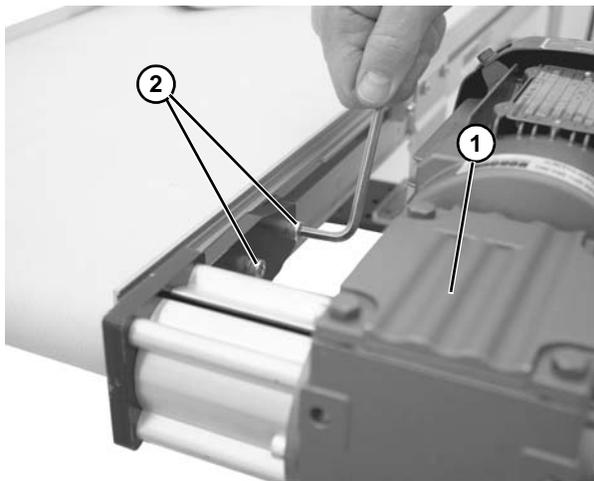


Figure 6

4. Tighten set screw on shaft coupling, access through slot (**Figure 7, item 1**).

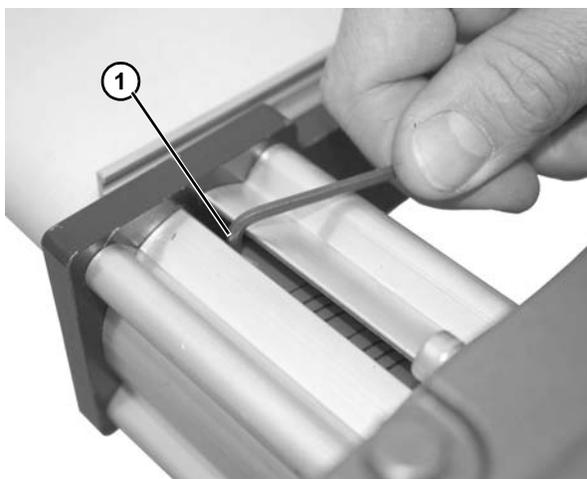


Figure 7

5. Remove motor fan cover (**Figure 8, item 1**).

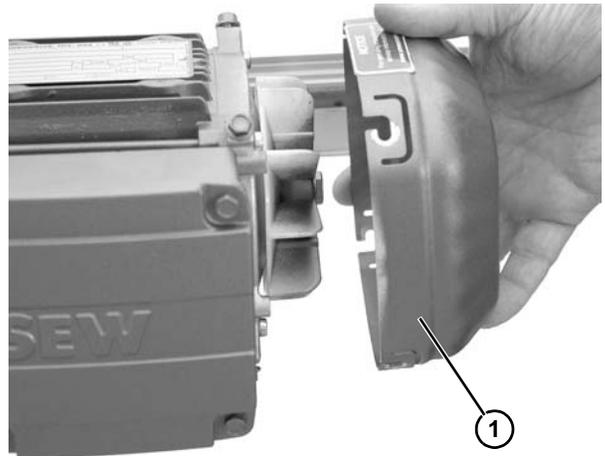


Figure 8

6. Rotate fan (**Figure 9, item 1**) by hand until second set screw lines up with slot. A 90 degree shaft move is required.

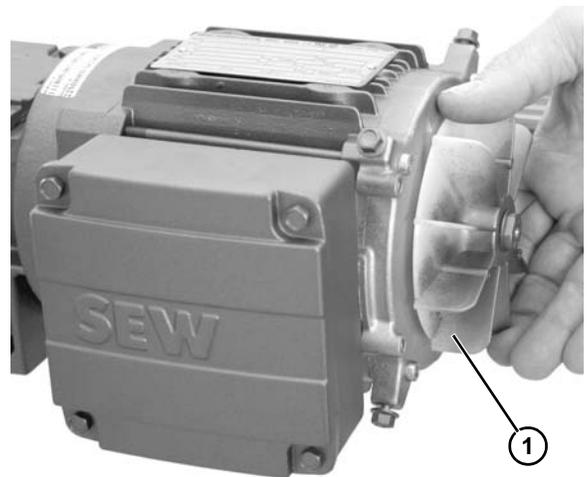


Figure 9

7. Tighten second set screw, access through slot (**Figure 7, item 1**).
8. Re-install fan cover.

Installation

Motor Wiring

⚠ DANGER

Hazardous voltage will cause severe injury or death. LOCK OUT POWER BEFORE WIRING.

NOTE
<i>Lug terminals are recommended for wiring connections.</i>

1. Remove cover (Figure 10, item 1).

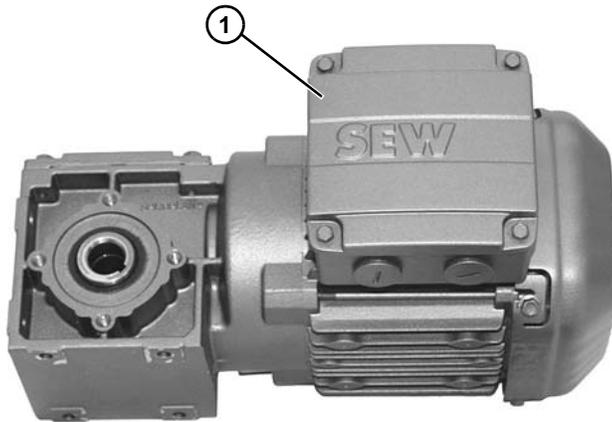


Figure 10

2. To determine wiring configuration, refer to the inside of the motor cover (Figure 11).

NOTE
<i>Image of wiring diagram for reference only. See inside motor cover for motor specific instructions.</i>



Figure 11

3. Install cord grip and power cord (Figure 12, item 1) mount to terminal box as required.

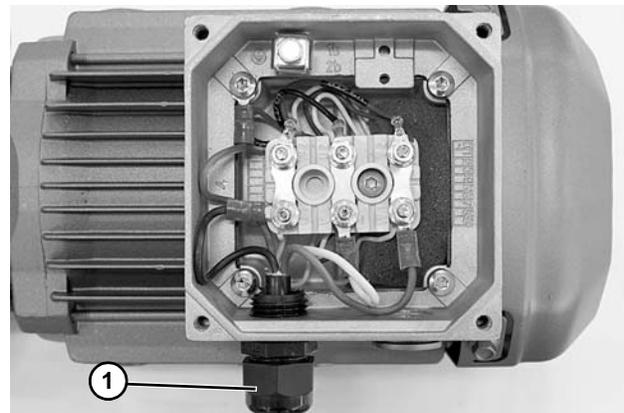


Figure 12

4. Connect wires.
5. Close cover.

Preventive Maintenance and Adjustment

Required Tools

- Hex key wrenches:
2.5 mm, 3 mm, 5 mm
- Large flat-blade screwdriver
- Adjustable wrench (for hexagon head screws)
- External snap ring pliers
- Torque wrench

Gearmotor Replacement

⚠ WARNING

Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.
⚠ DANGER

Hazardous voltage will cause severe injury or death. LOCK OUT POWER BEFORE WIRING.

1. Disconnect power. Remove terminal box cover and wires.
2. Remove motor fan cover (**Figure 13, item 1**).

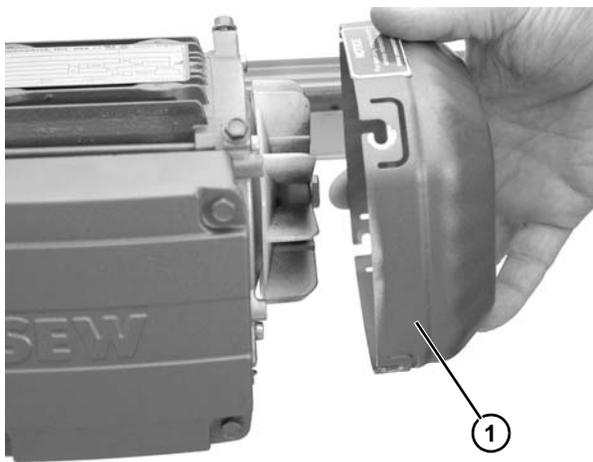


Figure 13

3. Rotate fan (**Figure 14, item 1**) by hand until set screw is visible through slot in spacer (**Figure 15, item 1**).

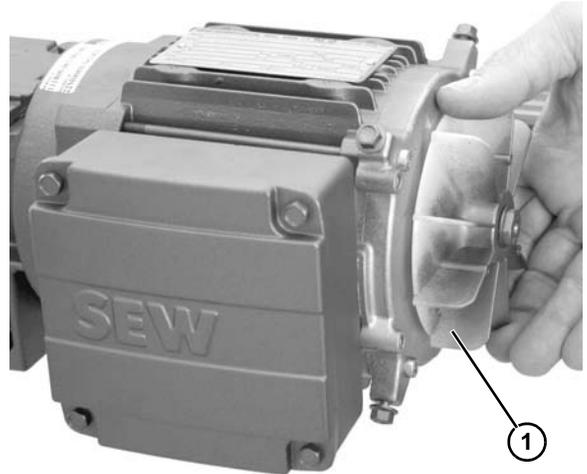


Figure 14

4. Loosen set screw on gearhead shaft (**Figure 15, item 2**).

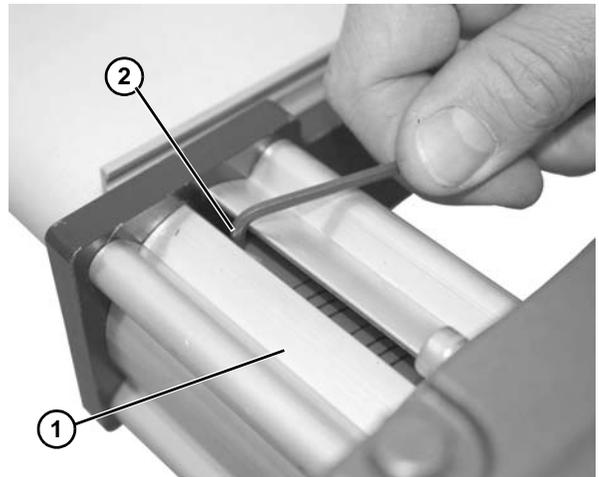


Figure 15

5. Rotate fan again for second set screw located 90 degree's from the first. Loosen set screw.

Preventive Maintenance and Adjustment

6. Remove mounting screws (**Figure 16, item 1**) and remove gearmotor.

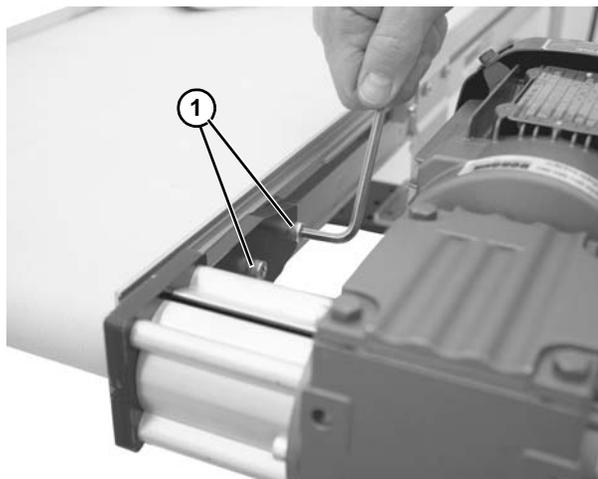


Figure 16

7. Remove shaft mounting bolt (**Figure 17, item 1**) and remove shaft.

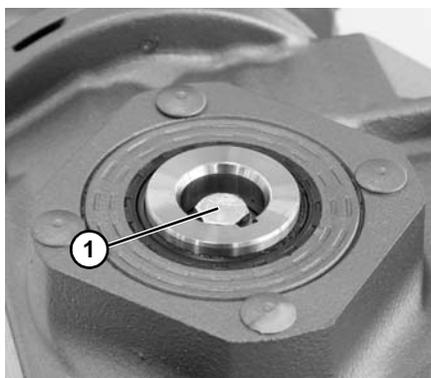



Figure 17

8. Repeat in reverse order to install new gearmotor.

NOTE

For replacement parts other than those shown in this section, contact an authorized Dorner Service Center or the factory. Key Service Parts and Kits are identified by the Performance Parts Kits logo . Dorner recommends keeping these parts on hand.


Side Mount Drive Package for SEW 60 Hz Gearmotors

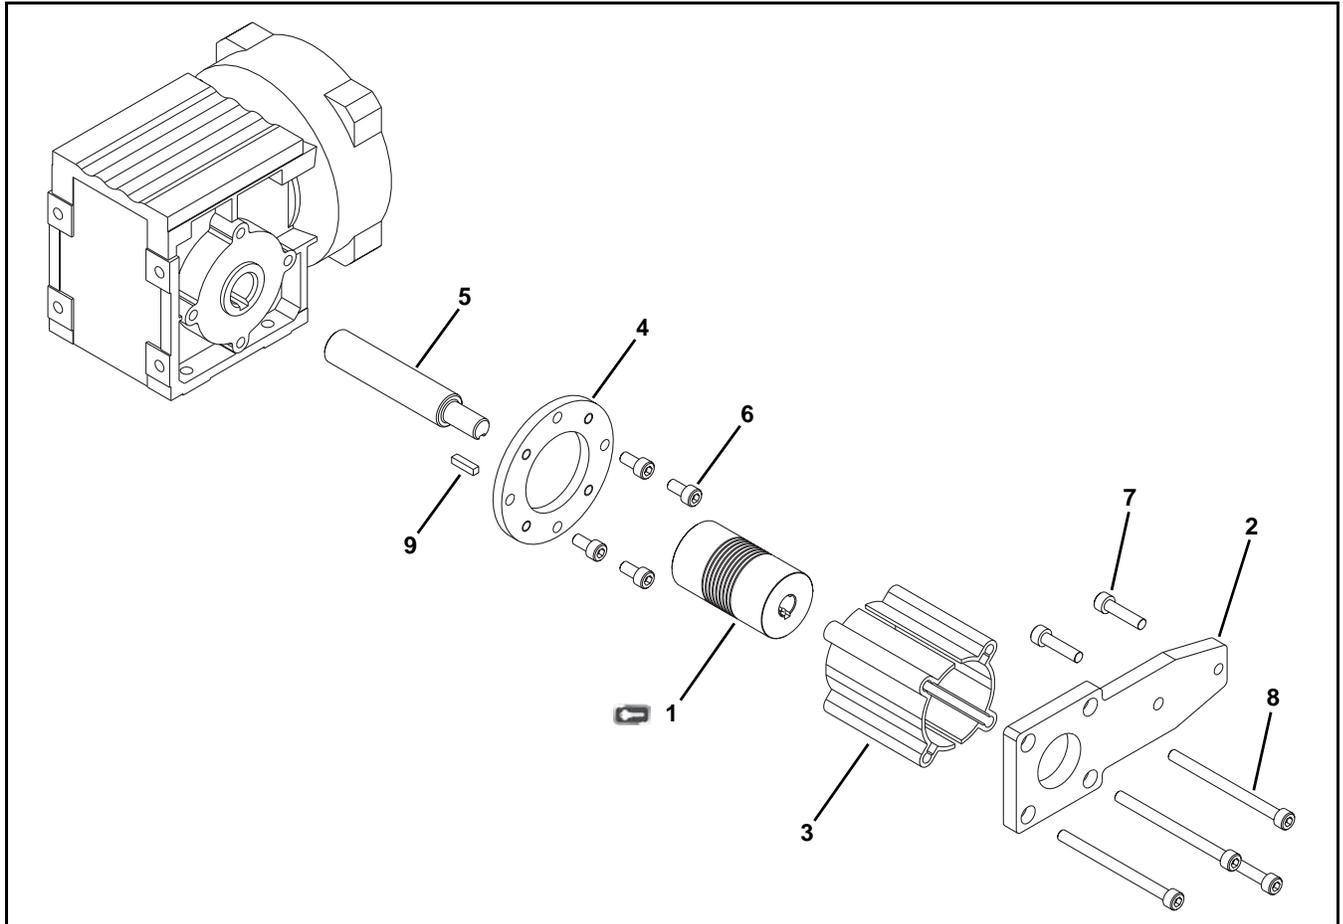

Item	Part Number	Description
1	807-995	Flex Coupling
2	201561	Side Drive Plate
3	201672	Side Drive Spacer Guard (qty. 2)
4	201673	Mounting Ring
5	201674	Output Shaft
6	920612M	Socket Head Screw M6 - 1.00 x 12 mm
7	920625M	Socket Head Screw M6 - 1.00 x 25 mm
8	920680M	Socket Head Screw M6 - 1.00 x 80 mm
9	980416M	Square Key

Service Parts

Gearmotor

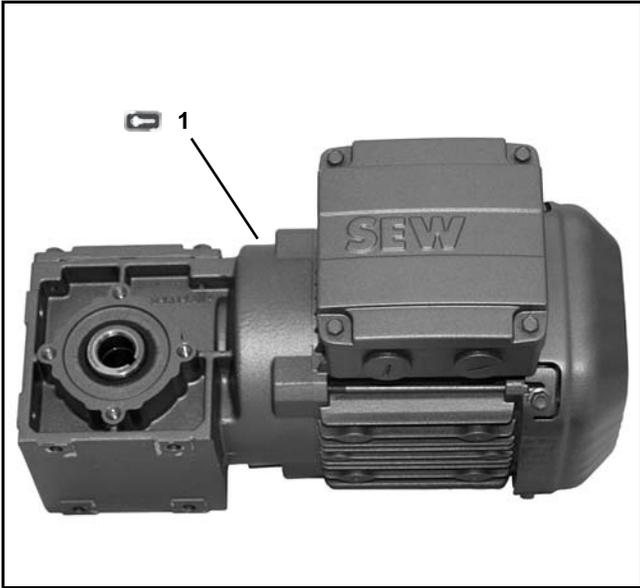

Item	Part No.	Part Description
1	22M039WS423EN	Gearmotor, 0.25 Hp (0.19 Kw), 230/460 Volts, 60 Hz, 39:1
	22M017WS423EN	Gearmotor, 0.33 Hp (0.25 Kw), 230/460 Volts, 60 Hz, 16.5:1
	22M008WS423EN	Gearmotor, 0.50 Hp (0.37 Kw), 230/460 Volts, 60 Hz, 8.2:1

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

1. Name and address of customer.
2. Dorner part number(s) of item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number (if available, part serial number).

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization (RMA) number for reference. RMA will automatically close 30 days after being issued. To get credit, items must be new and undamaged. There will be a return charge on all items returned for credit, where Dorner was not at fault. It is the customer's responsibility to prevent damage during return shipping. Damaged or modified items will not be accepted. The customer is responsible for return freight.

Product Type									
Standard Products									Engineered to order parts
Product Line	Conveyors	Gearmotors & Mounting Packages	Support Stands	Accessories	Spare Parts (non-belt)	Spare Belts - Standard Flat Fabric	Spare Belts - Cleated & Specialty Fabric	Spare Belts - Plastic Chain	All equipment and parts
1100	30% return fee for all products except: 50% return fee for conveyors with modular belt, cleated belt or specialty belts						non-returnable		case-by-case
2200									
2200 Modular Belt									
2200 Precision Move									
2300									
2300 Modular Belt									
3200									
3200 LPZ									
3200 Precision Move									
4100									
5200									
5300									
6200									
Controls									
7200 / 7300	50% return fee for all products								
7350	non-returnable								
7360									
7400									
7600									

Returns will not be accepted after 60 days from original invoice date. The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory. If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Customer Service Team will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

For replacement parts, contact an authorized Dorner Service Center or the factory.

 <p>Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2010</p>	<p>DORNER MFG. CORP. 975 Cottonwood Ave., PO Box 20 Hartland, WI 53029-0020 USA TEL 1-800-397-8664 (USA) FAX 1-800-369-2440 (USA) Internet: www.dorner.com</p>	<p>Outside the USA: TEL 1-262-367-7600 FAX 1-262-367-5827</p>
---	--	---