



5200 Series Nose Bar Drive Conveyors

Installation, Maintenance and Parts Manual



DORNER MFG. CORP.
P.O. Box 20 • 975 Cottonwood Ave.
Hartland, WI 53029-0020 USA

INSIDE THE USA
TEL: 1-800-397-8664
FAX: 1-800-369-2440

OUTSIDE THE USA
TEL: 262-367-7600
FAX: 262-367-5827

For other service manuals visit our website at:
www.dorner.com/service_manuals.asp

Table of Contents

Introduction	2	Spindle Removal	12
Warnings – General Safety.....	3	A - Nose Bar Drive Spindle Removal	12
Product Description	4	B - Idler Spindle Removal	14
Specifications	4	C - Nose Bar Idler Spindle Removal	15
Flat Belt 5200 Series Conveyor	4	Spindle Replacement	16
Conveyor Supports	5	Drive Spindle	16
Specifications	5	Idler Spindle.....	16
Installation	6	Nose Bar Idler Spindle.....	16
Required Tools.....	6	Bearing Replacement	17
Recommended Installation Sequence	6	Drive Bearing Removal and Replacement.....	17
Conveyors Longer than 12 ft (3658 mm)	6	Removal	17
Connecting Components	6	Replacement	17
Belt Installation	7	Service Parts.....	18
All Conveyors	8	Drive End Components	18
Stand Installation.....	8	Idler End Components.....	20
Drive Package Installation	8	Nose Bar Idler End Components.....	21
Preventive Maintenance and Adjustment.....	9	Frame Assembly.....	22
Required Tools.....	9	Connecting Assembly.....	23
Checklist	9	1” (25 mm) High Sides.....	24
Lubrication.....	9	3” (76 mm) High Sides.....	25
Maintaining the Conveyor Belt.....	9	Fully Adjustable Guiding	26
Troubleshooting	9	Tool-Less Fully Adjustable Guiding.....	27
Conveyor Belt Replacement	9	Twin Rail Adjustable Guiding	28
Replacing a Section of Belt.....	9	Flat Belt Returns.....	29
Replacing the Entire Belt	10	Stand Mount Kit	29
Conveyor Belt Tensioning	10	Ordering a Replacement Chain	29
Wear Strips	10	Flat Belt Chain Repair Kit.....	29
Removal	10	Return Policy.....	30
Installation.....	11		

Introduction

 **CAUTION**

Some illustrations may show guards removed. DO NOT operate equipment without guards.

Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage. Accessories may be shipped loose.
- See accessory instructions for installation.

The Dorner Limited Warranty applies.

Dorner 5200 Series conveyors have patents pending.

Dorner reserves the right to make changes at any time without notice or obligation.

Dorner has convenient, pre-configured kits of Key Service Parts for all conveyor products. These time saving kits are easy to order, designed for fast installation, and guarantee you will have what you need when you need it. Key Parts and Kits are marked in the Service Parts section of this manual with the Performance Parts Kits logo .

Warnings – General Safety

⚠ DANGER



SEVERE HAZARD!
KEEP OFF CONVEYORS. Climbing, sitting, walking or riding on conveyor will result in death or serious injury.

⚠ DANGER



EXPLOSION HAZARD!

- **DO NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.** The electric gearmotor generates heat and could ignite combustible vapors.
- Failure to comply will result in death or serious injury.

⚠ WARNING



CRUSH HAZARD!

- **DO NOT** place hands or fingers inside the conveyor while it is running.
- **DO NOT** wear loose garments while operating the conveyor. Loose garments can become caught up in the conveyor.
- Failure to comply could result in serious injury.

⚠ WARNING



CRUSH HAZARD!

- **SUPPORT CONVEYOR SECTIONS PRIOR TO LOOSENING STAND HEIGHT OR ANGLE ADJUSTMENT SCREWS.**
- Loosening stand height or angle adjustment screws may cause conveyor sections to drop down, causing serious injury.

⚠ WARNING



SEVERE HAZARD!
LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

⚠ WARNING



BURN HAZARD!
DO NOT TOUCH the motor while operating, or shortly after being turned off. Motors may be **HOT** and can cause serious burn injuries.

⚠ WARNING



PUNCTURE HAZARD!
 Handle drive shaft keyway with care. It may be sharp and could puncture the skin, causing serious injury.

⚠ WARNING



SEVERE HAZARD!

- Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.
- When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, **CHECK FOR POTENTIAL PINCH POINTS** and other mechanical hazards before system start-up.
- Failure to comply could result in serious injury.

Product Description

Refer to **(Figure 1)** for typical conveyor components.

Typical Components	
1	Conveyor
2	Gearmotor
3	Belt (Flat Belt Shown)
4	Support Stands
5	Drive End
6	Idler End


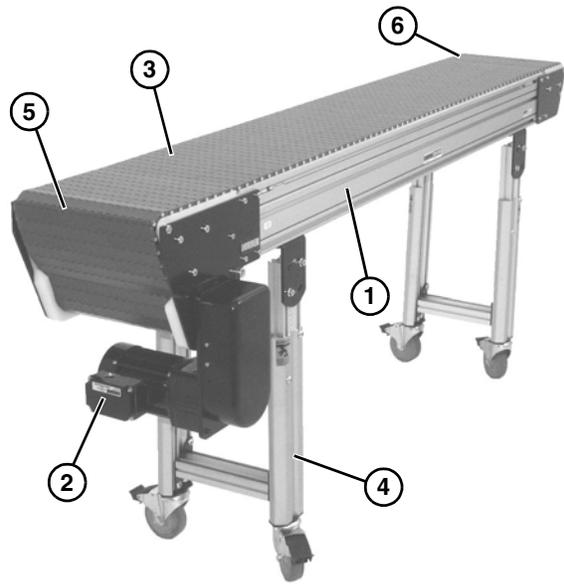


Figure 1

Specifications

Flat Belt 5200 Series Conveyor

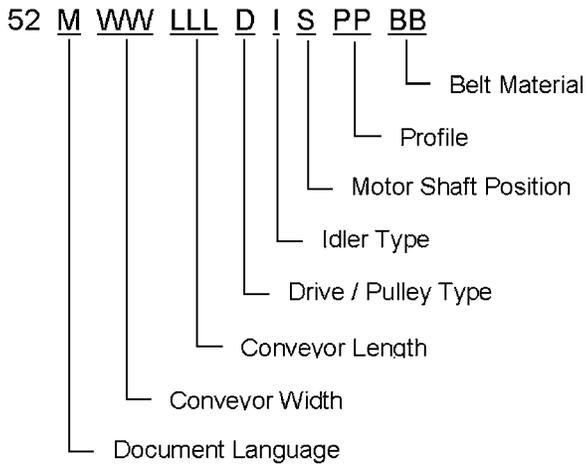

Conveyor Supports

Maximum Distances:

- 1 = Support Stand on Idler End = 3 ft (914 mm)
 - 2 = Between Support Stands = 12 ft (3658 mm)**
 - 3 = Support Stand on Drive End = 3 ft (914 mm)
- ** For conveyors longer than 12 ft (3658 mm),
install stand mount kit at frame joint.

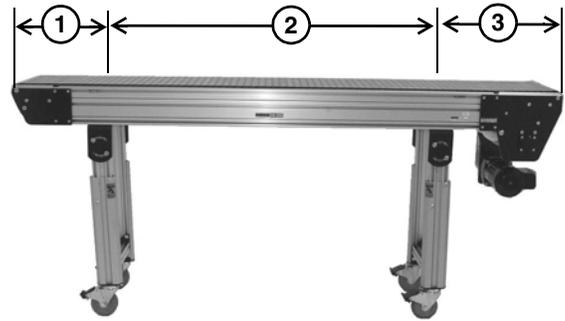


Figure 2

Specifications

Conveyor Width Reference (<u>WW</u>)	08 – 60 in 02 increments
Conveyor Belt Width	8" (203 mm) - 60" (1524 mm) in 2" (51 mm) increments
Maximum Conveyor Load	20 lbs. / ft ² (97 kg/ m ²) with a maximum of 1000 lbs. (454 kg)
Belt Travel	12" (305 mm) per revolution of pulley
Maximum Belt Speed	250 ft/minute (76 m/minute)
<hr/>	
Conveyor Length Reference (<u>LLL</u>)	036 – 999 in 001 increments
Conveyor Length	36" (914 mm) - 999" (25.4 m) in 1" (25 mm) increments

IMPORTANT

Maximum conveyor loads are based on:

- *Non-accumulating product*
- *Product moving toward gearmotor*
- *Conveyor being mounted horizontally*
- *Conveyor being located in a dry environment*
- *Conveyor equipped with standard belt only*

Installation

CAUTION

Conveyor **MUST** be mounted straight, flat and level within confines of conveyor. Use a level (Figure 3, item 1) during setup.

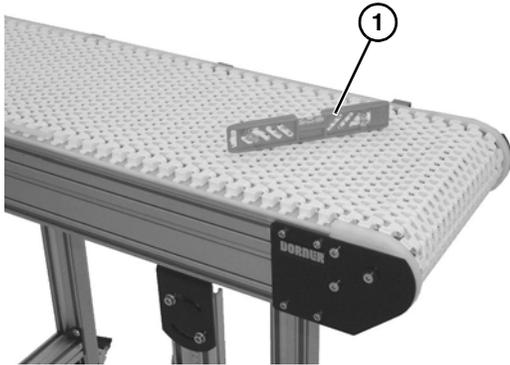


Figure 3

Required Tools

- Level
- Torque wrench
- 4 mm hex wrench
- 5 mm hex wrench

Recommended Installation Sequence

1. Assemble the conveyor (if required). Refer to “Conveyors Longer than 12 ft (3658 mm)” on page 6 or “All Conveyors” on page 8.
2. Attach the stands. Refer to “Stand Installation” on page 8.
3. Install the gearmotor. Refer to “Drive Package Installation” on page 8.

Conveyors Longer than 12 ft (3658 mm)

Connecting Components

Typical Connecting Components (Figure 4)

- | | |
|---|---------------------------------------|
| 1 | Bar Frame Connector |
| 2 | Drop-in Tee Bar |
| 3 | Conveyor frames |
| 4 | Plate Frame Connector |
| 5 | Low Head Cap Screw, M6 - 1.00 x 12 mm |
| 6 | Washer |
| 7 | Socket Head Screw, M6 - 1.00 x 20 mm |

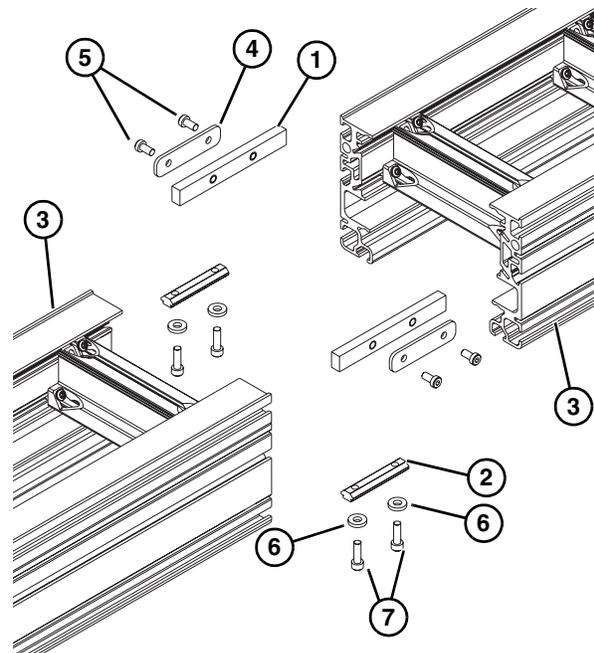


Figure 4

1. Install two bar frame connectors (Figure 4, item 1) and two drop-in tee bars (Figure 4, item 2) into one conveyor section (Figure 4, item 3).
2. Join both conveyor sections, and install plate frame connectors (Figure 4, item 4), and secure with M6x12 low head cap screws (Figure 4, item 5) on both sides. Tighten cap screws to 60 in-lb (7 Nm).
3. Install washers (Figure 4, item 6) and M6x20 socket head screws (Figure 4, item 7) into drop-in tee bar (Figure 4, item 2) on both sides as indicated. (Do not tighten hardware. This is for stand installation.)

NOTE

The stop plate (Figure 5, item 1) on the center wear strip (Figure 5, item 2) faces the idler end (Figure 5, item 3) of the conveyor.

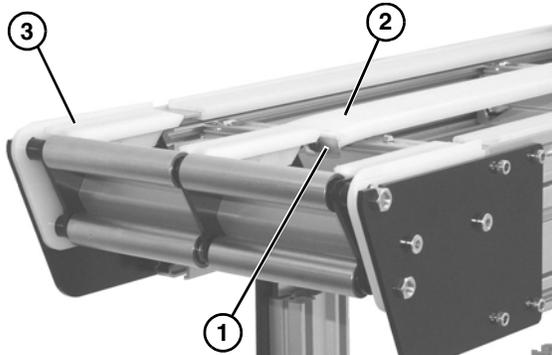


Figure 5

Belt Installation

Typical Belt Components (Figure 6)

- | | |
|---|------------|
| 1 | Chain Belt |
| 2 | Belt Rod |

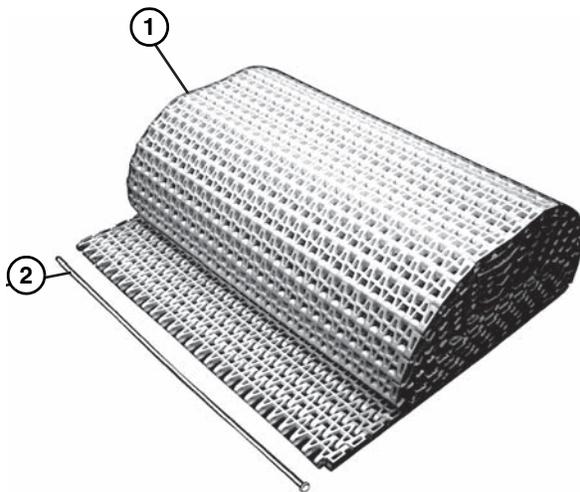


Figure 6

1. Position the belt on the conveyor frame (Figure 7).



Figure 7

2. Wrap belt around idler tail.
3. Install belt around lower frame section and above lower wear strips (Figure 8, item 1).

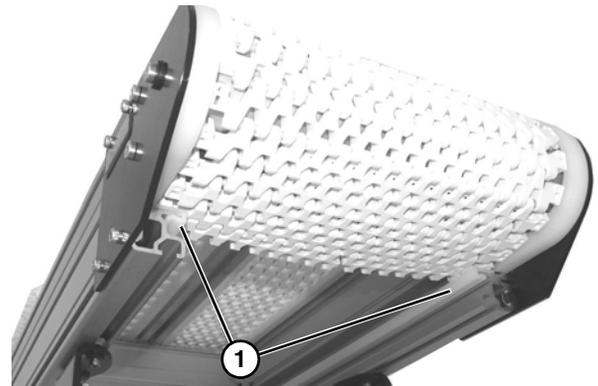


Figure 8

4. Wrap the belt around the drive end of the conveyor, making sure the sprocket teeth have engaged the belt, with concave teeth (Figure 9, item 1) mating with rounded section (Figure 9, item 2) of belt.

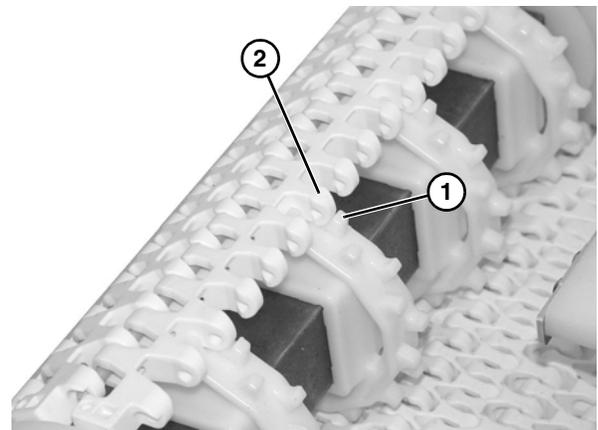


Figure 9

5. Bring the ends of the belt together (Figure 10).

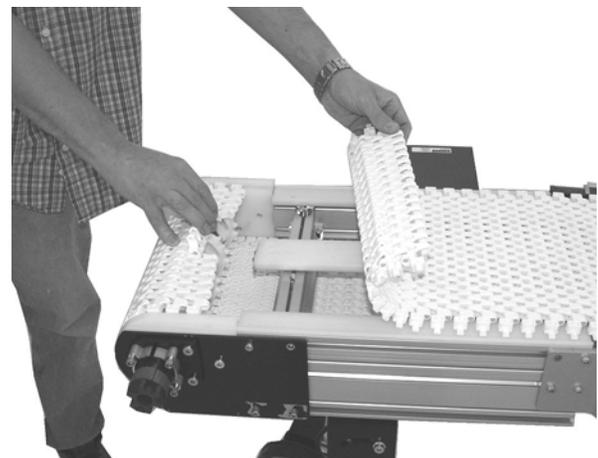


Figure 10

Installation

6. Insert the belt rod (Figure 11, item 1).

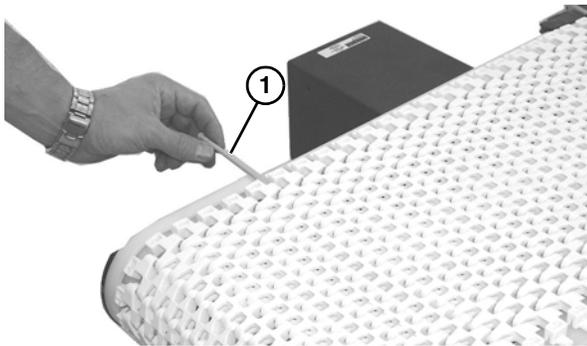


Figure 11

7. Push the belt rod in as far as possible.
8. Lightly tap the head of the rod with a hammer until it snaps into position.

All Conveyors

Stand Installation

NOTE

For detailed assembly instructions, please see your appropriate support stand manual.

Typical stand components (Figure 12)

- | | |
|---|--|
| 1 | Conveyor Frame |
| 2 | Stand |
| 3 | M6 - 1.0 x 20 mm socket head cap screws (x4) |

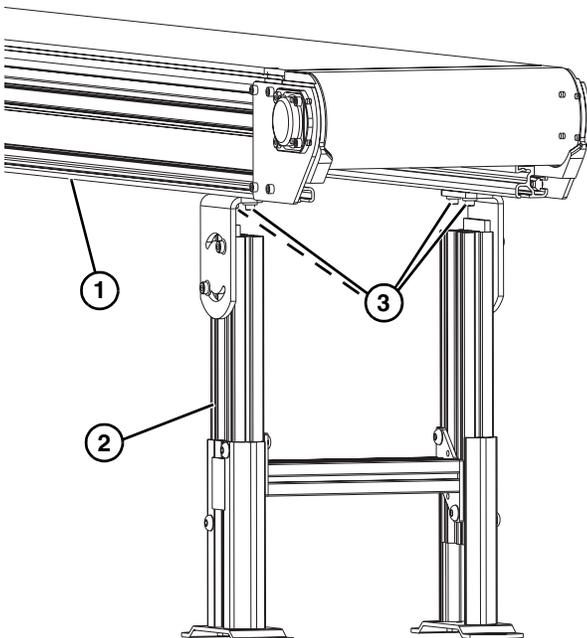


Figure 12

1. Properly support the conveyor.
2. Attach stands (Figure 13, item 1) to the bottom of the conveyor frame (Figure 13, item 2). Tighten socket head screws (Figure 13, item 3), on each side, to secure in place.

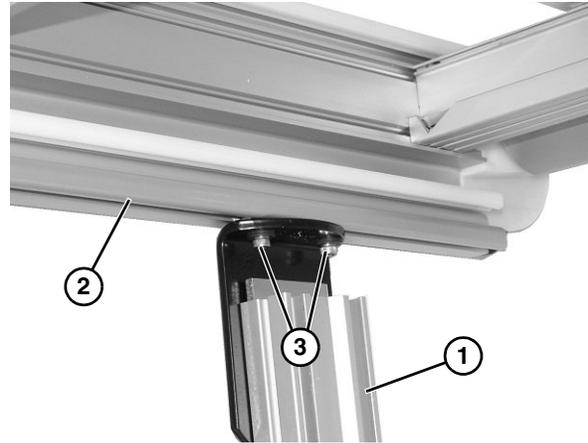


Figure 13

Drive Package Installation

NOTE

For detailed assembly instructions, refer to the appropriate Drive Packages Installation, Maintenance and Parts Manual.

1. Attach the motor (Figure 14, item 1) to the gear reducer (Figure 14, item 2).

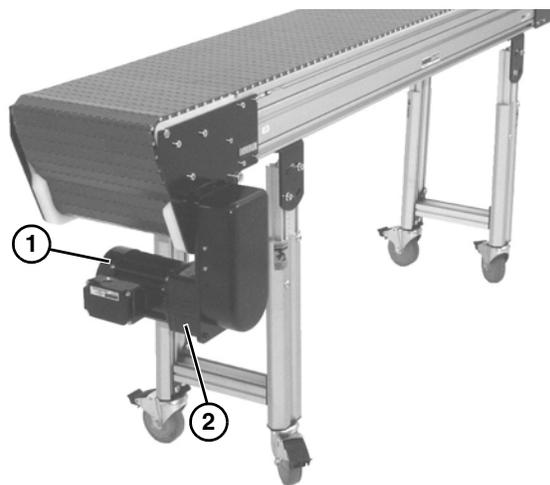


Figure 14

Preventive Maintenance and Adjustment

Required Tools

- 4 mm hex wrench
- 5 mm hex wrench
- 6 mm hex wrench
- 8 mm hex wrench
- Punch and hammer (to remove belt rod)

Checklist

- Keep service parts on hand. Refer to the "Service Parts" section starting on page 18 for recommendations.
- Replace any worn or damaged parts.

Lubrication

No lubrication is required. Replace bearings if worn.

Maintaining the Conveyor Belt

Troubleshooting

NOTE

Visit www.dorner.com for complete list of troubleshooting solutions.

Inspect conveyor belt for:

- Surface cuts or wear
- Skipping

Damage to belt links or rods, surface cuts and / or wear indicate:

- Sharp or heavy parts impacting belt
- Jammed parts
- Accumulated dirt
- Foreign material inside the conveyor
- Improperly positioned accessories

Skipping indicates:

- Excessive load on belt
- Worn spindle or impacted dirt on drive spindle

Conveyor Belt Replacement

WARNING



SEVERE HAZARD!
LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

Replacing a Section of Belt

1. Use a punch and hammer to push the belt rod (Figure 15, item 1) out by striking the rod end opposite the retaining head.

WARNING



SEVERE HAZARD!
If conveyor belt is damaged or worn, replace belt section.

2. Remove the belt rods on both sides of the section of belt being replaced.

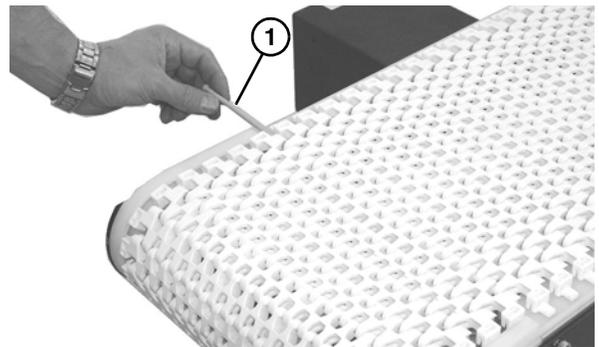


Figure 15

3. Replace old section of belt.

CAUTION

DO NOT reuse belt rods that are damaged or show signs of wear.

Preventive Maintenance and Adjustment

Replacing the Entire Belt

1. Use a punch and hammer to push the belt rod (Figure 16, item 1) out by striking the rod end opposite the retaining head.

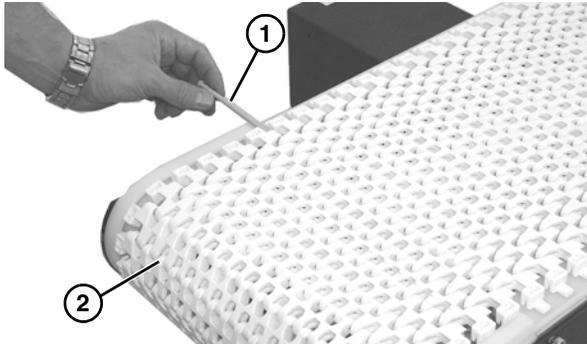


Figure 16

2. Slide the old belt (Figure 16, item 2) off the conveyor frame.
3. Replace the old belt with a new one. Refer to “Belt Installation” on page 7.

CAUTION

DO NOT reuse belt rods that are damaged or show signs of wear.

Conveyor Belt Tensioning

WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

NOTE

Belt should not be stretched during installation. A proper length of belt can be installed by interlocking the ends by hand without excess links.

1. Remove one or more belt links to take up tension. Refer to “Replacing a Section of Belt” on page 9.

Wear Strips

Replace the wear strips if they become worn.

Typical Standard Wear Strips (Figure 17)

- | | |
|---|-------------------------------|
| 1 | Wear Strip, Center |
| 2 | Wear Strips, Lower Side |
| 3 | Wear Strips, Lower Side |
| 4 | Stop Plate, Center Wear Strip |

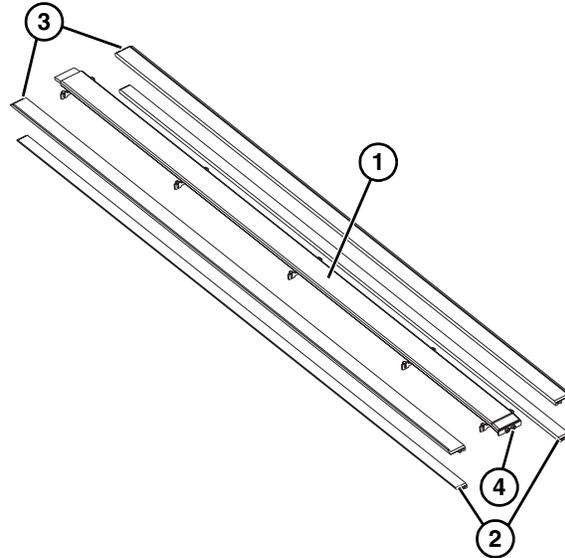


Figure 17

Removal

1. Remove upper wear strips (Figure 18, item 1) from top of frame assembly.

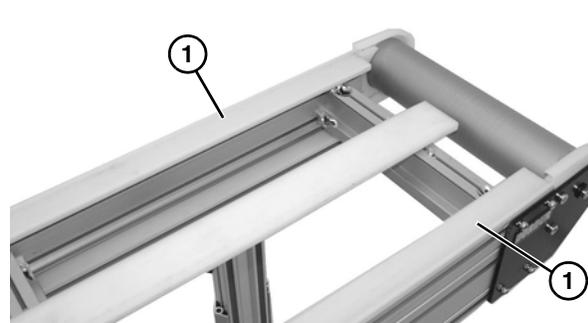


Figure 18

Preventive Maintenance and Adjustment

2. Remove lower wear strips (**Figure 19, item 1**), and if necessary, lower belt return (**Figure 19, item 2**) from lower frame assembly.

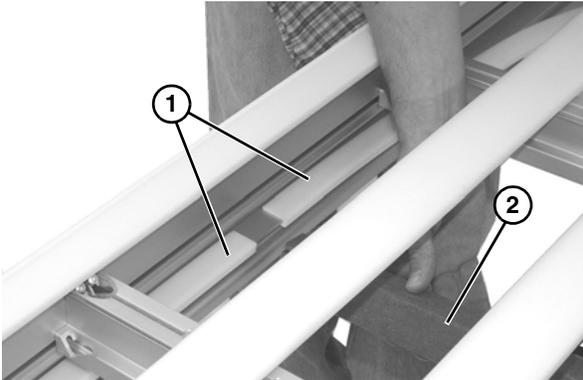


Figure 19

3. Remove two screws (**Figure 20, item 1**) from each clamp on center frame channel.

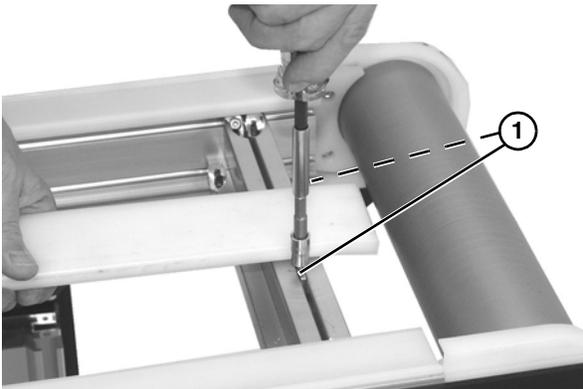


Figure 20

4. Remove center frame channel (**Figure 21, item 1**), making sure to keep each clamp matched with channel of each cross member (**Figure 21, item 2**).

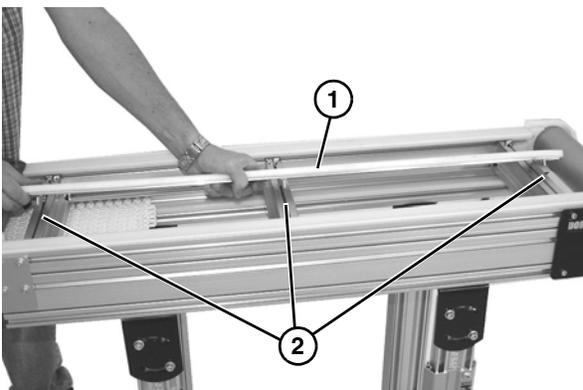


Figure 21

5. Remove the center wear strip (**Figure 22, item 1**) from the center frame channel (**Figure 22, item 2**).

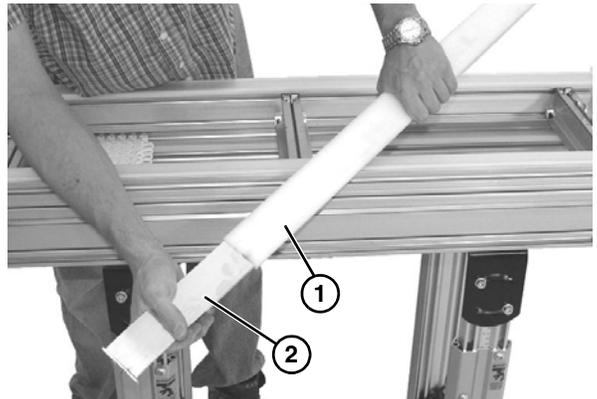


Figure 22

Installation

NOTE

The stop plate (**Figure 23, item 1**) on the center wear strip (**Figure 23, item 2**) faces the idler end (**Figure 23, item 3**) of the conveyor.

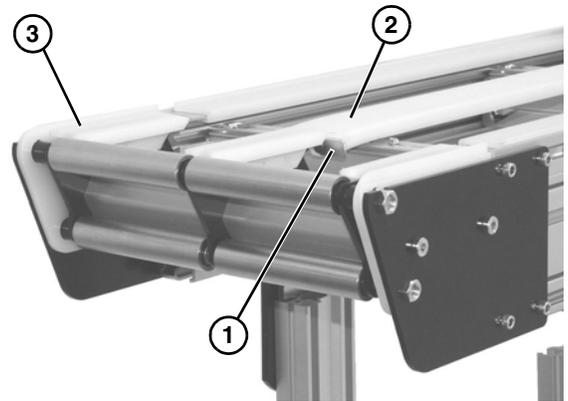


Figure 23

Install components reverse of removal.

Preventive Maintenance and Adjustment

Spindle Removal

⚠ WARNING

SEVERE HAZARD! Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.

Remove conveyor belt to access spindle(s). See “Replacing the Entire Belt” on page 10. Remove the desired spindle following the corresponding instructions below:

- **A** – Nose Bar Drive Spindle Removal
- **B** – Idler Spindle Removal
- **C** – Nose Bar Idler Spindle Removal

A – Nose Bar Drive Spindle Removal

⚠ WARNING

Drive shaft keyway may be sharp. HANDLE WITH CARE.

1. Remove the gearmotor. For detailed instructions, refer to the appropriate drive package manual.
2. Remove socket head bolt (**Figure 24, item 1**) on each side of drive tail assembly (**Figure 24, item 2**).

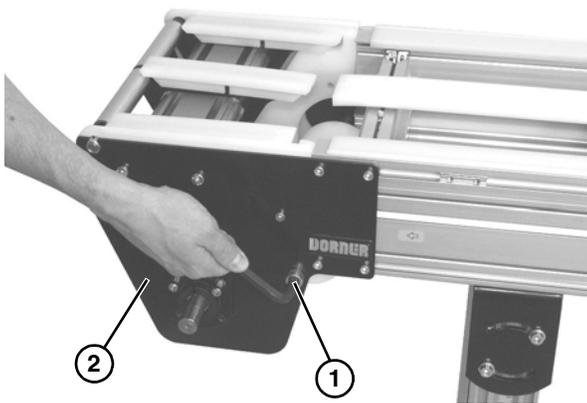


Figure 24

3. Lower roller assembly (**Figure 25, item 1**) from drive tail assembly (**Figure 25, item 2**).

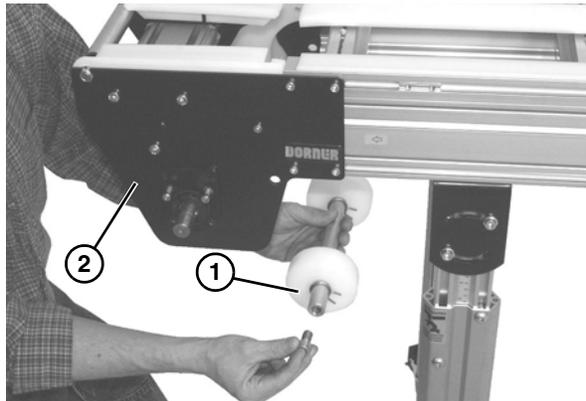


Figure 25

4. Loosen the four socket head screws (**Figure 26, item 1**). Repeat on opposite side.

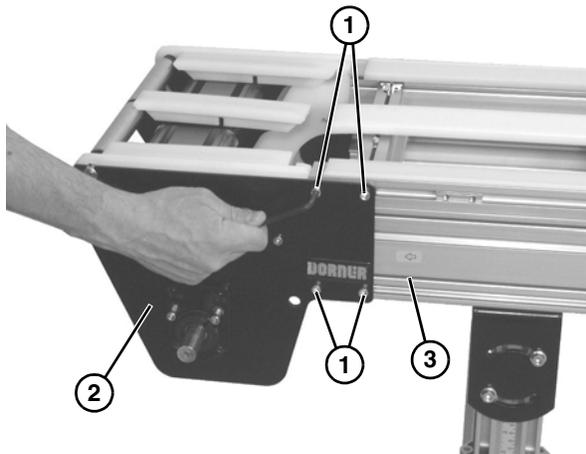


Figure 26

5. Remove the drive tail assembly (**Figure 26, item 2**) from the frame (**Figure 26, item 3**).
6. On right side, remove four socket head screws (**Figure 27, item 1**) and cover (**Figure 27, item 2**).

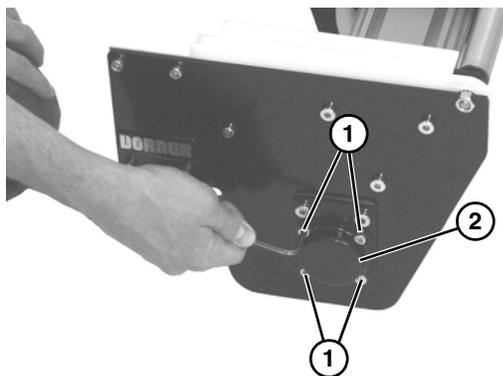


Figure 27

Preventive Maintenance and Adjustment

7. Loosen the bearing collar set screw (**Figure 28, item 1**) and remove bearing collar (**Figure 28, item 2**).

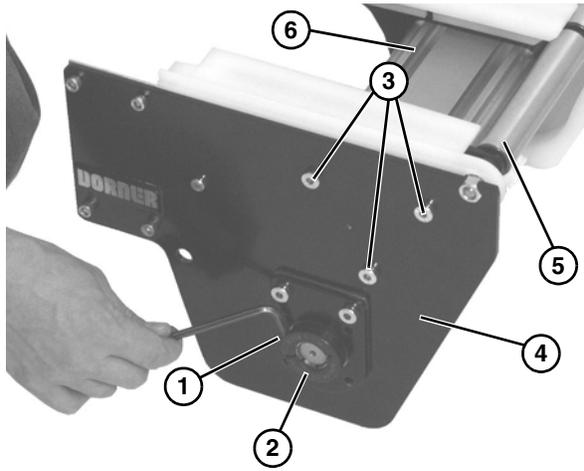


Figure 28

8. Remove three socket head screws (**Figure 28, item 3**), and remove plate (**Figure 28, item 4**) from drive spindle (**Figure 28, item 5**) and crossmember (**Figure 28, item 6**).
9. Remove retaining clip (**Figure 29, item 1**) and flanged puck (**Figure 29, item 2**) from drive spindle.

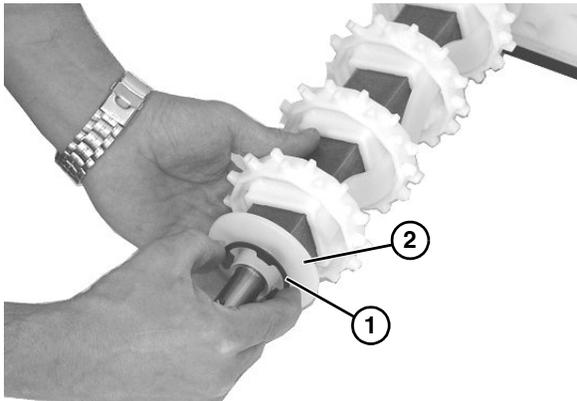


Figure 29

10. Slide entire sprocket assembly slightly outward, and remove the first sprocket (**Figure 30, item 1**) off the drive spindle and alignment bar (**Figure 30, item 2**).

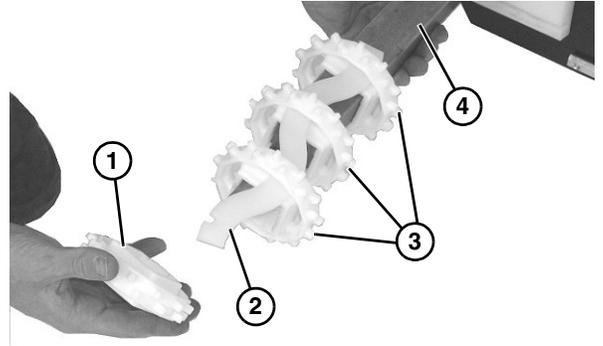


Figure 30

11. Remove remaining sprockets (**Figure 30, item 3**) off the alignment bar as you slide entire assembly off the drive spindle (**Figure 30, item 4**).
12. To assemble sprockets onto drive spindle, slide one sprocket (**Figure 31, item 1**) onto alignment bar (**Figure 31, item 2**) and slide assembly onto drive spindle (**Figure 31, item 3**).

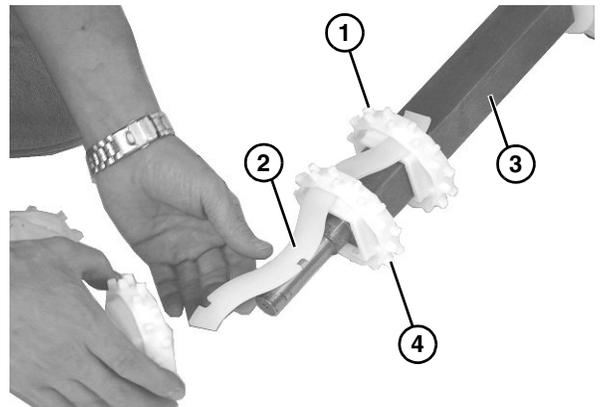


Figure 31

13. Install second sprocket (**Figure 31, item 4**) and subsequent sprockets one by one, while sliding entire assembly onto alignment bar and spindle.
14. Check drive terminal assembly (**Figure 32, item 1**) for wear. If worn, remove two low head cap screws (**Figure 32, item 2**) and low head cap screw (**Figure 32, item 3**) and replace.

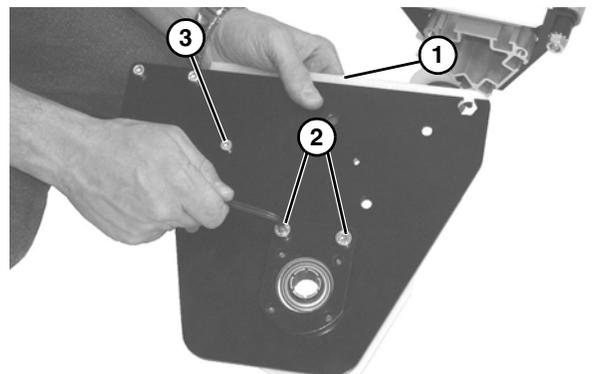


Figure 32

Preventive Maintenance and Adjustment

NOTE

When reinstalling the drive spindle tail assembly, the terminal assembly (Figure 33, item 1) should be flush with the conveyor frame (Figure 33, item 2).

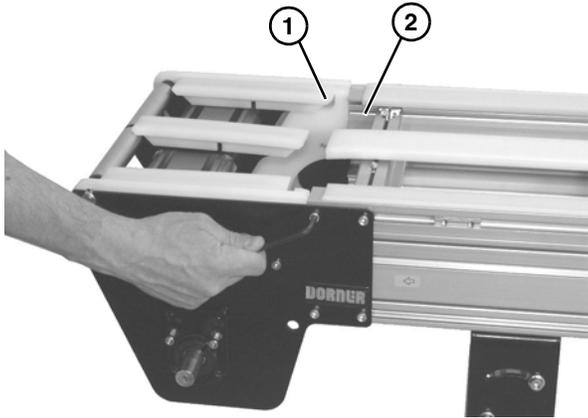


Figure 33

B – Idler Spindle Removal

1. Be sure the conveyor is supported.
2. On one side of conveyor, loosen the four socket head screws (Figure 34, item 1). Repeat on opposite side.

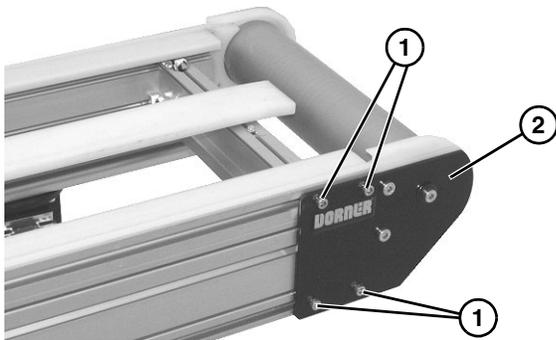


Figure 34

3. Remove idler tail assembly (Figure 34, item 2).

4. Remove socket head screw (Figure 35, item 1) from plate (Figure 35, item 2) and center of spindle shaft (Figure 35, item 3). Repeat procedure on opposite side.

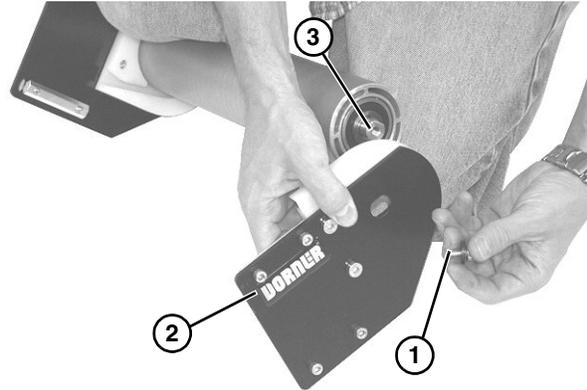


Figure 35

5. Remove the spindle shaft assembly: remove the clip ring (Figure 36, item 1) and washer (Figure 36, item 2) from one side of the spindle assembly.

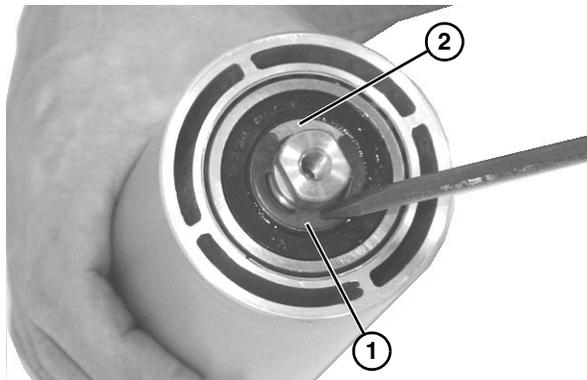


Figure 36

6. Slide the shaft assembly (Figure 37, item 1) out of the pulley (Figure 37, item 2).



Figure 37

Preventive Maintenance and Adjustment

7. Check idler terminal assembly (**Figure 38, item 1**) for wear. If worn, remove two low head cap screws (**Figure 38, item 2**) and replace.

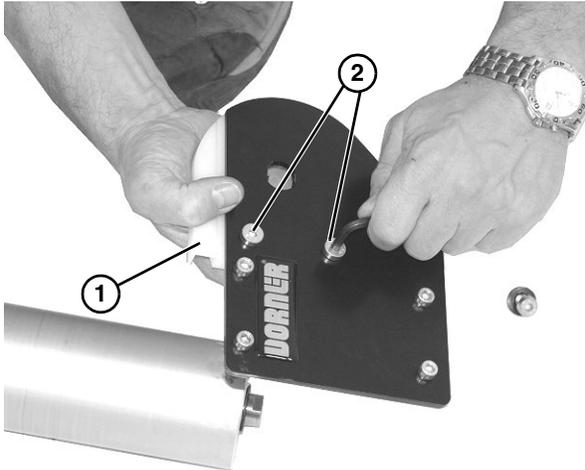


Figure 38

NOTE

When reinstalling the idler spindle tail assembly, the idler terminal assembly (**Figure 39, item 1**) should be flush with the conveyor frame (**Figure 39, item 2**).

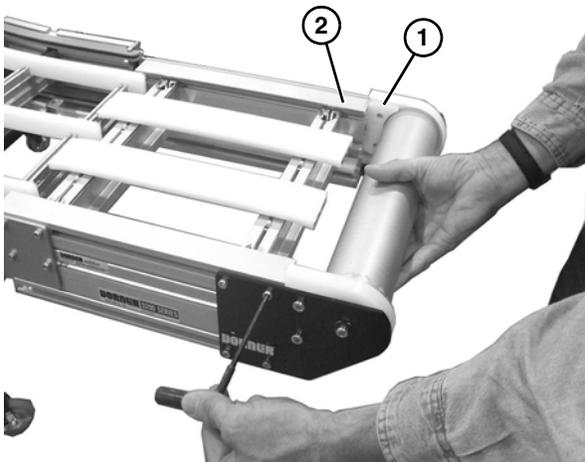


Figure 39

C – Nose Bar Idler Spindle Removal

1. Be sure the conveyor is supported.
2. On one side of conveyor, loosen the four socket head screws (**Figure 40, item 1**). Repeat on opposite side.

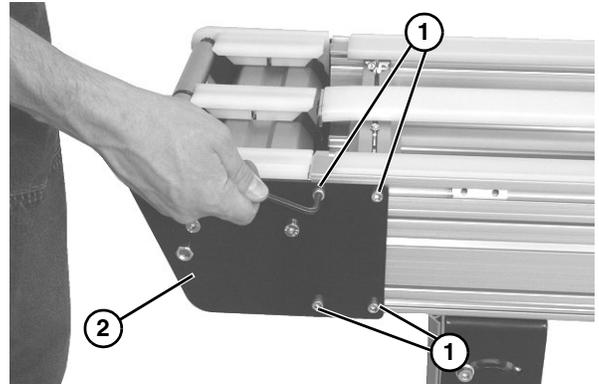


Figure 40

3. Remove idler tail assembly (**Figure 40, item 2**).
4. Remove two low head cap screws (**Figure 41, item 1**) from plate (**Figure 41, item 2**). Repeat procedure on opposite side.

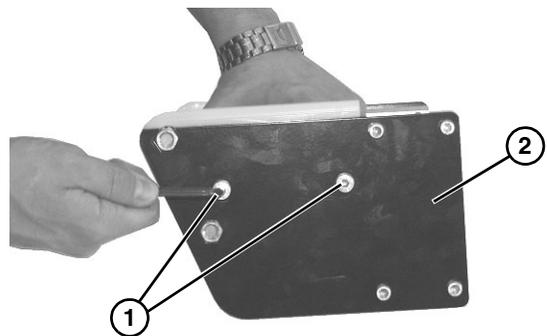


Figure 41

5. Remove upper nut (**Figure 42, item 1**) and spacer from end of axle shaft assembly.

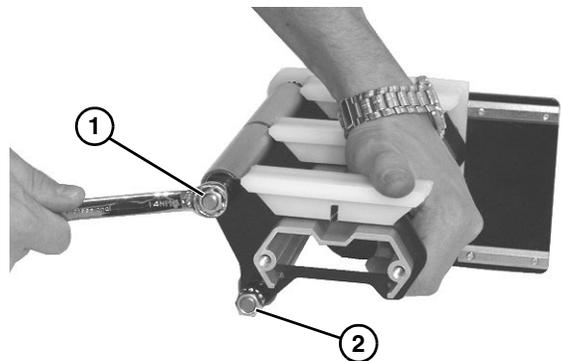


Figure 42

6. Remove lower nut (**Figure 42, item 2**) and spacer from lower axle shaft assembly.

Preventive Maintenance and Adjustment

- Slide the support plate (**Figure 43, item 1**) off of both axle shafts.

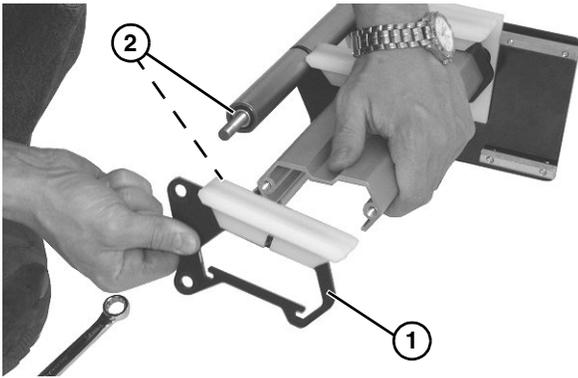


Figure 43

- Remove washer (**Figure 43, item 2**) off of lower and upper axle shafts.
- Remove roller assembly (**Figure 44, item 1**) and washer (**Figure 44, item 2**) from axle shaft (**Figure 44, item 3**).

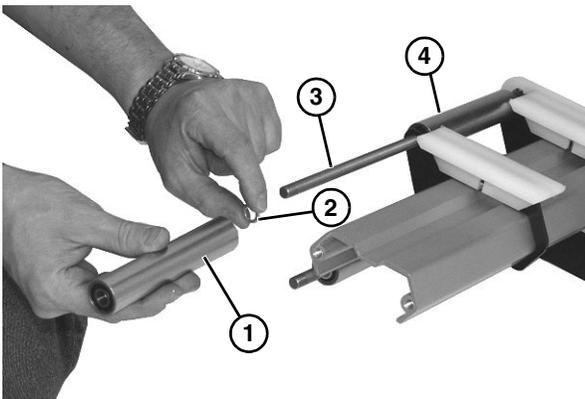


Figure 44

- Remove remaining roller assembly components (**Figure 44, item 4**) on opposite side.
- Check idler terminal assembly on each side (**Figure 45, item 1**) for wear. If worn, replace.

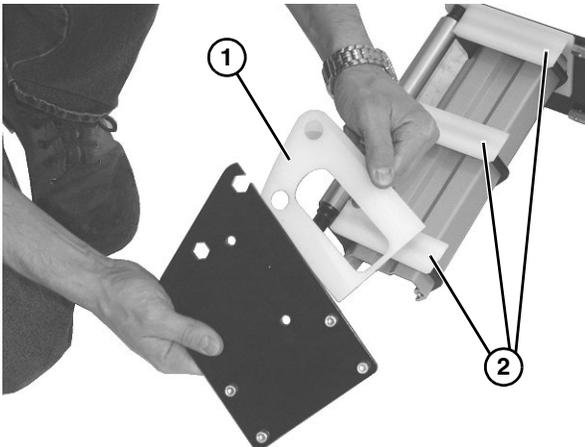


Figure 45

- Remove and replace wear guides (**Figure 45, item 2**) if worn. When replacing, secure onto pins on each support plate.

NOTE

*When reinstalling the idler spindle tail assembly, the idler terminal assembly (**Figure 46, item 1**) should be flush with the conveyor frame (**Figure 46, item 2**).*

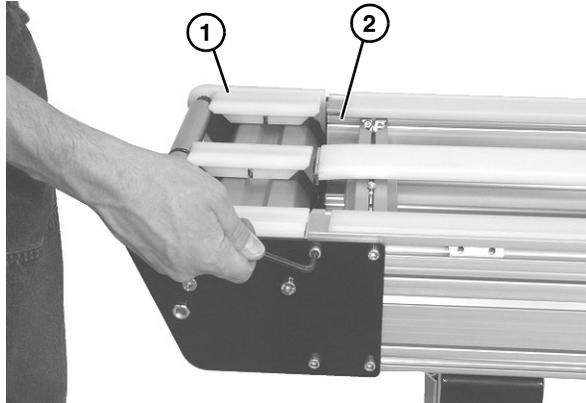


Figure 46

Spindle Replacement

Drive Spindle

To replace the drive spindle, reverse the "A - Nose Bar Drive Spindle Removal" procedure on page 12.

Idler Spindle

To replace the idler spindle, reverse the "B - Idler Spindle Removal" procedure on page 14.

Nose Bar Idler Spindle

To replace the idler spindle, reverse the "C - Nose Bar Idler Spindle Removal" procedure on page 15.

Preventive Maintenance and Adjustment

Bearing Replacement

 WARNING

Exposed moving parts can cause severe injury. LOCK OUT POWER before removing guards or performing maintenance.

Drive Bearing Removal and Replacement

 WARNING

Drive shaft keyway may be sharp. HANDLE WITH CARE.

Removal

1. Turn bearing (Figure 47, item 1) to align with slots (Figure 47, item 2) in bearing housing. Then remove bearing.

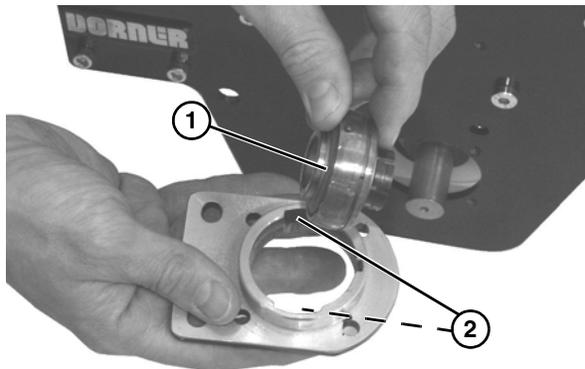


Figure 47

Replacement

1. Inspect bearing housing bearing surface. If worn or damaged, replace. See “Service Parts” on page 18.
2. Insert bearing (Figure 48, item 1) into housing slot: Locate anti-rotation nub (Figure 48, item 2) to align with slot (Figure 48, item 3), and twist bearing into housing.

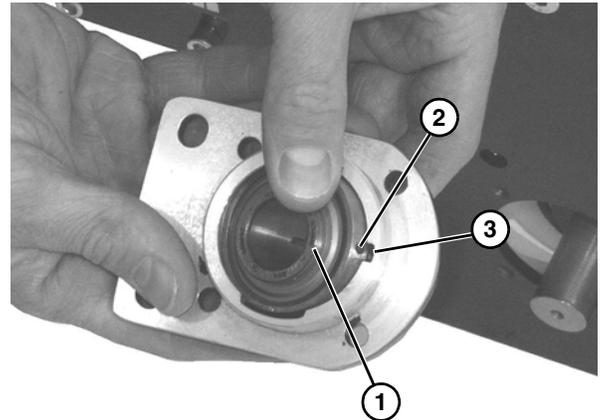



Figure 48

Service Parts

NOTE

For replacement parts other than those shown in this section, contact an authorized Dorner Service Center or the factory. Key Service Parts and Kits are identified by the Performance Parts Kits logo . Dorner recommends keeping these parts on hand.

Drive End Components

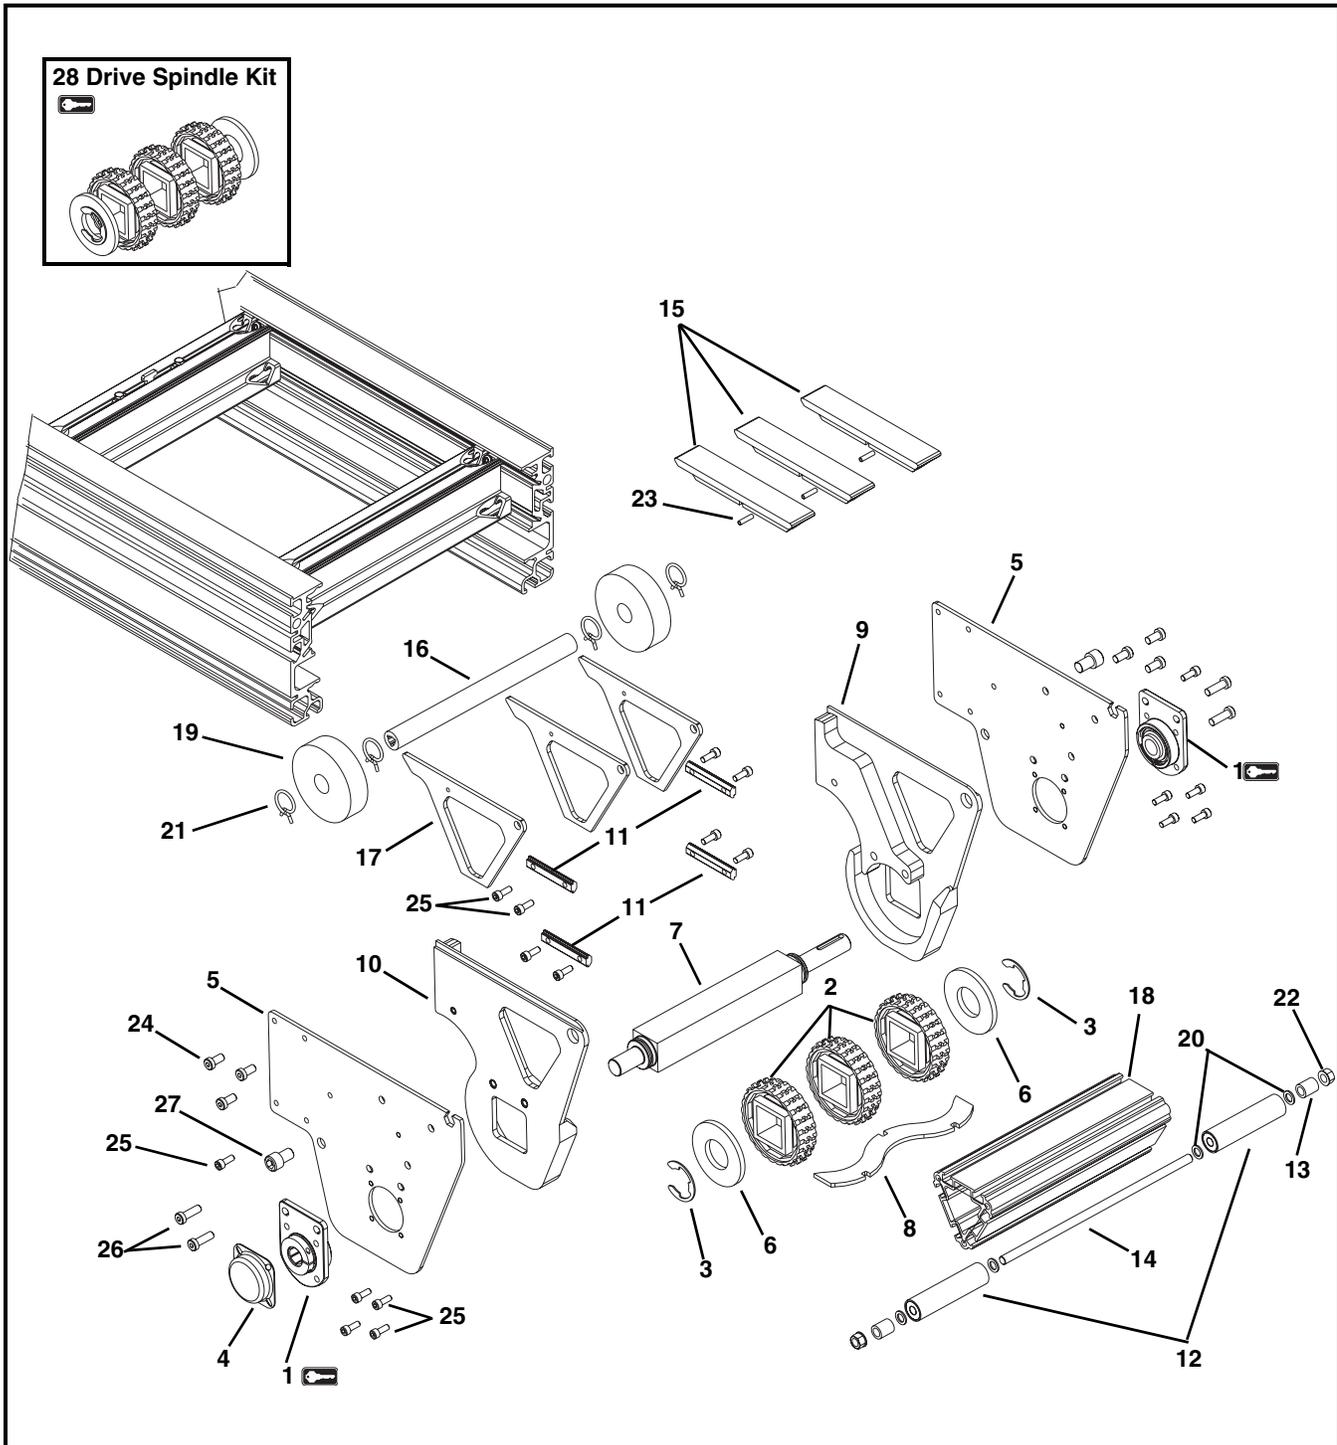


Service Parts

Item	Part Number	Description
1	52BKD	Drive Bearing Kit
		
2	807-1443	Sprocket
3	915-240	Retaining Ring
4	300139	Shaft Cover
5	352148	Tail Plate
6	352111	Sprocket Alignment Retainer Key
7	352112- <u>WW</u>	Drive Spindle
8	352138- <u>WW</u>	Sprocket Alignment Bar
9	352135	Drive Terminal Assembly Left Hand
10	352136	Drive Terminal Assembly Right Hand
11	300150M	Drop-In Tee Bar
12	352013- <u>WW</u>	Nose Bar Roller Assembly
13	352125	Spacer
14	352126- <u>WW</u>	Axle Shaft
15	352127	Wear Guide
16	352145- <u>WW</u>	Roller Rod
17	352147	Support Plate
18	352150- <u>WW</u>	Crossmember
19	500990	Return Disk
20	807-1136	Washer
21	807-1151	Clamp
22	910-203	Hex Nut
23	913-405	Pin
24	920893M	Low Head Cap Screw, M8-1.25 x 16 mm
25	920616M	Socket Head Screw, M6-1.00 x 16 mm
26	920895M	Low Head Cap Screw, M8-1.25 x 25 mm
27	921218M	Socket Head Screw, M12-1.75 x 18 mm
28	52DT- <u>WW</u>	Drive Spindle Kit (Includes Items 2, 3, 6 and 8)
		
<u>WW</u> = Conveyor width reference: 08 – 60 in 02 increments		

Service Parts


Idler End Components

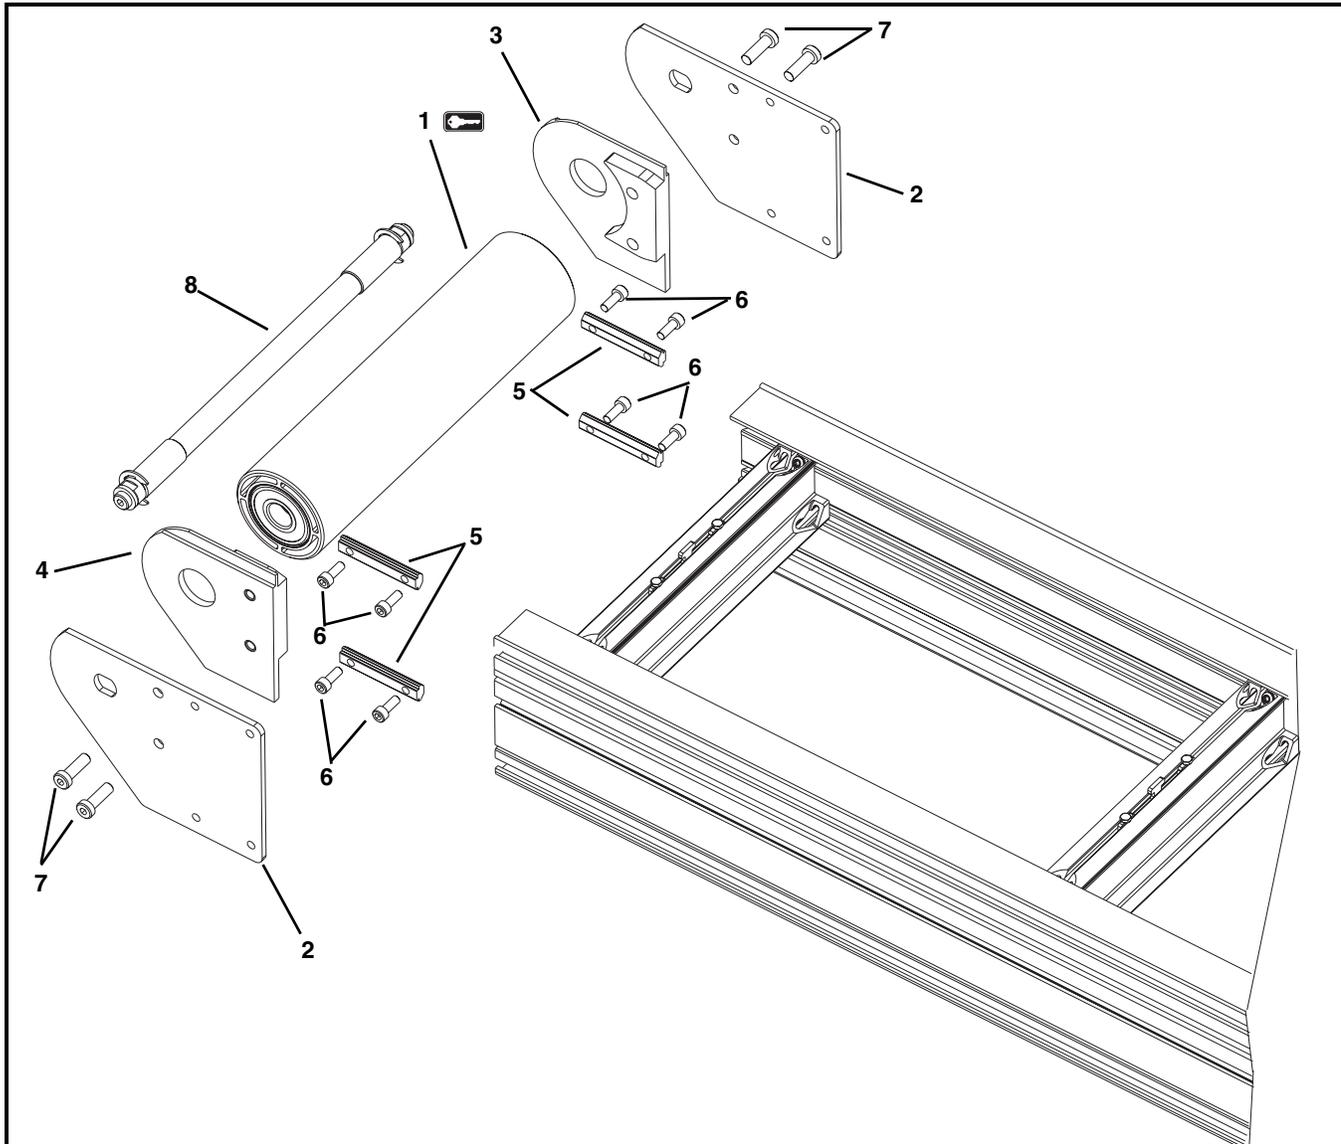

Item	Part Number	Description
1 	352011- <u>WW</u>	Idler Pulley Assembly
2	352110	Cover Plate
3	352123	Idler Terminal Assembly Left Hand
4	352124	Idler Terminal Assembly Right Hand

Item	Part Number	Description
5	300150M	Drop-In Tee Bar
6	920616M	Socket Head Screw, M6-1.00 x 16 mm
7	920895M	Low Head Cap Screw, M8-1.25 x 25 mm
8	352012- <u>WW</u>	Idler Wand Assembly
<u>WW</u> = Conveyor width reference: 08 – 60 in 02 increments		

Nose Bar Idler End Components

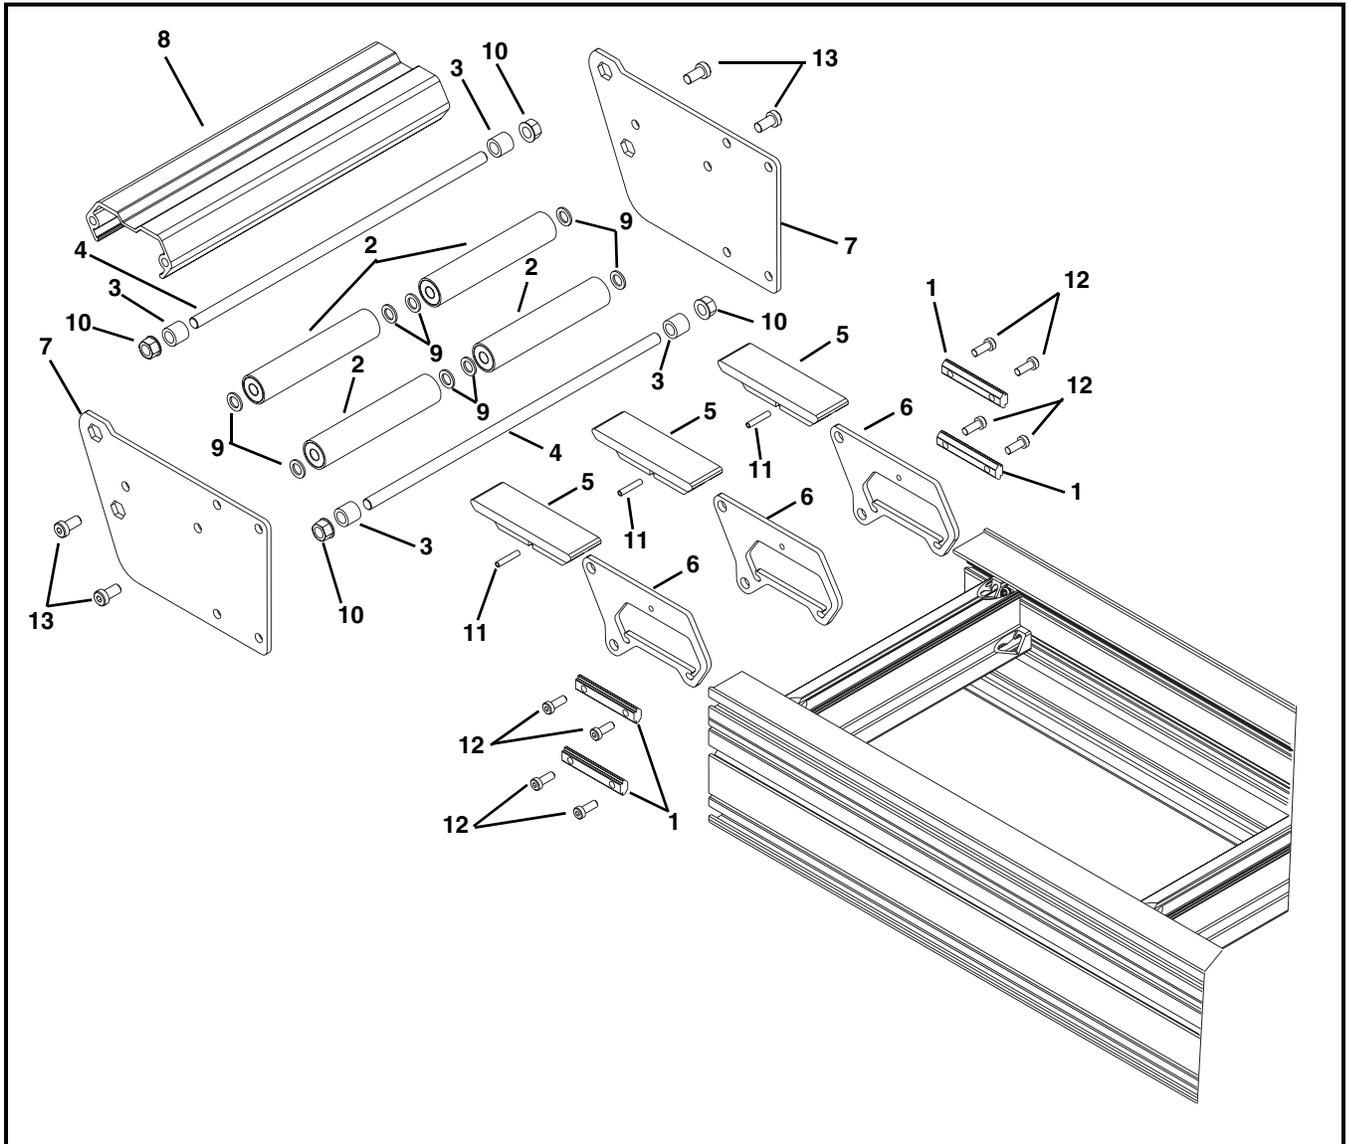


Item	Part Number	Description
1	300150M	Drop-In Tee Bar
2	352013- <u>WW</u>	Roller Assembly
3	352125	Spacer
4	352126- <u>WW</u>	Axle Shaft
5	352128	Wear Guide
6	352146	Support Plate
7	352149	Cover Plate

Item	Part Number	Description
8	352151- <u>WW</u>	Crossmember
9	807-1136	Washer
10	910-203	Hex Nut
11	913-409	Pin
12	920693M	Socket Head Screw, M6-1.00 x 16 mm
13	920893M	Low Head Cap Screw, M8-1.25 x 25 mm

WW = Conveyor width reference: 08 – 60 in 02 increments

Service Parts


Frame Assembly

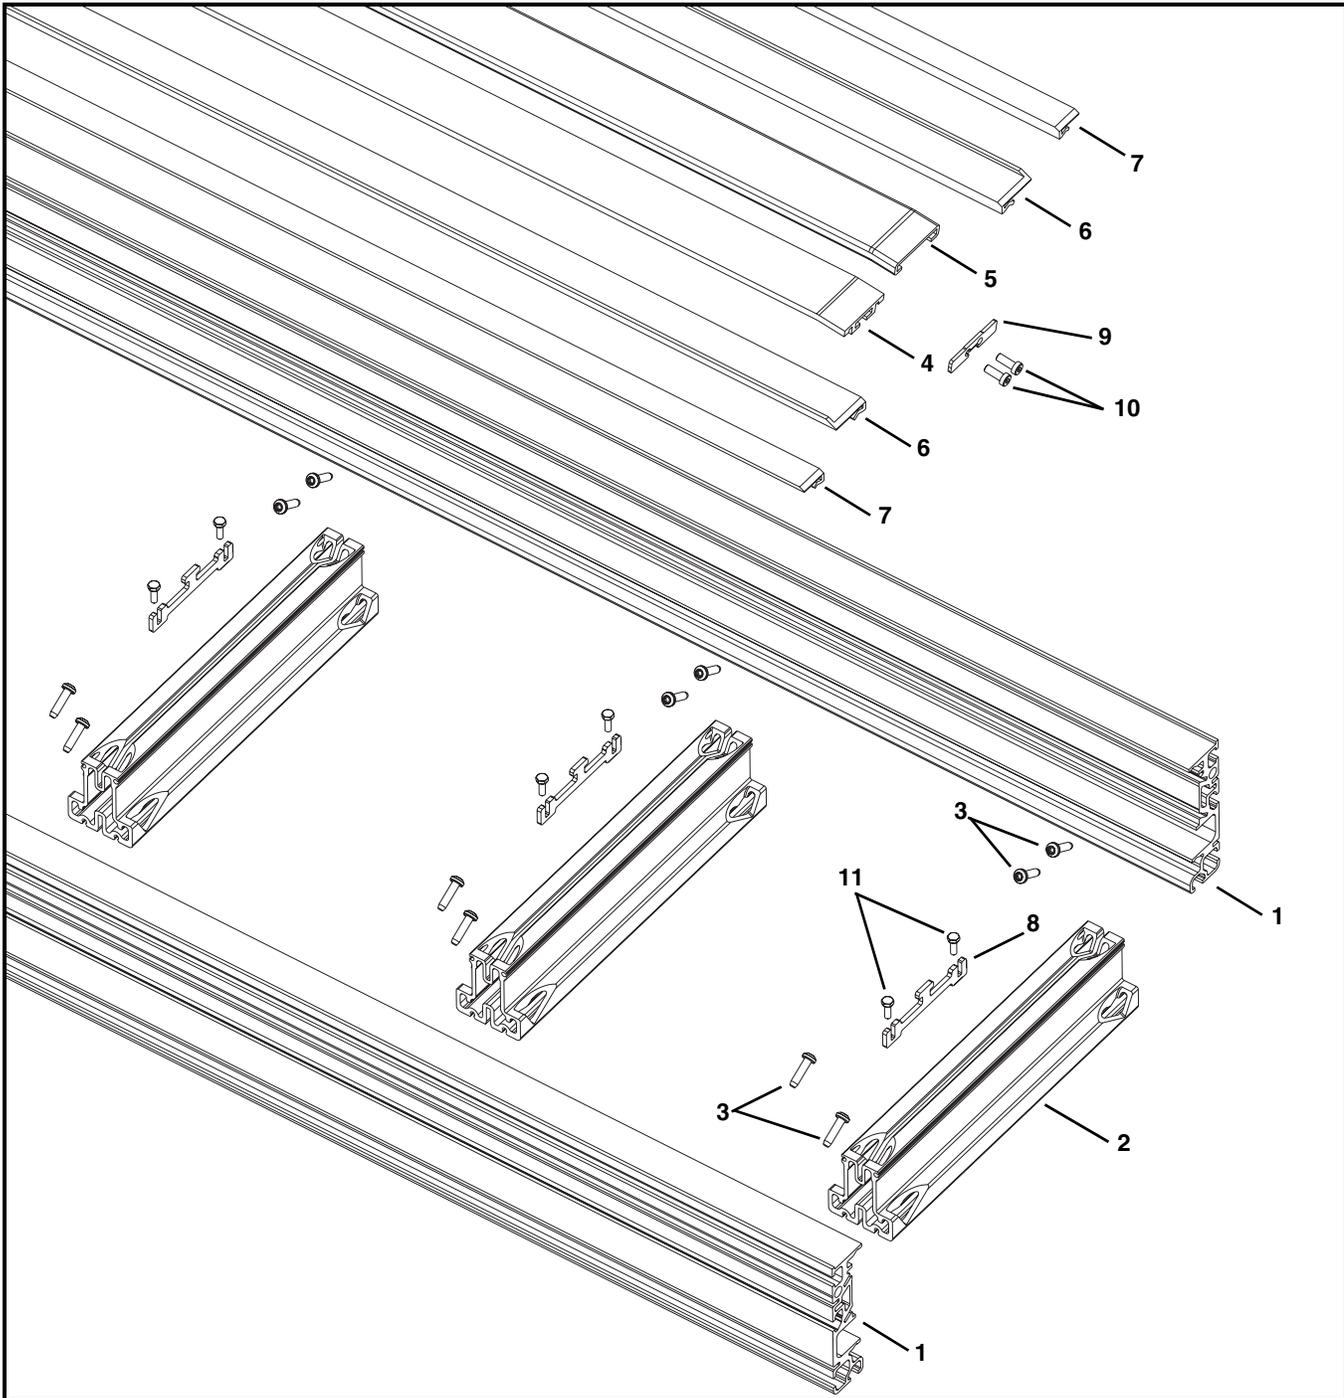

Item	Part Number	Description
1	352100-LLLLL	Side Rail
2	352101-WW	Cross Support Rail
3	352108	Pan Screw, M5-.80 x 20 mm
4	352102-LLLLL	Center Bed Rail
5	352103-LLLLL	Center Wearstrip
6	352104-LLLLL	Top Wearstrip
7	352105-LLLLL	Return Wearstrip
8	352106	Center Bed Rail Hold Down Clip

Item	Part Number	Description
9	352107	Center Wearstrip Stop Plate
10	920693M	Low Head Cap Screw, M6-1.00 x 16 mm
11	960498M	Hex Head Cap Screw, M4-.70 x 12 mm
WW = Conveyor width reference: 08 – 60 in 02 increments LLLLL = Length in inches with 2 decimal places. Length Example: Length = 95.25" LLLLL = 09525		


Connecting Assembly

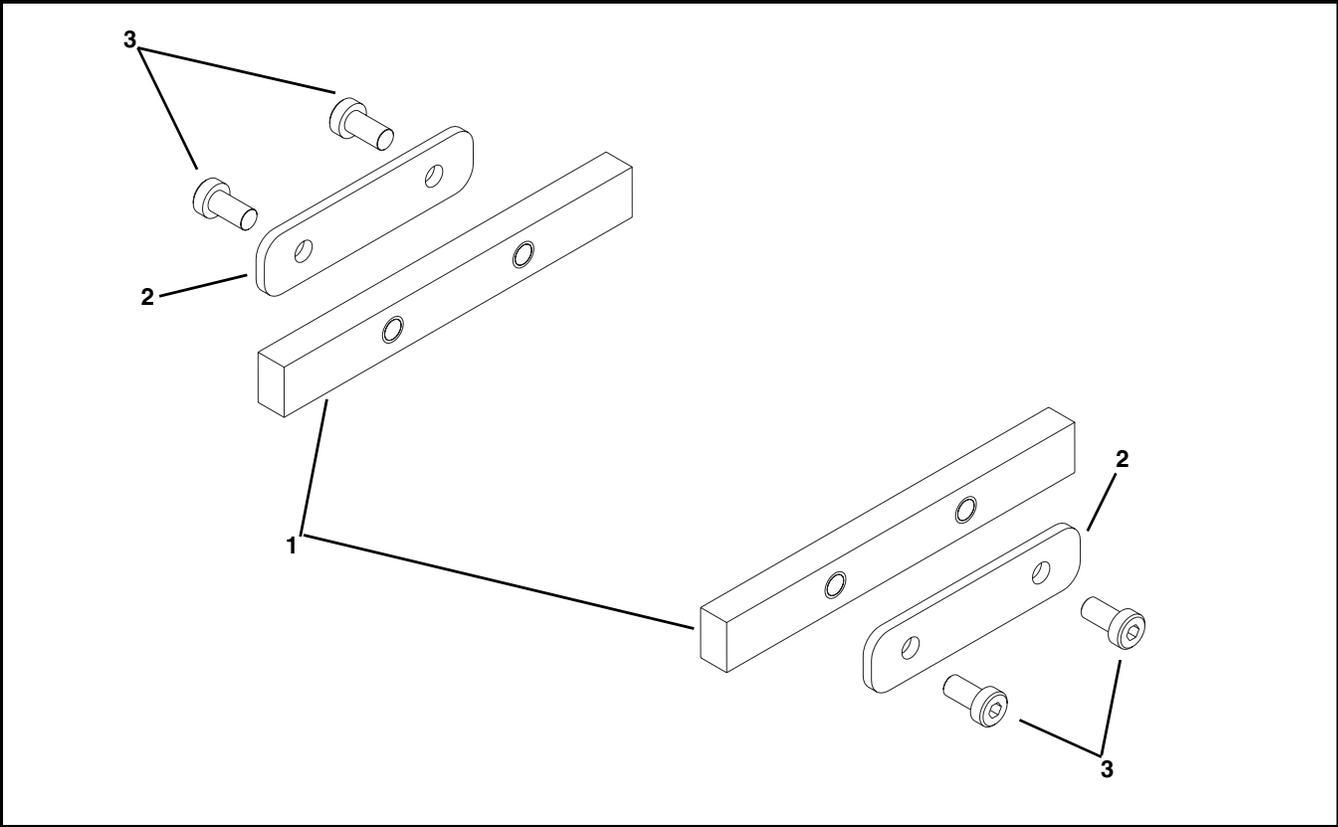

Item	Part Number	Description
1	352315	Bar Frame Connector
2	240859	Plate Frame Connector
3	920692M	Low Head Cap Screw, M6-1.00 x 12 mm

Service Parts


1" (25 mm) High Sides

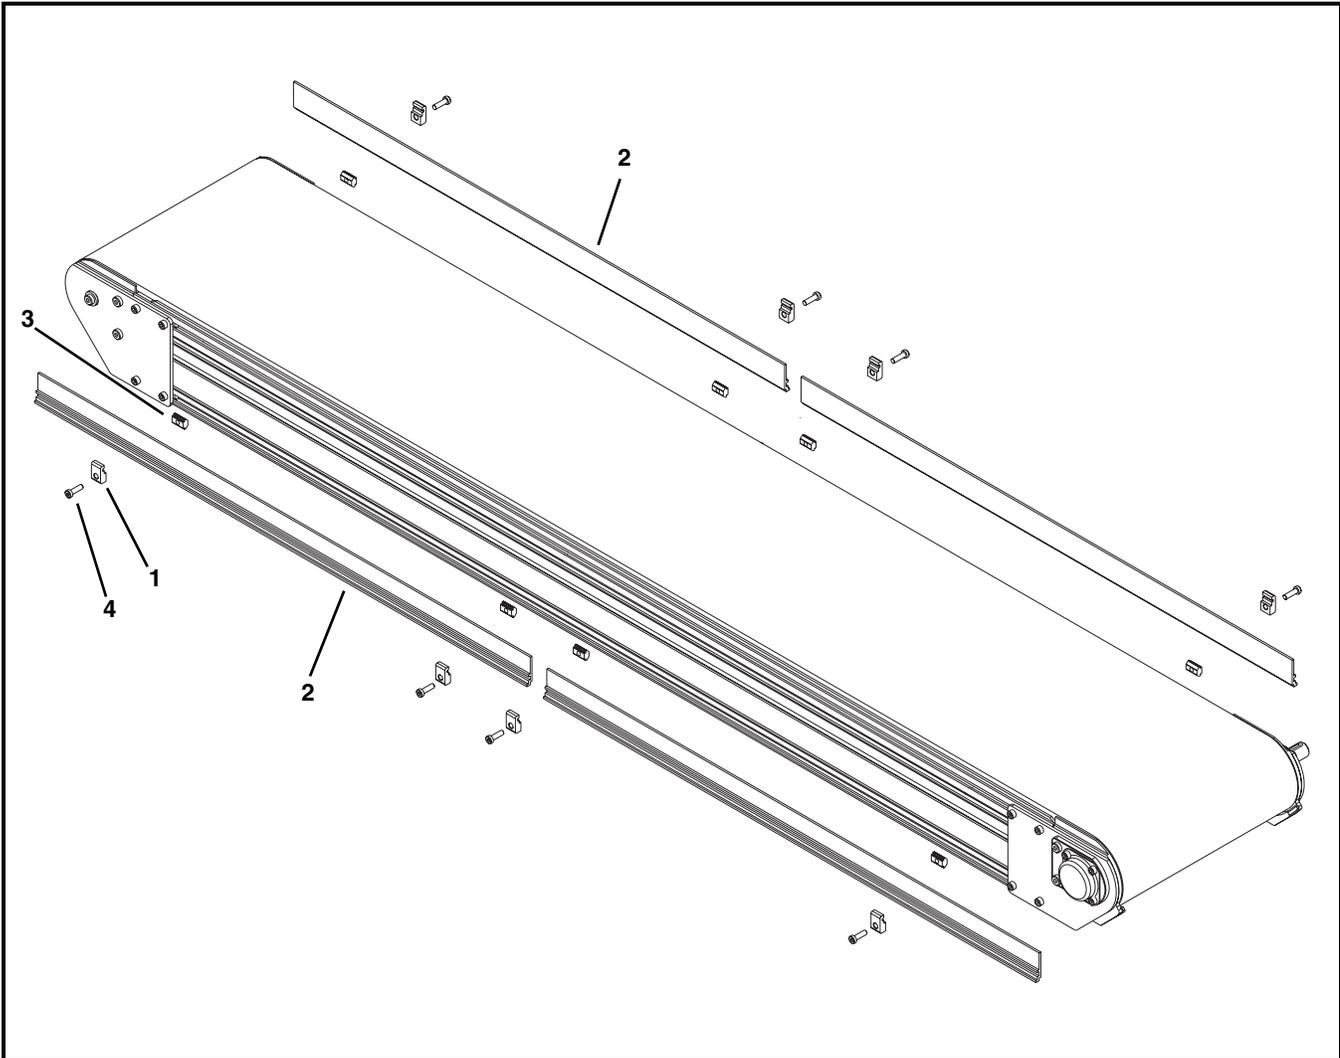

Item	Part Number	Description
1	200121	Guide Retaining Clip
2	380500-LLLLL	1" Guides
3	639971M	Single Drop -In Tee Bar

Item	Part Number	Description
4	920694M	Low Head Cap Screw, M6-1.00 x 20 mm
LLLLL = Length in inches with 2 decimal places.		
Length Example: Length = 95.25" LLLLL = 09525		

3" (76 mm) High Sides

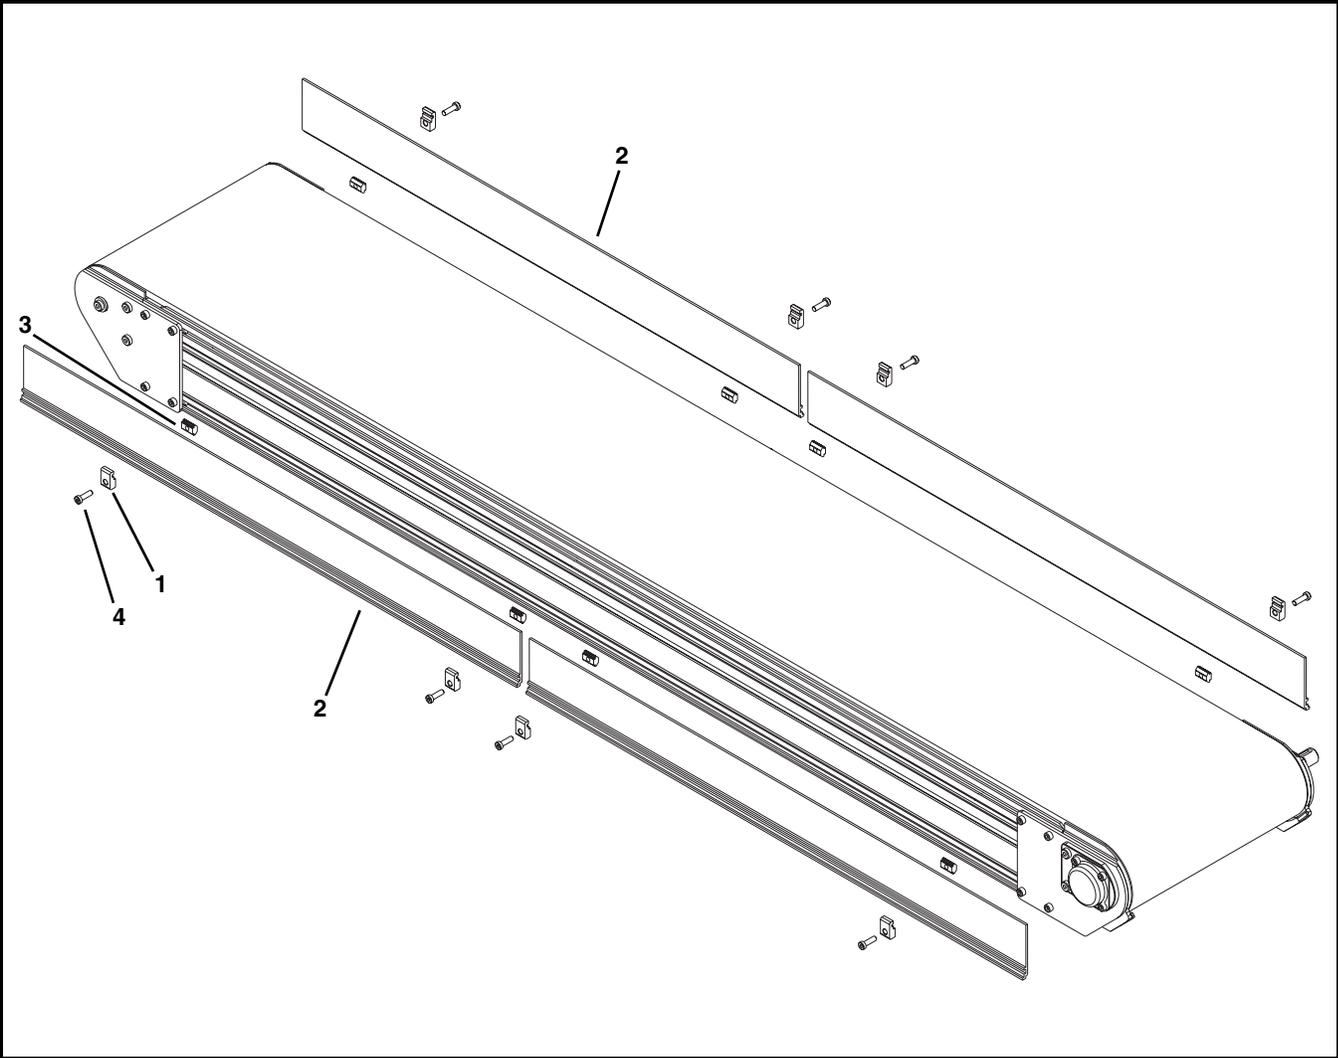


Item	Part Number	Description
1	200121	Guide Retaining Clip
2	380400-LLLLL	3" Guides
3	639971M	Single Drop -In Tee Bar

Item	Part Number	Description
4	920694M	Low Head Cap Screw, M6-1.00 x 20 mm
LLLLL = Length in inches with 2 decimal places.		
Length Example: Length = 95.25" LLLLL = 09525		

Service Parts


Fully Adjustable Guiding

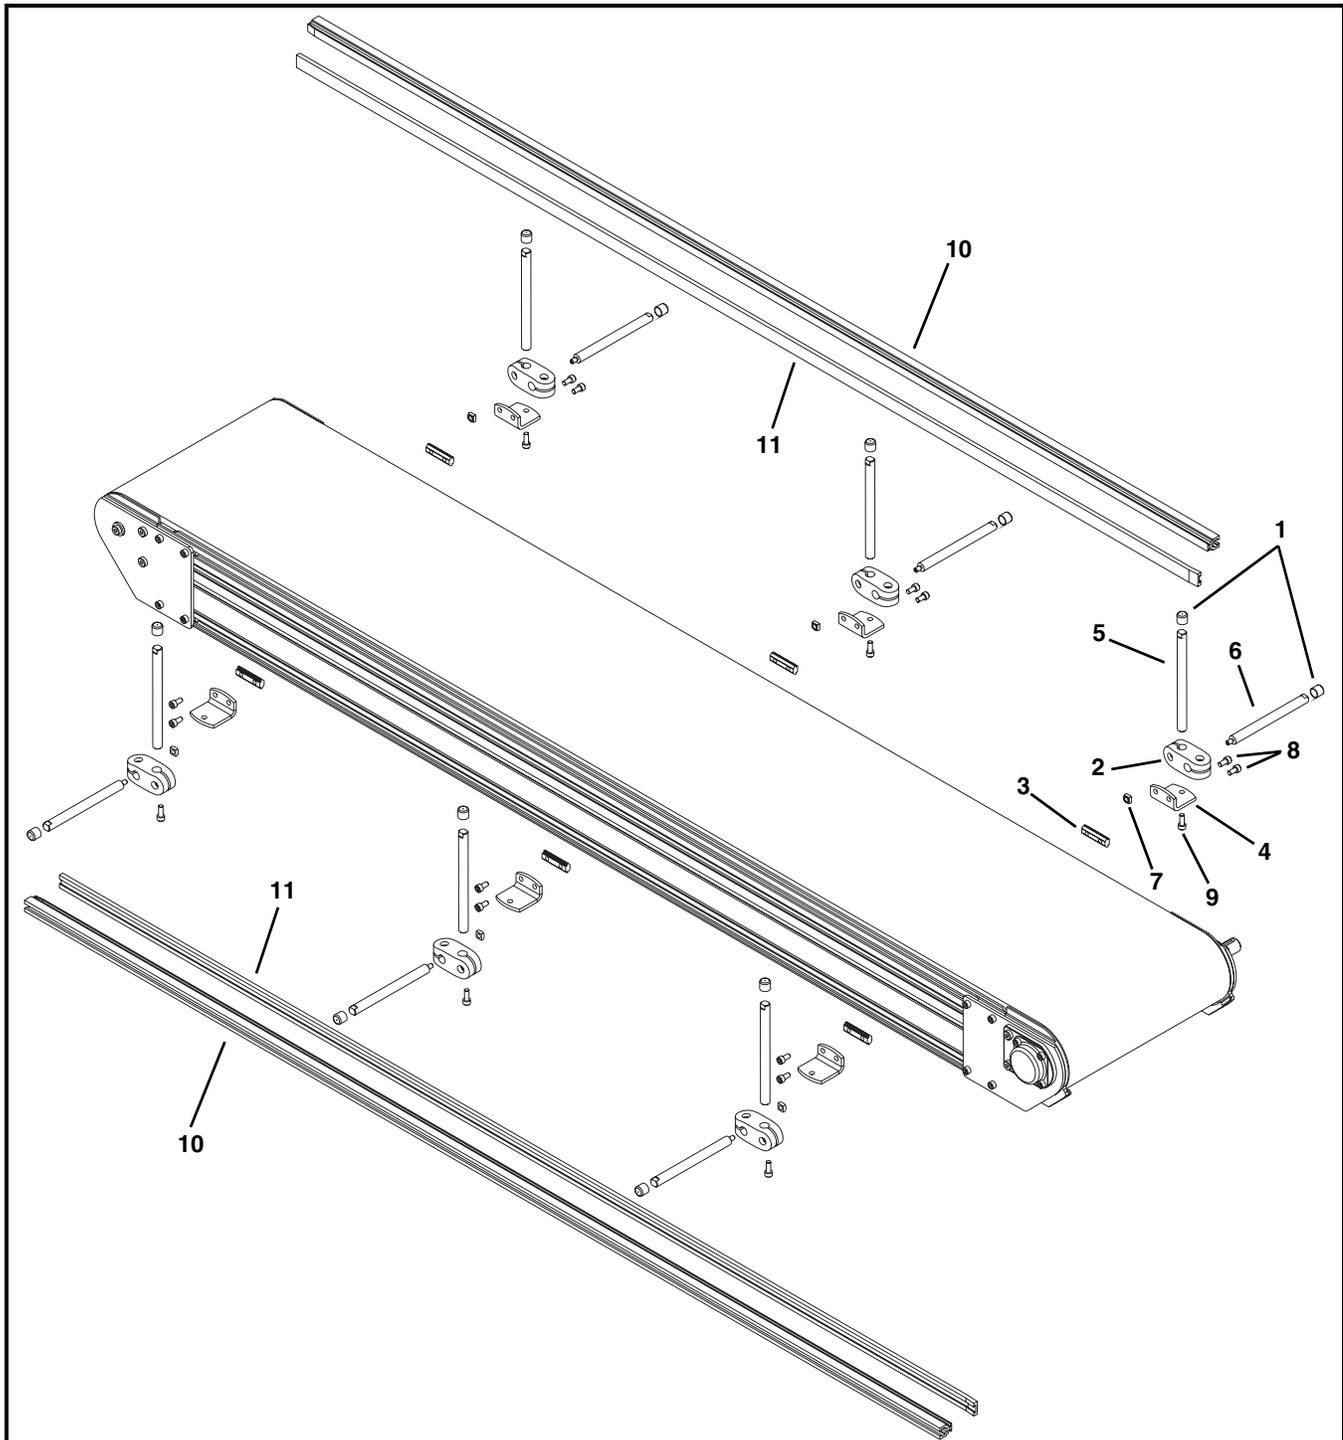

Item	Part Number	Description
1	807-948	Shaft Cap
2	807-652	Cross Block
3	200830M	Drop-In Tee Bar
4	202004M	Mounting Bracket
5	202027M	Vertical Mounting Guide Shaft
6	202028M	Horizontal Mounting Guide Shaft
7	674175MP	Square Nut, M6-1.00

Item	Part Number	Description
8	920612M	Socket Head Screw, M6-1.00 x 12 mm
9	920616M	Socket Head Screw, M6-1.00 x 16 mm
10	460063-LLLLL	Aluminum Profile Guide
11	614068P-LLLLL	Extruded Guide
LLLLL = Length in inches with 2 decimal places.		
Length Example: Length = 95.25" LLLLL = 09525		

Tool-Less Fully Adjustable Guiding

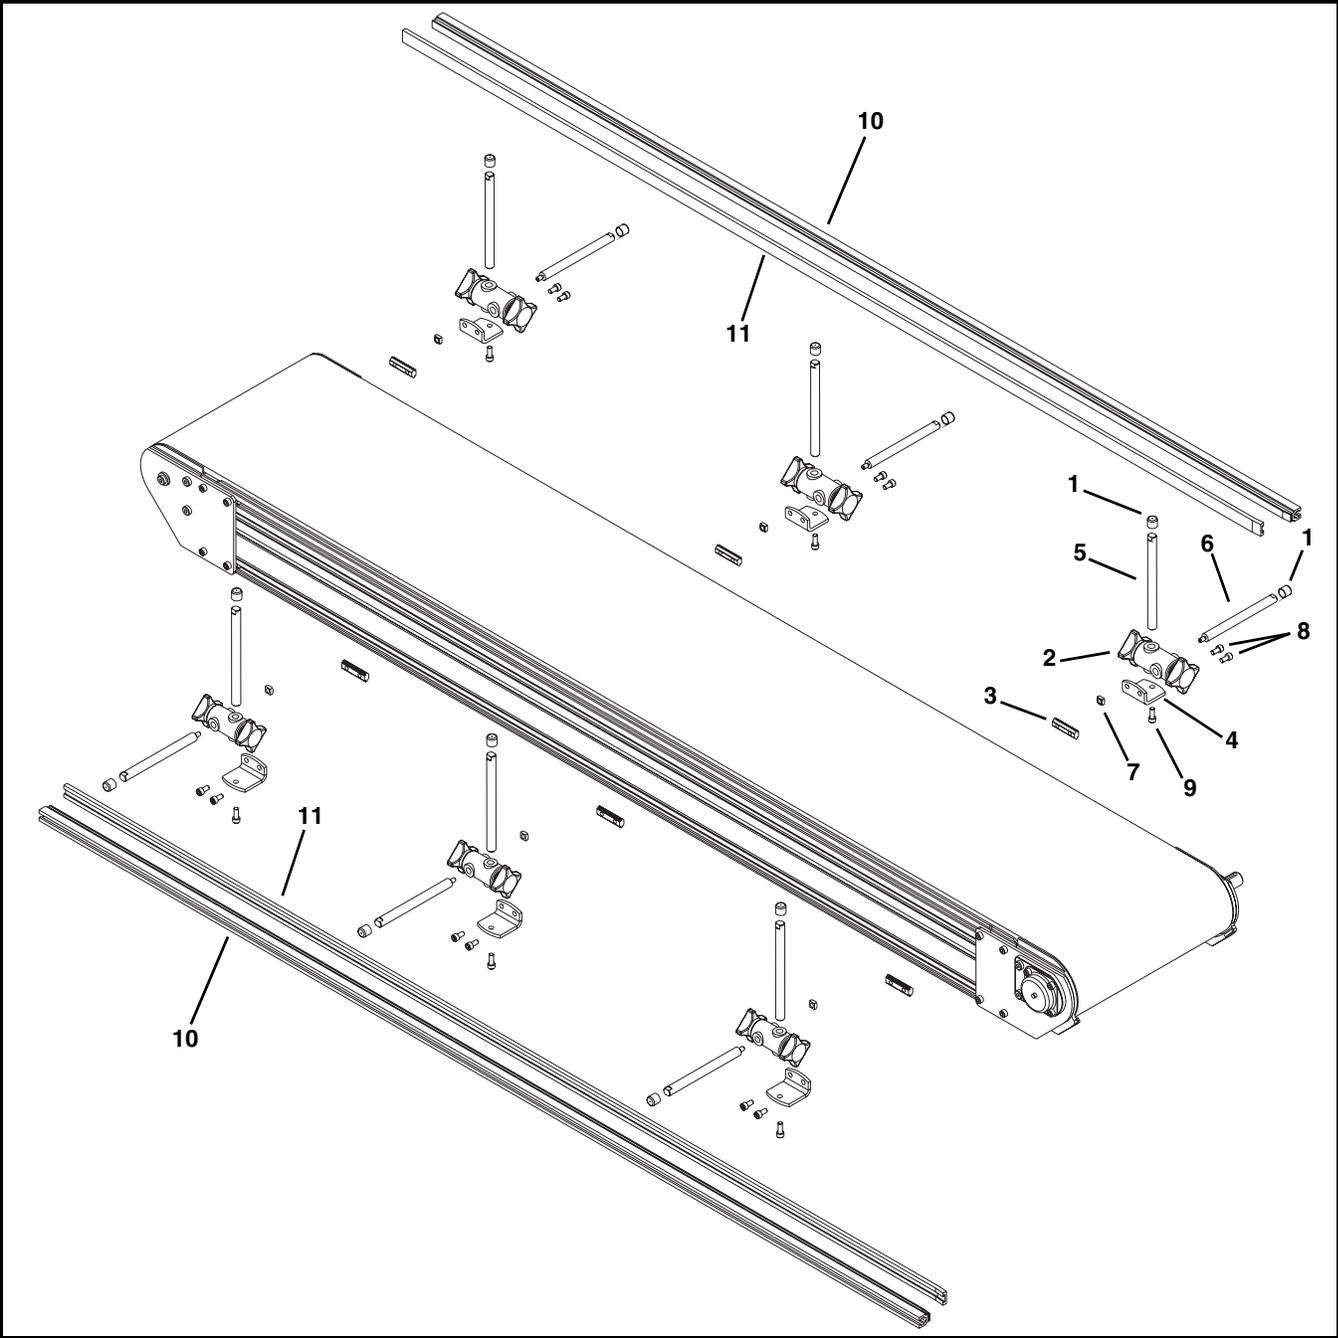


Item	Part Number	Description
1	807-948	Shaft Cap
2	807-1470	Cross Block
3	200830M	Drop-In Tee Bar
4	202004M	Mounting Bracket
5	202027M	Vertical Mounting Guide Shaft
6	202028M	Horizontal Mounting Guide Shaft

Item	Part Number	Description
7	674175MP	Square Nut, M6-1.00
8	920612M	Socket Head Screw, M6-1.00 x 12 mm
9	920616M	Socket Head Screw, M6-1.00 x 16 mm
10	460063-LLLLL	Aluminum Profile Guide
11	614068P-LLLLL	Extruded Guide
LLLLL = Length in inches with 2 decimal places.		
Length Example: Length = 95.25" LLLLL = 09525		

Service Parts


Twin Rail Adjustable Guiding

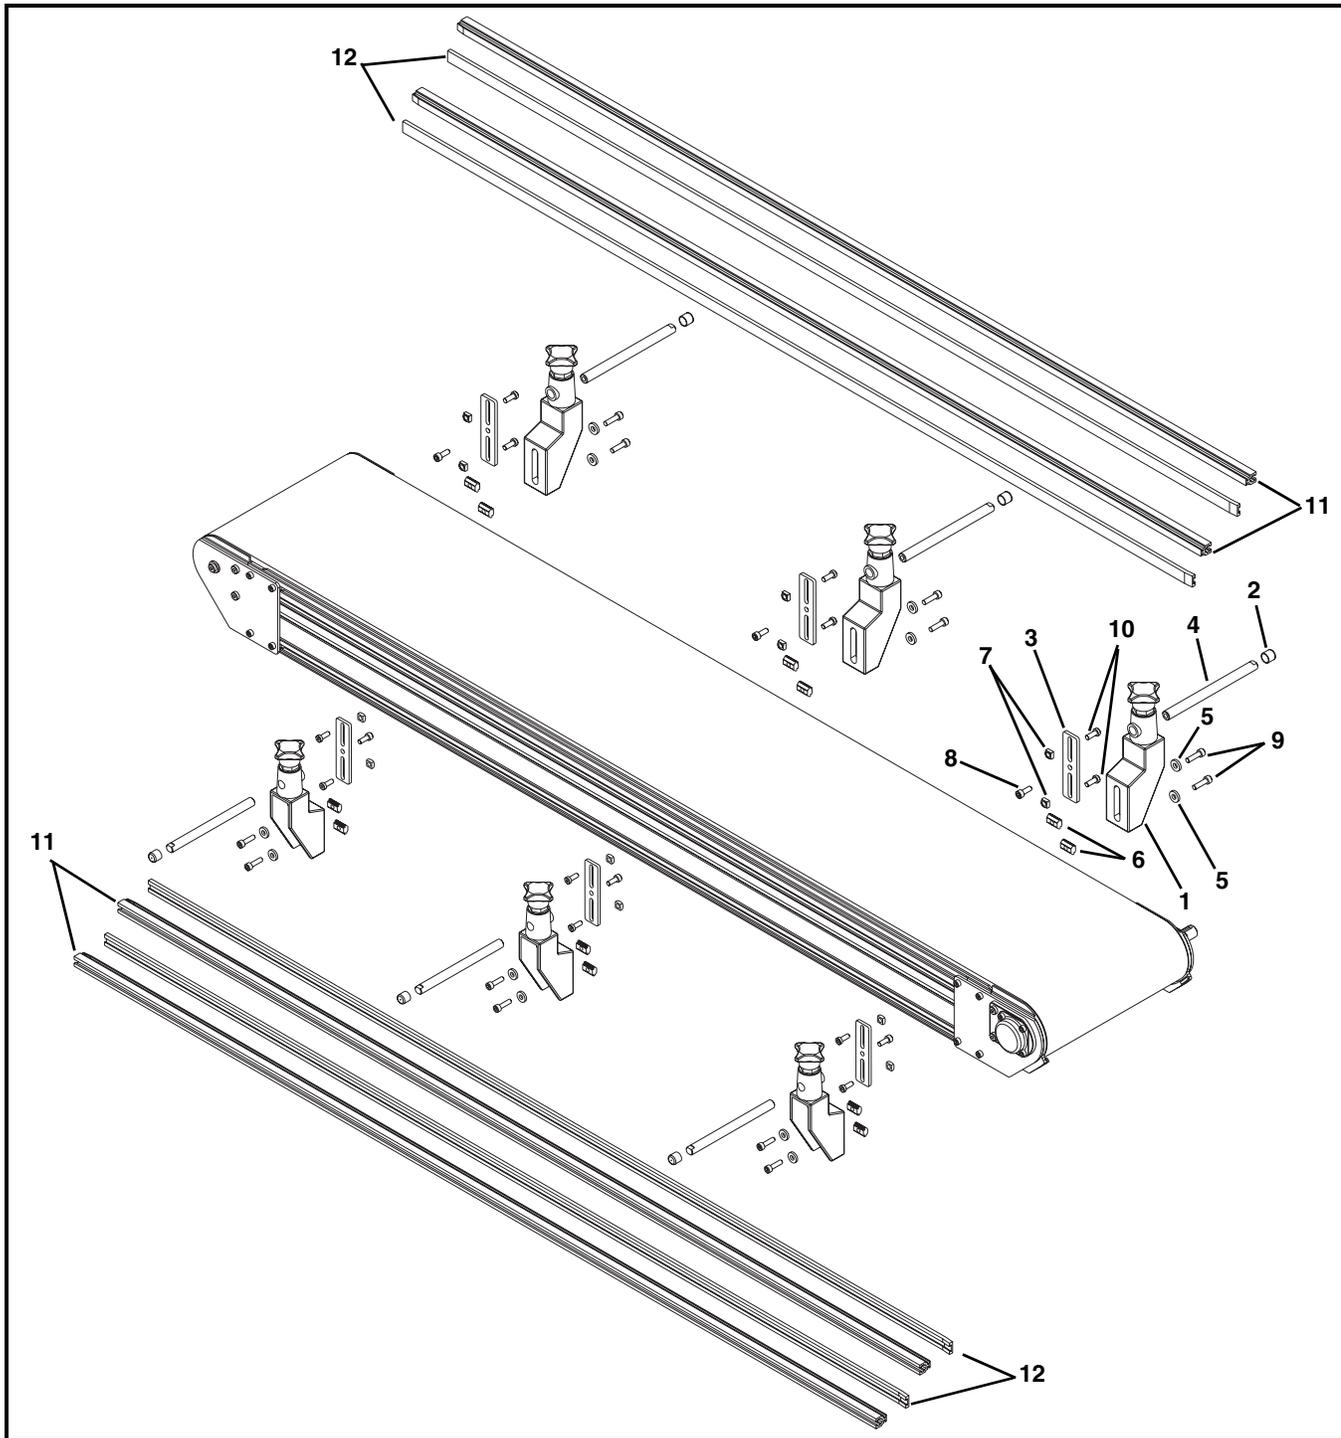

Item	Part Number	Description
1	807-1708	Swivel Guide Rail Bracket
2	807-948	Shaft Cap
3	352304	Guide Mounting Bracket
4	202027M	Mounting Shaft
5	605279P	Washer
6	639971M	Drop-In Tee Bar
7	674175MP	Square Nut, M6-1.00


Item	Part Number	Description
8	920616M	Socket Head Screw, M6-1.00 x 16 mm
9	920622M	Socket Head Screw, M6-1.00 x 22 mm
10	920693M	Low Head Cap Screw, M6-1.00 x 16 mm
11	460063-LLLLL	Aluminum Profile Guide
12	614068P-LLLLL	Extruded Guide
LLLLL = Length in inches with 2 decimal places.		
Length Example: Length = 95.25" LLLLL = 09525		

Flat Belt Returns

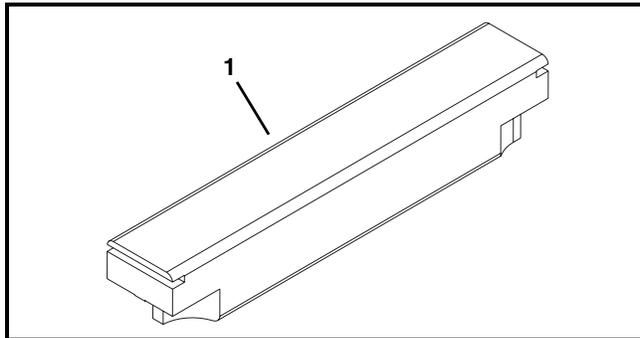

Item	Part Number	Description
1	352120- <u>WW</u>	Returns
<u>WW</u> = Conveyor width ref: 26 - 60 in 02 increments		

Stand Mount Kit

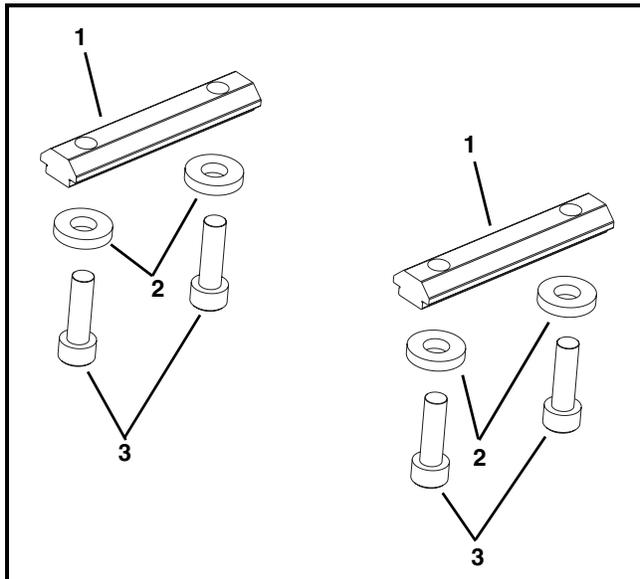

Item	Part Number	Description
1	300150M	Drop-In Tee Bar
2	605279P	Washer
3	920620M	Socket Head Screw, M6-1.00 x 20 mm

Ordering a Replacement Chain

Determine the length of chain required for the conveyor and round up to the nearest foot length. Order the proper number of chain repair kits (1' long each) for your conveyor. Dorner will ship chain kits that are of a reasonable length fully assembled

Example:

Overall chain length = 42' 5" (rounded up = 43')

Order: Qty (43) of 52BB-WW

BB = Chain reference number

WW = Conveyor width ref: 08-60 in 02 increments

Flat Belt Chain Repair Kit



Item	Part Number	Description
1	52 <u>BB</u> - <u>WW</u>	Flat Belt Chain Repair Kit (Includes 1 ft (305 mm) of flat belt chain and assembly pins)
<u>BB</u> = Chain Reference number		
<u>WW</u> = Conveyor width ref: 08 - 60 in 02 increments		

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

1. Name and address of customer.
2. Dorner part number(s) of item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number.

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization number for reference.

There will be a return charge on all new undamaged items returned for credit where Dorner was not at fault. Dorner is not responsible for return freight on such items.

Conveyors and conveyor accessories

Standard catalog conveyors	30%
MPB Series, cleated and specialty belt conveyors	50%
7400 & 7600 Series conveyors	non-returnable items
Engineered special products	case by case
Drives and accessories	30%
Sanitary stand supports	non-returnable items

Parts

Standard stock parts	30%
MPB, cleated and specialty belts	non-returnable items

Returns will not be accepted after 60 days from original invoice date.

The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory.

If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Technical Sales, Catalog Sales and Service Teams will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2008

DORNER MFG. CORP.

975 Cottonwood Ave., PO Box 20
Hartland, WI 53029-0020 USA
USA
TEL 1-800-397-8664 (USA)
FAX 1-800-369-2440 (USA)
Internet: www.dorner.com

Outside the USA:
TEL 1-262-367-7600
FAX 1-262-367-5827