



7400 Series Curved Nose Bar Conveyors

Installation, Maintenance and Parts Manual



DORNER MFG. CORP.
P.O. Box 20 • 975 Cottonwood Ave.
Hartland, WI 53029-0020 USA

INSIDE THE USA
TEL: 1-800-397-8664
FAX: 1-800-369-2440

OUTSIDE THE USA
TEL: 262-367-7600
FAX: 262-367-5827

For other service manuals visit our website at:
www.dorner.com/service_manuals.asp

Table of Contents

Introduction	2	Wear Strips and Belt Returns	17
Warnings – General Safety.....	3	Maintaining the Conveyor Belt	17
Product Description	4	Troubleshooting	17
Specifications	4	Conveyor Belt Replacement.....	17
Specifications.....	4	Conveyors with Guides.....	17
Conveyor Supports	5	Standard Belts	18
7400 Series Frame Section Numbers.....	5	Replacing a Section of Belt.....	18
Straight Infeed / Idler Module	5	Replacing the Entire Belt	19
Straight Intermediate Module.....	5	Specialty Intralox 2400 Series Belts.....	19
Curve Module.....	5	Replacing a Section of Belt.....	19
Straight Exit / Drive Module.....	5	Replacing the Entire Belt	19
Installation	6	Conveyor Belt Tensioning.....	20
Required Tools.....	6	Sprocket and Puck Removal.....	20
Recommended Installation Sequence	6	A - Drive Sprocket Removal	20
Conveyor Installation.....	6	B - Idler Puck Removal	22
Frame Section Connection	6	C - Nose Bar Puck Removal	22
Stand Installation.....	7	Reassembling Tail Assemblies.....	23
Tail Assembly Installation	8	Nose Bar Idler.....	23
Nose Bar Drive Tail.....	8	Idler Tail	24
Tip Up Assembly.....	8	Drive Tail Assembly.....	24
Nose Bar Idler Tail	9	Bearing Replacement	25
Idler Tail	10	Service Parts.....	26
Lifter Installation.....	11	Nose Bar Drive End Components	26
Wear Strip Installation	11	Tension End Components	28
Straight Frame Sections.....	11	Nose Bar Tension End.....	29
Curved Frame Sections.....	12	Curve Conveyor Frame and Wear Strips	30
Belt Return Installation – Curved Frame Sections.....	13	Straight Conveyor Frame and Wear Strips.....	32
Belt Installation	13	Conveyor Frame Connection.....	33
Belt Return Installation – Straight Frame Sections....	15	3" (76 mm) High Sides.....	34
Preventive Maintenance and Adjustment.....	16	Straight Belt Return.....	35
Required Tools.....	16	Curve Belt Return.....	35
Checklist	16	Curve Belt Chain Kit.....	36
Cleaning	16	Belt Removal Tool	36
Routine Cleaning.....	16	Ordering a Replacement Chain	36
Standard Conveyors.....	16	Configuring a Conveyor Part Number	37
Periodic Cleaning	17	Curve Conveyor.....	37
Lubrication.....	17	Return Policy.....	38
Conveyor Bearings.....	17		

Introduction

⚠ CAUTION

Some illustrations may show guards removed. DO NOT operate equipment without guards.


Upon receipt of shipment:

- Compare shipment with packing slip. Contact factory regarding discrepancies.
- Inspect packages for shipping damage. Contact carrier regarding damage. Accessories may be shipped loose.
- See accessory instructions for installation.

The Dorner Limited Warranty applies.

Dorner 7400 Series conveyors have patents pending.

Dorner reserves the right to make changes at any time without notice or obligation.

Dorner has convenient, pre-configured kits of Key Service Parts for all conveyor products. These time saving kits are easy to order, designed for fast installation, and guarantee you will have what you need when you need it. Key Parts and Kits are marked in the Service Parts section of this manual with the Performance Parts Kits logo .

Intralox is a registered trademark of Laitram L.L.C. in the United States and / or other countries.

Warnings – General Safety


⚠ DANGER



SEVERE HAZARD!

KEEP OFF CONVEYORS. Climbing, sitting, walking or riding on conveyor will result in death or serious injury.


⚠ DANGER



EXPLOSION HAZARD!

- **DO NOT OPERATE CONVEYORS IN AN EXPLOSIVE ENVIRONMENT.** The electric gearmotor generates heat and could ignite combustible vapors.
- Failure to comply will result in death or serious injury.

⚠ WARNING



CRUSH HAZARD!

- **DO NOT** place hands or fingers inside the conveyor while it is running.
- **DO NOT** wear loose garments while operating the conveyor. Loose garments can become caught up in the conveyor.
- Failure to comply could result in serious injury.

⚠ WARNING



CRUSH HAZARD!

- **SUPPORT CONVEYOR SECTIONS PRIOR TO LOOSENING STAND HEIGHT OR ANGLE ADJUSTMENT SCREWS.**
- Loosening stand height or angle adjustment screws may cause conveyor sections to drop down, causing serious injury.

⚠ WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.


⚠ WARNING



BURN HAZARD!

DO NOT TOUCH the motor while operating, or shortly after being turned off. Motors may be **HOT** and can cause serious burn injuries.


⚠ WARNING



PUNCTURE HAZARD!

Handle drive shaft keyway with care. It may be sharp and could puncture the skin, causing serious injury.

⚠ WARNING



SEVERE HAZARD!

- Dorner cannot control the physical installation and application of conveyors. Taking protective measures is the responsibility of the user.
- When conveyors are used in conjunction with other equipment or as part of a multiple conveyor system, **CHECK FOR POTENTIAL PINCH POINTS** and other mechanical hazards before system start-up.
- Failure to comply could result in serious injury.

Product Description

Refer to **(Figure 1)** for typical conveyor components.

Typical Components	
1	Conveyor
2	Gearmotor
3	Belt
4	Return
5	Support Stands
6	Motor Controller
7	Drive End
8	Tension End

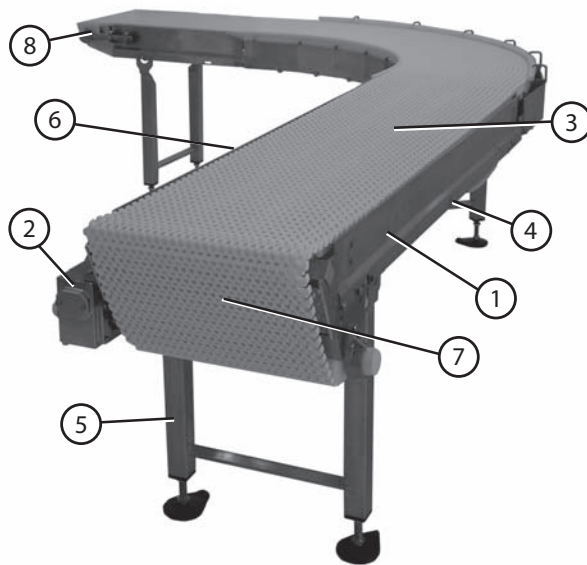


Figure 1

Specifications

Specifications

Conveyor Width Reference (WW)	08 – 36 in 02 increments
Maximum Conveyor Load	20 lb / ft ² (97 kg / m ²) with a maximum of 1000 lb / ft ² (4882 kg / m ²)
Belt Travel	12" (305 mm) per revolution of pulley
Belt Take-up	2" (51 mm)
Conveyor Length Reference (LLL)	020 – 999 in 001 increments
Conveyor Length	20" (508 mm) – 999" (25.4 m) in 1" (25 mm) increments

IMPORTANT

Maximum conveyor loads are based on:

- *Non-accumulating product*
- *Product moving toward gearmotor*
- *Conveyor being mounted horizontally*
- *Conveyor being located in a dry environment*
- *Conveyor equipped with standard belt only*

Conveyor Supports

Maximum Distances:

1 (Infeed) = 3 ft (914 mm)

2 (Outfeed) = 3 ft (914 mm)

**** Stand positions will be determined by the factory.**


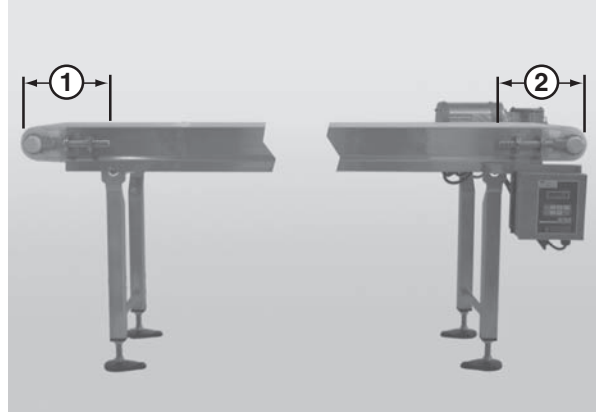



Figure 2

7400 Series Frame Section Numbers


Straight Infeed / Idler Module

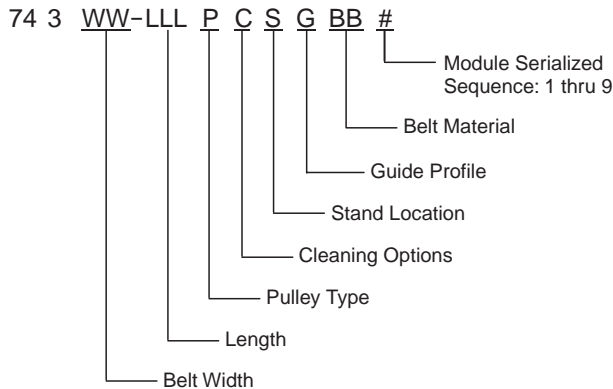


Curve Module

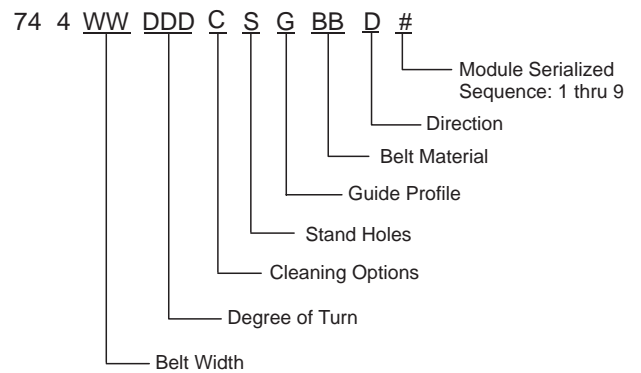

Straight Intermediate Module

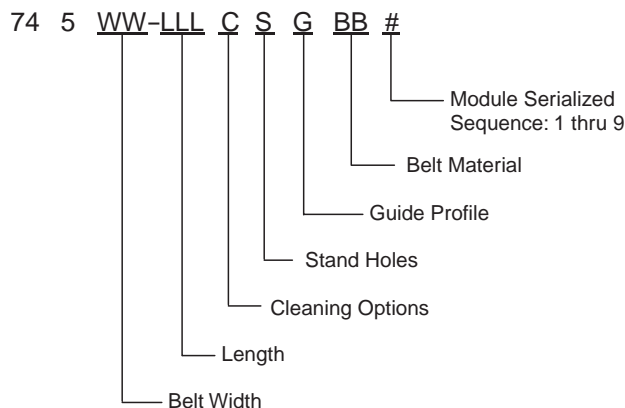

Straight Exit / Drive Module

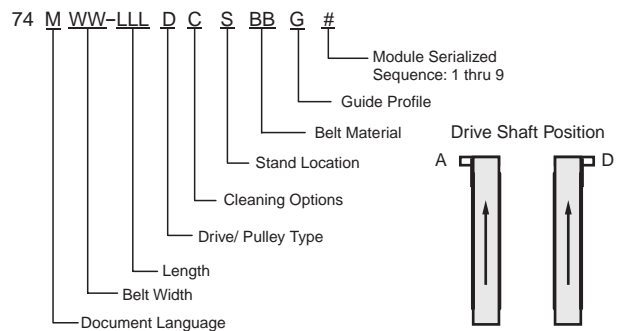

Installation

⚠ CAUTION

Dorner recommends cleaning all the “food zones” prior to placing conveyor into service. Ensure adequate access is provided for cleaning and servicing equipment so that the required level of hygiene can be maintained.

⚠ CAUTION

Conveyor **MUST** be mounted straight, flat, and level within confines of conveyor. Use a level (Figure 3, item 1), during setup.

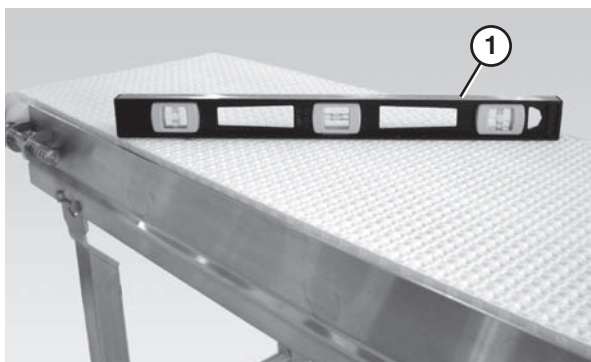


Figure 3

Required Tools

- 17 mm wrench (for hexagonal head fasteners)
- 4 mm hex wrench (for bearing shaft assembly fasteners)
- Level
- Torque wrench

Recommended Installation Sequence

1. Connect the frame sections together. “Frame Section Connection” on page 6.
2. Attach the stands to the conveyor. Refer to “Stand Installation” on page 7.
3. Attach the tail assemblies to the frame. Refer to “Tail Assembly Installation” on page 8.
4. Attach the lifters, if applicable. Refer to “Lifter Installation” on page 11.
5. Install the gearmotor, if applicable. Refer to the “7400 Series Drive Package Installation, Maintenance and Parts Manual.”
6. Attach the wear strips. Refer to “Wear Strip Installation” on page 11.
7. Attach the belt returns. Refer to “Belt Return Installation – Straight Frame Sections” on page 15.
8. Install the belt. Refer to “Belt Installation” on page 13.

9. Attach any guides / accessories. Refer to the “Service Parts” section starting on page 26.

Conveyor Installation

Frame Section Connection

Typical Connection Components (Figure 4)

- | | |
|---|--|
| 1 | Conveyor frame section |
| 2 | Curved conveyor frame section |
| 3 | Hex post connector (x2) |
| 4 | Flat connector (x2)* |
| 5 | M10 - 1.5 x 12 mm hex head cap screw (x4)* |
| 6 | M10 - 1.5 x 16 mm hex head cap screw (x4) |

* For connections not supported by stands.

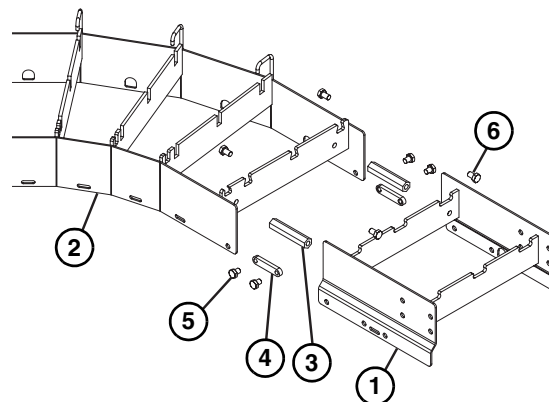


Figure 4

1. Locate the section number sequence etched on each section of frame (Figure 5, item 1).



Figure 5

- Position the frame sections in the correct order (**Figure 6**).

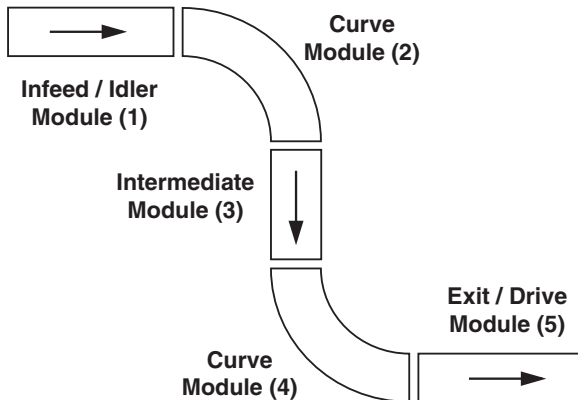


Figure 6

- Connect the frame sections by bolting the hex post connectors (**Figure 7, item 1**) to the cross member supports of each frame section.

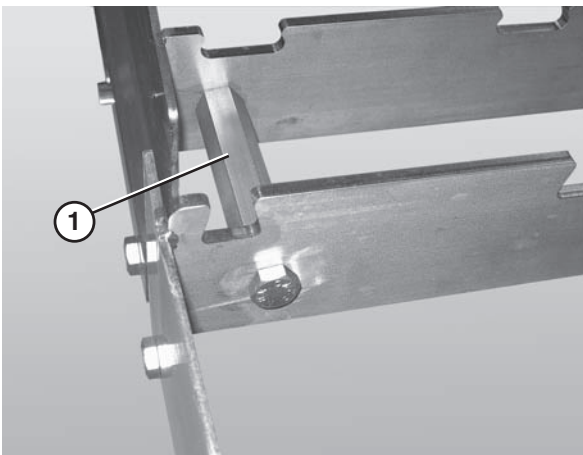


Figure 7

- Attach the flat connectors (**Figure 8, item 1**), if applicable, to the inside of the frame sections.

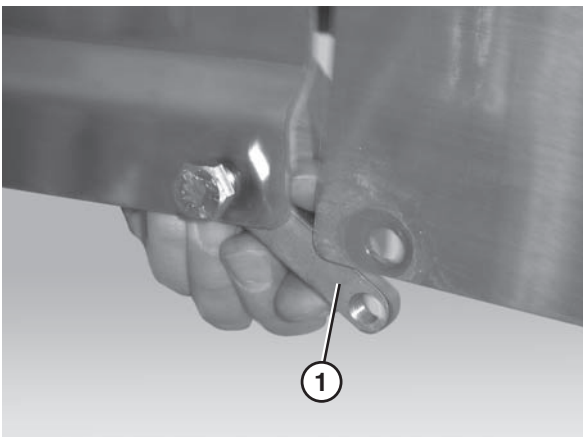


Figure 8

Stand Installation

Typical Stand Components (**Figure 9**)

1	Conveyor frame
2	Stand
3	M10 - 1.5 x 12 mm hex head cap screws (x4)

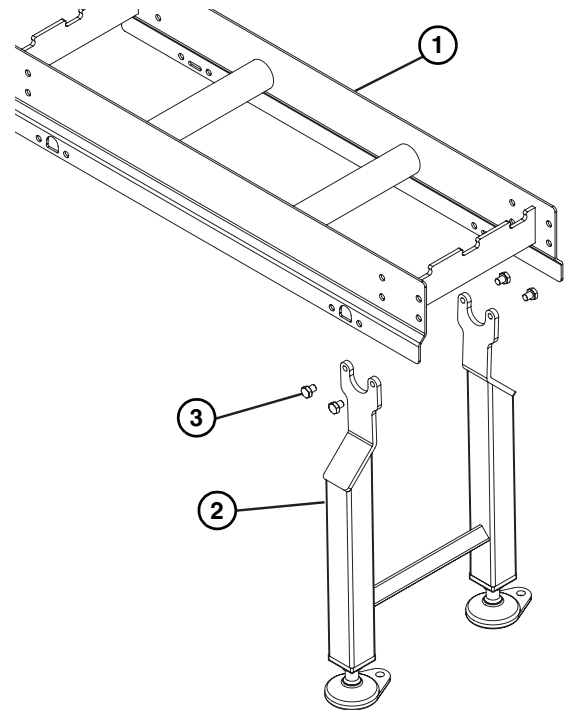


Figure 9

- Position the stands on a flat, level surface.
- Attach the stands to the frame (**Figure 10**).



Figure 10

Installation

Tail Assembly Installation

Nose Bar Drive Tail

Typical Nose Bar Drive Tail Components (**Figure 11**)

1	Nose bar drive tail assembly
2	M10 x 1.5 x 12mm hex head cap screws (x4)
3	Conveyor frame

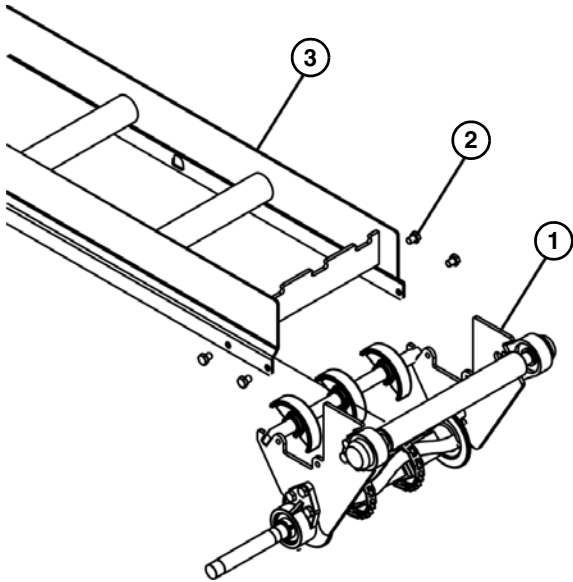


Figure 11

1. Bolt the nose bar drive tail assembly to the conveyor frame (**Figure 12**).

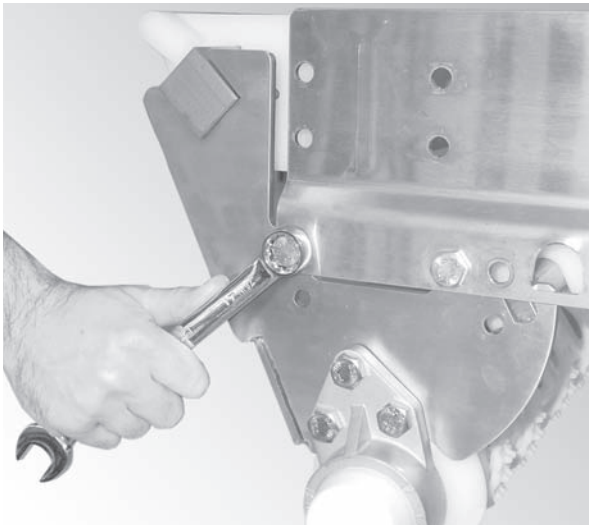


Figure 12

2. Install the drive package, if applicable. Refer to the "7400 Series Drive Package Installation, Maintenance and Parts Manual."

Tip Up Assembly

Typical Tip Up Assembly Components (**Figure 13**)

1	Hex Bar
2	Stop Key (x2)
3	Tip Up Sleeve (x2)

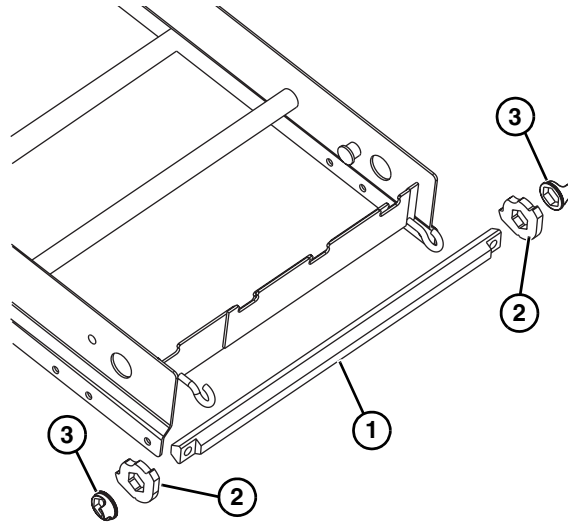


Figure 13

1. Slide stop keys (**Figure 14, item 1**) and tip up sleeves (**Figure 14, item 2**) onto hex shaft (**Figure 14, item 3**). The tabs on the tip up sleeves face outward and align with the slotted ends of the hex shaft as shown.

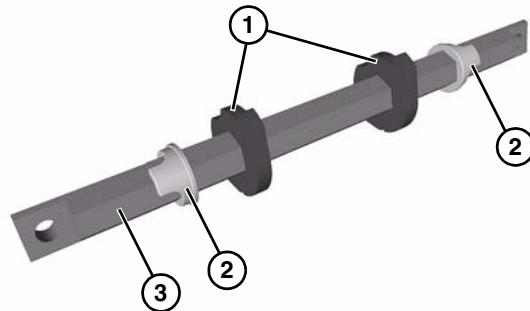


Figure 14

- Place hex shaft assembly (**Figure 15, item 1**) through the conveyor frame tip up holes (**Figure 15, item 2**) and center with conveyor.

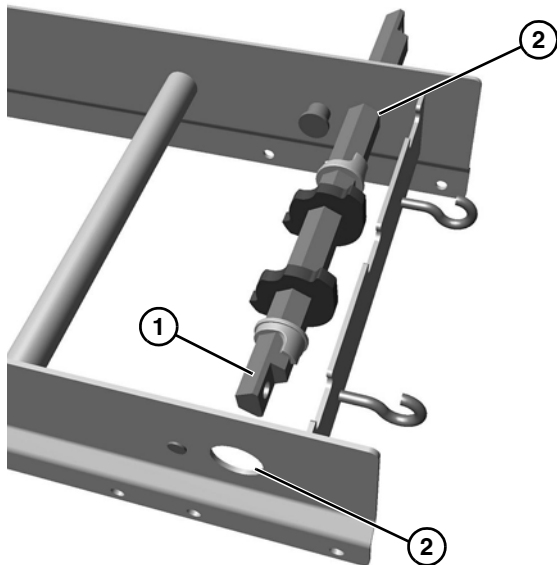


Figure 15

- Hex shaft assembly will need to be rotated (**Figure 16**) for stop keys (**Figure 16, item 1**) to pass by the frame stops (**Figure 16, item 2**).

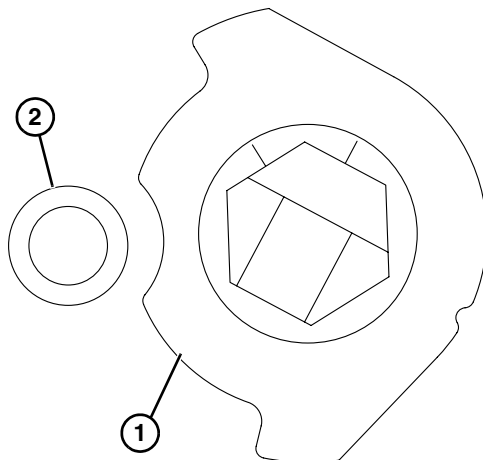


Figure 16

- Slide the tip up sleeves (**Figure 17, item 1**) and stop keys (**Figure 17, item 2**) outward on hex shaft assembly (**Figure 17, item 3**) until the sleeves seat in the holes of the frame and stop keys are seated against frame stops (**Figure 17, item 4**).

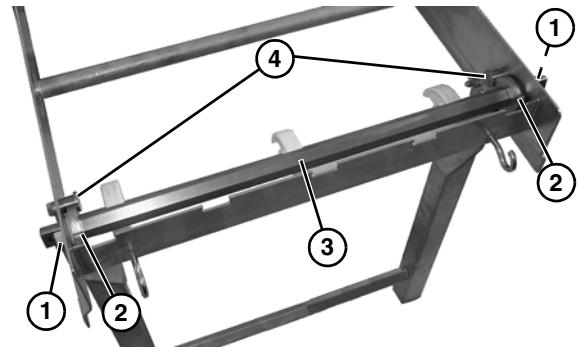


Figure 17

Nose Bar Idler Tail

Typical Nose Bar Idler Tail Components (**Figure 18**)

1	Nose bar idler tail assembly
2	Bolt (x2)
3	Conveyor frame

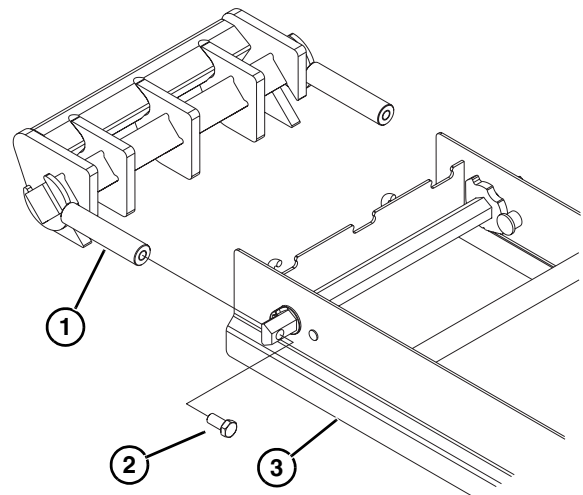


Figure 18

Installation

1. Place the nose bar idler shafts (**Figure 19, item 1**) against the holes in the hex shaft assembly (**Figure 19, item 2**) and secure each with a bolt (**Figure 19, item 3**).

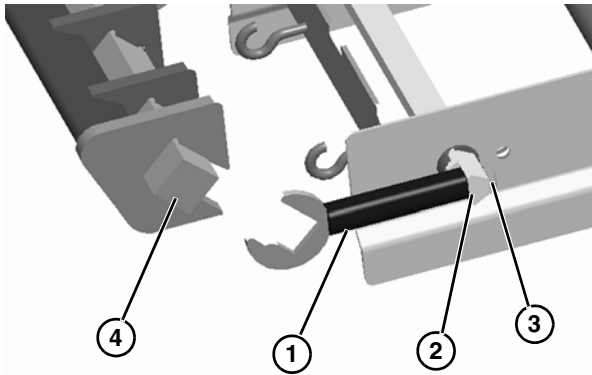


Figure 19

2. Attach the nose bar transfer post (**Figure 19, item 4**) to the nose bar idler shafts.
3. Ensure that the nose bar pucks (**Figure 20, item 1**) are in line with the conveyor frame (**Figure 20, item 2**).

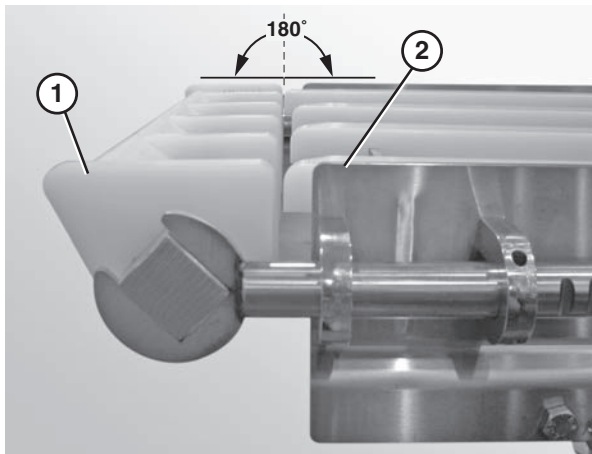


Figure 20

Idler Tail

Typical Idler Tail Components (**Figure 21**)

- | | |
|---|---------------------|
| 1 | Conveyor Frame |
| 2 | Bolt (x2) |
| 3 | Idler tail assembly |

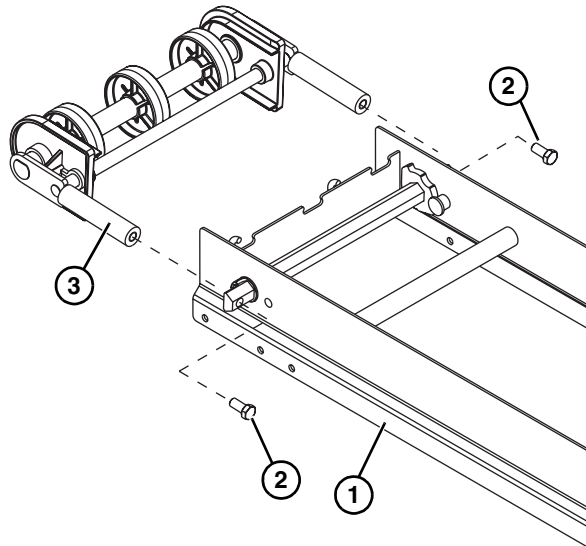


Figure 21

⚠ CAUTION

To avoid injury and damage to parts, have an assistant hold opposite end of idler tail when removing or installing it.

1. Place the idler tail assembly (**Figure 22, item 1**) against the holes in the tip up hex shaft assembly (**Figure 22, item 2**) and secure with a bolt (**Figure 22, item 3**) on each side.

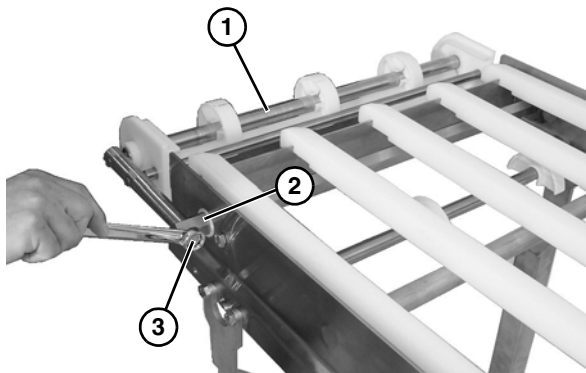


Figure 22

Lifter Installation

Typical Lifter Components (Figure 23)

1	Belt lift pivot bar
2	Lifter bars
3	Belt lift handle
4	M8 - 1.25 x 16 mm hex head cap screw

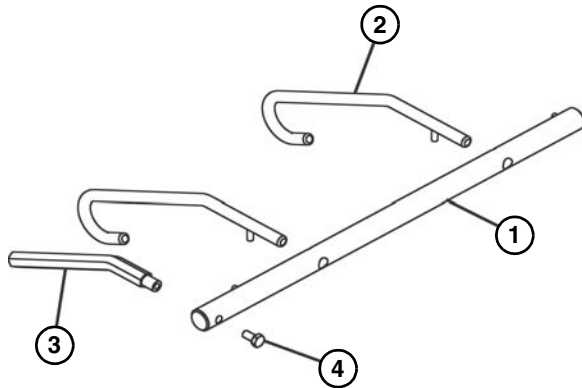


Figure 23

1. Slide the belt lift pivot bar (Figure 24, item 1) through the designated holes in the frame.

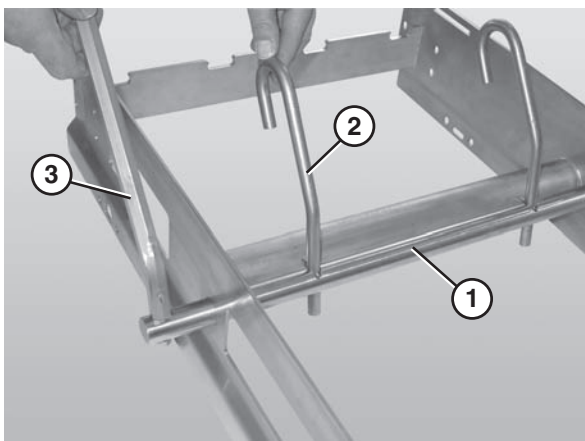


Figure 24

2. Attach the lifter bars (Figure 24, item 2) to the belt lift pivot bar (Figure 24, item 1). Make sure the hooked ends of the lifter bars are facing down when resting against the frame.
3. Attach the lifter handle (Figure 24, item 3) to the belt lift pivot rod.

Wear Strip Installation

Straight Frame Sections

Typical Wear Strip Components (Figure 25)

1	Wear strip
---	------------

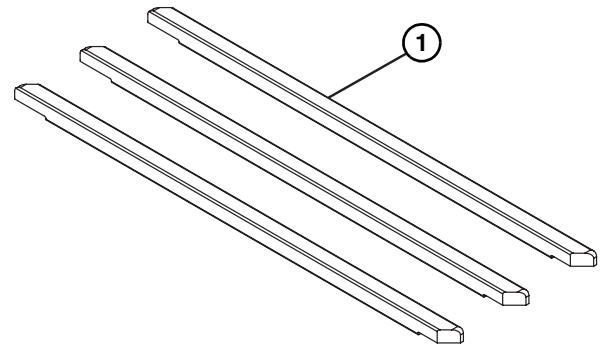


Figure 25

1. Position the wear strips (Figure 26, item 1) on the frame.

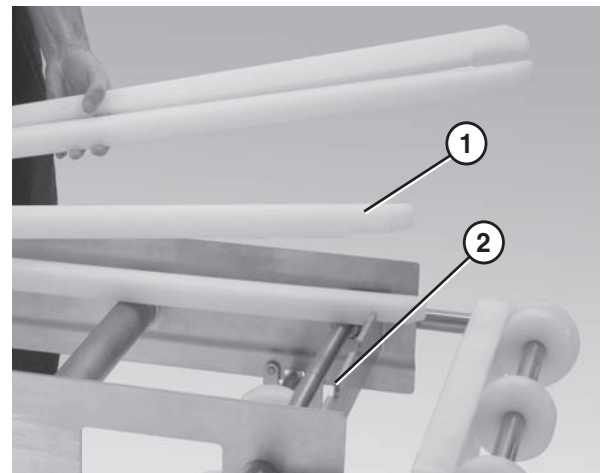


Figure 26

2. Make sure the wear strips are situated securely in the frame slots (Figure 26, item 2).

Installation

Curved Frame Sections

Typical Curved Wear Strip Components (Figure 27)

1	Hold down wear strip
2	Wear strip
3	Inside curve top wear strip



Figure 27

1. Insert inside curve top wear strip (Figure 28, item 1) into the innermost slot (Figure 28, item 2) on the inside of the frame.

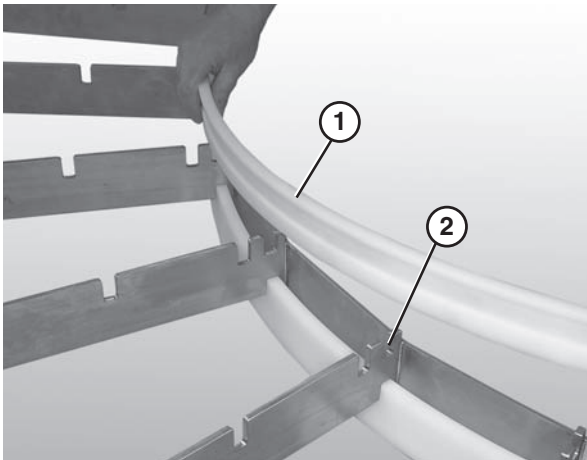


Figure 28

2. Attach the hold down wear strip (Figure 29, item 1) to the frame hooks (Figure 29, item 2) on the outside of the frame.

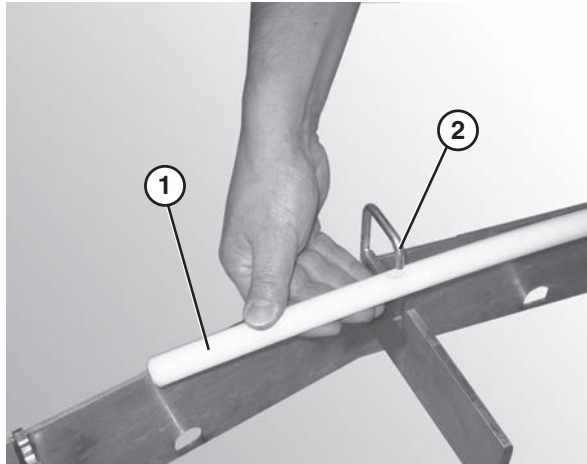


Figure 29

3. Insert the wear strips (Figure 30, item 1) into the appropriate slots in the frame (Figure 30, item 2), starting with the shortest wear strip on the inside of the curved section and working outward to the longest.

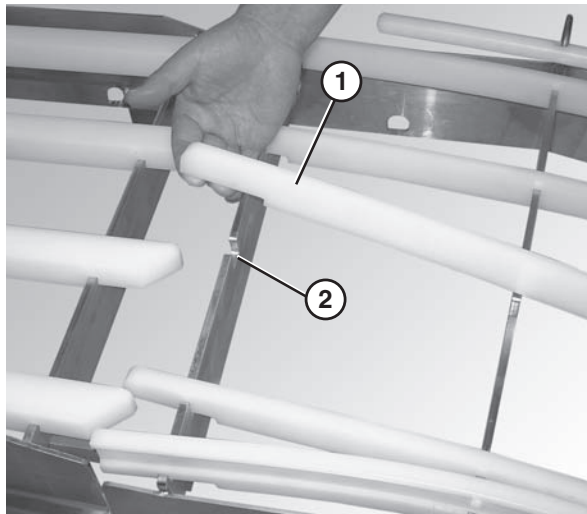


Figure 30

Belt Return Installation – Curved Frame Sections

Typical Curved Belt Return Components (Figure 31)

1	Return bottom wear strip
2	Curve return shaft
3	Chain return shoe
4	Inside return bottom wear strip

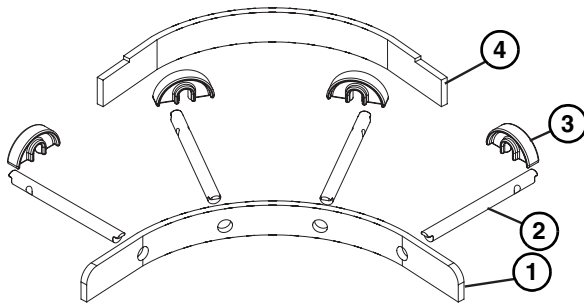


Figure 31

1. Insert the inside return bottom wear strip (Figure 32, item 1) into the slots (Figure 32, item 2) on the lower inside section of the frame (figure shown without the belt or wear strips).

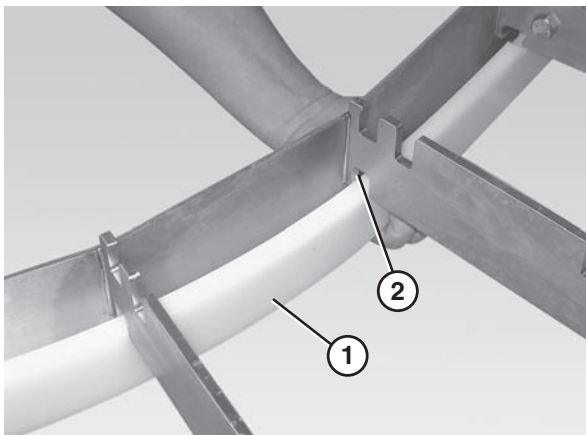


Figure 32

2. Attach the chain return shoes (Figure 32, item 1) to the curve return shafts (Figure 32, item 2).

3. Slide the long end of the curve return shaft (Figure 33, item 1) through the center hole in the return bottom wear strip (Figure 33, item 2).

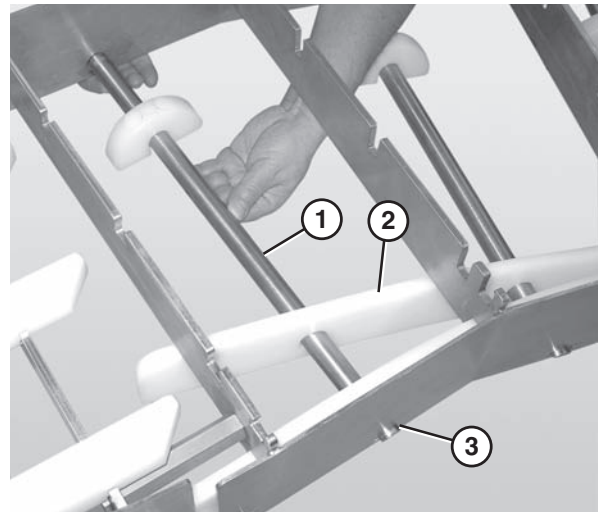


Figure 33

4. Slide the return shaft up and through the large slot in the frame. Make sure the holes in the return bottom wear strip match up with the holes in the conveyor frame.
5. Push up on the return shaft and slide the notched end of the shaft through the small slot on the opposite side of the frame (Figure 33, item 3).
6. Repeat steps 4 – 5 with the remaining returns.

Belt Installation

Typical Belt Components (Figure 34)

1	Chain belt
2	Belt rod

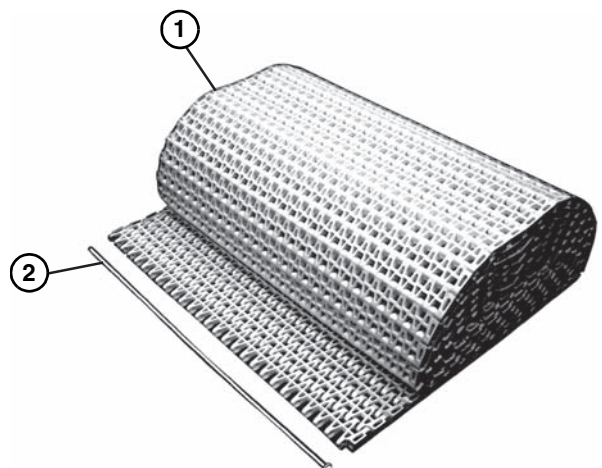


Figure 34

Installation

1. Position the belt on the conveyor frame (**Figure 35**).



Figure 35

NOTE

Ensure the belt is running in the correct direction (**Figure 36**).

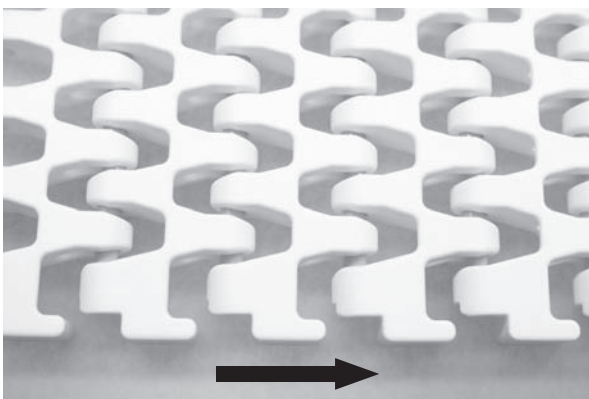


Figure 36

2. Wrap the belt around the conveyor, making sure the sprocket teeth have engaged the belt.
3. Feed the ends of the belt through the top and bottom of the curved frame sections.
4. Bring the ends of the belt together (**Figure 37**).



Figure 37

5. Insert the belt rod (**Figure 38, item 1**).

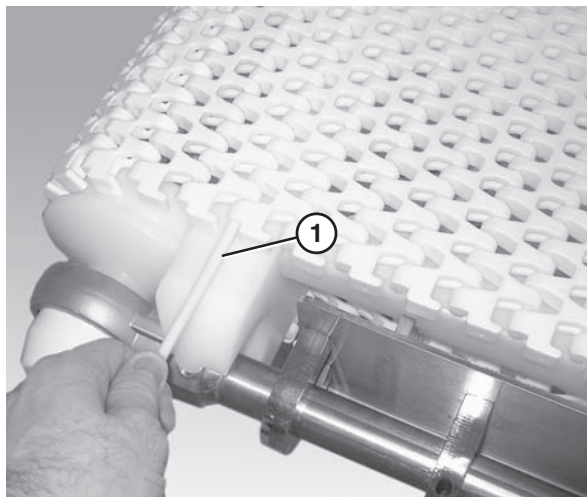


Figure 38

6. Push the belt rod in as far as possible.
7. Lightly tap the head of the rod with a hammer until it snaps into position.
8. Check belt sag by measuring from the top of the return (**Figure 39**).

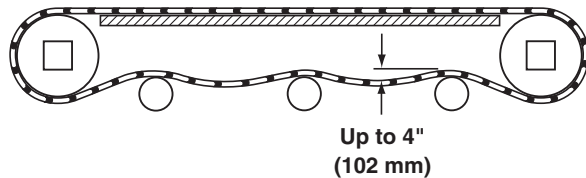


Figure 39

CAUTION

Belt sag should not exceed 4" (102 mm) from the top of the returns.

Belt Return Installation – Straight Frame Sections

Typical Belt Return Components (Figure 40)

1	Return shaft
2	Chain return shoe

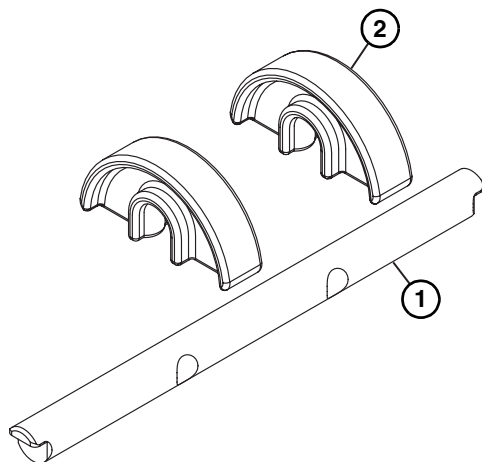


Figure 40

1. Attach the chain return shoes (Figure 41, item 1) to the return shaft (Figure 41, item 2).

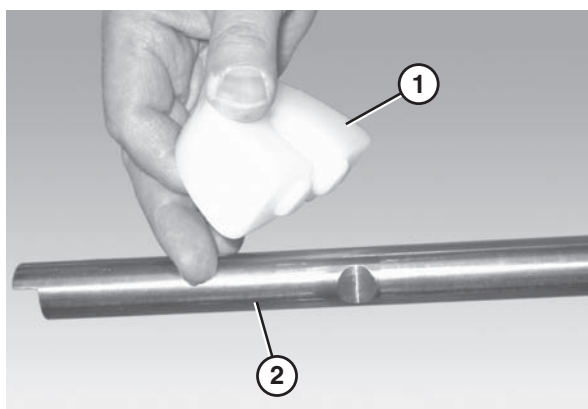


Figure 41

2. Slide the return shaft (Figure 42, item 1) up and through the large slot (Figure 42, item 2) in the frame (picture shown without the belt or wear strips).

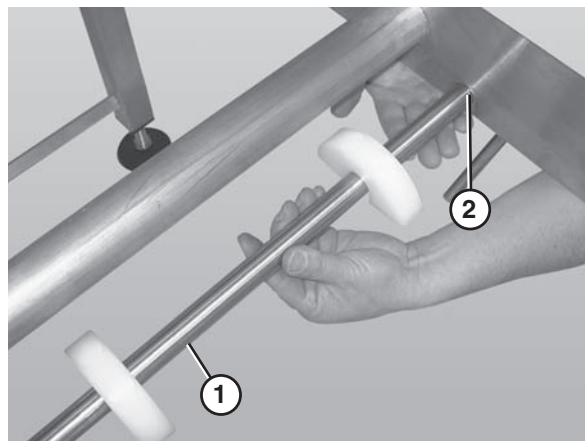


Figure 42

3. Push up on the return shaft (Figure 42, item 1) and slide the notched end of the shaft through the small slot on the opposite side of the frame.
4. See Step 8 of Belt Installation to check for proper belt sag.

Preventive Maintenance and Adjustment

Required Tools

- 17 mm wrench (or adjustable wrench)
- 4 mm hex wrench (for bearing shaft assembly fasteners)
- 3 mm hex wrench
- Punch and hammer (to remove belt rod)

Checklist

- Keep service parts on hand. Refer to the "Service Parts" section starting on page 26 for recommendations.
- Replace any worn or damaged parts.

Cleaning

NOTE

Proper conveyor application, cleaning, and sanitation are the responsibility of the end user.

⚠ CAUTION

Dorner recommends cleaning all the "food zones" prior to placing conveyor into service. Ensure adequate access is provided for cleaning and servicing equipment so that the required level of hygiene can be maintained.

Routine Cleaning

⚠ WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

Dorner recommends cleaning the inside and the outside of the conveyor on a daily basis. Refer to the following steps to access the inside of the conveyor.

Standard Conveyors

1. Remove the guides, if applicable, by removing the pull pins (Figure 43, item 1) that connect the guide (Figure 43, item 2) to the frame.

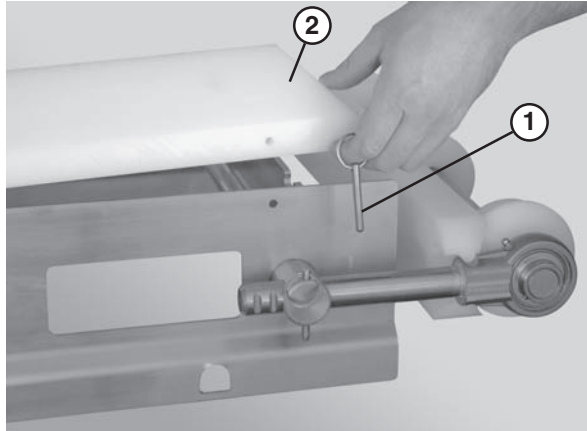


Figure 43

2. Use the lifter handle (Figure 44, item 1) to raise the lifters (Figure 44, item 2) and raise the tip up tail (Figure 44, item 3).

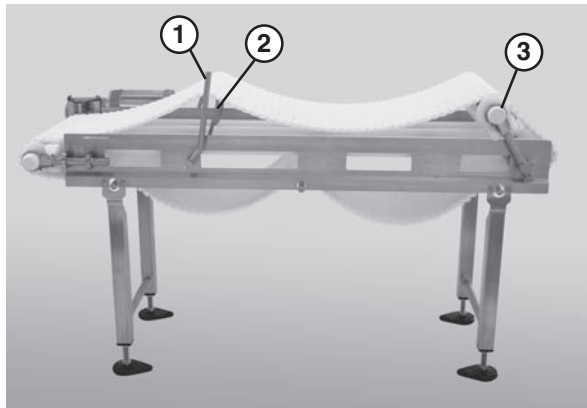


Figure 44

3. Lift up on the belt (Figure 45).



Figure 45

⚠ CAUTION

DO NOT submerge or soak bearing assemblies. This will reduce the life of the bearing.

Preventive Maintenance and Adjustment

Periodic Cleaning

Dorner recommends complete disassembly of the conveyor periodically for thorough cleaning.

For conveyor disassembly and reassembly instructions:

- Refer to “Conveyor Belt Replacement” on page 17.
- Refer to “Sprocket and Puck Removal” on page 20.
- Refer to “Reassembling Tail Assemblies” on page 23.

Lubrication

Conveyor Bearings

Conveyor bearing lubrication is required. Dorner recommends using an H-1 food grade grease.

NOTE

Although bearings are sealed, re-greasing is recommended to increase bearing life. An H-1 food grade grease is recommended. The frequency of bearing re-greasing is dependent upon the application in which the conveyor is being used. Frequency of re-greasing will increase with the frequency of conveyor washing.

1. Add grease to the bearing using the zerk fitting (**Figure 46, item 1**) on the exterior of the bearing shaft assembly.



Figure 46

2. Replace the bearings if they become worn.

Wear Strips and Belt Returns

Replace the wear strips and belt returns if they become worn.

For wear strip and belt return installation instructions:

- Refer to “Wear Strip Installation” on page 11.
- Refer to “Belt Return Installation – Straight Frame Sections” on page 15.

Maintaining the Conveyor Belt

Troubleshooting

NOTE

Visit www.dorner.com for complete list of troubleshooting solutions.

Inspect conveyor belt for:

- Surface cuts or wear
- Skipping

Damage to belt links or rods, surface cuts and / or wear indicate:

- Sharp or heavy parts impacting belt
- Jammed parts
- Accumulated dirt
- Foreign material inside the conveyor
- Improperly positioned accessories

Skipping indicates:

- Excessive load on belt
- Worn sprockets or impacted dirt on drive pulley

Damage to belt links or rods indicate:

- Excessive load on belt
- Dirt impacted on sprockets
- Excessive or improper side loading
- Improperly positioned accessories

Conveyor Belt Replacement

WARNING



SEVERE HAZARD!

LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

Conveyors with Guides

1. Remove the pull pins (**Figure 47, item 1**) that connect the guide (**Figure 47, item 2**) to the frame.

Preventive Maintenance and Adjustment

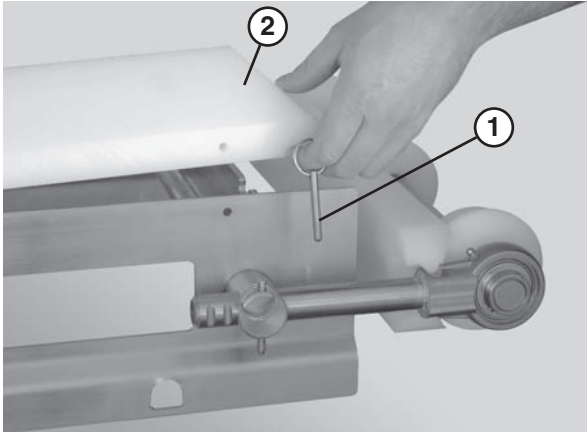


Figure 47

2. Remove the guide (**Figure 48, item 1**).

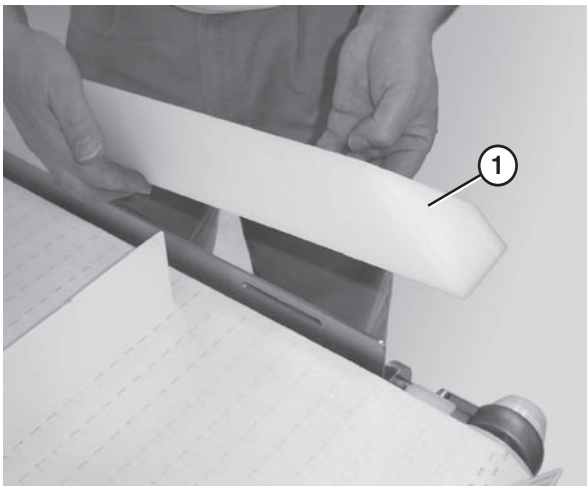


Figure 48

3. Follow the belt replacement procedures described in “Standard Belts” on page 18, “Specialty Intralox 1100 Series Belts” on page 18, or “Specialty Intralox 1600 Series Belts” on page 18.

Standard Belts

Replacing a Section of Belt

CAUTION

Secure the retaining head side of the belt prior to removing a belt rod in order to prevent damaging the belt.

1. Secure the retaining head side of the belt. Use the belt removal tool (**Figure 49, item 1**) for 1" pitch belts. For all other belts, position the section of belt so that it is braced by the flanged puck (**Figure 49, item 2**).

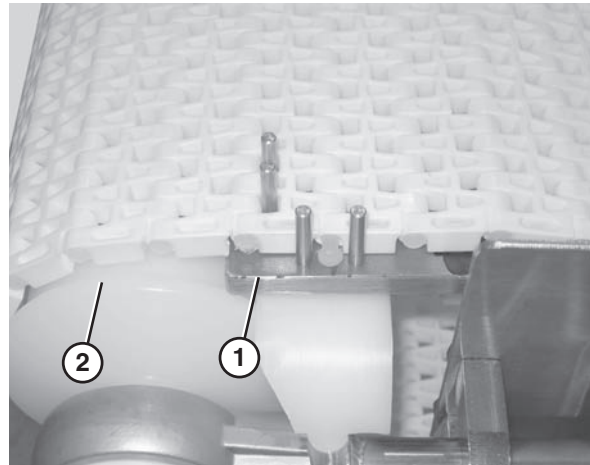


Figure 49

2. Use a punch and hammer to push the belt rod out by striking the rod end opposite the retaining head (**Figure 50**).



Figure 50

3. Remove the belt rods on both sides of the section of belt being replaced.
4. Replace the old section with a new section of belt.

CAUTION

DO NOT reuse belt rods that are damaged or show signs of wear.

Preventive Maintenance and Adjustment

Replacing the Entire Belt

1. Remove the belt returns by pushing up on the return shaft (**Figure 51, item 1**) and sliding it through the large hole (**Figure 51, item 2**) in the frame.

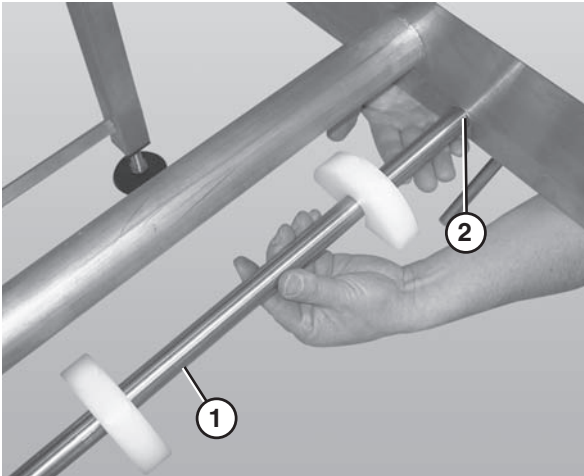


Figure 51

2. Lower the opposite end of the return shaft (**Figure 51, item 1**) and slide it out of the frame.
3. Follow steps 1 – 3 in "Standard Belts: Replacing a Section of Belt" on page 18.
4. Remove the belt.
5. Replace the damaged or worn belt. Refer to "Belt Installation" on page 13 and "Belt Return Installation" on page 15.

Specialty Intralox 2400 Series Belts

Replacing a Section of Belt

CAUTION

Secure the retaining head side of the belt prior to removing a belt rod in order to prevent damaging the belt.

1. Use a punch and hammer to push the belt rod out by striking the rod end opposite the retaining head (**Figure 52, item 1**).

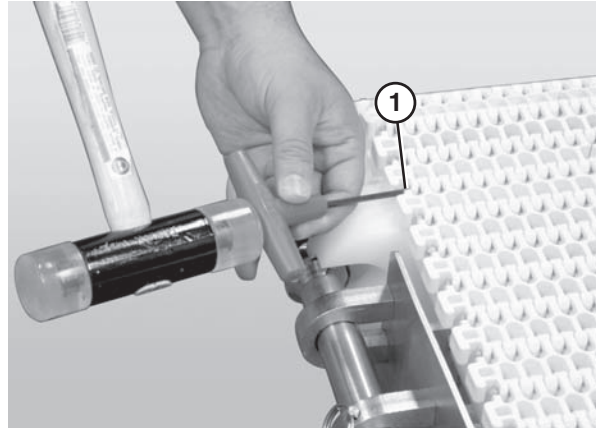


Figure 52

2. Remove the belt rods on both sides of the section of belt being replaced.
3. Replace the old section with a new section of belt.

CAUTION

DO NOT reuse belt rods that are damaged or show signs of wear.

Replacing the Entire Belt

1. Remove the belt returns by pushing up on the return shaft (**Figure 53, item 1**) and sliding it through the large hole (**Figure 53, item 2**) in the frame.

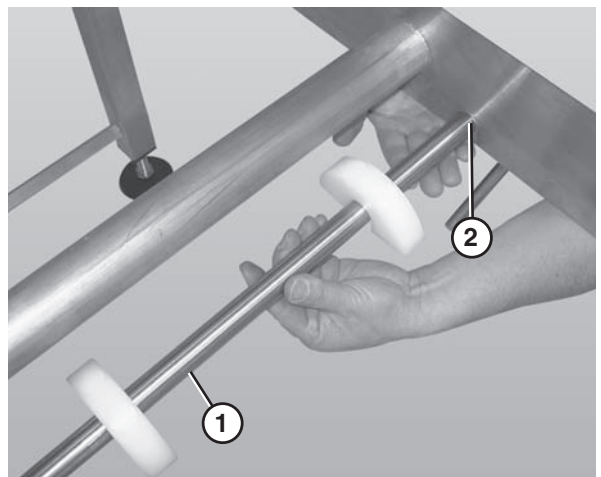


Figure 53

2. Lower the opposite end of the return shaft (**Figure 53, item 1**) and slide it out of the frame.
3. Follow steps 1 – 3 in "Specialty Intralox 2400 Series Belts: Replacing a Section of Belt" on page 18.
4. Remove the belt.
5. Replace the damaged or worn belt. Refer to "Belt Installation" on page 13, and "Belt Return Installation" on page 15.

Preventive Maintenance and Adjustment

Conveyor Belt Tensioning

⚠ WARNING

SEVERE HAZARD! LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

⚠ CAUTION
Belt sag should not exceed 4" (102 mm) from the top of the returns.

1. Check belt for proper sag. Refer to step 7 of "Belt Installation" on page 13.
2. If belt has excessive sag, remove one or more belt links to take up the tension. Refer to "Replacing a Section of Belt" on page 18.


Sprocket and Puck Removal

⚠ WARNING

SEVERE HAZARD! LOCK OUT POWER before removing guards or performing maintenance. Exposed moving parts can cause serious injury.

1. Remove the conveyor belt to access the sprockets / pucks. Refer to "Conveyor Belt Replacement" starting on page 17.
2. Remove the desired sprocket / puck by following these instructions:
 - A - Drive Sprocket Removal
 - B - Nose Bar Puck Removal
 - C - Idler Puck Removal

A - Drive Sprocket Removal

⚠ WARNING

PUNCTURE HAZARD! Handle drive shaft keyway with care. It may be sharp and could puncture the skin, causing serious injury.

1. Loosen the fasteners (**Figure 54, item 1**) that connect the gearmotor to the drive spindle using a hex wrench (**Figure 54, item 2**).

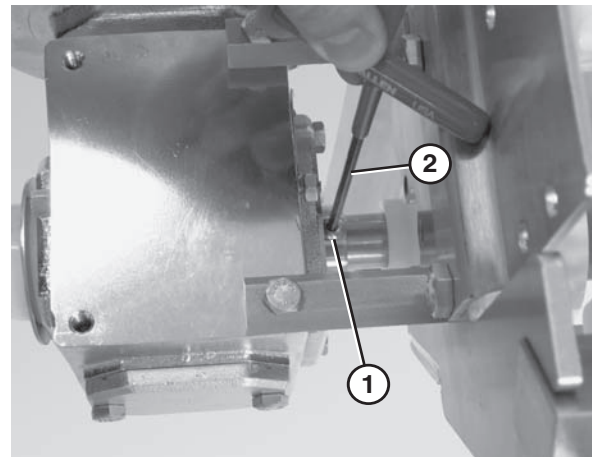


Figure 54

2. Remove the bolts that connect the motor to the drive assembly (**Figure 55**).
3. Remove the motor (**Figure 55, item 1**) from the drive assembly (**Figure 55, item 2**).

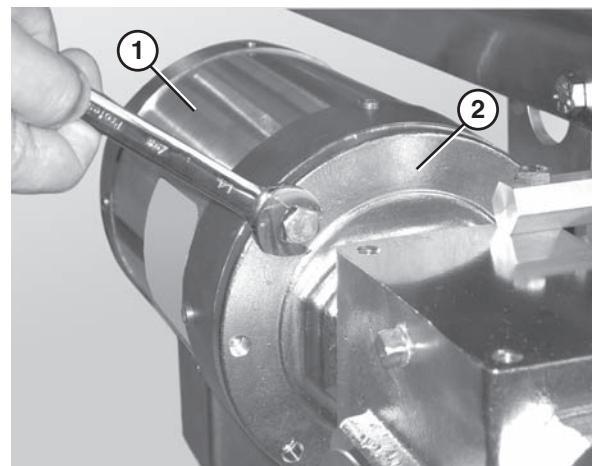


Figure 55

Preventive Maintenance and Adjustment

4. Unbolt the drive assembly and slide it off the bearing spindle (**Figure 56**).

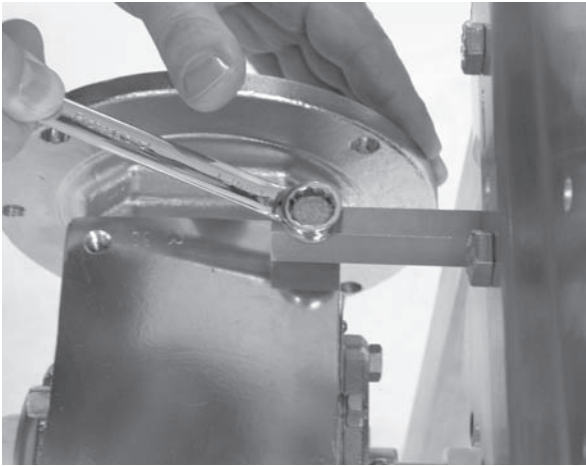


Figure 56

5. Remove the bearing cover.
6. Loosen the 3 hole flange (**Figure 57, item 1**) with bearing fasteners using a hex wrench (**Figure 57, item 2**).

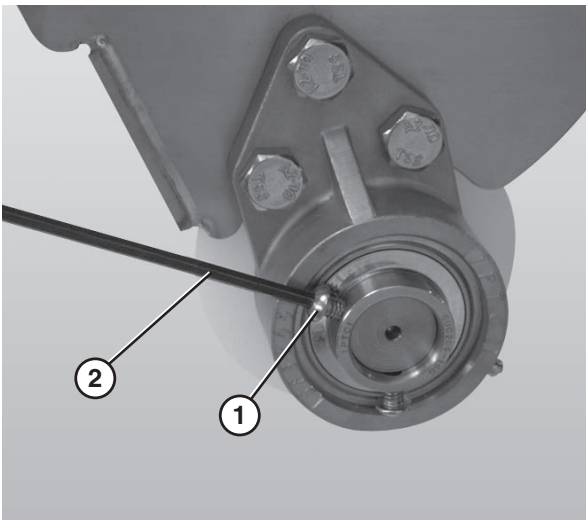


Figure 57

7. Disconnect the 3 hole flange bearing (**Figure 58, item 1**) from the nose bar drive weldment (**Figure 58, item 2**).

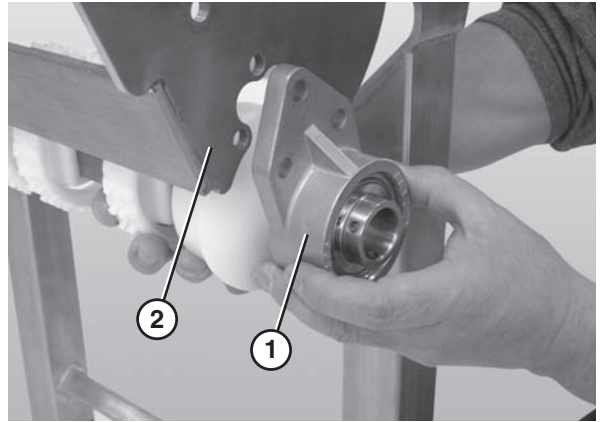


Figure 58

8. Lower the entire drive assembly.
9. Slide the 3 hole flange with bearing (**Figure 59, item 1**) and flanged puck (**Figure 59, item 2**) off the drive spindle.

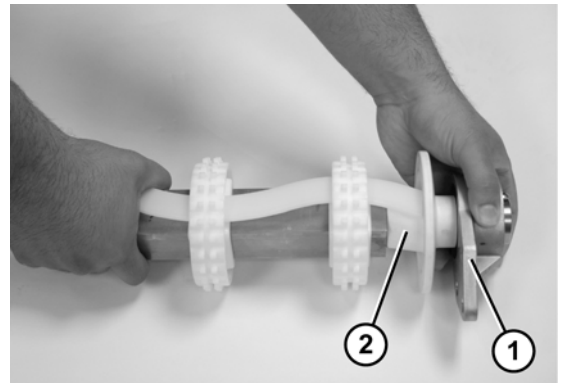


Figure 59

Preventive Maintenance and Adjustment

- Slide the sprockets (**Figure 60, item 1**) and the sprocket alignment bar (**Figure 60, item 2**) off the drive spindle (**Figure 60, item 3**).

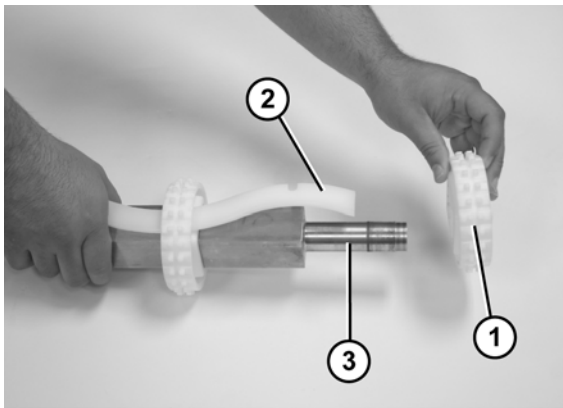


Figure 60

B - Idler Puck Removal

- Remove bolt (**Figure 61, item 1**) from each side, and remove idler tail assembly (**Figure 61, item 2**) from take up blocks (**Figure 61, item 3**).

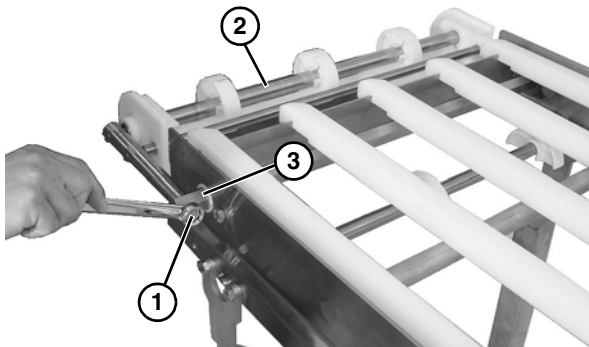


Figure 61

- Remove the bearing end rod (**Figure 62, item 1**) from idler shaft (**Figure 62, item 2**) and pinch guard shaft (**Figure 62, item 3**).

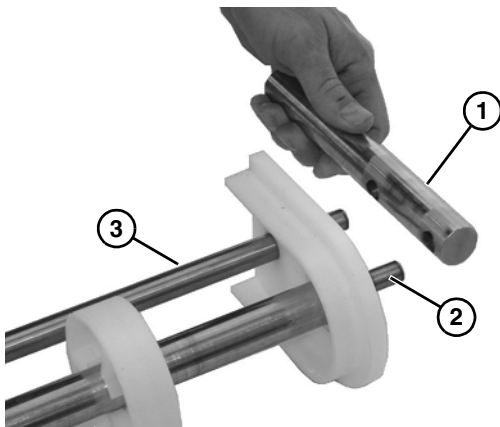


Figure 62

- Remove pinch guard (**Figure 63, item 1**) from idler shaft (**Figure 63, item 2**) and pinch guard shaft (**Figure 63, item 3**).

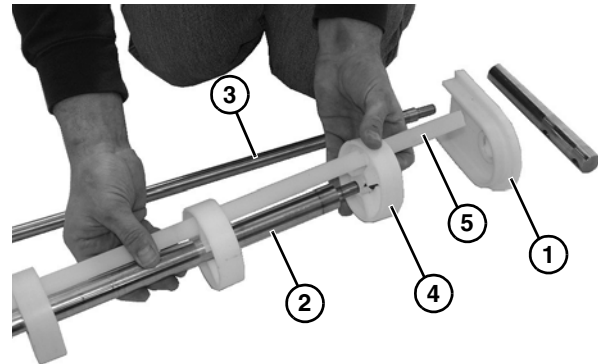


Figure 63

- Slide the pucks (**Figure 63, item 4**) and alignment bar (**Figure 63, item 5**) off the idler shaft (**Figure 63, item 2**).

C - Nose Bar Puck Removal

- Slide the nose bar drive or transfer post (**Figure 64, item 1**) out of the nose bar drive weldment or idler hands (**Figure 64, item 2**).

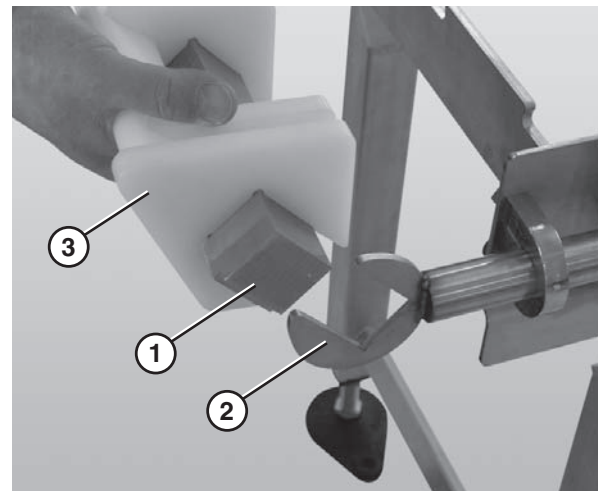


Figure 64

- Remove the nose bar tracking pucks (**Figure 64, item 3**), if applicable.

Preventive Maintenance and Adjustment

3. Remove the nose bar wear strip (**Figure 65, item 3**).

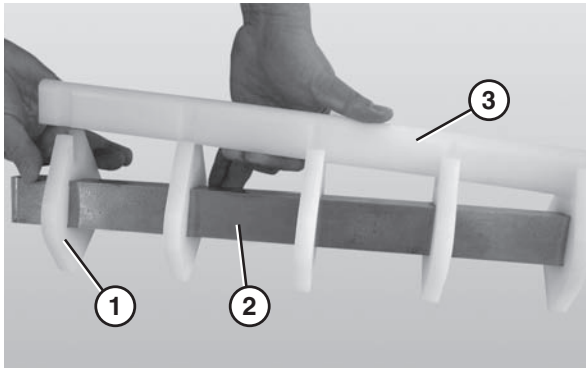


Figure 65

4. Slide the nose bar pucks (**Figure 65, item 1**) off the nose bar shaft (**Figure 65, item 2**).

Reassembling Tail Assemblies

Refer to the "Service Parts" section starting on page 26 for complete diagrams and lists of all tail assembly components.

Nose Bar Idler

1. Slide the nose bar pucks (**Figure 66, item 1**) onto the nose bar drive post (**Figure 66, item 2**).

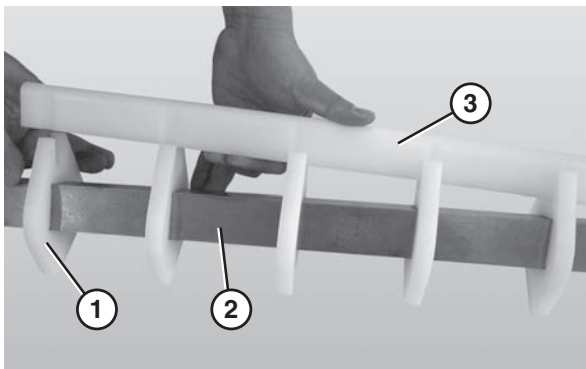


Figure 66

2. Attach the nose bar wear strip (**Figure 66, item 3**).

3. Attach the nose bar tracking pucks (**Figure 67, item 1**) to the nose bar drive post (**Figure 67, item 2**).

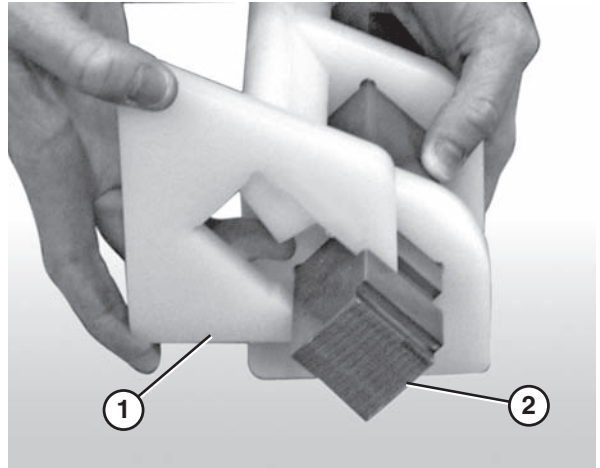


Figure 67

4. After all tracking pucks (**Figure 68, item 3**) are installed, slide the nose bar drive or transfer post (**Figure 68, item 1**) into of the nose bar drive weldment or idler hands (**Figure 68, item 2**).

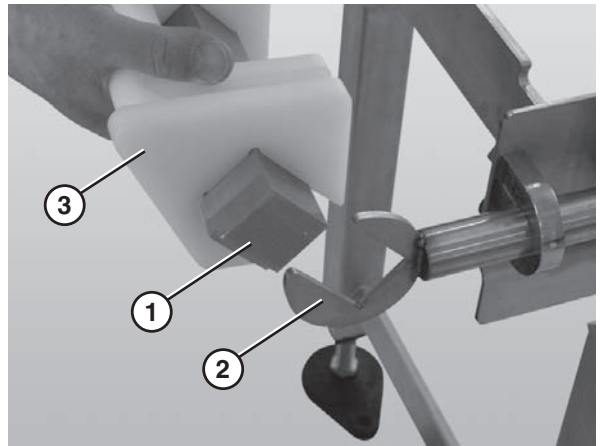


Figure 68

Preventive Maintenance and Adjustment

Idler Tail

1. Place the pucks (Figure 69, item 1) into the slots (Figure 69, item 2) of alignment bar (Figure 69, item 3).

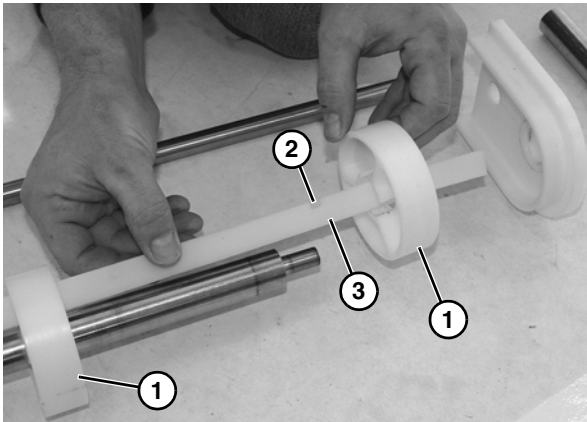


Figure 69

2. Slide all the idler pucks (Figure 70, item 1) along with alignment bar onto idler shaft (Figure 70, item 2).

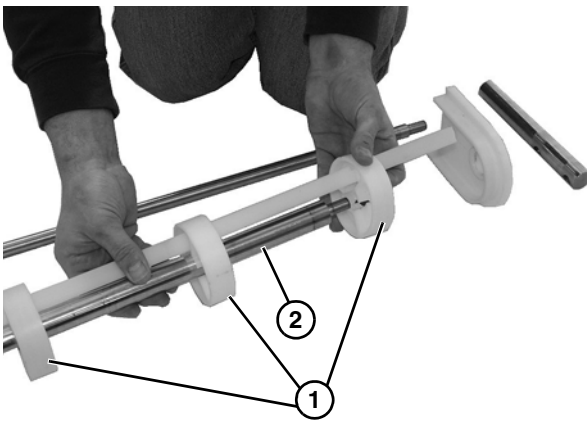


Figure 70

3. Install the pinch guard (Figure 71, item 1) to each side onto idler shaft (Figure 71, item 2) and pinch guard shaft (Figure 71, item 3).

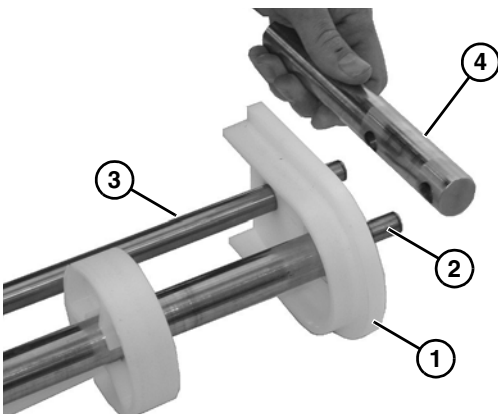


Figure 71

4. Install the bearing end rod (Figure 71, item 4) onto idler shaft (Figure 71, item 2) and rod (Figure 71, item 3).

Drive Tail Assembly

1. Slide the first sprocket (Figure 72, item 1) onto the drive spindle (Figure 72, item 2).

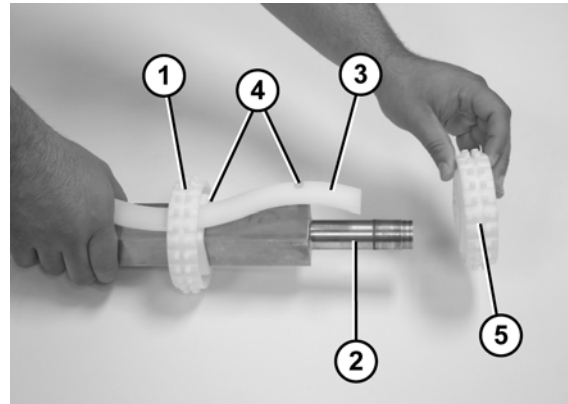


Figure 72

2. Insert the sprocket alignment bar (Figure 72, item 3) into the first sprocket and align the sprocket with the notch (Figure 72, item 4) in the sprocket alignment bar.
3. Slide the remaining sprockets (Figure 72, item 5) onto drive spindle and align each sprocket with the notches (Figure 72, item 4) in the sprocket alignment bar.
4. Attach the flanged pucks (Figure 73, item 1) and the 3 hole flange with bearing (Figure 73, item 2) to the drive spindle.

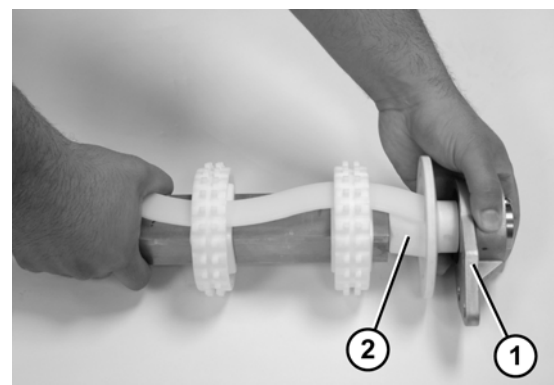


Figure 73

Preventive Maintenance and Adjustment

5. Tighten the 3 hole flange with bearing fasteners (**Figure 74, item 1**) using a hex wrench (**Figure 74, item 2**) to 54 in•lbs (6 N•m). Check after 24 hours of conveyor use.

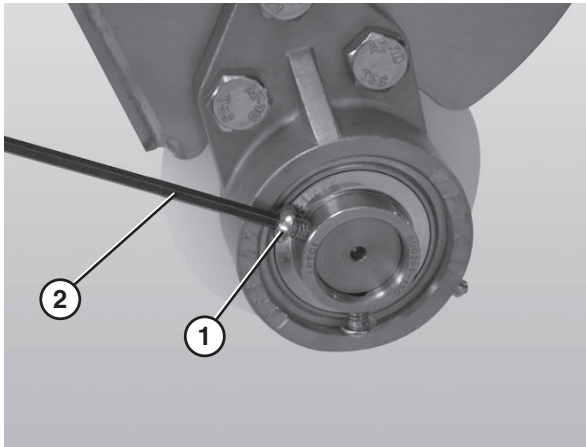


Figure 74

Bearing Replacement

1. Secure the bearing shaft in the take up blocks.
2. Insert the rod end of a second bearing shaft through the bearing (**Figure 75**).

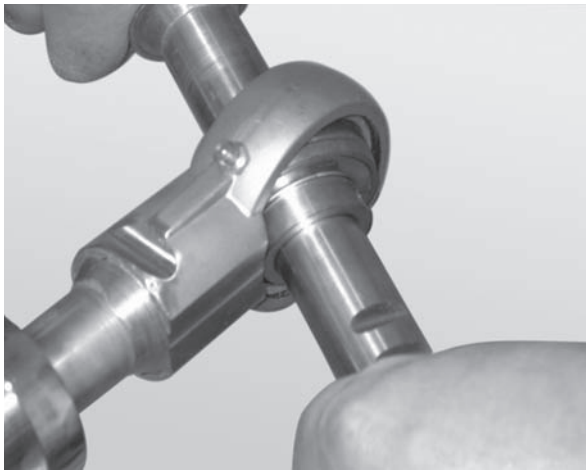


Figure 75

3. Apply lateral pressure to the rod until the bearing comes loose.

4. Remove the worn or damaged bearing (**Figure 76**).

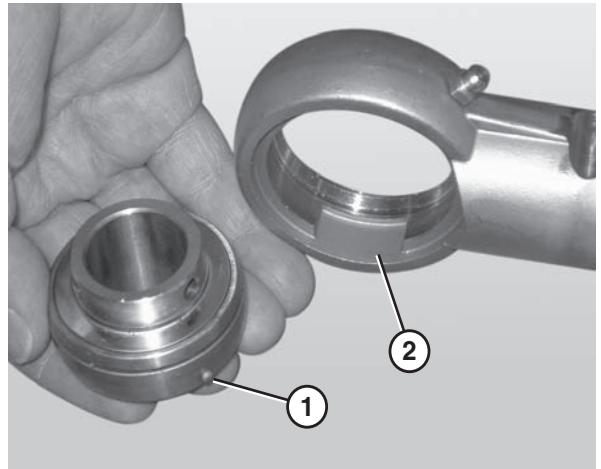


Figure 76


5. Replace the bearing.

NOTE


*When inserting the new bearing, make sure the anti-rotation notch (**Figure 76, item 1**) on the bearing lines up with the groove inside the housing (**Figure 76, item 2**).*

Service Parts

NOTE

For replacement parts other than those shown in this section, contact an authorized *Dorner Service Center* or the factory. Key Service Parts and Kits are identified by the Performance Parts Kits logo . Dorner recommends keeping these parts on hand.

Nose Bar Drive End Components

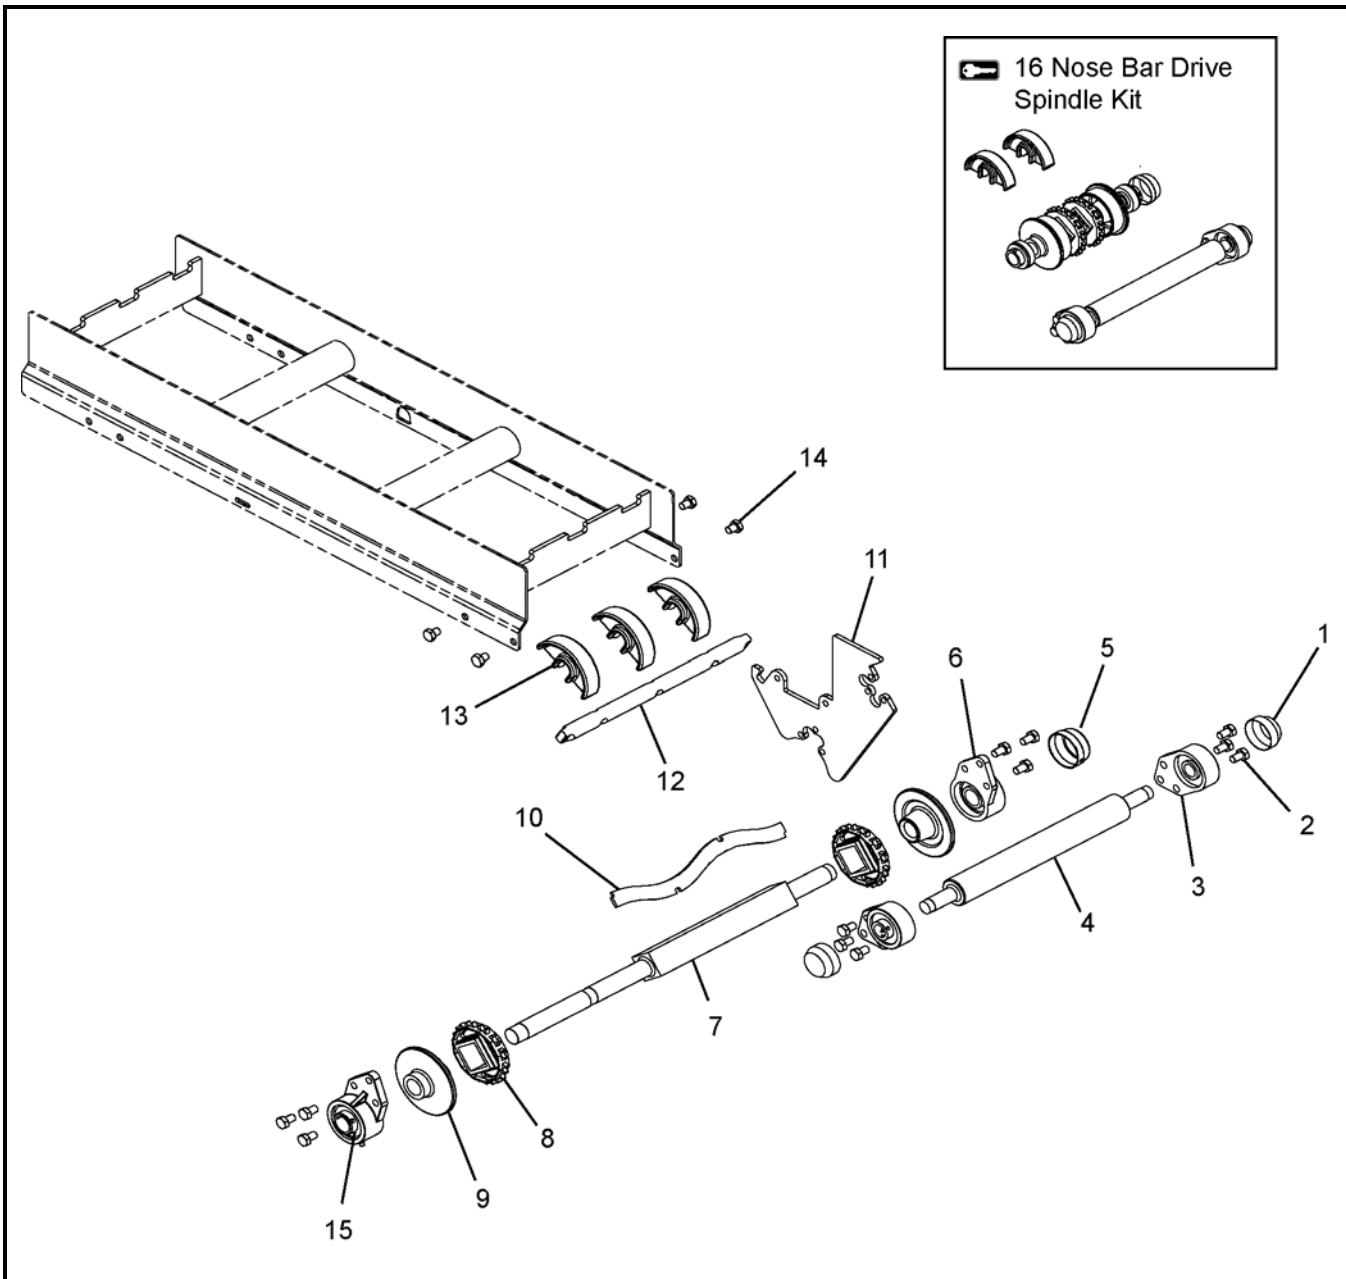


Service Parts

Item	Part Number	Description
1	802-133	Bearing Cover
2	961016MSS	Hex Head Cap Screw M10-1.5x16mm
3	802-132	3 Hole Flange Bearing 20mm Bore
4	5006WW	Transfer Spindle
5	807-1454	Bearing Cover
6	500288	3 Hole Flange with Bearing
7	5015WW	Drive Spindle for Standard Belt
	5070WW	Drive Spindle for Specialty Intralox Belt
	5295WW	CE Drive Spindle for Standard Belt
	5294WW	CE Drive Spindle for Specialty Intralox Belt
8	807-1444	Sprocket for Standard 1.00" Pitch Belt
	807-1447	Sprocket for Specialty Intralox 1.00" Pitch Belt
9	5053WW	Flange Puck for Standard Belt
	5071WW	Flange Puck for Specialty Intralox Belt
10	5090WW	Sprocket Alignment Bar for Standard 1.00" Pitch Belt
	5089WW	Sprocket Alignment Bar for Specialty Intralox 1.00" Pitch Belt
11	500496	Nose Bar Drive Sideplate
12	5039WW	Return Shaft
13	500075	Chain Return Shoe
14	961012MSS	Hex Head Cap Screw M10-1.5x12mm
15	802-163	Bearing
16	74NBDD25-WW	Nose Bar Drive Spindle Kit with a Dorner Gearmotor Mounting Package for Standard 1.00" Pitch Belt (Includes Items 1 through 5, 8, 9, 13 and 15)
	74NBDD24-WW	Nose Bar Drive Spindle Kit with a Dorner Gearmotor Mounting Package for Specialty Intralox 1.00" Pitch Belt (Includes Items 1 through 5, 8, 9, 13 and 15)
	74NBDC25-WW	Nose Bar Drive Spindle Kit without a Dorner Gearmotor Mounting Package for Standard 1.00" Pitch Belt (Includes Items 1 through 5, 8, 9, 13 and 15)
	74NBDC24-WW	Nose Bar Drive Spindle Kit without a Dorner Gearmotor Mounting Package for Specialty Intralox 1.00" Pitch Belt (Includes Items 1 through 5, 8, 9, 13 and 15)
WW = Conveyor width ref: 08 - 36 in 02 increments		

Sprocket Quantity (Item 8)	
Width	Sprocket Quantity
8" (203mm)	2
10" (254mm)	3
12" (305mm)	3
14" (356mm)	4
16" (406mm)	4
18" (457mm)	5
20" (508mm)	5
22" (559mm)	6
24" (610mm)	6
26" (660mm)	7
28" (711mm)	7
30" (762mm)	8
32" (813mm)	8
34" (864mm)	9
36" (914mm)	9

Service Parts

Tension End Components

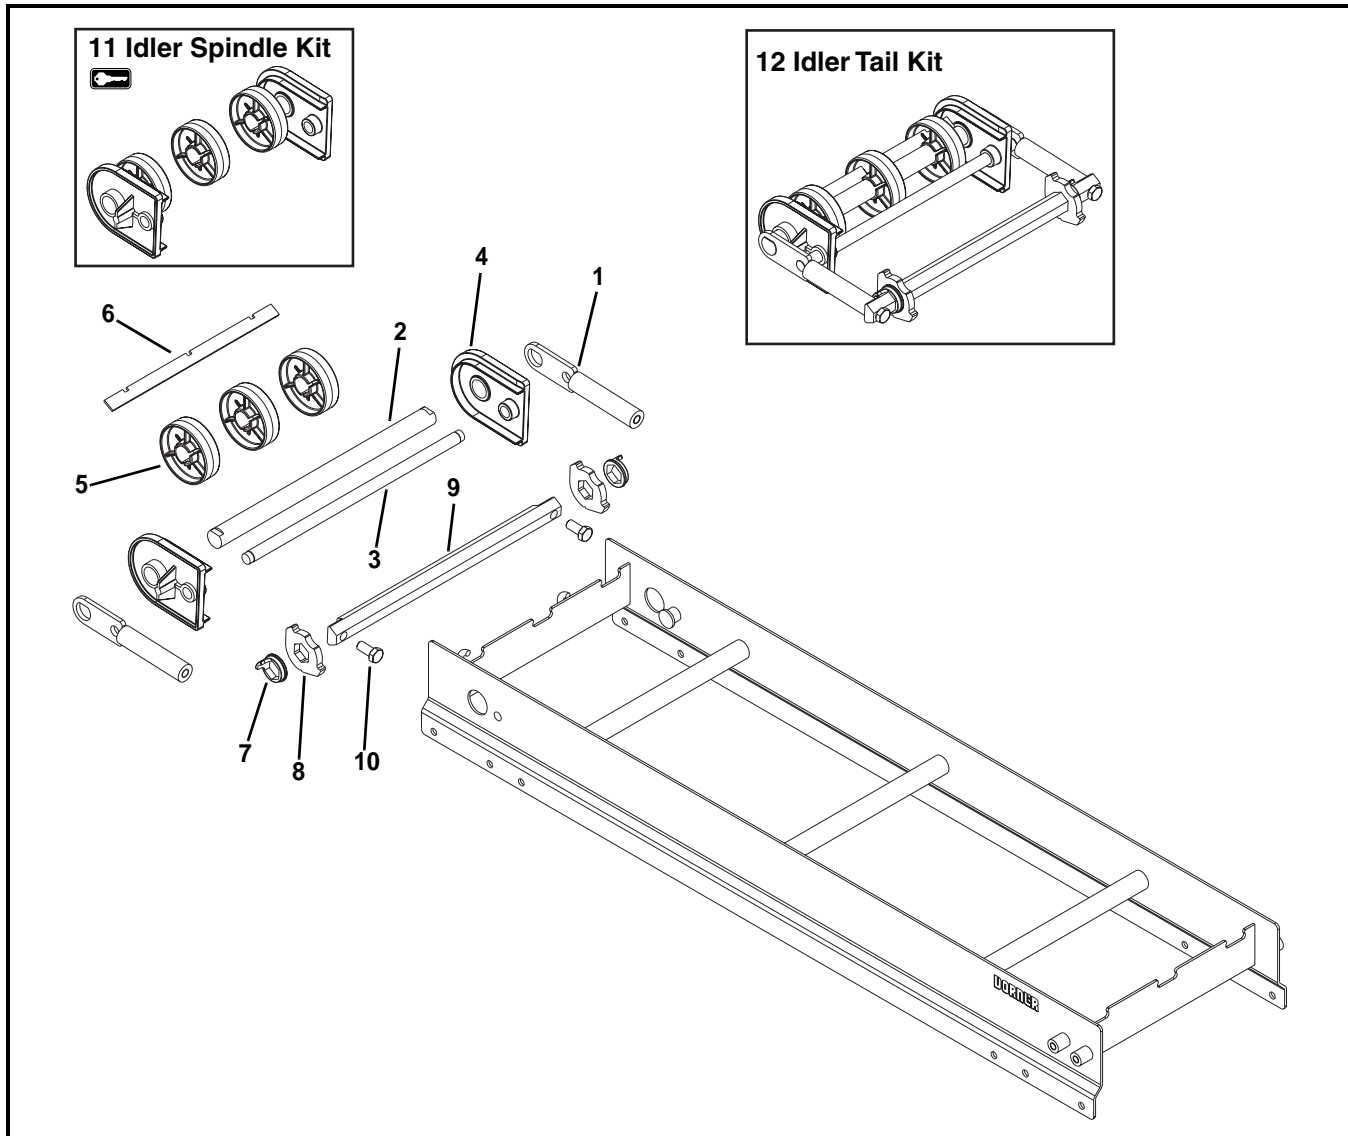


Item	Part Number	Description
1	506801	Shaft Assembly
2	506397- <u>WW</u>	Idler Shaft
3	506396- <u>WW</u>	Pinch Guard Shaft
4	506327- <u>WW</u>	Tracking Plate for Standard Belt
	506332- <u>WW</u>	Tracking Plate for Specialty Intralox Belt
5	506297	Idler Puck
6	506313- <u>WW</u>	Alignment Bar for Standard Belt
	506314- <u>WW</u>	Alignment Bar for Specialty Intralox Belt

Item	Part Number	Description
7	506307	Tip Up Sleeve
8	506356	Stop Key
9	506328- <u>WW</u>	Hex Bar
10	961225MSS	Hex Head Cap Screw M12-1.75 x 25mm
11	74IX- <u>WW</u>	Idler Spindle Tail Kit for Standard Belt (Includes Items 4 and 5)
	74ISX- <u>WW</u>	Idler Spindle Tail Kit for Specialty Intralox Belt (Includes Items 4 and 5)
12	74ITX- <u>WW</u>	Idler Tail Kit for Standard Belt (Includes Items 1 through 10)
	74ITSX- <u>WW</u>	Idler Tail Kit for Specialty Intralox Belt (Includes Items 1 through 10)

WW = Conveyor width ref: 08 - 36 in 02 increments

Nose Bar Tension End

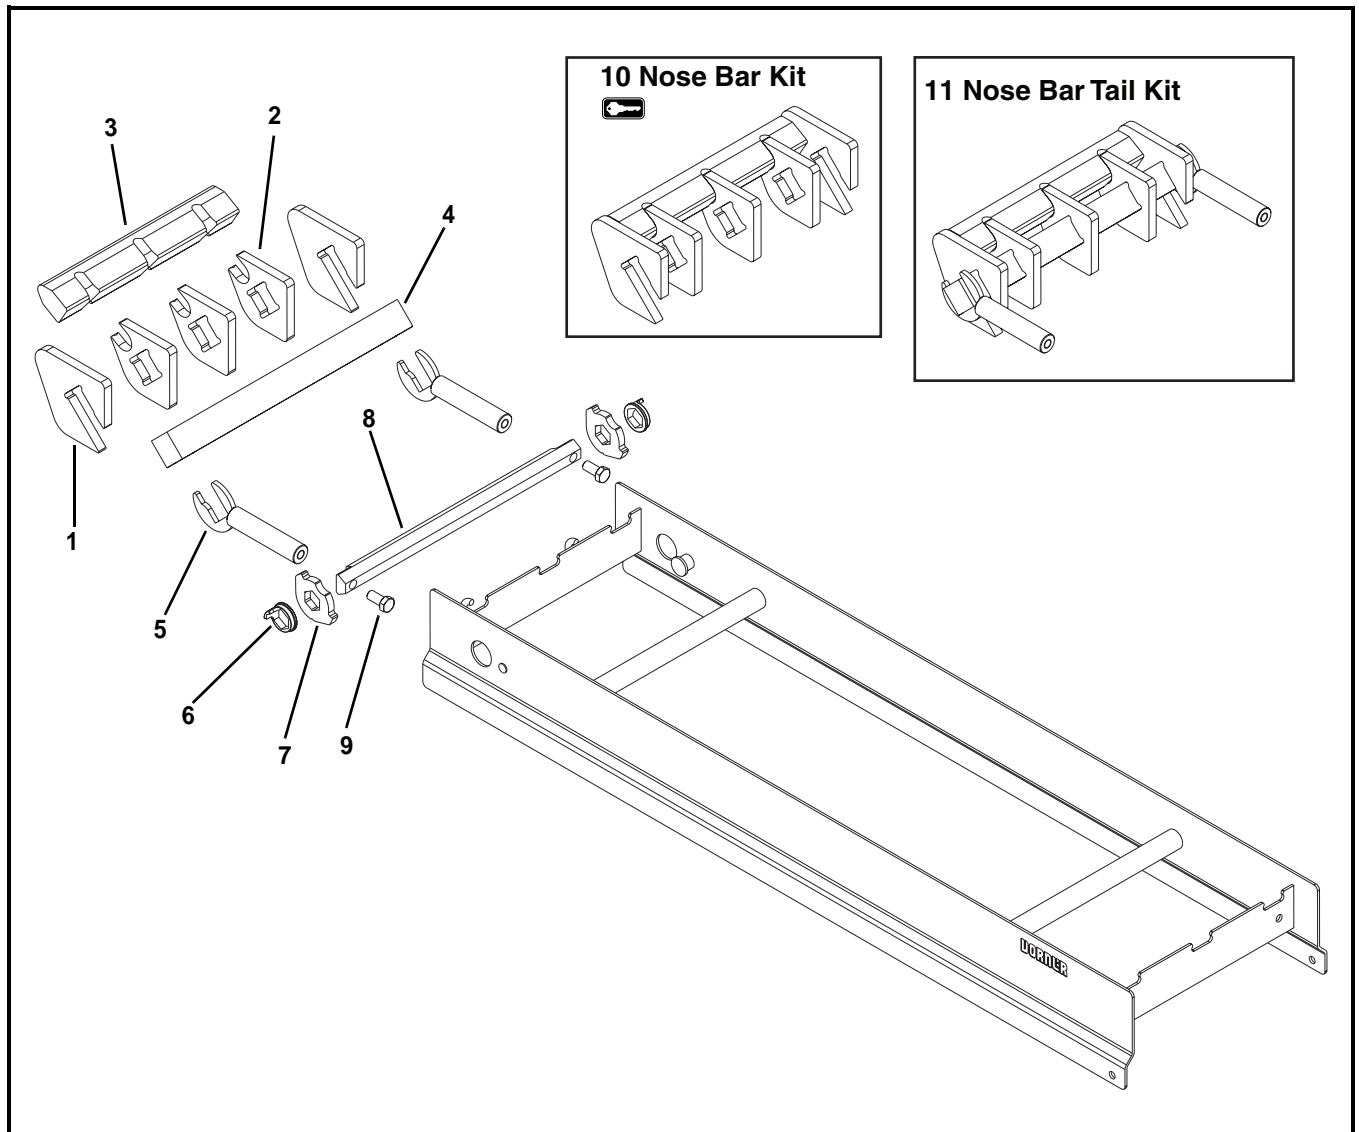


Item	Part Number	Description
1	500490	Nose Bar Tracking Puck
2	500278	Nose Bar Puck
3	5056WW	.5" Pitch Nose Bar Wear Strip
	5058WW	1" Pitch Nose Bar Wear Strip
4	5037WW	Nose Bar Transfer Post for Standard Belt
	5076WW	Nose Bar Transfer Post for Specialty Intralox Belt
5	506363	Nose Bar Idler Shaft
6	506307	Tip Up Sleeve
7	506356	Stop Key
8	506328-WW	Hex Bar
9	961225MSS	Hex Head Cap Screw M12-1.75 x 25mm

Item	Part Number	Description
10	74NB5X-WW	.5" Nose Bar Kit (Includes Items 1 through 3)
	74NB1X-WW	1" Nose Bar Kit (Includes Items 1 through 3)
11	74NBT5X-WW	.5" Nose Bar Tail Kit, for Standard Belt (Includes Items 1 through 5)
	74NBT1X-WW	1" Nose Bar Tail Kit, for Standard Belt (Includes Items 1 through 5)
	74NBT5X-WW	.5" Nose Bar Tail Kit, for Specialty Intralox Belt (Includes Items 1 through 5)
	74NBT1SX-WW	1" Nose Bar Tail Kit, for Specialty Intralox Belt (Includes Items 1 through 5)

WW = Conveyor width ref: 08 - 36 in 02 increments

Service Parts

Curve Conveyor Frame and Wear Strips

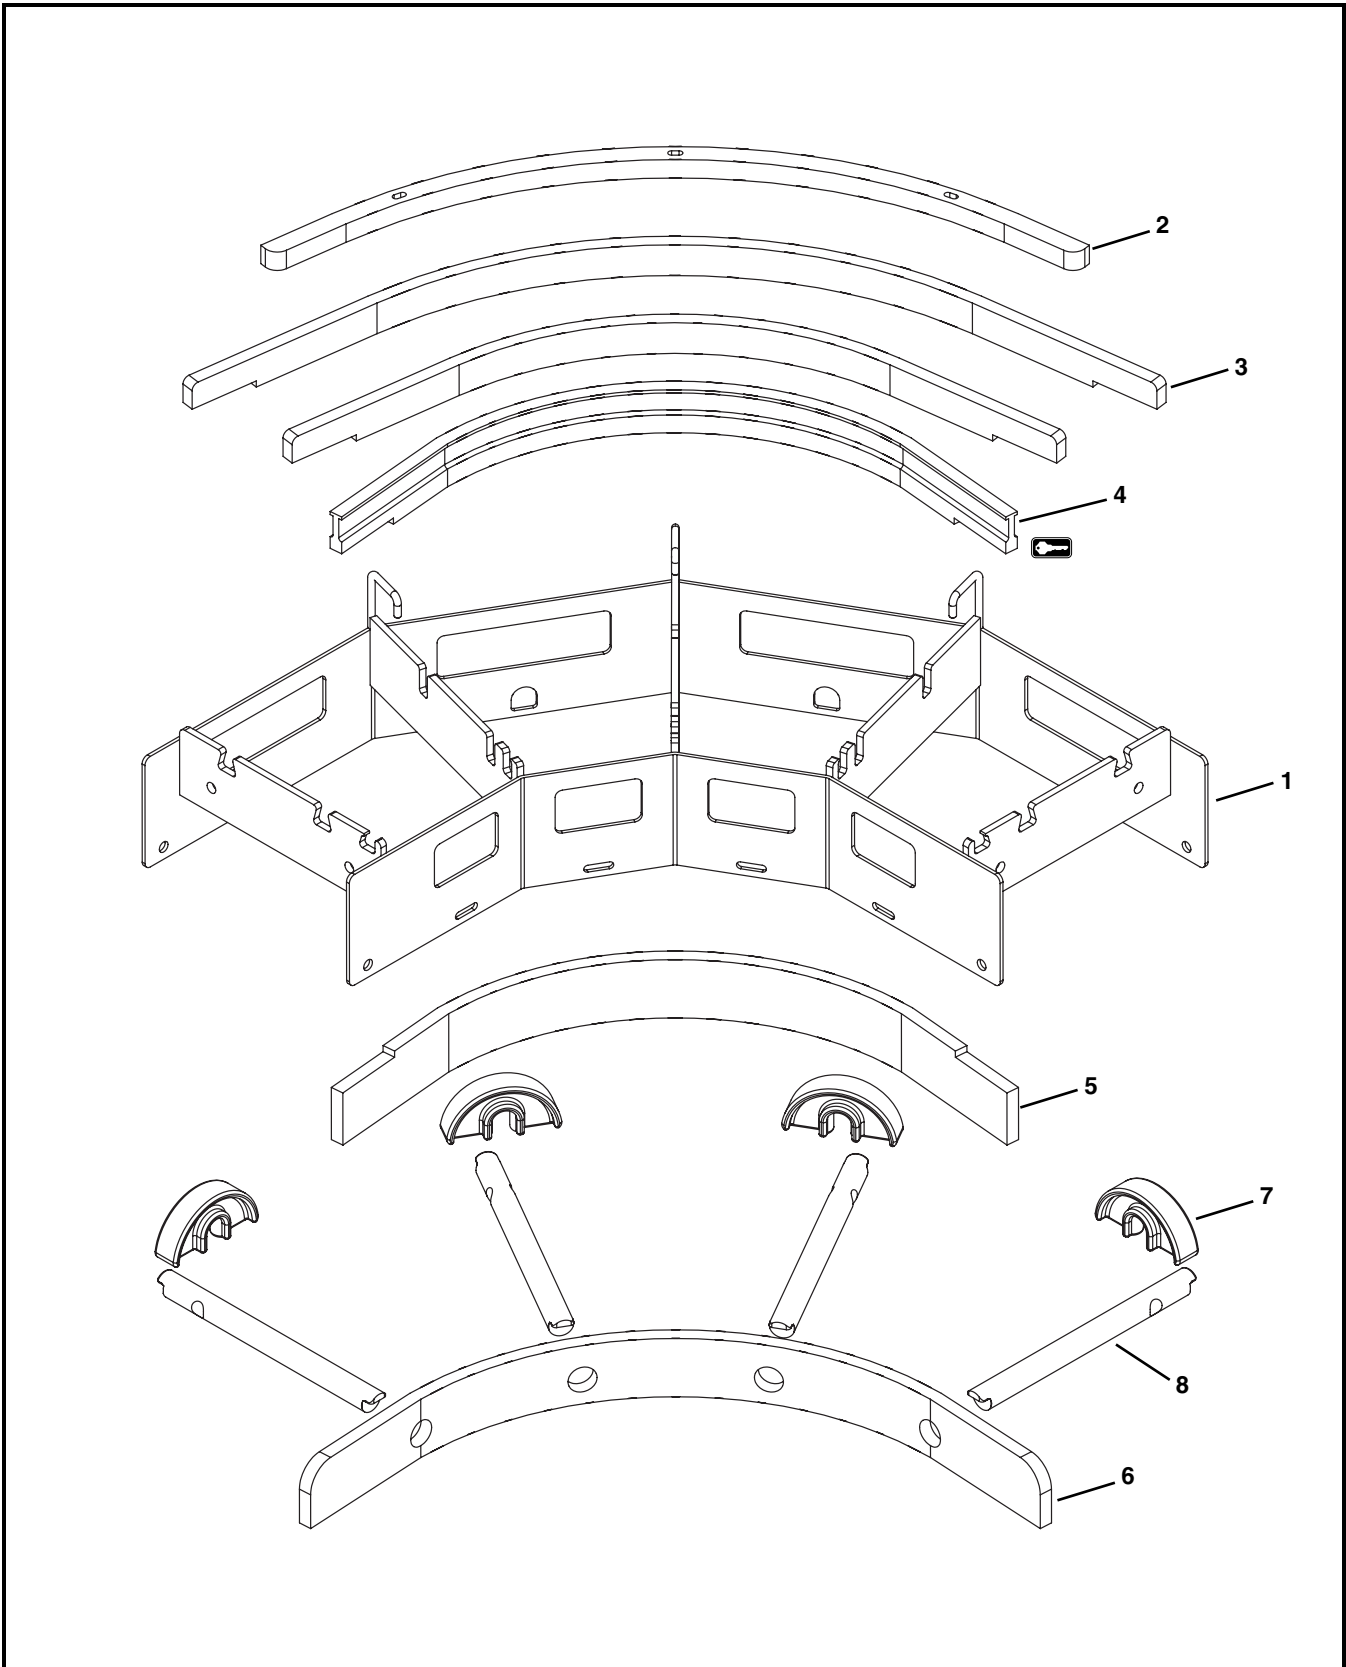


Service Parts

Item	Part Number	Description
1	-----	Consult Factory for Frame Part Number
2	500189- <u>LLLLL</u>	Hold Down Wearstrip
3	500186- <u>LLLLL</u>	Curved Bed Rail Group
4	500187- <u>LLLLL</u>	Low Side Inside Curve Top Wearstrip
	500197- <u>LLLLL</u>	High Side Inside Curve Top Wearstrip
5	500188- <u>LLLLL</u>	Inside Return Bottom Wearstrip
6	500190- <u>LLLLL</u>	Return Bottom Wearstrip
7	500075	Chain Return
8	5033 <u>WW</u>	Curve Return Shaft
<u>LLLLL</u> = Length in inches with 2 decimal places.		
Example: Length = 95.25" <u>LLLLL</u> = 09525		
<u>WW</u> = Conveyor width ref: 08 - 36 in 02 increments		

		Section Degree of Turn Chart		
		Conveyor Width (<u>WW</u>)		
		08-10	12-24	26-36
Module Degree of Turn	15	N/A	15	15
	30	30	30	30
	45	N/A	45	45
	60	60	60	30 & 30
	75	N/A	75	45 & 30
	90	90	90	45 & 45
	105	N/A	60 & 45	45, 30 & 30
	120	60 & 60	60 & 60	45, 45 & 30
	135	N/A	75 & 60	45, 45 & 45
	150	90 & 60	75 & 75	45, 45, 30 & 30
165	N/A	90 & 75	45, 45, 45 & 30	
180	90 & 90	90 & 90	45, 45, 45 & 45	

Service Parts

Straight Conveyor Frame and Wear Strips

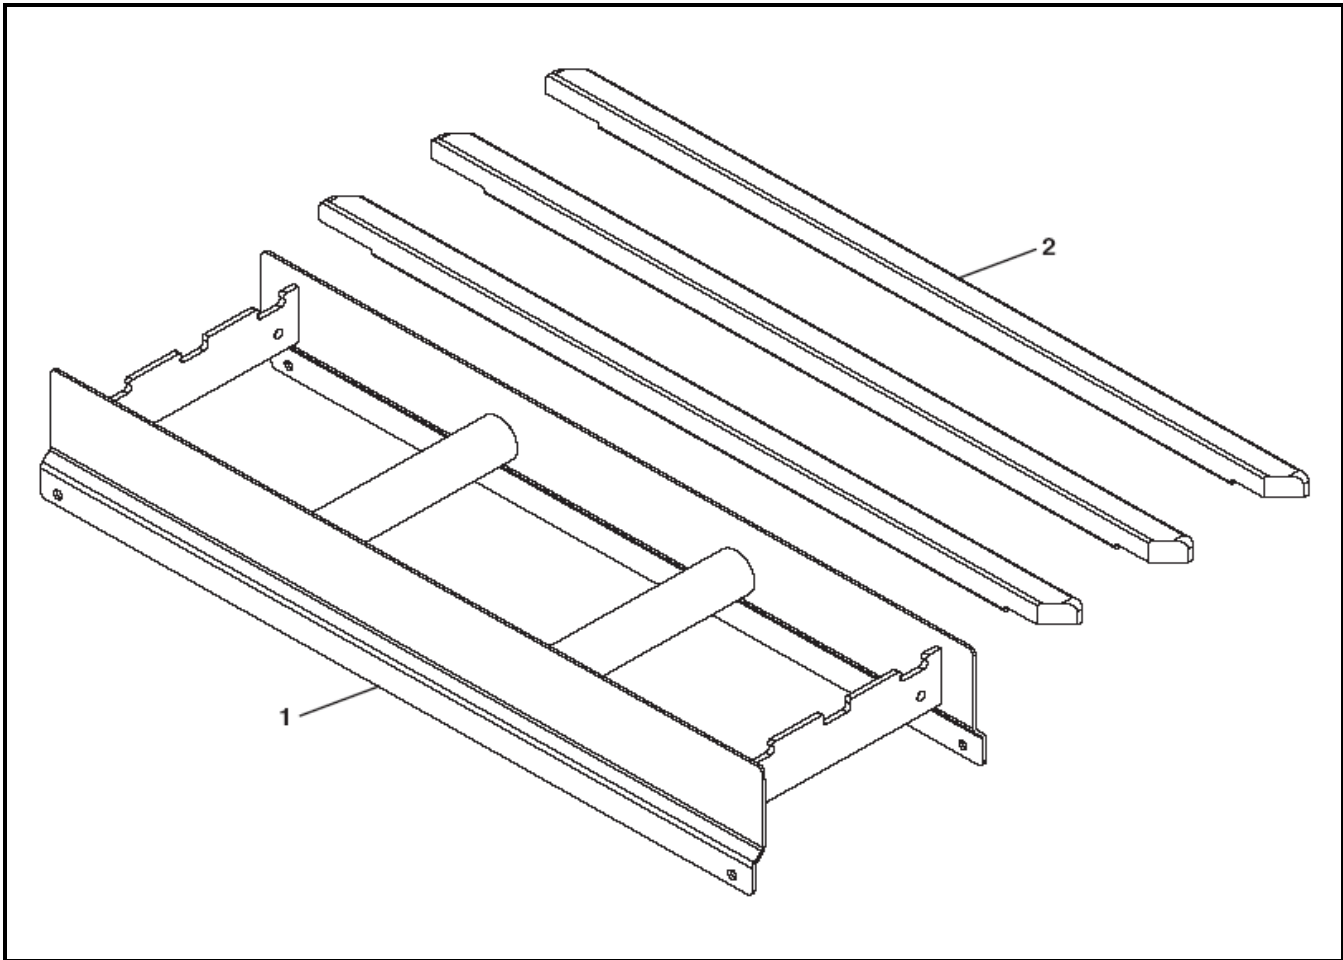


Item	Part Number	Description
1	-----	Consult Factory for Frame Part Number
2	501800-LLL	Straight Wear Strip (Refer to chart)

LLL = Conveyor length ref: 020 - 999 in 001 increments

		Wear Strip Quantity (Item 2)							
		Conveyor Length (LLL)							
		020-132	133-252	253-372	373-492	493-612	613-732	733-852	853-999
Conveyor Width (WW)	08	2	4	6	8	10	12	14	16
	10	3	6	9	12	15	18	21	24
	12	3	6	9	12	15	18	21	24
	14	3	6	9	12	15	18	21	24
	16	4	8	12	16	20	24	28	32
	18	4	8	12	16	20	24	28	32
	20	5	10	15	20	25	30	35	40
	22	5	10	15	20	25	30	35	40
	24	5	10	15	20	25	30	35	40
	26	6	12	18	24	30	36	42	48
	28	6	12	18	24	30	36	42	48
	30	6	12	18	24	30	36	42	48
	32	7	14	21	28	35	42	49	56
34	7	14	21	28	35	42	49	56	
36	8	16	24	32	40	48	56	64	

Conveyor Frame Connection

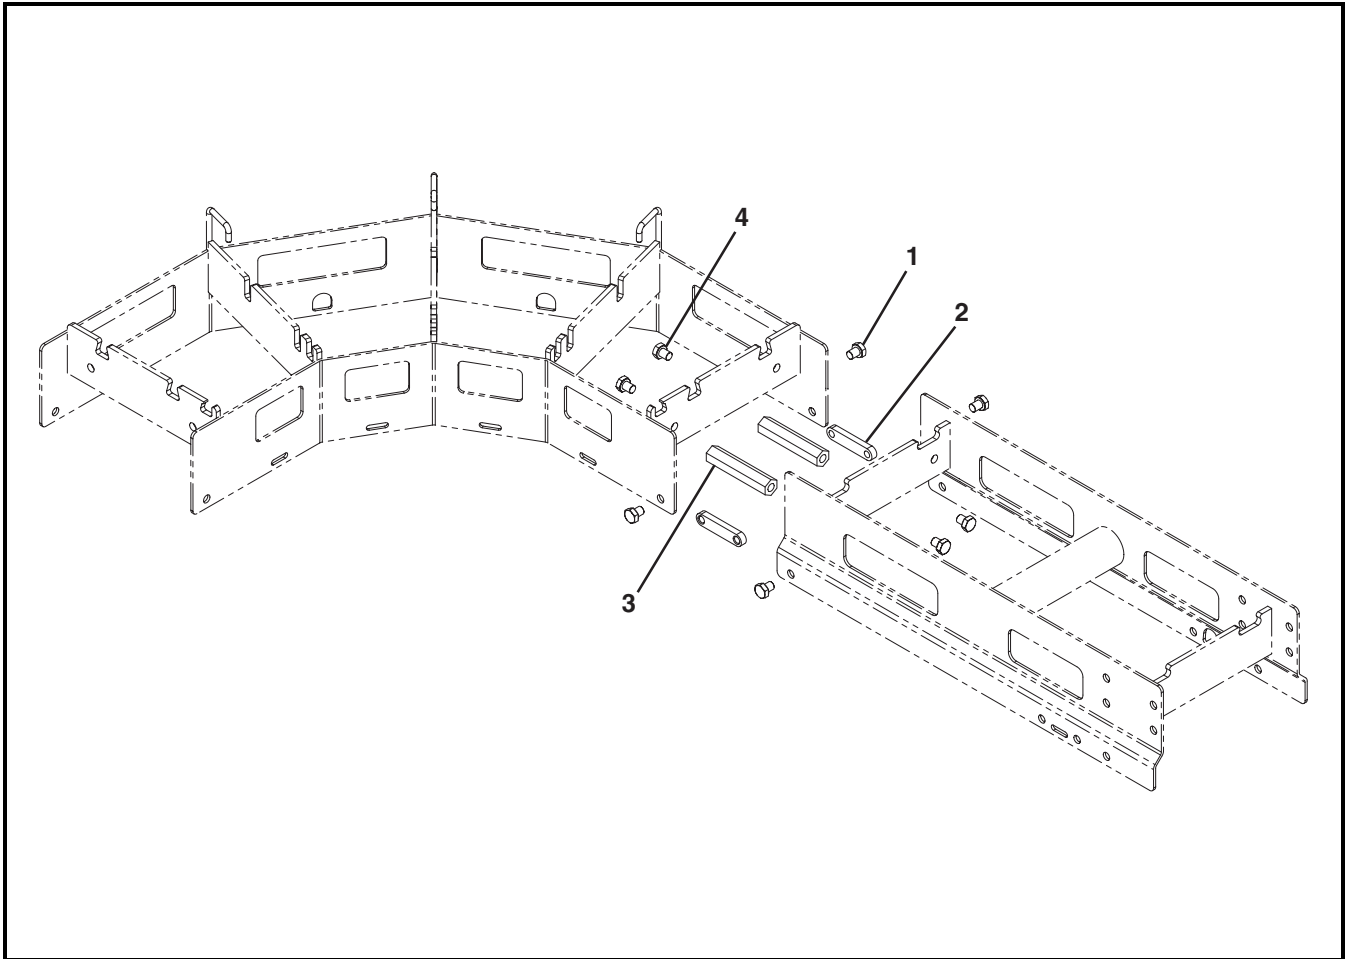


Item	Part Number	Description
1	961016MSS	Hex Head Cap Screw, M10-1.5x16 mm
2	500199	Flat Connector (Not Applicable if Stand Located at Connection)

Item	Part Number	Description
3	500193	Hex Post Connector
4	961016MSS	Hex Head Cap Screw, M10-1.5x16 mm

Service Parts


3" (76 mm) High Sides

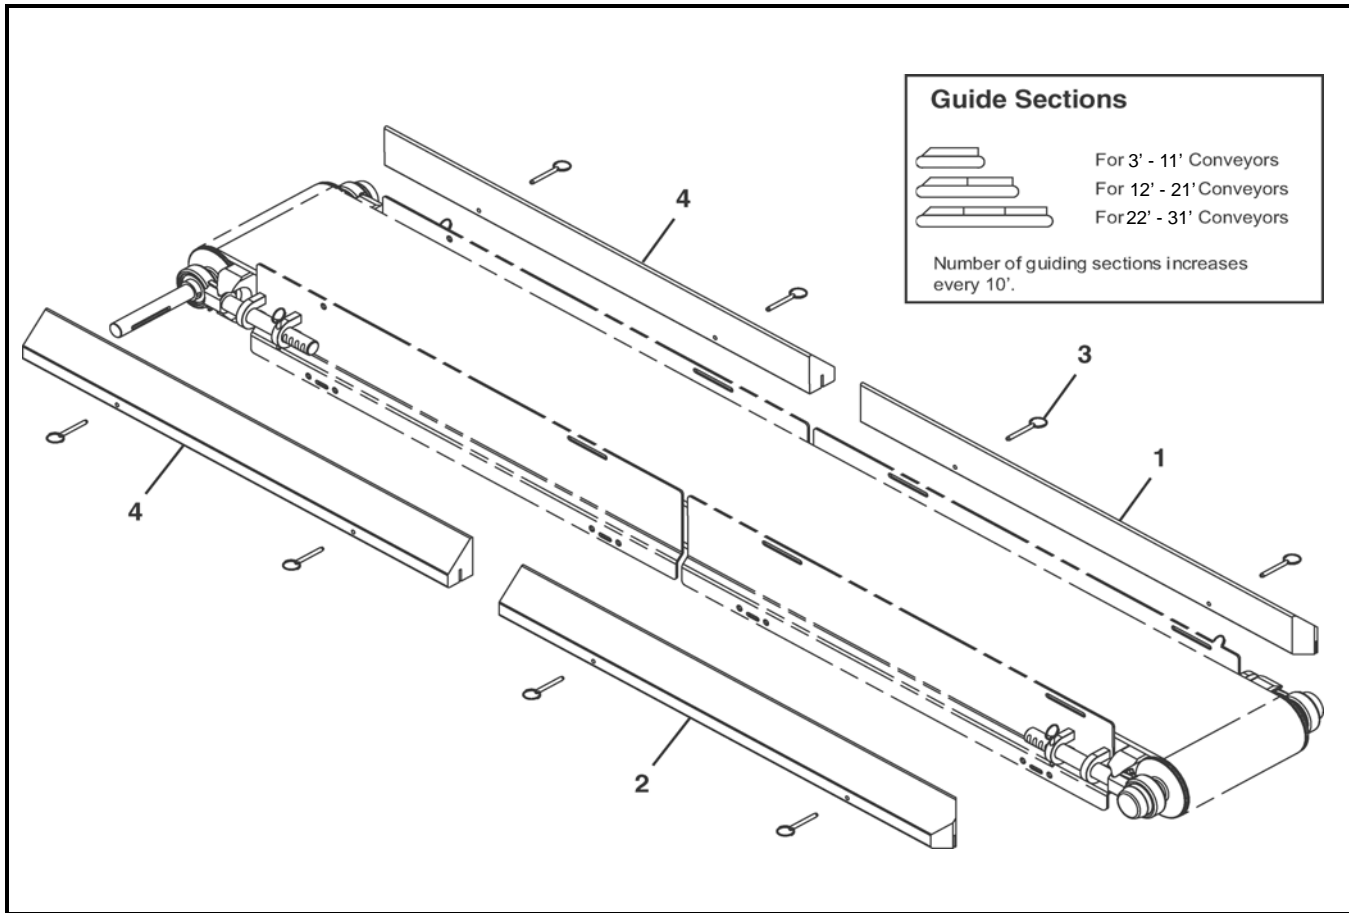

Item	Part Number	Description
1	503501- <u>LLLLL</u>	Right Hand High Side Guide
2	503601- <u>LLLLL</u>	Left Hand High Side Guide
3	807-1553	Pull Pin

Item	Part Number	Description
4	503401- <u>LLLLL</u>	Square End High Side Guide
<u>LLLLL</u> = Guide Length in inches with 2 decimal places.		
Example: Guide Length = 95.25" <u>LLLLL</u> = 09525		


Straight Belt Return

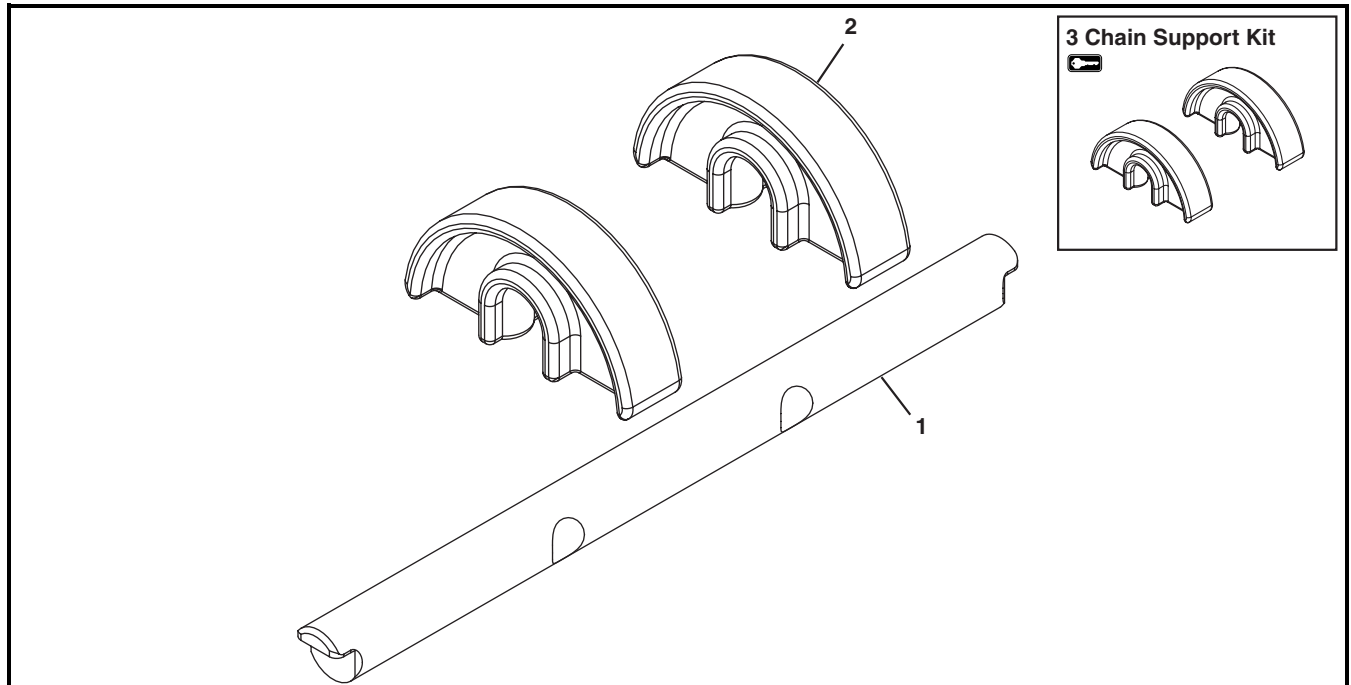

Item	Part Number	Description
1	5032 \underline{WW}	Return Shaft
2	500075	Chain Return Shoe

Item	Part Number	Description
3	74R- \underline{WW}	Chain Support Kit (Includes Item 2)
\underline{WW} = Conveyor width ref: 08 - 36 in 02 increments		

Curve Belt Return

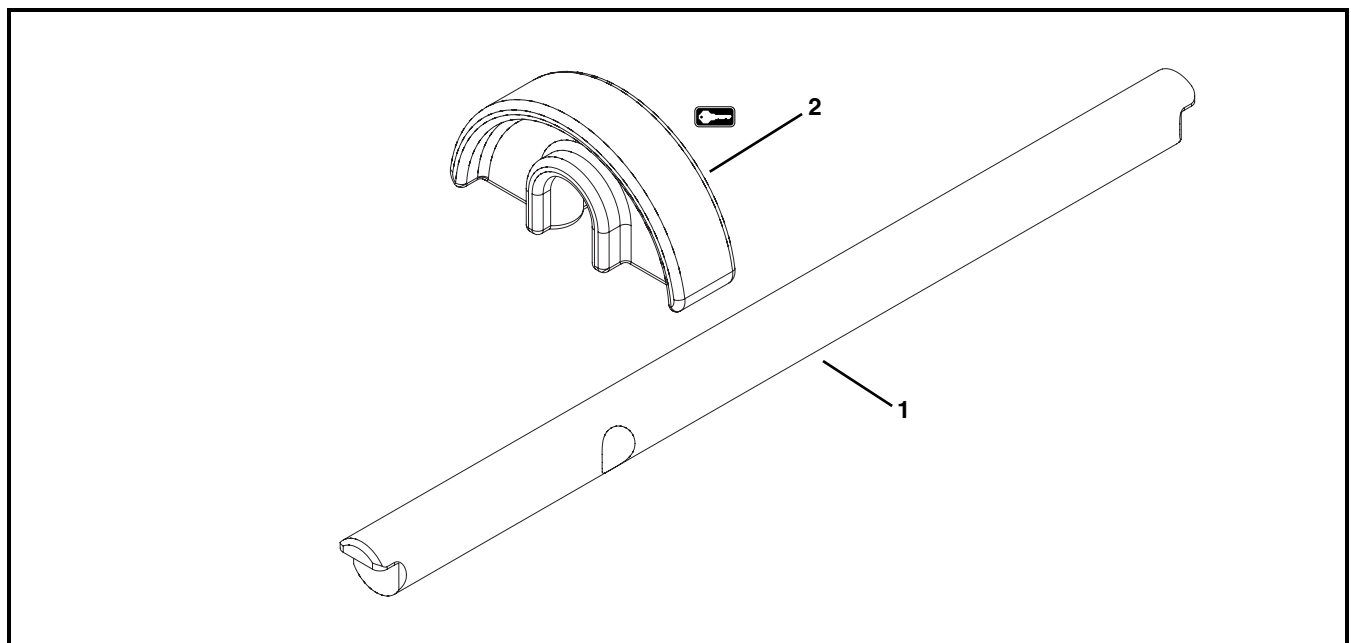


Item	Part Number	Description
1	5033 \underline{WW}	Curve Return Shaft

Item	Part Number	Description
2	500075	Chain Return Shoe
\underline{WW} = Conveyor width ref: 08 - 36 in 02 increments		


Service Parts

Curve Belt Chain Kit

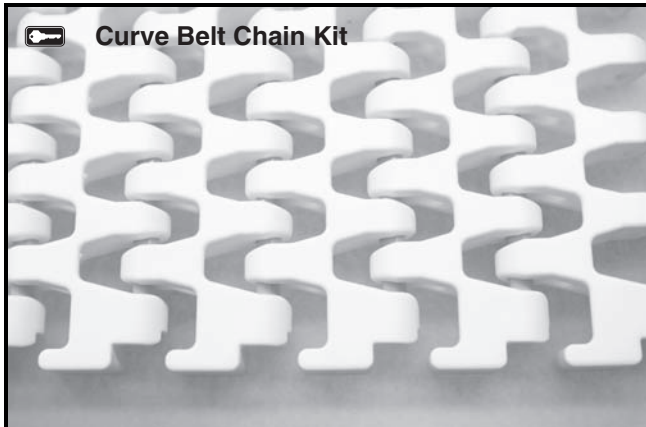

Item	Part Number	Description
1	74 <u>BB</u> - <u>WW</u>	Curve Belt Chain Kit (Includes 1 ft (305 mm) of flat belt chain and assembly pins)
<u>BB</u> = Chain Reference Number		
<u>WW</u> = Conveyor width ref: 08 - 36 in 02 increments		

Belt Removal Tool

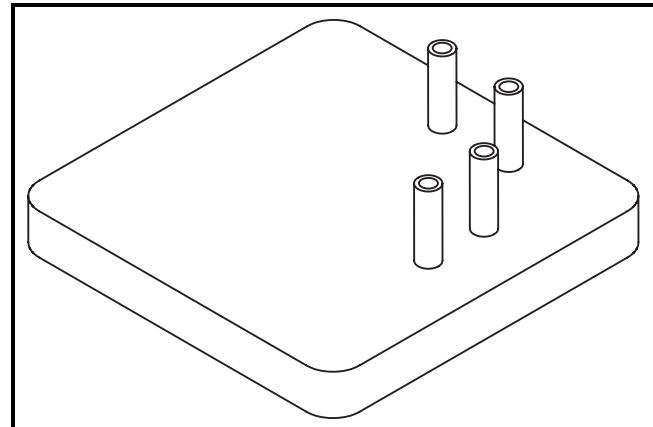

Item	Part Number	Description
1	500581	Tool Rod Removal for 1" Pitch Flush Grid Belt
	500494	Tool Rod Removal for 1/2" Pitch Flush Grid Belt

Ordering a Replacement Chain

Determine the length of chain required for the conveyor and round up to the nearest foot length. Order the proper number of chain repair kits (1' long each) for your conveyor. Dorner will ship chain kits that are of a reasonable length fully assembled.

Example:

Overall chain length = 42' 5" (rounded up = 43')

Order: Qty (43) of 74BB-WW

BB = Chain reference number

WW = Conveyor width ref: 08 - 36 in 02 increments

Configuring a Conveyor Part Number



Figure 77

Curve Conveyor

Refer to your serial and model number plate (**Figure 77**). From the model number, determine conveyor width (**WW**), length (**LLL**), pulley type (**P**), stand location, cleaning options (**C**), stand holes (**S**), guide profile (**G**), belt material (**BB**), degree of turn (**DDD**), drive/pulley type (**D**) and module serialized sequence (**#**).

Straight Infeed / Idler Module **Example: 74324-12015B1MR1**

Straight Infeed/Idler module, 24" wide, 10' long, ready for Dorner support stands, first stand 12" from pulley end including standard idler pulley, frame cutouts, belt lifters, tip up idler pulley option, lowside profile and MR belt material.

Straight Intermediate Module **Example: 74524-1807Z1MR3**

Straight Intermediate module, 24" wide, 15' long, ready for Dorner support stands, including frame cutouts, belt lifters, lowside profile and MR belt material.

Curve Module

Example: 744240901Z1MR4

Curve module, 24" wide, 90°, ready for Dorner support stands, including frame cutouts and MR belt material.

Straight Exit / Drive Module

Example: 74M24-04817CMR15

Straight Exit/Drive module, 24" wide, 4' long, ready for Dorner support stands, last stand mounted 18" from pulley end, and side drive mount in position D, including standard drive pulley, frame cutouts, belt lifters, lowside profile and MR belt material.

Return Policy

Returns must have prior written factory authorization or they will not be accepted. Items that are returned to Dorner without authorization will not be credited nor returned to the original sender. When calling for authorization, please have the following information ready for the Dorner factory representative or your local distributor:

1. Name and address of customer.
2. Dorner part number(s) of item(s) being returned.
3. Reason for return.
4. Customer's original order number used when ordering the item(s).
5. Dorner or distributor invoice number (if available, part serial number).

A representative will discuss action to be taken on the returned items and provide a Returned Goods Authorization (RMA) number for reference. RMA will automatically close 30 days after being issued. To get credit, items must be new and undamaged. There will be a return charge on all items returned for credit, where Dorner was not at fault. It is the customer's responsibility to prevent damage during return shipping. Damaged or modified items will not be accepted. The customer is responsible for return freight.

Conveyors and conveyor accessories

Standard catalog conveyors	30%
MPB, 7200, 7300 Series, cleated and specialty belt	50%
AquaGard & AquaPruf Series conveyors	non-returnable items
Engineered to order products	case by case
Drives and accessories	30%
Sanitary stand supports	non-returnable items

Parts

Standard stock parts	30%
Plastic chain, cleated and specialty belts	non-returnable items

Returns will not be accepted after 60 days from original invoice date. The return charge covers inspection, cleaning, disassembly, disposal and reissuing of components to inventory. If a replacement is needed prior to evaluation of returned item, a purchase order must be issued. Credit (if any) is issued only after return and evaluation is complete.

Dorner has representatives throughout the world. Contact Dorner for the name of your local representative. Our Customer Service Team will gladly help with your questions on Dorner products.

For a copy of Dorner's Warranty, contact factory, distributor, service center or visit our website at www.dorner.com.

For replacement parts, contact an authorized Dorner Service Center or the factory.



Dorner Mfg. Corp. reserves the right to change or discontinue products without notice. All products and services are covered in accordance with our standard warranty. All rights reserved. © Dorner Mfg. Corp. 2009

DORNER MFG. CORP.
975 Cottonwood Ave., PO Box 20
Hartland, WI 53029-0020 USA
TEL 1-800-397-8664 (USA)
FAX 1-800-369-2440 (USA)
Internet: www.dorner.com

Outside the USA:
TEL 1-262-367-7600
FAX 1-262-367-5827